 



AZULLC®

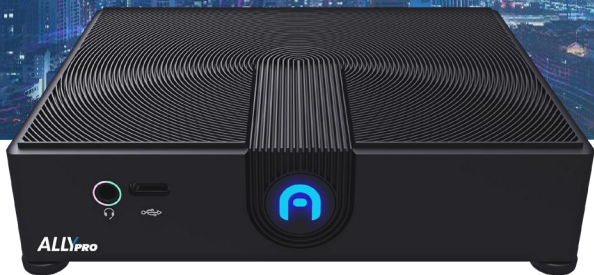

# ALLY PRO

 **USER MANUAL**

# 1 WHAT IN THE BOX?



**ALLY PRO**



**12V/2A POWER ADAPTER**

# 2 INSTALLATION INSTRUCTIONS

 
## STEP 1: UNBOX AND INSPECT

Connect to your chosen input on your monitor or TV.



## STEP 2: PLUG-IN DEVICE

Plug-in device using your desired display output.



## STEP 3: POWER IT UP

Connect the power adapter



## STEP 4: SET UP ACCESSORIES

Choose your input, connect your accessories and enjoy.



## 2 PRODUCT SPECIFICATIONS

### Product Specifications

#### MEMORY

<b>RAM INSTALLED</b>	Preinstalled 8GB; DDR5-SLOT (x1)
----------------------	----------------------------------

#### STORAGE

<b>STORAGE</b>	128GB eMMC
----------------	------------

#### OS/OTHER

<b>OPERATING SYSTEM</b>	Windows 10/11 Pro, Windows IoT, Linux Ubuntu
<b>WI-FI</b>	AC9560 WiFi 5 (M.2-1216) ONBOARD, external antenna
<b>GPU MODEL &amp; MANUFACTURE</b>	Intel® UHD Graphics

#### PROCESSOR

<b>PROCESSOR, MODEL &amp; MANUFACTURE</b>	Intel® Twin Lake (N150)
<b>PROCESSOR CORE COUNT</b>	4
<b>PROCESSOR CACHE</b>	6 MB Intel® Smart Cache

#### NETWORK

<b>ETHERNET</b>	1 Gbps (x2)
<b>BLUETOOTH</b>	Intel AC9560, supports Bluetooth 5.1
<b>WIRELESS LAN (TYPE)</b>	WiFi 5

 
#### INTERFACES/PORTS

<b>HDMI®(NUMBER)</b>	HDMI 2.1 (x2)
<b>HDMI® OUTPUT</b>	4k@60fps
<b>USB PORTS</b>	USB3.1-GEN2, 10Gbps (x2) USB2.0 (x2)
<b>TYPE-C PORT</b>	USB2.0 (x1)
<b>MICRO SD CARD SLOT</b>	(x1)
<b>AUDIO OUTPUT</b>	3.5 mm audio jack with L/R/MIC combo (x1)
<b>POWER CONNECTOR</b>	Locking Power Jack
<b>POWER SUPPLY</b>	12V/2A
<b>WEIGHT</b>	0.66 lbs
<b>DIMENSIONS</b>	5 x 3.9 x 1.4 in
<b>WARRANTY</b>	3 year manufacturer's warranty

# 3

# PORT LAYOUT



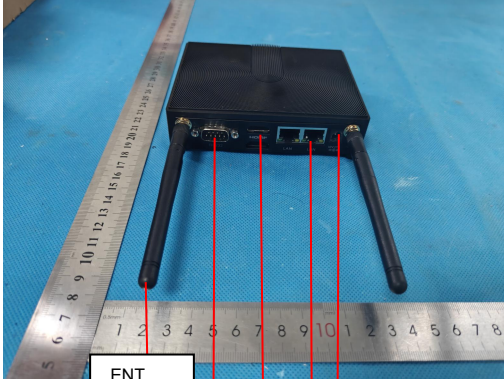

ENT

Serial Port

Power Input

HDMI Port

Ethernet

The Ally Pro is designed to deliver exceptional performance across various applications. Here's a brief overview of the solutions it can support:

- ◆ Software Integration
- ◆ Digital Signage
- ◆ Edge Computing
- ◆ Remote Work
- ◆ Retail Solutions



Chat live with a real person!  
**azulle.com**



US-based technical support  
**786-233-6769 (Ext 1)**



US-based customer service  
**786-233-6769 (Ext 3)**



Email us!  
**support@azulle.com**

## Warnings and Safety Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver.

•• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.