

80x125mm

xo
poppy
Pixie Duet
KARAOKE MACHINE
DUAL WIRELESS MICS



SUPPORTS ALL
KARAOKE APPS



PY-MNKRKSP-CRM
USER MANUAL

IN THE BOX

Pixel Karaoke Speaker (x1)
Wireless Microphone (x2)
Type-C Charging Cable (x2)
User Manual (x1)

SPECIFICATIONS

Material: ABS + Grill
Bluetooth Version: V5.3
Bluetooth Range: 10M (33FT)
Functions: BT, AUX, TF, USB, FM, Mic, LED, TWS
Frequency Response: 80Hz ~ 20KHz
Battery (Speaker): 3.7V 2500mAh
Battery (Wireless Mic): 3.7V 500mAh
Playback Time: 6~8 Hourse
Speaker: 4Ω5W
Signal Noise Rate: >85dB

THROWBACK® COPYRIGHT ALL RIGHTS RESERVED. THROWBACK® is an innovative brand of BH Brand Holding LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC, New York, NY 10018.


Please Visit our Website at www.truststonegroup.com

TRUSTSTONE
GROUP



LOCATION OF CONTROLS

Control Panel At Front Of Speaker

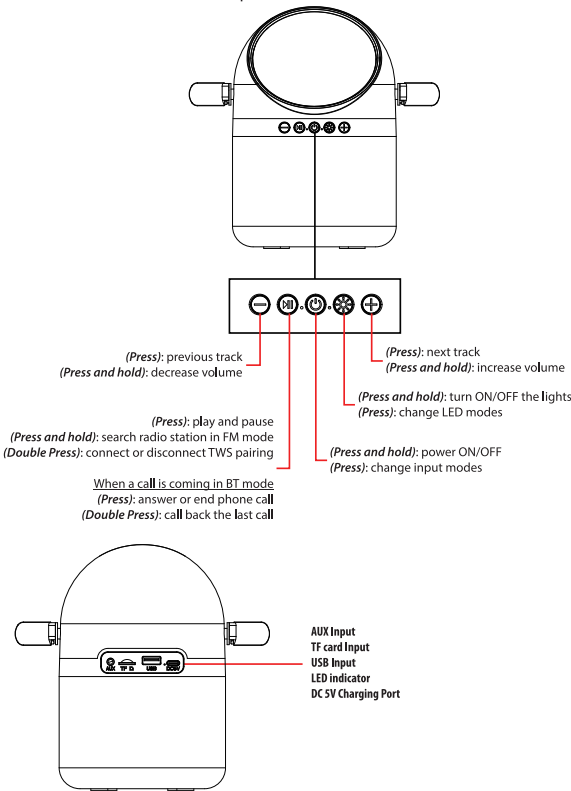

LOCATION OF CONTROLS

Control Panel At Front Of Wireless Mic



- : Press and hold to turn ON/OFF wireless microphone
- : Press to increase mic volume
- : Press to decrease mic volume
- : Press to remove vocal track
Press and hold to change between microphone sound effect

DC 5V : Type-C Charging port

CHARGING THE SPEAKER & WIRELESS MIC

Turn red during charging and turn off after being fully charged.

BLUETOOTH PAIRING

- Press and hold the button to power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode, The LED indicator will quickly flash BLUE.
- Set your mobile device to search for Bluetooth devices. When the list appears, select **PY-MNKRKSP** from the found devices.
- After a successful pairing, a tone will be heard. When play music, the LED indicator will turn solid BLUE.

CHANGING INPUT MODE

After powering ON the speaker, press the button to select different modes (BT/AUX/TF/USB/FM). A tone will be heard during each mode.

Note: Do NOT have a TF card, AUX or USB device installed at the same time, as this can cause the speaker to malfunction.

FM MODE

- Press the button to enter into FM mode.
- Press and hold the button to scan the available stations.

Note: Please use the speaker close to the window will help to receive strong radio signal.

TF MODE

Insert a TF memory card or similar Micro SD memory card into the TF Card Slot. The speaker will enter into TF Card mode automatically, if not, please press button to enter into TF Card mode, your speaker will play.mp3 audio files stored on the device.

AUX MODE

To play music from another device, insert an Auxiliary cable (not included) into the speaker's AUX IN Jack. Insert the other end of the cable into your phone or another audio device. If not, please press button to enter into TF Card mode, your speaker will play.mp3 audio files stored on the device.

USB MODE

Insert a USB device such as a thumb drive or jump drive into the USB Port. The speaker will enter into USB mode automatically, if not, please press button to enter into USB mode, your speaker will play.mp3 audio files stored on the device.

CHANGE LED MODE

Press the button to change LED lights modes, press and hold the button to turn ON/OFF the LED lights.

ADJUST VOLUME

Press and hold the or button to decrease or increase volume during BT/AUX/TF/USB/FM mode.

ADJUST PLAYBACK

Press the or button to skip to previous or next track during BT/TF/USB/FM mode.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.