


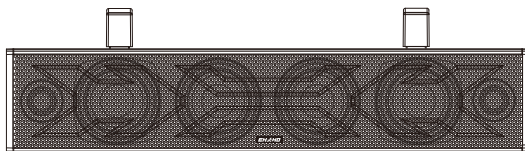


ATV/UTV SOUND BAR PRO



MT4100



MT4200

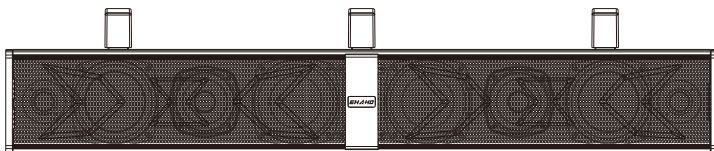

MT4300

Excitement on Every Mile

User Manual

BRAND LOGO UPDATE



USED LOGO

NEW LOGO

Same Brand, New Look !

Our logo has changed, but our commitment to quality remains.

Ehaho appreciates your support !

EH&HO
INDEX

Information to the User..... 3

Before You Start..... 4

Getting to Know Your Sound Bar..... 5

Specifications..... 6-8

Mounting Kit Contains 9-10

Installation 11

Wire Diagram..... 12

Power ON/OFF..... 13

Bluetooth Operation 13-14

USB Input15

AUX Input.....16

AUX Out17

Remote Control Operation 18-20

Troubleshooting..... 21

Dimensions.....22

Thank you for purchasing ATV/UTV Sound Bar.

Please read through these instructions carefully so you will know how to operate your model properly.

After you have finished reading the instructions, keep this document in a safe place for future reference.

THIS PACKAGE CONTAINS:

(1) SOUND BAR All-Terrain Speaker System -----



(2) Mounting Kit -----



(3) User Manual -----



BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

- Do not operate mobile equipment while driving a motorized vehicle. Safe driving and safety consideration of others should always be your highest priority.
- In the event you should notice smoke, strange noises or odor from this product, or any other abnormal signs, immediately turn off the power. Using this product in this condition may result in permanent damage to the system.
- Set your volume control at a low setting, then slowly increase the sound until you can hear it comfortably without distortion or ear discomfort.

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

- Do not turn up the volume too loud that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.

INSTALLATION PRECAUTIONS

- Servicing of this product by persons without professional training and experience in electronic equipment and motorized vehicle accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Contact customer service for any installation, service questions or requests.
- The **SOUND BAR** can be powered from a vehicle's cigarette lighter auxiliary power port, or hardwired directly to the battery through an optional relay / accessory switch.
- When wiring directly to the vehicle's battery, be sure to disconnect the batteries negative terminal wire before starting any wiring procedures, it is suggested that an optional fuse and fuse holder (not included) with minimum rating of 15 Amps be in line with the positive battery terminal.
- The ground cable length should not exceed 18-inches (see wiring diagram).
- The **SOUND BAR** has a weather resistant design. It should not be submerged in or under water under any circumstances.
- Use only the installation parts provided with the **SOUND BAR**.
- Wash with a mild soap or detergent and lukewarm water using a clean sponge or a soft cloth. Rinse well with clean water.

VERY IMPORTANT


- DON'T clean in hot sun or on very hot days. don't be in damp or wet conditions.
- DON'T use abrasive or highly alkaline cleaners on the main body.
- DON'T scrape the main body with razor blades, or other sharp instruments.
- DON'T ever use, gasoline, acetone or carbon tetrachloride.




CAUTION: Using other mounting methods may void this warranty.

GETTING TO KNOW YOUR ATV / UTV SOUND BAR



MT4100

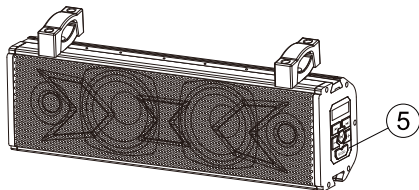

MT4200

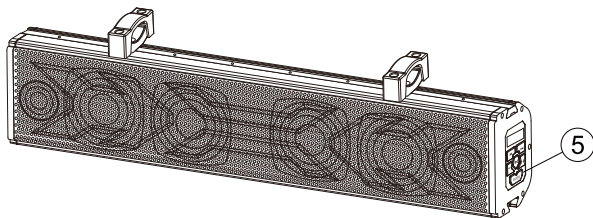

MT4300

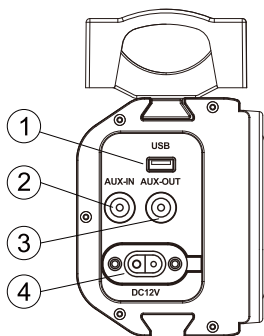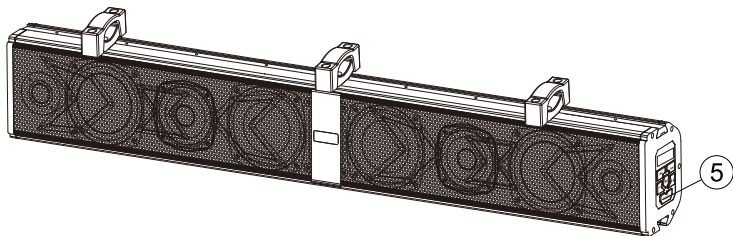


- ① USB connector
- ② AUX-IN
- ③ AUX-OUT
- ④ Power cord interface
- ⑤ Control Panel

SPECIFICATIONS




Model	MT4100
Bluetooth Protocol	V5.0
Bluetooth Range	33ft / 10m
Frequency Response	40HZ-22KHZ
Operating Voltage	12V DC (8-18V allowable)
Maximum Operating Current	≤ 10A
Tweeters	1" (x2)
Mid-woofer	4" (x2)
Low Frequency Radiator	None
Wireless Remote Distance	≥ 33ft / 10m
MP3 Signal Noise Ratio	≥ 50dB
MP3 Channel Separation	≥ 30dB
MP3 Total Harmonic Distortion(THD)	≤ 5%
MP3 Vocal Channel Balance	≤ 2dB
Operating Temperature	-20°C to 60°C
Dust / Waterproof Rating	IP66

SPECIFICATIONS

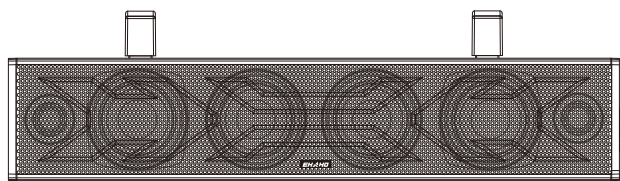

Model	MT4200
Bluetooth Protocol	V5.0
Bluetooth Range	33ft / 10m
Frequency Response	40HZ-22KHZ
Operating Voltage	12V DC (8-18V allowable)
Maximum Operating Current	≤ 10A
Tweeters	1" (x2)
Mid-woofer	4" (x2)
Low Frequency Radiator	4" (x2)
Wireless Remote Distance	≥ 33ft / 10m
MP3 Signal Noise Ratio	≥ 50dB
MP3 Channel Separation	≥ 30dB
MP3 Total Harmonic Distortion(THD)	≤ 5%
MP3 Vocal Channel Balance	≤ 2dB
Operating Temperature	-20°C to 60°C
Dust / Waterproof Rating	IP66

SPECIFICATIONS

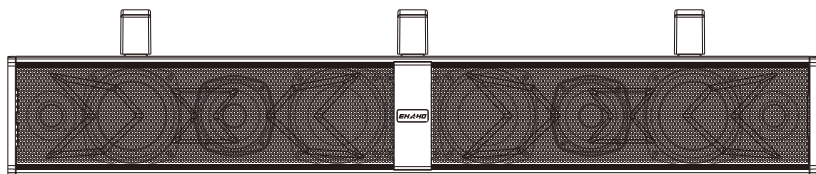

Model	MT4300
Bluetooth Protocol	V5.0
Bluetooth Range	33ft / 10m
Frequency Response	40HZ-22KHZ
Operating Voltage	12V DC (8-18V allowable)
Maximum Operating Current	≤ 13A
Tweeters	1" (x2)
Mid Range Speaker	3" (x2)
Subwoofer	4" (x2)
Low Frequency Radiator	4" (x2)
Wireless Remote Distance	≥ 33ft / 10m
MP3 Signal Noise Ratio	≥ 50dB
MP3 Channel Separation	≥ 30dB
MP3 Total Harmonic Distortion(THD)	≤ 5%
MP3 Vocal Channel Balance	≤ 2dB
Operating Temperature	-20°C to 60°C
Dust / Waterproof Rating	IP66

MOUNTING KIT CONTAINS



MT4100

LIST

wrench		x1
Bracket		x2
Remote Control		x1
Spring washers		x7
Ring		x7
Nut		x5
Short Bolt		x2
Middle Bolt		x4
Long Bolt		x4
Extension Bolt		x4
Rubber Pad		x4
3.5mm AUX		x1
Cigarette Lighter Power Cable (91 inch)		x1
Cigarette Lighter Power Cable (130 inch)		x1
Cigarette Lighter Receptacle		x1

SPARE

Short Bolt		x1
Middle Bolt		x1
Long Bolt		x1
Extension Bolt		x1
Fuse		x2
Ribbon		x10



MT4200

LIST

wrench		x1
Bracket		x2
Remote Control		x1
Spring washers		x7
Ring		x7
Nut		x5
Short Bolt		x2
Middle Bolt		x4
Long Bolt		x4
Extension Bolt		x4
Rubber Pad		x4
3.5mm AUX		x1
Cigarette Lighter Power Cable (91 inch)		x1
Cigarette Lighter Power Cable (130 inch)		x1
Cigarette Lighter Receptacle		x1

SPARE

Short Bolt		x1
Middle Bolt		x1
Long Bolt		x1
Extension Bolt		x1
Fuse		x2
Ribbon		x10

MOUNTING KIT CONTAINS



MT4300

LIST

wrench		x1
Bracket		x3
Remote Control		x1
Spring washers		x10
Ring		x10
Short Bolt		x3
Middle Bolt		x6
Long Bolt		x6
Rubber Pad		x6
3.5mm AUX		x1
Cigarette Lighter Power Cable (91 inch)		x1
Cigarette Lighter Power Cable (130 inch)		x1
Cigarette Lighter Receptacle		x1

SPARE

Short Bolt		x1
Middle Bolt		x1
Long Bolt		x1
Fuse		x2
Ribbon		x10




Remarks: Two lengths of cigarette lighter power cords are provided to meet installation needs over different distances or to serve as replacements in case of power cord damage.

INSTALLATION


- **USE THE SUPPLIED ADJUSTABLE BRACKET TO SECURE TO RAILS.**
- **ALWAYS RECHECK BRACKET BEFORE EVERY RIDE.**

1. Adjust the installation bracket to the slot above the host and tighten it with a hex screw.
2. Attach the supplied rubber pads for secure clamping and abrasion prevention.
3. Tighten the upper clamp to the lower clamp with a hex wrench. Make sure the supplied spring washers are used to provide more stable bolt tightening against vibration.
4. Repeat the steps above to secure the sound bar with the other clamp.


a. Square Tube

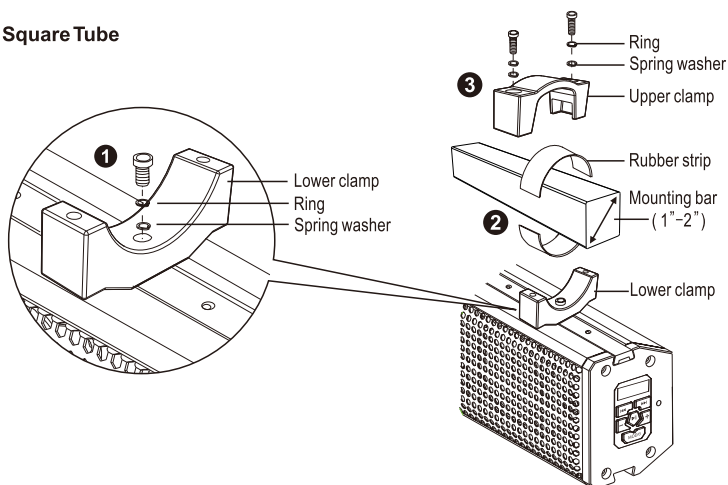


b. Round Roll Bar

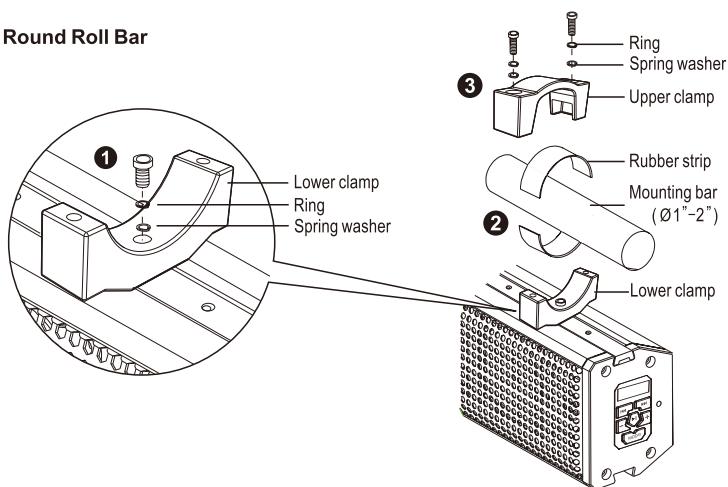

WIRE DIAGRAM


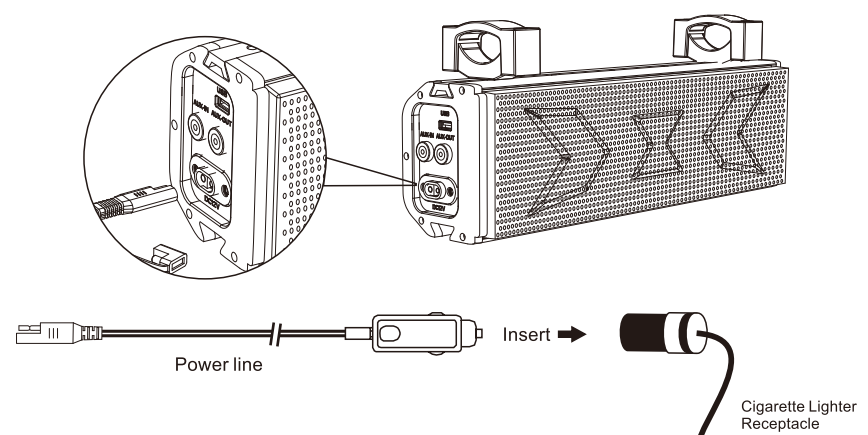


OPTIONAL DIRECT BATTERY WIRING CIRCUIT

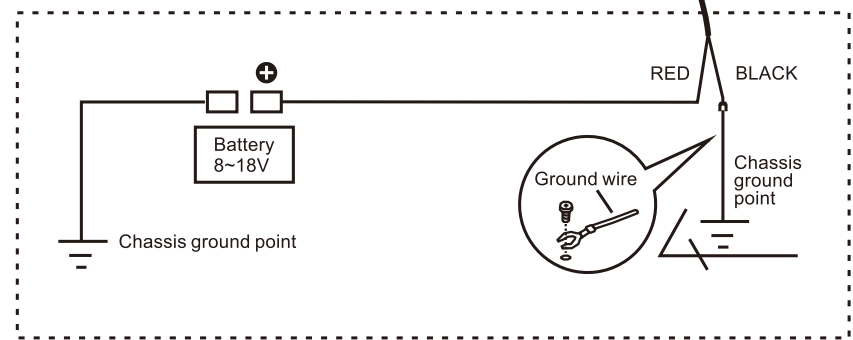

 **Important Reminder:** To prevent battery exhaustion, periodically run the vehicle's engine while using this product. Prolonged use without running the engine may drain the battery.

POWER ON/OFF

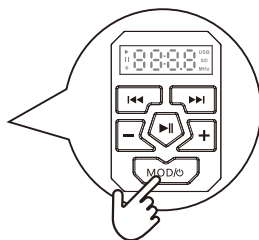
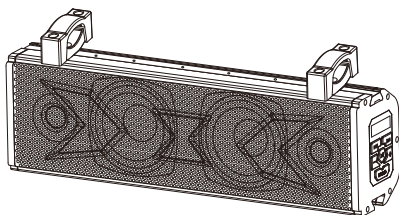


1. **Power On:** Short press “**MOD/⏻**” button to turn on.
2. **Power Off:** Long press “**MOD/⏻**” button to turn off.
3. In the power on state, short press the “**MOD/⏻**” button to switch between BT, USB, and AUX modes.

BLUETOOTH OPERATION



PAIRING & DISCOVERING A NEW BT CONNECTION

1. Press the “**MOD/⏻**” button. The **SOUND BAR** will automatically go in to pairing mode.

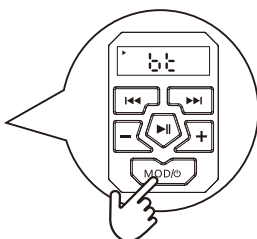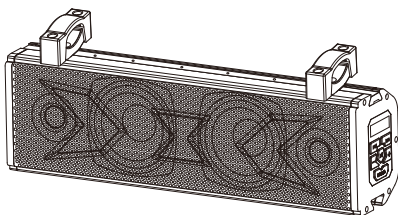

MOBILE OPERATION

- a. Go into the **Settings Menu** of your device
- b. Enter the **BT Menu**
- c. **TURN ON BT** and press **SCAN**
- d. **EHAHO MT4100 / EHAHO MT4200 / EHAHO MT4300** will now be displayed under **AVAILABLE DEVICES**
- e. If prompted, enter passcode: **0000**

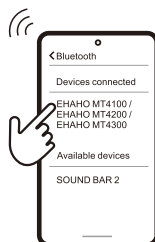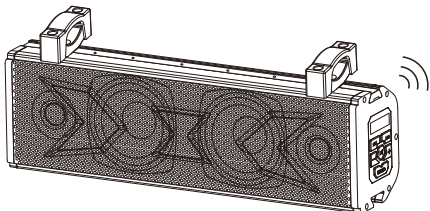


NOTE: You have 2 minutes before you must restart this procedure over again.

2. If **EHAHO MT4100 / EHAHO MT4200 / EHAHO MT4300** is not seen, repeat the above steps to refresh the **Device List**
3. When the connection is successful, you are now ready to stream music from your favorite media player to the **SOUND BAR**.

BLUETOOTH OPERATION


RECONNECTION

1. Power on the **SOUND BAR** and your last paired BT device.
2. Press the “**MOD/⏻**” button. The unit will now automatically reconnect.

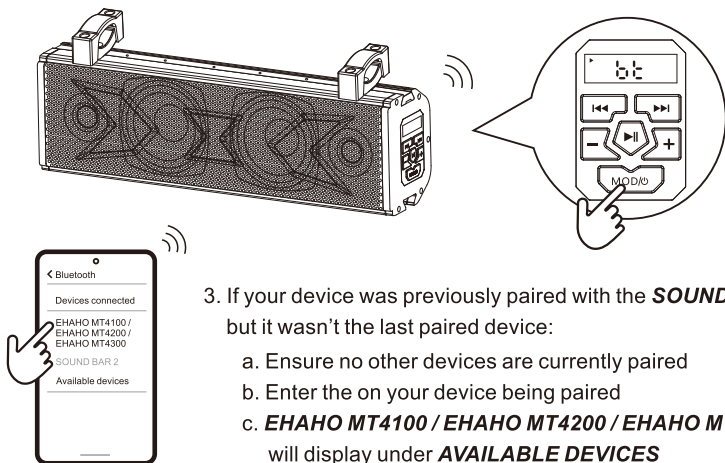

3. If your device was previously paired with the **SOUND BAR**, but it wasn't the last paired device:
 - a. Ensure no other devices are currently paired
 - b. Enter the on your device being paired
 - c. **EHAHO MT4100 / EHAHO MT4200 / EHAHO MT4300** will display under **AVAILABLE DEVICES**
 - d. Choose the **SOUND BAR** to reconnect
4. If the device is out of range from the **SOUND BAR**, it will disconnect automatically:
 - a. The **SOUND BAR** will automatically reconnect to the device once back in range.
5. BT function can only be connected to a **SOUND BAR**, does not support multiple **SOUND BAR** connection at the same time.

BUTTON OPERATION

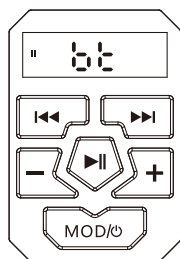

1. Press the **▶|| PLAY/PAUSE** once to start playing music or press the **▶|| PLAY** button from your device's touchscreen.
2. To select the previous song, press the **◀◀ PREVIOUS TRACK** button or use your device's controls.
3. To skip songs or advance, press the **▶▶ NEXT TRACK** button or use your device's controls.
4. To raise the volume, press the **⊕ VOLUME UP** button or use your device's controls.
5. To lower the volume, press the **⊖ VOLUME DOWN** button or use your device's controls.




TIPS: For maximum audio performance, ensure your device BT volume is set to a minimum 75% level before stowing.


USB INPUT

USB IN OPERATION


1. Insert the **USB** flash drive into the **SOUND BAR**.

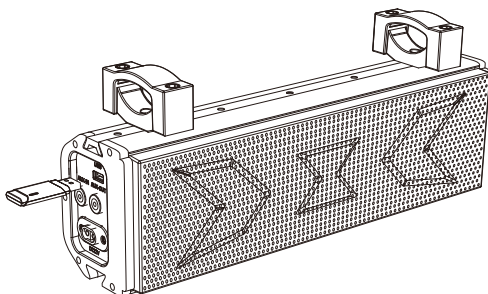

2. Press the “**MOD/⏻**” button. Switch **SOUND BAR** to **USB** mode.

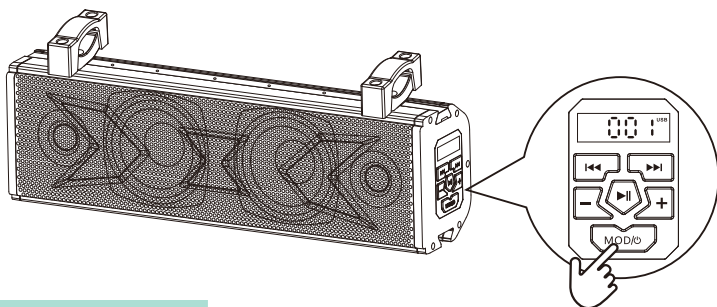

BUTTON OPERATION

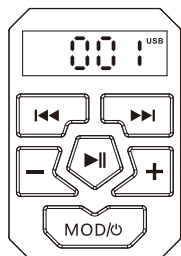

1. Press the **▶|| PLAY/PAUSE** once to start playing music or pause.
2. To select the previous song, press the **◀◀ PREVIOUS TRACK** button.
3. To skip songs or advance, press the **▶▶ NEXT TRACK** button.
4. To raise the volume, press the **+ VOLUME UP** button .
5. To lower the volume, press the **- VOLUME DOWN** button.




TIPS: USB can play music formats MP3 and WMA.


AUX INPUT

AUX-IN OPERATION


1. Connect the **3.5mm AUX** audio cable to the device's **AUX-IN** jack.

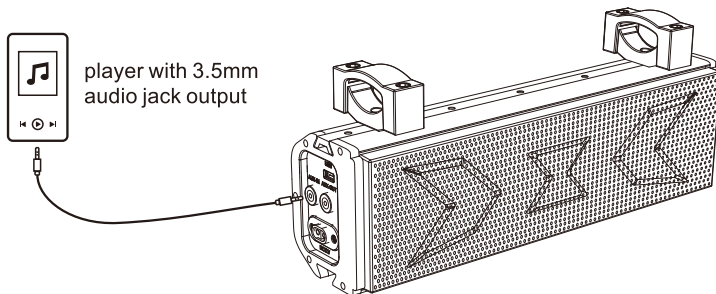

2. Press the “**MOD/⏻**” button. Switch **SOUND BAR** to **AUX** mode.

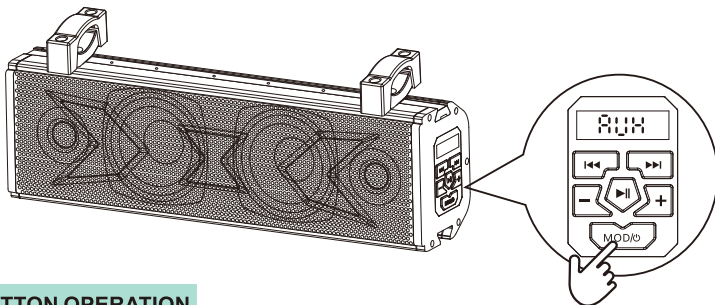

BUTTON OPERATION

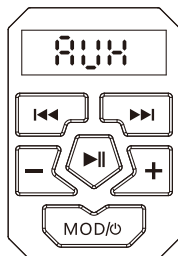

1. To raise the volume, press the **+** **VOLUME UP** button .
2. To lower the volume, press the **-** **VOLUME DOWN** button.




TIPS: sound bar can play audio from any device that has a 3.5mm headphone audio jack.


AUX OUT

AUX-OUT OPERATION


1. To connect two of our **SOUND BARS** for simultaneous music playback using a **3.5mm AUX** cable, plug one end into the **AUX OUT** port of **SOUND BAR A** (the host) and the other end into the **AUX IN** port of **SOUND BAR B** (the secondary).

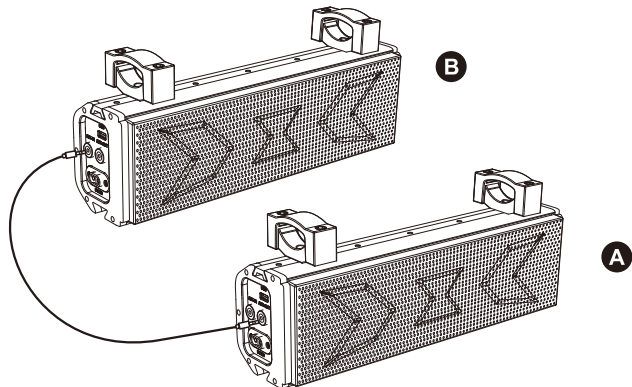

2. **SOUND BAR A** needs to play music in **USB** flash drive mode or **Bluetooth (BT)** mode.

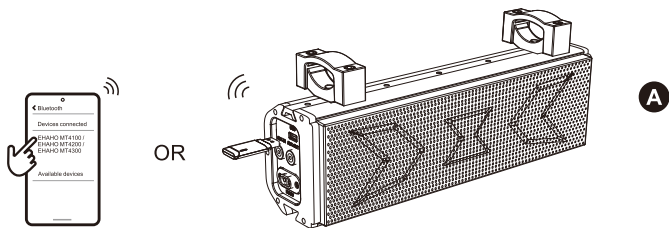

3. **SOUND BAR B** needs to be in **AUX** mode to synchronize with the music playback of **SOUND BAR A**.

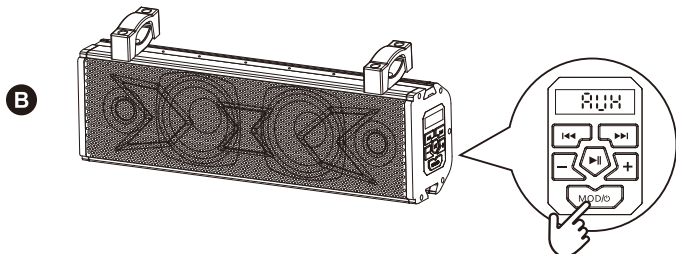

REMOTE CONTROL OPERATION



- | | |
|---|---|
|  On/off key |  Light brightness increase key |
|  Light gradient speed decrease key |  Light brightness decrease key |
|  Light gradient speed increase key |  Up selection key |
|  LED light on/off key |  Down selection key |
|  Light mode up selection key |  Pause/play key |
|  Light mode down selection key |  Volume down key |
|  Light Mode Restore Default Mode Key |  Volume up key |
|  Light color up selection key |  Sound effect selection key |
|  Light color down selection key |  Mode switching key |




Due to different production batches, the color of the buttons may vary, but the function is the same.

REMOTE CONTROL OPERATION



Cautions

- 1) RF controller range: Up to 33ft (LoS)
- 2) Do not obstruct the RF remote with metal
- 3) Do not store in direct sunlight

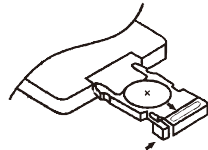

Replacement Battery-CR2032



WARNING: Remote control includes a button battery keep the button battery out of reach of children.
If swallowed, seek medical attention immediately, as ingestion may lead to serious injury, chemical burns, or death.

REMOTE CONTROL OPERATION



Function Introduction

1. After powering on, the light of the host light bar turns on. Press the  LED light switch key briefly to turn off the light of the host light bar. Press the  LED light switch key briefly again to turn on the light of the host light bar.
2. In any state, short press the  light mode to restore the default mode key, and the light bar light will be converted to the default strobe mode.
3. In the default lighting mode, press  or  briefly or use the down or up selection keys to switch lighting modes:
→ Strobe Mode → Single Color Gradient Mode → Fash Mode → Mixed Color Gradient Mode
4. When the light mode is adjusted to the single color gradient mode and the mixed color gradient mode, briefly press the  or  light gradient speed increase or decrease key to adjust the light color change speed.
5. In the light mode, press the  or  light color up or down selection key briefly to switch between light colors. At the same time, press the  or  light brightness increase or decrease key briefly in this mode to adjust the light brightness.

TROUBLE SHOOTING

TROUBLE	CAUSE	SOLUTION
Device will not turn on	The fuse is blown	Check / replace the fuse
	Vehicle didn't start / Main acc switch not engaged	Starting the vehicle / Turn switch to on position
	Operating voltage not applicable	The soundbar operates on 12V DC. The soundbar does not work properly when the voltage is below 8V DC or above 18V DC.
No sound is heard	Incorrect operating voltage	Check the operating voltage, 12V DC (8-18V allowable)
	Soundbar volume is low / muted	Turn up the volume on your device
	The volume of the device inputting music to the Soundbar is too low / muted.	Turn up the volume of the input device
	BT / AUX / USB are not connected properly	Check if the soundbar control panel is successfully connected to the device (BT, AUX IN, AUX OUT, USB IN)
Cannot pair BT	The BT function of the device is not enabled	Refer to the user manual of the device for how to enable the BT function
Device not responding	Power failure or interference	Remove power for 10 seconds to reset

FREQUENTLY ASKED QUESTIONS

Q1: Will this sound bar fit my vehicle?

Mounting with Universal Brackets, fits any offroad vehicle with a 1" ~ 2" roll cage, including UTV, ATV, golf cart, Marine, Boat, Polaris RZR, Ranger, Can-Am, Defender, Maverick, etc.

Q2: Is it plugged in? Or run off a charge?

This soundbar is NOT rechargeable. It needs to be plugged into a 12v vehicle with a cigarette lighter (included in the package) or be hardwired straight to the battery via the 12V DC converter and a fuse (both included in the package).


Q3: Can I turn the led lights off while listening to music?

Yes, RGB light can be turned off at any time by remote control, press Light button to turn off the light.


Q4: Used for the 12V plug test and the soundbar works fine, but when I connect it to the golf cart battery it doesn't work?

The soundbar operates on 12V DC. The soundbar does not work properly when the voltage is below 8V DC or above 18V DC. The working voltage of the golf battery may be 24V, 36V, 48V, please check the working voltage before installing the product, if the voltage is not applicable, you need to use a voltage converter.


DIMENSIONS

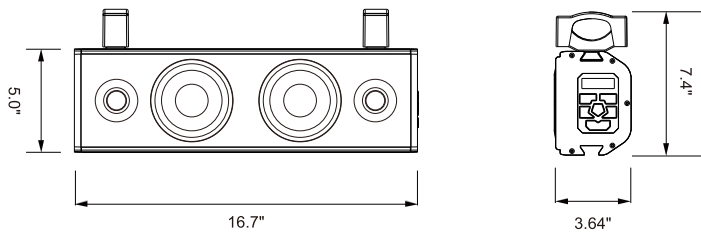

MT4100

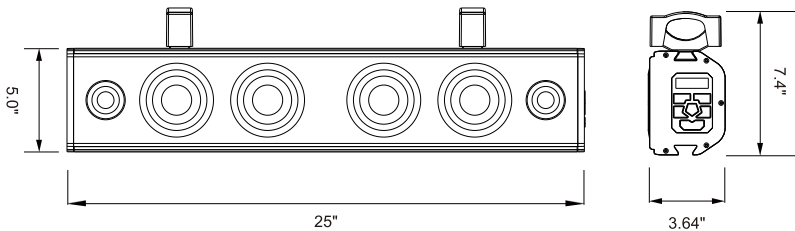

MT4200

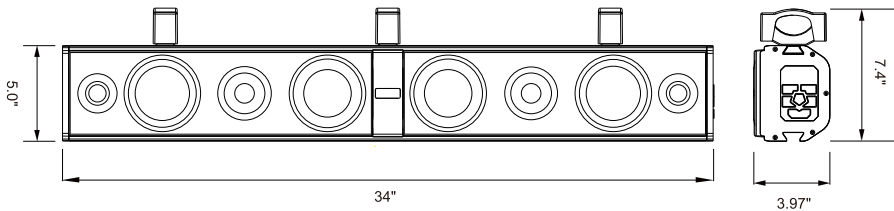

MT4300

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Warm Tips

Regarding voltage compatibility, we provide solutions for vehicles that do not use a 12V DC power supply to ensure you can use the product effectively. For further details, please consult our official customer service team.

After-Sales Service and Warranty

We provide a warranty from the date of purchase. We will repair or replace any defective products free of charge. For any questions or assistance, you can contact our customer service team via below methods for help:

Email: support@ehaho.com

Website: <https://www.ehaho.com>

How to Make a Warranty Claim

Contact Us: Reach out to our customer service team at support@ehaho.com.
Provide Information: Be prepared to provide proof of purchase and a detailed description of the issue including relevant pictures or videos.

Our team will respond to your issues within 24 hours on weekdays. Please check your email, including the spam folder, for our replies. Note that response times may be delayed during weekends or holidays.

Terms and Conditions

This warranty is non-transferable and applies only to the original purchaser. Thank you for choosing Ehaho. We appreciate your business and are here to support you with any questions or concerns.



Thank you for choosing Ehaho.If you have any questions
or need assistance,please contact our customer service
team at:support@ehaho.com