

LEOMEGA
LIFE & ALOUD

PRIL PORTABLE DIGITAL RADIO

Quick Start Guide
www.lemegaudio.com
info@lemegaudio.com



 
Scan me on your
smartphone camera
for more information

Quick setup

Schnelle Einrichtung / Installation rapide / Installazione rapida / Hurtig opsetning /
Snelle installatie / Configuración rápida / Snabb installation / Rychlé nastavení /
Szybkie ustawienia / Configuração Rápida


1. connect power to USB adapter (C)

Schließen Sie den USB-Adapter (C) an.
l'alimentation à l'adaptateur USB (C)
l'alimentazione all'adattatore USB (C)
og tilslut strømmen til USB-adapteren (C)
en sluttde voeding aan op de USB-adapter (C)
conecte la alimentación al adaptador USB (C)
strömmen till USB-adaptaren (C)
a pripojtenapájení k USB adaptéru (C)
i podłącz zasilanie do adaptera USB (C)
conecte a energia ao adaptador USB (C)

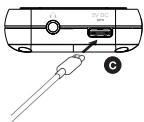


2. Push to switch on

 Zum Einschalten  drücken
Appuyer sur  pour allumer
Premere  per accendere
Tryk på  for at tænde
Druk  om in te schakelen
Pulse  para encender
Tryck på  för att slå på den
Stisknète  pro zapnutí
Nacišni  , aby włączył
Pressione  , para ligar




3. Wait for autotune to complete

 Warten Sie, bis der automatische Sendersuchlauf abgeschlossen ist.
Attendre la fin du réglage automatique
Attendere il completamento della sintonia automatica
Vent på, at autotune er afsluttet
Wacht tot de autotuning is voltooid
Espere a que se complete la sintonización automática
Vänta tills autotune är slutfört
Počkujte na dokončení automatického ladění
Odczekaj na zakończenie automatycznego strojenia.
Aguarde a conclusão da sintonização automática



4. Tap DAB/FM button to switch between (A) DAB radio, (B) FM radio

 Drücken Sie die „Quelle“-Taste, um zwischen (A) DAB-Radio, (B) FM-Radio
Toucher le bouton Source pour basculer entre (A) radio DAB, (B) radio FM
Toccare il pulsante Sorgente per passare tra (A) radio DAB, (B) radio FM
Tryk på Kildeknappen for at skifte mellem (A) DAB-radio, (B) FM-radio
Raak de knop Source aan om te schakelen tussen (A) DAB-radio, (B) FM-radio
Toque el botón «Fuente» para cambiar entre (A) radio DAB, (B) radio FM
Tryck på källknappen för att växla mellan (A) DAB-radio, (B) FM-radio
Klepnutím na tlačítko Source můžete přepínat mezi (A) DAB rádiem, (B) FM rádiem
Naciśnij przycisk Źródło, aby przełączyć się pomiędzy pozycjami: (A) radio cyfrowe DAB, (B) radio FM (C)
no botão Source para alternar entre (A) DAB, (B) rádio FM

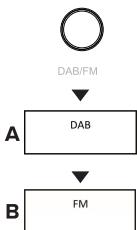

Controls

Bedienung / Contrôles / Comandi / Betjening / Bedieningselementen / Controles / Kontrollen /
Ovládací prvky / Elementy sterujące / Controlos

Tap to turn PRIL on and long press for standby (off when powered by batteries)

Schalten Sie PRIL zwischen Ein und Standby (Aus im Batteriebetrieb)
Passer de marche en veille (non disponible lorsque alimenté par des piles)
Cambiare PRIL tra acceso e standby (spento quando alimentato dalle batterie)
Skift PRIL mellem tændt og standby (slukket når den er drevet af batterier)
Schakel PRIL in tussen inschakelen en stand-by (uitgeschakeld bij gebruik met batterijen)
Cambie su PRIL entre encendido y modo de espera (apagado cuando el dispositivo funciona con pilas)
Växla PRIL mellan på och standby (av då den drivs med batterier)
Přepínání rádia mezi režimem zapnutu a pohotovostním režimem (vypnutu v prípade napájení na baterie)
Używaj przycisku PRIL do przełączania urządzenia pomiędzy trybem włączenia a trybem gotowości (trybem wyłączenia w przypadku zasilania baterijnego).
Alternar entre ligado e em espera (desligado quando alimentado por pilhas)



Switch between digital radio, FM radio

Schalten Sie zwischen Digitalradio, UKW-Radio
Basculer entre la radio numérique, la radio FM
Passare tra radio digitale, radio FM
Skift mellem digital radio, FM-radio
Schakelen tussen digitale radio, FM-radio
Cambie entre radio digital, radio FM, Växla mellan digital radio, FM-radio
Přepínání mezi digitálním rádiem, FM rádiem
Przełączanie pomiędzy radiem cyfrowym, radiem FM
Alternar entre rádio digital, rádio FM



 
Change settings (including language)

Einstellungen ändern (einschließlich Sprache)
Modifier les paramètres (y compris la langue)
Modificare impostazioni (inclusa la lingua)
Skift indstillinger (inklusive sprog)
Instellingen wijzigen (inclusief taal)
Cambiar la configuración (incluido el idioma)
Ändra inställningar (inklusive språk)
Změna nastavení (včetně jazyka)
Zmiana ustawień (w tym języka)
Alterar configurações (incluindo idioma)



Press to change radio stations

Drücken, um Radiosender zu wechseln
Appuyer pour changer de station de radio
Premere per cambiare stazione radio
Tryk for at skifte radiostationer
Indrukken om van radiostation te veranderen
Pulse para cambiar las emisoras de radio
Tryck för att byta radiostationer
Stisknète pro změnu rozhlasové stanice
Naciśnij, aby zmieniać stacje radiowe
Premir para mudar de estação de rádio




Set and recall presets

Voreinstellungen festlegen und abrufen
Définir et se souvenir des préférences
Impostare e richiamare le impostazioni predefinite
Inställ og husk forindstillinger
Instellen en oproepen van presets
Configure y recupere preajustes
Ställ in och återkalla förinställningar
Nastavení a vyvolání předvoleb
Ustawienie i przywrócenie ustawień wstępnych
Definir e recuperar predefinições



Turn and press to select menu options. If listening to content, turn to adjust the volume & tap to mute the volume.

 Drehen und drücken, um Menüoptionen auszuwählen. Drehen, um die Lautstärke anzupassen, wenn Sie etwas hören.
Tourner et appuyer pour sélectionner les options du menu. Si vous écoutez du contenu, tournez pour régler le volume.
Ruotare e premere per selezionare le opzioni del menù. Se si ascolta il contenuto, ruotare per regolare il volume.
Drej og tryk for at vælge menuindstillinger. Hvis du lytter til indhold, skal du drejefør at justere lydstyrken.
Draaien en indrukken om de menu-opties te selecteren. Draaien om tijdens het luisteren volume te regelen.
Gire y pulse para seleccionar las opciones del menú. Si está escuchando contenido, gire para ajustar el volumen
Vrid och tryck för att välja menyalternativ. Om du lyssnar på innehåll, vrid för att justera volymen.
Otočte a stisknète pro výběr možnosti nabídky. Při poslechu užívejte otočením upravit hlaslost.
Obróć i naciśnij, aby wybrać opcje menu. Obracaj, aby ustawiać głośność podczas słuchania.
Rodar e premir para selecionar as opções do menu. Se estiver a ouvir conteúdo, rodar para ajustar o volume.



Rear panel connections

Anschlüsse an der Geräterückseite / Raccordements du panneau arrière / Collegamenti sul pannello posteriore / Bagpaneelbindelser / Aansluitingen achterpaneel / Conexiones del panel posterior / Bakre panelanslutningar / Pripojení na zadním panelu / Złącza na panelu tylnym / Conexões do painel traseiro

Type C-USB Power input

Type C-USB-Stromeingang
Entrée d'alimentation Type C-USB
Ingresso di alimentazione Type C-USB
Type C-USB Power input
Type C-USB-voedingingang
Entrada de alimentación Type C-USB
Type C-USB strömningång
Vstup Type C-USB
Wejście zasilania Type C-USB
Entrada de alimentação Type C-USB



Stereo headphone output (3.5mm)

Stereo-Kopfhörerausgang (3,5 mm)
Sortie casque stéréo (3,5 mm)
Uscita cuffie stereo (3,5 mm)
Stereohovedtelefonudgang (3,5 mm)
Uitgang voor stereokoptelefoon (3,5 mm)
Saída de auriculares estéreo (3,5 mm)
Utgång för stereohörlurar (3,5 mm)
Výstup pro stereofonní sluchátka (3,5 mm)
Wyjście słuchawkowe stereo (3,5 mm)
Saída de auscultadores estéreo (3,5 mm)



 
Choose source

Quelle auswählen / Choisir la source / Scegliere la Sorgente / Vælg kilde / Kies bron / Elegir fuente / Välj källa / Vyběr zdroje / Wybierz źródło / Escolher a Fonte

Digital radio

Change digital radio station


Digitalen Radiosender wechseln
Changer de station de radio numérique
Cambiare la stazione radio digitale
Skift digital radiostation
Wijzig digitaal radiostation
Cambie de emisora de radio digital
Byt till digital radiostation
Změna digitálního rozhlasové stanice
Zmiana stacji radio cyfrowego
Alterar estação de rádio digital



FM radio

Seek to next station

 Nächste Station suchen
Rechercher la prochaine station
Cercare la prossima stazione
Søg efter næste station
Zoek naar het volgende station
Busqueda de la siguiente emisora
Søk efter næste station
Vyhledat další stanici
Wyszukiwanie następnej stacji
Procurar a próxima estação



Manual tune




Manueller Suchlauf
Syntonisation manuelle
Sintonizzazione manuale
Manuel kanalindstilling
Handmatig afstemmen
Manual
Manuellt inställning
Ruční ladění
Strojenie ręczne
Sintonização manual

Preset 1-20

Voreinstellung 1-20 / Pré-réglage 1-20 / Impostazioni predefinite 1-20 / Forindstilling 1-20 / Voornstelling 1-20 / Preajuste 1-20 / Förinställning 1-20 / Predvolba 1-20 / Ustawienia wstępne 1-20 / Predefinição 1-20


Store

  Speichern
Enregistrer
Memorizza
Gemme
Opslaan
Guardar
Spara
Uložit
Zapisać
Save

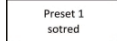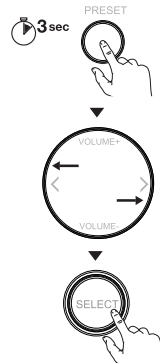

Select


 
Auswählen
Sélectionner
Selezionare
Vælg
Selecteer
Selección
Välj
Vybrat
Wybór
Selecionar

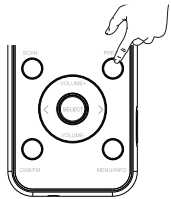

Digital radio settings






Autotune

  Autom. Sendersuche / Autotune / Sintonia automatica / Autotune / Autotune / Sintonización automática / Autotune / Automatické ladění / Strojenie automatyczne / Sintonização automática

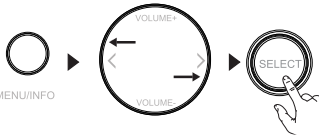

Set sleep timer

     Sleep-Timer einstellen / Régler le minuteur de veille / Impostare il timer di spegnimento / Indstl dval-e-timer / Slaaptimer instellen / Ajuste el temporizador de estado de reposo / Ställ in sömrtimer / Nastavit automatické vypnutí / Ustawienie trybu sleep timer / Configurar temporizador para adormecer

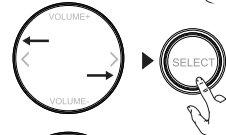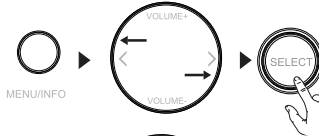



CONTENTS


Topic	Page
Introduction	1
Controls	2
Connections	2
Charging the PR1L	3
Switching on for the first time	3
Locking & Unlocking	4
Switching to DAB/FM Mode	4
Changing the DAB Display Information	4
DAB Mode	5
FM Mode	8
PRESET Button	9
Recall a Station from the Preset List	9
Next/ Previous Button	9
VOLUME +/- Button	10
Performing a Battery Reset	10
Support	10
Warranty	10
Specification	11
Safety Instructions	11

INTRODUCTION

Thank you for purchasing the LEMEGA PR1L.


Please follow the guidance of the manual to set up your device and enjoy its fantastic features.

 CONTROLS

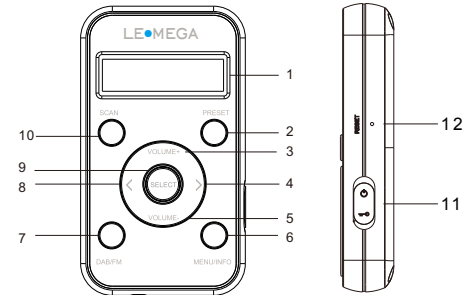

1. LCD Display	7. DAB/FM Button
2. Preset Button	8. Previous /TUNE- Button
3. Volume + Button	9. Select Button
4. Next/TUNE+ Button	10. Scan Button
5. Volume - Button	11. Power/Lock Button
6. Menu/Info Button	12. Reset Button

 CONNECTIONS




1. 3.5 mm headphone socket	2. Type C-USB socket
----------------------------	----------------------

PRODUCT OVERVIEW

Charging the PR1L

 1. Connect the Type C-USB cable to the Type C-USB port.

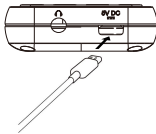


2. Connect the other end of the Type C-USB cable to a power outlet, using a USB power adapter. You can also charge the battery by connecting PR1L to a computer's USB port.

Switching on

Before you switch on the first time, charge the battery for at least 8 hours.

 1. Connect the headphones into the headphone socket. The headphones are also the aerial.

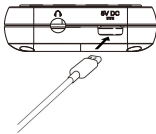

2. Slide the Power/Lock switch into the position and then release the switch. PR1L switches on and starts tuning to digital radio stations. After the auto tune is complete, you can start listening to digital radio.

Locking the PR1L

You can lock the buttons, so you don't accidentally press a button.

1. To lock the buttons, slide the Power/Lock switch into the position.
2. To unlock the buttons, slide the Power/Lock switch into the middle position.

Switching to DAB/FM Mode

1. When powered on for the first time, it will start up DAB Mode.
2. If the PR1L is in DAB Mode, press the MODE button repeatedly until FM is shown on the display.
3. Once in FM Mode, PR1L will start scanning with the available FM range (87.50MHz) or play last FM radio station (See fig.1.).
4. To manually change the FM frequency, make sure that you have not selected any other sub-menus. Turn the TUNE+/TUNE- to change the frequency by 0.05MHz.

87.5MHz
[No RadioText]

Fig.1

Changing the DAB Display Information

1. If the PR1L is in DAB Mode, press MENU/INFO button to select different info to show on the display, such as DLS (Dynamic Label Segment), Signal Strength, PTY (Programme Type), Ensemble, Frequency, Signal Quality, Bit Rate Codec, Battery status, Time or Date.
2. If the PR1L is in FM mode, press MENU/INFO button to select different information to show on the display, such as Radio Text, PTY (Programme Type), PS (Programme Service), Stereo/Mono, Battery status, Time, or Date.

DAB Mode – Choosing Menu Options

1. In DAB Mode, press and hold MENU/INFO to enter the menu list shown on fig.2. Press NEXT/ PREVIOUS to select option through the menu list. Select your preferred option and press the SELECT button to confirm. The menu options are: Full Scan, Station list ,Manual Tune, Prune ,DRC and System.

DAB
< Full Scan >

Fig.2

2. **Full Scan** – In the menu list, press the Next/ Previous button to select “Full scan”. Press SELECT button to confirm (See fig.2).
The radio will automatically start scanning all DAB radio stations available. Once a full scan has been completed, the radio will start playing the previously selected radio station or the first one available from the list.

DAB
< Manual tune >

Fig.3

3. **Manual Tune** – As well as the normal method of scanning, you can also manually tune to a particular channel/frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list. Under the menu list, press the Next/ Previous button to select “Manual tune”. Push SELECT to confirm and then press NEXT/PREVIOUS to select a particular channel/frequency. Push SELECT to confirm the setting (See Fig.3).The display shows a live indication of the received signal strength on the selected frequency. Adjustments to your antenna will be manifested in the received signal strength displayed.

4. **DRC (Dynamic Range Compression)** – This function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter. In the menu list, press the NEXT/PREVIOUS to select “DRC”(See Fig. 4). Push ENTER to confirm. Press NEXT/PREVIOUS to select and Push SELECT button to confirm the setting options: Off (default)/High/Low.

DAB
< DRC >

Fig.4

Note: DRC only works if it is enabled by the broadcaster for a specific station.

5. **Prune** – This removes all invalid stations indicated in the station list with a ‘?’ in front of the station name. In the menu list, press NEXT/PREVIOUS to select “Prune”. Push SELECT to confirm (See Fig. 5). Press NEXT/ PREVIOUS to select <Yes>, and push SELECT to confirm.

DAB
< Prune >

Fig.5

System settings

- 6.1 **Sleep** – To set the sleep timer while the radio is playing Press Menu> System setting>Sleep. You can choose the sleep delay time in minutes from: Sleep Off | 15 |30 | 45 | 60 | 90.
- 6.2 **Time** – if there is any DAB+ radio signal, the machine will automatically update the time, there is no signal, can also be set manually(SeeFig.6).
*Set Time/Date: Set Date>Set Month > Set Year
*Set Hour > Set Minutes >Saved
*Auto Update Options: Update from any / Update from FM /

EU Compliance Information

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2014/35/EU; European Union EMC Directive 2014/30/EU; European Union Restriction of Hazardous Substances Recast (RoHS) Directive 2011/65/EU; European Union WEEE Directive 2012/19/EU; European Union Eco-Design Directive 2009/125/EC; European Union Registration, Evaluation, Authorization and Restriction of Chemicals (REACH) Directive 2006/121/EC. European Union Radio Equipment Directive (RED), 2014/53/EU.



To prevent possible hearing damage, do not listen at high-volume levels for long periods of time. Consistent exposure to high volumes when using headphones can damage your hearing. Always check the volume level before you insert headphones into your ears. Use of headphones other than those supplied by manufacture expose you to hearing damage, as the high-level volume warning on the device may be inaccurate. Use of headphones while operating a vehicle is not recommended and is illegal in some areas. If you find that listening to is distracting while operating any type of vehicle or performing an activity that requires your full attention, stop listening.



- Do not use your product in extremely hot or cold temperature. Keep the device away from heat sources, such as radiators or gas/electric fires. Do not expose your product to naked flames, such as lighted candles.
- To charge your product, only connect it to a supply source that meets the Safety Isolation requirements of EN 60065 or EN 60950-1 for an accessible safety extra low voltage circuit. For this connection, use either the supplied Type C-USB cable or a suitably CE approved power adapter with the correct USB output rating.
- Power the product using an external 5V DC 1A power supply. The maximum output current is 1A, protected by an internal circuit.
- Before charging your product, ensure that the available supply voltage corresponds with the required operation at voltage of the product.
- Disconnect your product from the charging power supply if you will not use your product for a long period of time (for example, if you are going on holiday).
- Always unplug your product from the charging power supply before cleaning. When cleaning the product, do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the product's surface.
- To reduce the risk of electric shock, do not remove any screws. The product does not contain any user-service able parts inside. Product repairs should only be carried out by authorized personnel.

SPECIFICATIONS

Model: PR1L
Type: Portable Digital Radio
Power output: 1CH X1.2W
Power Supply: 5V DC (1A) Type C-USB power socket
Dimension (mm): 90 mm (H) x 51 mm (W) x 16 mm (D)
Weight: 0.1KG

Specifications are subject to change without notice.

SAFETY INSTRUCTIONS

Please read this owner's Manual completely before operating this unit and store this instruction manual for future reference.

- If you do not follow the operating instructions provided, it may compromise the safety of your product and this may invalidate the warranty.
- Do not expose the product to dripping or splashing. Do not place objects filled with liquids, such as vases on the product. If liquid or water spills onto the product, switch it off immediately and contact your retailer. If you are using a mains-powered adapter, do not touch the product with wet hands.
- The internal battery in this product is not user replaceable. Do not expose the battery to excessive heat or naked flames. Ensure adequate ventilation and airflow around the product, particularly when charging. Dispose of the product in accordance with local environmental rules.
- Using the product in rooms or climates with high humidity and temperatures may cause condensation to form inside the product, which can damage the product. Use the product in moderate climates only.

- If PR1L is in DAB mode, you can press NEXT /PREVIOUS buttons to scroll through the radio stations list while playing a radio station.
In DAB mode, you can also use NEXT/ PREVIOUS buttons to navigate through radio Menu list/ Options.
- If the radio is in FM Mode, you can press NEXT/PREVIOUS buttons to manually adjust the frequency by 0.05MHz. Alternatively, press and hold TUNE+/TUNE- button to auto-scan station.
While in FM mode you can also use NEXT/PREVIOUS buttons to scroll through the Menu list/ Options.

VOLUME +/- Button

Adjusting Volume - Turn the Volume dial to increase or decrease the volume.

Performing a Battery Reset

If the controls stop responding, perform a battery reset. To perform a battery reset, use a paper clip to press the reset button on the side.

SUPPORT

If you require further assistance with your new radio, please contact our support team at info@lemegaaudio.com

www.lemegaaudio.com



Scan me on your smartphone camera for more information

(Options: Stereo allowed | Forced mono) in "Audio Setting" (See Fig.12). Press SELECT to confirm the change to new setting. It will automatically change to new setting after 3 seconds.

 


Fig.12

 


Fig.13

 


Fig.14

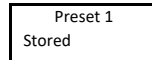


Fig.15

PRESET Button

On PR1L radio you can save 20 DAB radio stations presets and 20 FM radio stations.

To store a radio station as a Preset, select your radio station that you would like to save on the list, then Press and hold down PRESET button for 1-2 seconds until you will see on radio display 'Preset Store #: (Empty)'. (See Fig.13). or "#: saved radio station". Press NEXT/PREVIOUS to select your desired station preset number. Press the SELECT button to confirm your selection. The radio display will then show "Preset # Stored" (See Fig.15).

Recall a Radio Station from the Preset List

To recall a Preset Station, press ' PRESET' button, then using NEXT/PREVIOUS you can view your stored preset stations. When the display shows your desired Preset number, press SELECT to confirm.

Next/ Previous Button

Choosing Radio Stations or Options

confirm (See Fig.9).Use the Next/ Previous button to choose <Yes> and push SELECT button to start the factory reset.

6.6 Software version

Under the System Menu, press NEXT/PREVIOUS to select "Software version" See Fig. 10). Press SELECT to confirm the existing SW version will be showed.

 


Fig.10

FM Mode – Choosing Menu Options

- In FM Mode, press and hold MENU/ INFO button to enter the menu list (See Fig.11). Press NEXT/PREVIOUS to select option in the menu. Press SELECT to confirm option. The menu options

 


Fig.11

- are: Scan Setting, Audio Setting.
- Scan Setting- By default, any FM scan will stop when finding an available radio station which may result in poor sound quality for the radio stations found with weak radio signal reception.
While in 'Scan Setting' . press NEXT/PREVIOUS to view and choose one of these options: 'Strong stations only' or 'All Stations'. Press SELECT button to confirm the change to new setting (See fig.11),
 - Audio Setting – By default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio. The audio quality can be improved using mono. In the Menu List, press NEXT/PREVIOUS to select a particular option

Update from DAB / No Update.
*Set 12/24 hour: 12hour/24 hours
*Set date format: DD-MM-YYYY/
MM-DD-YYYY Cycle through Time Menu

 


Fig.6

by pressing SELECT, choose your option, and push SELECT changes.

6.3 Backlight

–This radio display has a backlight which can be adjustable. You can select the On Level at Low / Medium [default] /High

 


Fig.7

6.4 Language

–The language used for display messages can be English, Deutsch, Italiano etc. In System menu, Press NEXT/PREVIOUS buttons to find the 'Language' menu, Press SELECT button to confirm (See Fig.8). Scroll through the 'Language' menu using NEXT/ PREVIOUS buttons to find your preferred one. Press SELECT button to confirm your selection.

 


Fig.8

6.5 Factory Reset

–This function clears all user defined settings, replacing them with the original default values-Time/Date, Preferences/Settings, DAB station list and Preset Stations are all lost. Under the System Menu, press NEXT/PREVIOUS to select "Factory Reset". Push SELECT to

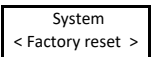


Fig.9