 




ELECTRIC KETTLE

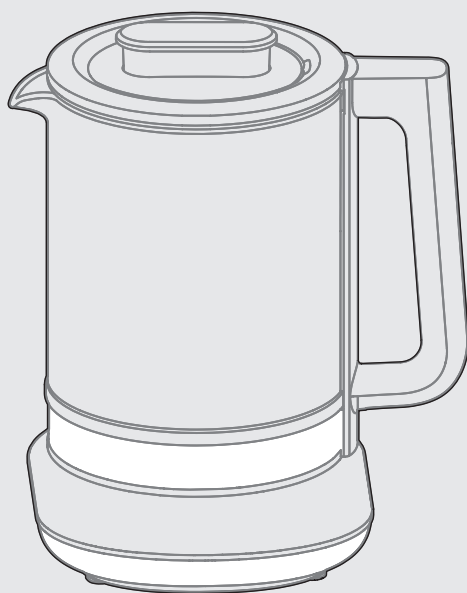

USER MANUAL

MKT200DTDGS

Warning: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.

All diagrams in this manual are for illustration purposes only. The appearance of your actual product may vary.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

SAFETY INSTRUCTIONS 02

SPECIFICATIONS 05

PRODUCT OVERVIEW 06

OPERATING INSTRUCTIONS 07

CLEANING AND MAINTENANCE 11

TROUBLESHOOTING 12

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT 13

DATA PROTECTION NOTICE 13

1 YEAR LIMITED WARRANTY 14



SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer.

Please note modifications or alterations to the appliance are not allowed for your safety. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

This symbol indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

This symbol indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

This symbol indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using the kettle and keep them nearby for later use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- To protect against fire, electrical shock and injury to persons, do not immerse the cord, plugs, or base in water or other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Scalding may occur if the lid is removed during the brewing cycles.
- Do not use outdoors. This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the stand provided.

-  CAUTION: Ensure that the appliance is switched off or unplugged before removing it from its stand.
-  WARNING: Do not spill water or any other liquid on the stand connector.
- Do not use the appliance for other than intended use.
- Unplug the kettle from outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let the power cord touch hot surfaces or hang over the edge of the table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- The appliance is only to be used with the stand provided.
-  WARNING: avoid spillage on the stand connector.
- Do not open the lid during a heating cycle.
- Heating element surface is subject to residual heat after use.
- Heating element surface is subject to residual heat after use.
-  WARNING: Do not remove the lid while the water is boiling.
-  CAUTION: Position the lid so that steam is directed away from the handle.
 - Do not pour any beverage powders into the kettle. If using a beverage powder (such as hot chocolate mix or powdered formula), heat only water in the kettle and mix the hot water and powder in a separate container.
- If the kettle is overfilled, boiling water may be ejected.

- Power cord requirements:
 - a) A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b) Extension cords are available and may be used if care is exercised in their use.
 - c) If an extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) If the appliance is grounded, the extension cord should be a grounding-type 3-wire cord.
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS


SPECIFICATIONS

Product Model	MKT200DTDGS
Rated Capacity	2.0L
Rated voltage	120V~
Rated frequency	60Hz
Rated power	1500W



PRODUCT OVERVIEW

 Part Name

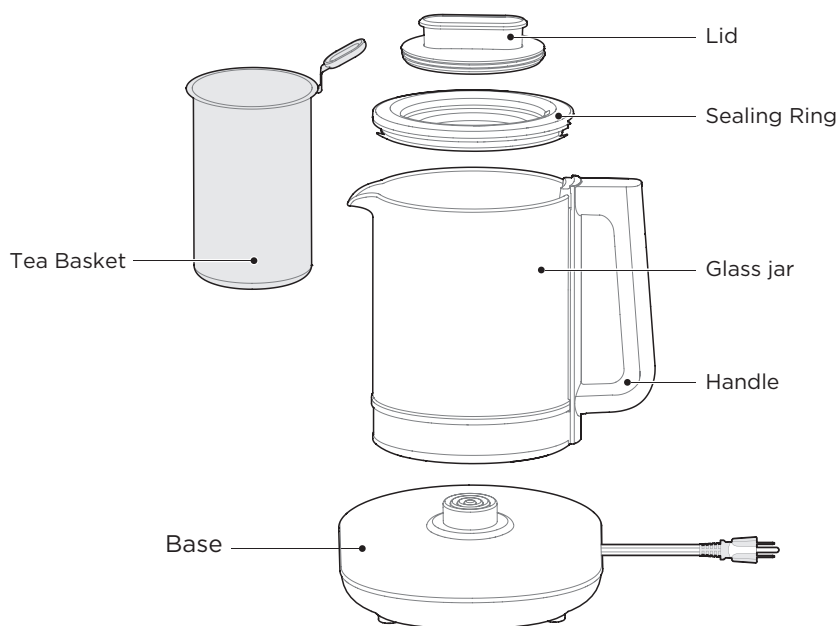


NOTE

All diagrams in this manual are for illustration purposes only. The appearance of your actual product may vary.

OPERATING INSTRUCTIONS

Control Panel

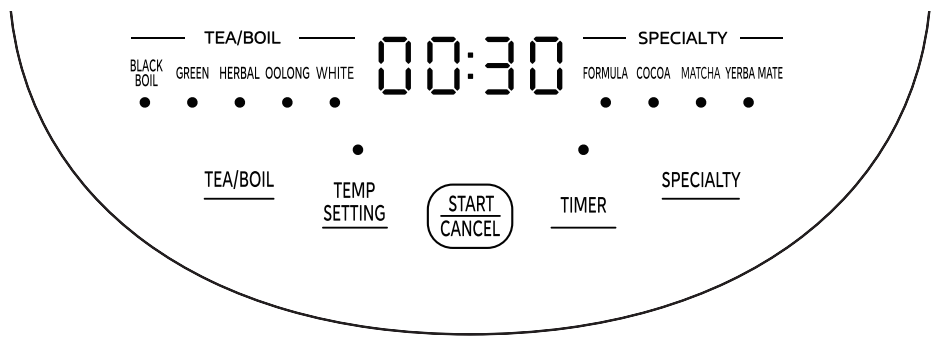

TEA/BOIL	Press to cycle through the available tea or boil settings: BLACK/BOIL, GREEN, HERBAL, OOLONG and WHITE.
SPECIALTY	Press to cycle through the available specialty beverage settings: FORMULA, COCOA, MATCHA, and YERBA MATE.
TEMP SETTING	After selecting a Tea/Boil or Specialty setting, press Temp Setting to cycle through the three available temperature settings for your selected beverage.
START/CANCEL	Press to start or cancel the heating process.
TIMER	After selecting a Tea/Boil or Specialty Setting, press the 【TIMER】 button to set the countdown time within the range of 30 minutes to 24 hours. The kettle will begin heating after the countdown time has passed. Press and hold the 【TIMER】 button to quickly adjust the countdown time. After setting the Timer, press the 【START/CANCEL】 button. The remaining time will display on the control panel. Once the Timer reaches 0:00, the kettle will automatically begin heating.

STANDBY

When the kettle is powered on, there will be a long beep and all indicator lights will flash once. Press any button to display the current water temperature. The kettle is now in standby mode.

If there is no operation while the kettle is in standby mode, it will beep and the display will go dark. Press any key to return to standby mode and display the current water temperature.

KEEP WARM MODE

Keep Warm mode will maintain a temperature of 122°F for 12 hours. During Keep Warm mode, you may hear an occasional clicking sound. To exit Keep Warm mode, press Start/Cancel.



BOIL DRY PROTECTION

If the kettle is dry, the boil dry protection function will automatically stop any heating to prevent the electric kettle from being damaged.

If the boil dry protection triggers, unplug the power cord from the outlet and wait about 10 minutes for the kettle to cool down naturally.

Do not use cold water to cool the kettle down, as that could reduce the service life of the heating system.

BLACK/BOIL 212°F

The default temperature for the BLACK/BOIL setting is 212°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

GREEN 175°F

The default temperature for GREEN is 175°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

HERBAL 210°F

The default temperature for the HERBAL setting is 210°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

OOLONG 195°F

The default temperature for the OOLONG setting is 195°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

WHITE 185°F

The default temperature for the WHITE setting is 185°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

FORMULA 104°F

The default temperature for the FORMULA setting is 104°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 104°F for 12 hours.

COCOA 140°F

The default temperature for the COCOA setting is 140°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

MATCHA 160°F

The default temperature for the MATCHA setting is 160°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

YERBA MATE 185°F

The default temperature for the YERBA MATE setting is 185°F. The kettle will stop heating once the target temperature is reached, then enters Keep Warm mode to maintain a temperature of 122°F for 12 hours.

Tea recommendations

Preset	Default Temperature	Recommended Drink Types	Temp Setting Range for Beverage
BLACK/BOIL	212°F	Black Tea with Milk Pu'erh	For Black tea 195°F-205°F-212°F
GREEN	175°F	Sencha Gyokuro Jasmine	160°F-165°F-175°F
HERBAL	210°F	Fruit Teas Rooibos Peppermint	195°F -205°F -210°F
OOLONG	195°F	Most Oolong Teas	185°F-195°F-205°F
WHITE	185°F	Most White Teas	175°F-185°F-195°F
FORMULA	104°F		104°F-115°F-120°F
COCOA	140°F		140°F-150°F-160°F
MATCHA	160°F		160°F-170°F-180°F
YERBA MATE	185°F		175°F-185°F-195°F

NOTE: This table includes recommended guidelines. The ideal temperature ranges may vary according to personal preference. Experiment with your favorite tea and adjust temperature and steep times to suit your taste.

Automatic Boiling Point Detection


- When this kettle is used for the first time, it will automatically detect and record the boiling point for the area where it was used. The time needed to boil water may be slightly longer during first use. After first use, the boiling time will return to normal.
- When using this kettle to boil water for the first time, we recommend using 1.2L of water to avoid splashing hot water during boiling point detection.
- If this product is moved from a high-altitude to a low-altitude area, please complete a BLACK/BOIL function to detect and reset the boiling point of the new area. If the boiling point is not reset, the water may not boil correctly.



Operation Instructions

Installing the Tea Basket


Place the tea basket into the sealing ring. The tea basket handle should fit into the groove on the inside of the sealing ring.

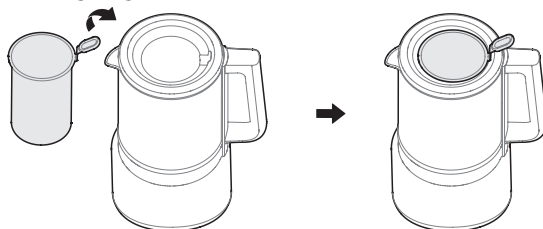


Heating water

1. Open the lid and fill the kettle with fresh water. Keep the water level between the MIN 0.5 L fill level and MAX 2.0 L fill level. Make sure the water level is between the MIN and MAX marks with or without the tea basket installed.

IMPORTANT: This kettle is designed to heat water or brew tea from tea leaves. If you are using a beverage powder (such as hot chocolate mix), please heat only water in the kettle, then mix the hot water and powder in a separate container.

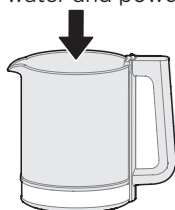

2. Place the kettle body on the power base, close the kettle lid, and plug in the power base. Do not open the lid during a heating cycle.

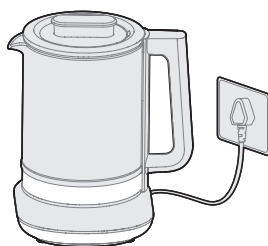

3. Press any key to enter standby mode, then press the [TEA/BOIL] or [SPECIALTY] button to select a brewing function.

TEA/BOIL

SPECIALTY

4. OPTIONAL: Change the Temperature or Timer settings.

Temperature Setting: Press the Temp Setting button to cycle through three different temperature settings.

Timer Setting: Press the Timer Setting button to increase the countdown time in half-hour increments. The kettle will not begin heating until the countdown time has passed.


5. Press Start/Cancel to begin.




CLEANING AND MAINTENANCE

Cleaning the Tea Basket

The tea basket can be cleaned in the dishwasher or hand-washed with regular dish detergent.

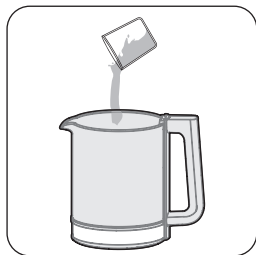

1. Remove the kettle from the base and remove the tea basket. Add a descaling agent and clean water to the kettle. The water level should be between the MIN and MAX marks (0.5-2.0 L).

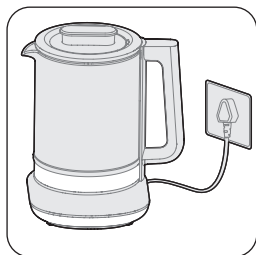

2. Close the lid and return the kettle to the base. Plug in the base and press the [TEA/BOIL], then select [BLACK/BOIL] to boil.



3. Let the solution stand for at least 60 minutes, then discard the descaling agent solution.



4. Rinse the inner pot with clean water, then wipe it dry with a clean, soft cloth.

Error Codes

Error code on display panel	Possible causes	Solutions
C1	Sensor overheat protection	Disconnect the power, check that the settings are correct, then wait for a while before powering the kettle on and using it again. If the problem persists, please contact Midea customer service.
E2	Sensor short-circuit protection	

When the display panel displays an error code, use the above table to identify and address the issue. If the problem cannot be resolved, contact Midea customer service for assistance.

TROUBLESHOOTING

Problem	Possible causes	Solutions
Indicator lights are off	The plug is not plugged in properly	• Check that the power plug is properly inserted.
	Lighting wire fault	• Contact Midea customer service for maintenance.
The kettle does not heat	There is no brewing function selected	• Select a function.
	The product is in Timer Countdown mode.	• This is normal. Wait for the timer to count down or press Start/Cancel and select the function again.
	Appliance breakdown	• Contact Midea customer service.
No response after pressing buttons	The machine is currently operating a brewing program	• This is normal. Press Start/Cancel to cancel the brewing program.
	There is water on the operation panel	• Wipe the operation panel dry.
	Appliance breakdown	• Contact Midea customer service.
Kettle making clicking sound	This is normal when the kettle is in Keep Warm mode.	• Exit Keep Warm mode to stop the sound.

If you are experiencing any issues with your product, please check the above table for potential solutions before calling for service. Call 1-866-646-4332 or visit <https://www.midea.com/us/Support>.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

The  Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates ("Midea"), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**.

1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover wear from normal use, and damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales. This warranty is void if products is used for other than single family household use or subjected to any voltage and waveform. We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. Legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty.

In the event of a warranty period claim, question, comments or if service is required for this product, please contact the Customer Service Center:

Midea America Corp.
300 Kimball Drive Parsippany, NJ 07054

customerserviceusa@midea.com
1-866-646-4332

Business Hours
Mon - Fri: 8am - 7pm (EST)
Sat: 9am - 4pm (EST)

Note: Contact the Customer Service Center to order replacement parts.



make yourself at home



www.midea.com

© Midea 2022 all rights reserved