 


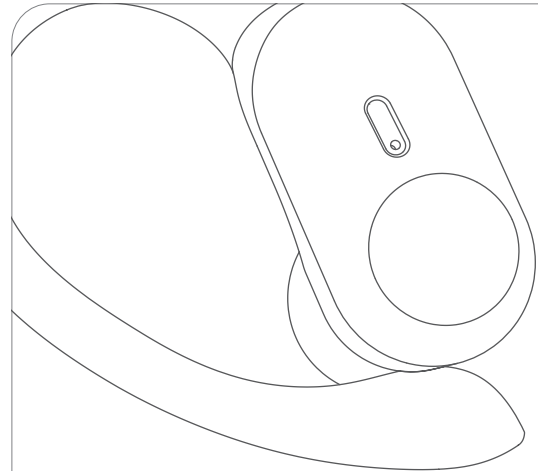

T59 ANC User Manual

TRUE WIRELESS EARBUDS

V1.2 2025.11.26

Customer Service

US: (617) 751-1159 Mon.-Fri.

 
Package Accessories




Charging Case x1



Earbuds x2



 Ear Tips Set x3
(Size M has been
preinstalled on earbuds)




Type-C
Charging Cable x1



User Manual x1

 Overview

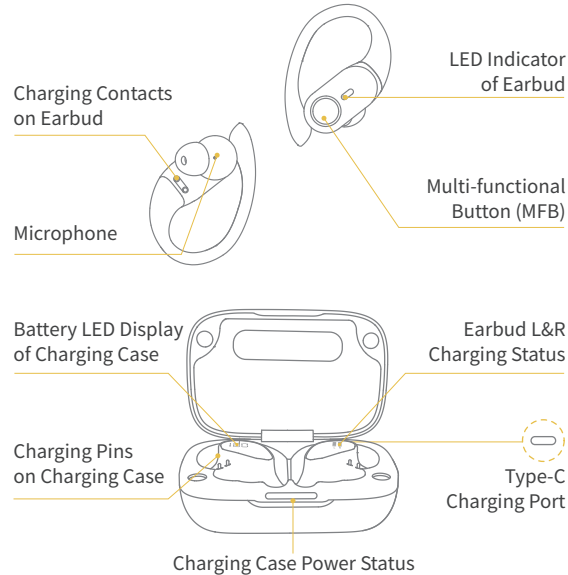

Product Parameters

 
Product Name: T59 Headset
Model No.: T59
Input: 5V $\Rightarrow$ 1A
Battery Capacity: 3.7V 600mAh, 2.22Wh
FCC ID: 2A33A-T59
IC: 32589-T60
HVIN: T59
Charging Cord Type: Type-C
Transmission Range: 33feet (Without Obstacles)
Frequency Response: 20Hz - 20kHz

First Use

- Before the first use, please tear off the isolating film on the earbuds. Put the earbuds into the case, then charge both earbuds and charging case via supplied Type-C charging cable for at least 10mins (or after not use for a long time); do not take out the earbuds during this period.
- The earbuds are installed with a pair of size M ear tips by default. You can select other suitable sizes for a secure fit.

How to Wear?

- Step 1:** Adjust earbuds downwards to a proper position and push earbuds into your ears.
- Step 2:** Slightly adjust earbuds to fit you best.

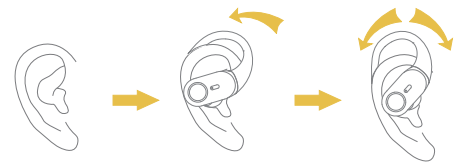

How to Pair?

Method 1:

- Pick up two earbuds from the charging case. They will auto power on and pair with each other in 10s.

If the earbuds are not connected to your device over 5 minutes, the earbuds will power off automatically. Turn on the earbuds manually by pressing the MFB button for about 2 seconds to hear the prompt "power on".




- The LED indicators on the buds will flash white-red in sequence continuously, the other bud will blink white slowly.
- On phone, search for "T59" and tap to connect.

You will hear "connected" from both earbuds. Then the indicator lights will turn off after the earbuds are connected.

Method 2:

 - In the unconnected state, double click the MFB of two earbuds to enter pairing mode.

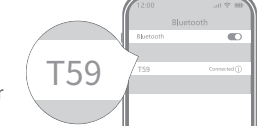


How to Reset?

- Take out the earbuds and make sure they are disconnected from all devices.
- Simultaneously click the buttons on both earbuds five times.
- The earbuds will play the "power off" prompt tone, and the red and white indicator lights will flash three times simultaneously. The earbuds shut down, indicating a successful reset.



Maintenance

 After a period of use, the charging metal contacts of the earbuds may be contaminated with sweat and dirt, resulting in the earbuds aren't able to power on, charge, or having connection issues, and the protective grille of both earbuds may accumulate earwax and dust, resulting in muffled volume. Please use the cleaning swab to remove dust or earwax from the charging contacts and the protective grille.

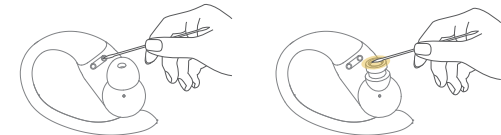

Indicator status of the earphone

Power-on: White light for 1s;
Power-off: Red light for 1s;
Pairing mode of the earphones: White light of dual earbuds flash;
Device to be connected mode: White light of the main earphone flashes;
Connected to the standby state: White light on the L/R earphone for 1s after connected, then goes out;
Phone state: White light goes out.

Indicator status of the battery case

- Charge the case: After plugging in the USB charging cable, the LED bar on the front will flash slowly during the charging process.
- Charge the earphone with charging case (without external charger): Put the earphone into the charging case, the earbuds will be charged immediately and the red indicator flashes.
- Charging case is fully charged (plug cable): LED indicator bar is steady on (flash slowly during charging).

Dual Mode

Power on:
Pick up the earbud from charging case/ Press and hold the MFB for 2s in power-off state

Power off:
Standby/Non-playing music, press and hold the MFB for 5s. Put into the charging case/Not connected to any devices over 5 minutes

Play/Pause:
Click MFB once

Answer/End call:
Click MFB once

Reject call:
Press and hold the MFB on L/R earbud for 2s

Next track:
Double click MFB on R earbud

Volume +:
Long press R earbud

Activate/Stop the voice assistant:
Triple click the MFB on R earbud

Previous song:
Double click MFB on L earbud

Volume -:
Long press L earbud

ANC On /ANC Off / Transparency:
Triple click the MFB on L earbud

Mono Mode

Music Mode

Play/Pause	Press Once (R/L)	Volume+	Long Press (R/L)
Next Track	Press Twice (R/L)	Volume-	Unsupported
Previous Track	Unsupported	Voice Assistant	Press three times(R/L)

Tips: The ANC function cannot be used in Mono Mode.

How to Charge?

 
Type-C USB Charging

There is a Type-C USB charging cable in the package, please use it to charge the case directly. During charging, the digital display will flash and show the battery in real-time. After being fully charged, the number is displayed as 100.

The right display panel indicates the charging status per headset. There are separated power consumption indicators by 4 grids in total, the indicator light will always flash during charging.

Wireless Charging

Charge the case easily without cables, just put your charging case on the wireless charging pad. If the charging case is not being charged, please try to reposition it. (Wireless Charging Pad Not Included)

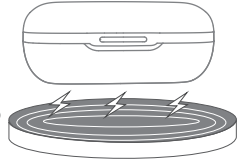

Troubleshooting Guide

- Q1:** What should I do when the earbuds can't be paired with my mobile device?
A1: Reset your earbuds and pair the earbuds with your mobile device again.
- Q2:** What to do when the earbuds can't be charged?
A2: The charging case may run out of power. Please charge it for at least one hour, then put the earbuds into it to charge.
- Try to take out the earbuds and clean the charging pins, then put the earbuds into the charging case to see if the display panels on the case light up or not. There may be some malfunction with your charging case. If your charging case can't charge for earbuds after many attempts, please contact us.

- Q3:** What should I do if there is no sound from one earbud?
A3: Turn off Bluetooth on the device and turn it on, then pair your earbuds with the mobile device again.
- For Android devices, if there is no sound from one earbud after connecting, you need to check whether the phone volume is too low. If the phone volume is normal, it may be that the volume of the earbud has been turned to the minimum. Please try to adjust the volume of the earbud.

- Q4:** What device can the earbuds be connected to?
A4: Devices with BT version over 5.0
- Q5:** Can my earbuds be paired with multiple devices?
A5: The earbuds don't support this feature currently.
- Q6:** Can I use one earbud at a time?
A6: Yes. After connecting the earbuds to your mobile device, you can use them together or just use one earbud alone.
- Q7:** Can I activate voice assistant through my earbuds?
A7: Yes. You can wake up the voice assistant by tapping the Touch pad of either earbud 3 times after pairing the earbud with your mobile device.

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of some lithium battery types)

- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion
- Do not leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- l'appareil ne doit pas produire de brouillage, et
- l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité et compliance d'acquérir les informations correspondantes.

Caution

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

The symbol indicates DC voltage



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

The device is low power device, it can meet the requirement of the RF exposure.

NOTES:

- High Sound Pressure
- Hearing Damage Risk
- Do not listen at high volume levels for long periods.



FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2A33A-T590

