 


英语

Model NO.: KT11

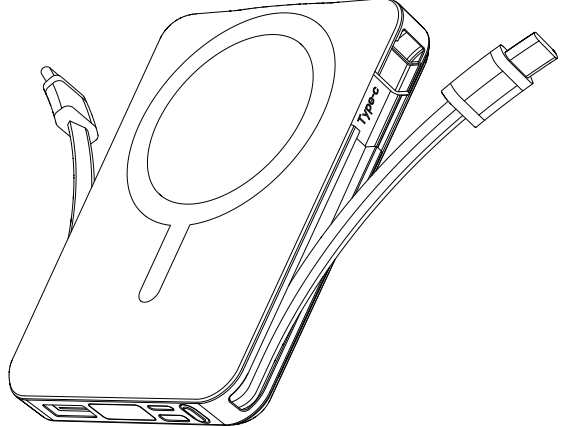

WIRELESS POWER BANK

Instructions Manual

 
10000mAh

CAUTION: Risk of Fire and Burns. Do Not Open, Crush, Heat Above (45 °C) or Incinerate. Follow Manufacturer's Instructions.



Please read this instruction carefully before using the product and keep it properly

Name: Wireless Power Bank
Model NO.: KT11
Battery Type: Lithium Polymer
Material: ABS + PC
USB-C port input: 5VDC, 3A/9VDC, 2A
Lightning input: 5VDC, 2A
USB-C port output: 5VDC, 2A/9VDC, 2.2A 12VDC, 1.67A
USB-C wire output: 5VDC, 2A
USB-A output: 5VDC, 2A
Total output: 5VDC, 3A (15W Max.)
Wireless charging output: 15W Max.
Battery Capacity: 10000mAh (3.85V 38.5Wh)
Rated Capacity: 6000mAh (5VDC, 2A)
Energy Conversion ≥ 60%
Product size: 104x71x19mm (4.09x2.80x0.74 inch)
Net Weight: 197g/0.43lb

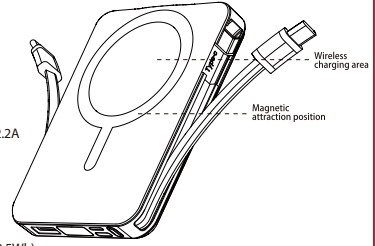

Packing List:



Wireless Power Bank*1



Instruction*1



USB to Type-C Cable*1

Product Description:

Product description: This product is a portable charging device, which can provide wired charging and wireless charging for mobile phones, tablets, ebooks and game consoles. The product is characterized by built-in lighting cable and type C cable, and supports wireless charging, magnetic attraction positioning, digital power display, 20W PD fast charging, three outputs (including WirelessOutput), 15W wireless fast charging, etc. It has overcharge protection, over-discharge protection, temperature protection and other safety protection circuits.

USING INSTRUCTIONS: Checking Quantity of Electricity:

Press on/off button check the remaining electricity of the power bank on the Led display. The display will automatically turn off after about 30 seconds;

Charging the Power Bank:

Charging the power bank: When connecting to the charging cable matching the mobile power interface, the electric quantity number of the display will flash, which means that the connection is normal and the power bank is charged. If there is no flash with the number, it means that the connection fails and there is no charging. Please check whether the charging cable is connected correctly.

Operation Instruction of Wired Charging:

 
Operation instruction of wired charging: Connect the USB charging cable to the corresponding output port of the power bank, and the power bank will automatically turn on the output. Due to compatibility, some smartphones need to press the button to turn on the power output function, which is a normal phenomenon and need not be ignored. Press the key once to supply power to the external equipment.

Wireless Charging Operation Instructions:

The wireless charger has the function of self-starting. It doesn't need to press the switch. It just needs to put the mobile phone close to the wireless charging coil and charge it as soon as it is placed. If there is no wireless load access within 30 seconds, the product will automatically turn off the wireless charging function.

Wireless Charging Tips:

Wireless charging tips: Wireless charging mobile phone needs to place the wireless charging area of the product (see the illustration for the wireless charging coil emission area) for wireless charging. The charging distance of this product is within 2mm. If the wireless charging distance exceeds 2mm, the wireless charging cannot be carried out. Please adjust the wireless charging distance of the mobile phone within the wireless charging range.

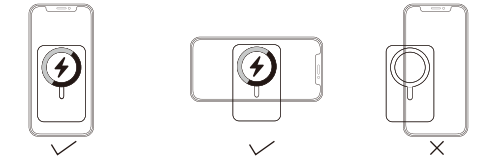

Charge the Product:

Charge the product: Use the power adapter/computer USB port to charge the local wireless charging mobile power bank. The Type-C charging cable can be used to plug into the Type-C input port of the wireless charging power bank to charge the power bank. Connect the USB connector to the charger or the USB port of the computer, and the number of the power indicator will start to flash, indicating that the product is being charged. When it is fully charged, the digital display will display "100".

Charge Mobile Phones or Other Digital Devices:

1. Check whether the charging voltage of the digital product matches the output voltage of the product.
2. Select the original charging cable of the digital product, one end is connected with the digital product, and the other end is connected with the output port of the product. The wired output terminal of the product automatically turn on to charge the mobile phone or other digital products, and the digital display screen will always be on.
3. Charge the mobile phone with a wireless charging function, The wireless charger has the function of self-starting. It doesn't need to press the switch. It just needs to put the mobile phone close to the wireless charging coil and charge it as soon as it is placed.

Reminder:

Please read all instructions and warnings before using this product. Improper use will damage the product or personal safety.

1. The charging contact surface on the back of the mobile phone does not contain metal substances, such as iron sheets, rings, metal protective cases, etc.
2. When the mobile phone is charging, if intermittent charging or serious heating is found, it is likely that the receiving coil of the mobile phone is not fully aligned with the wireless charging coil, and there are metal foreign bodies in the protective sleeve of the mobile phone. Please try to cool the mobile phone, remove the protective sleeve, and then align it in the normal position.
3. This product has an over-current protection function. If the product is used improperly, it will turn off or reduce the output power, reduce the charging speed and ensure safety. Please check whether the equipment is used improperly or not.
4. Do not let children use alone under 12-year, especially the accessories.
5. Please use a dry soft cloth to clean the surface. Do not use chemicals, soap, or detergent.
6. Please don't dismantle the machine by yourself. The user's abnormal use or improper placement of this product may reduce the service life or damage the product. Therefore, the responsibility does not belong to the warranty responsibility or the manufacturer's responsibility. Please understand.
7. There is a conversion rate in the power bank, so the battery capacity of the power bank is not equal to the rechargeable capacity.
8. Please charge your power bank regularly (at least 5 months is recommended) to maintain its long service life.
9. Improper use of the product may easily result in the product itself or endanger the safety of personal and property.
10. If consumers violate the product manual and improperly apply or warn, the personal and property damage caused by consumers and the company will not bear any legal responsibility.
11. Non-professionals are strictly prohibited to decompose this product.
12. Avoid using electrical appliances or loads that exceed the output current of the product (the circuit will be protected, no output).
13. Avoid strong physical effects, including knocking, throwing, trampling, squeezing, etc

14. Store the product in a cool, dry place. Do not store the product in a hot or humid environment. Do not dispose of the product in heat or fire.
15. Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.
16. Operating temperature should be between 10°C to 45°C / 50°F to 113°F
17. Storage Temperature range: -10 to 60 °C
18. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using the product.
 - b) To Reduce the Risk of Injury, close supervision is necessary when the product is used near children.
 - c) Do not put fingers or hands into the product.
 - d) Do not expose power bank to rain or snow.
 - e) Do not expose power bank to heat or fire. Do not store in direct sunlight or in a vehicle.
 - f) Use of a power supply or charger not recommended or sold by power bank manufacturer may result in a risk of fire or injury to persons.
 - g) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
 - h) Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
 - i) Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
 - j) Do not expose a power bank to fire or excessive temperature. Exposure to fire or temperature above 45 °C can be replaced by the temperature of 113°F.
 - k) Have servicing performed by a qualified service or repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
 - l) Switch off the power bank when not in use.
- SAVE THESE INSTRUCTIONS

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

