

SENCOR[®]

SFN 4091WH



PEDESTAL FAN 3D ULTRASILENT 14"

Translation of the original manual

 


 
 
SENCOR®

SFN 4091WH




A

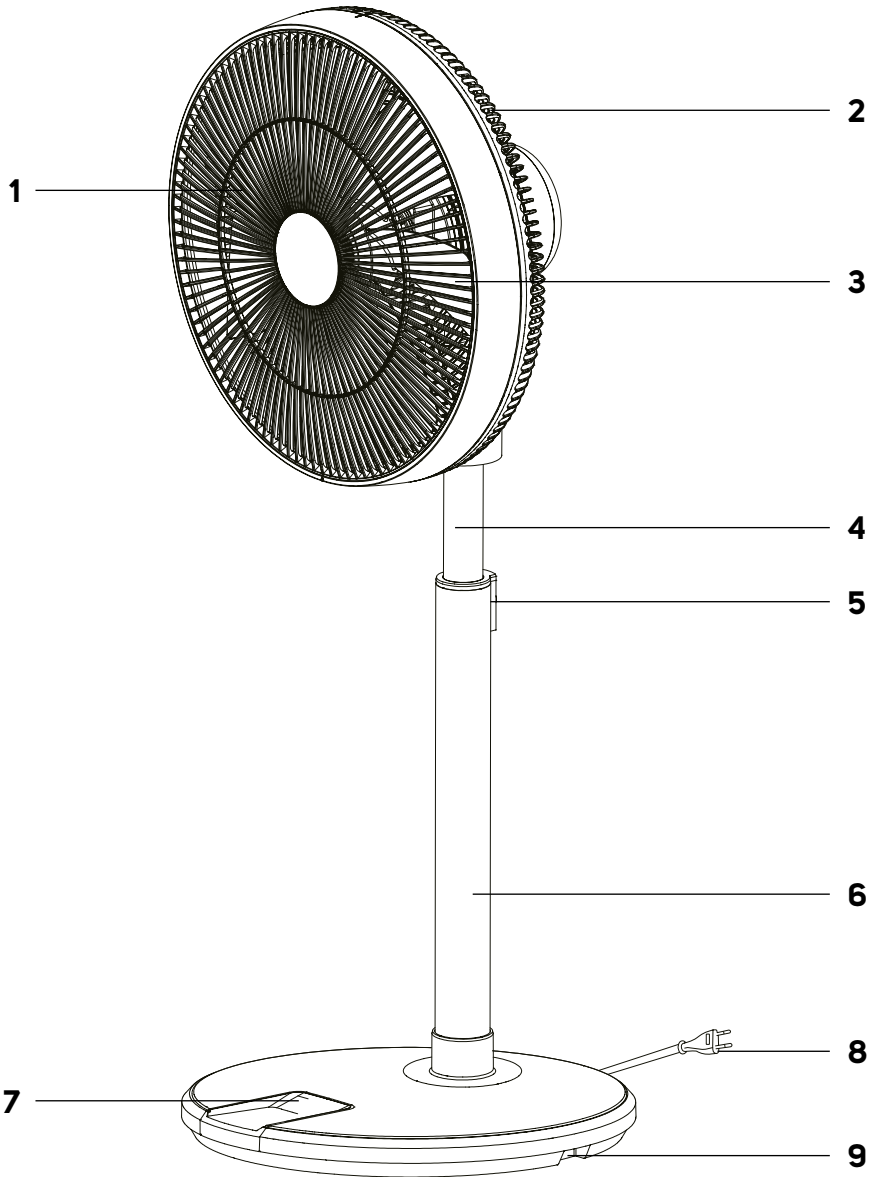

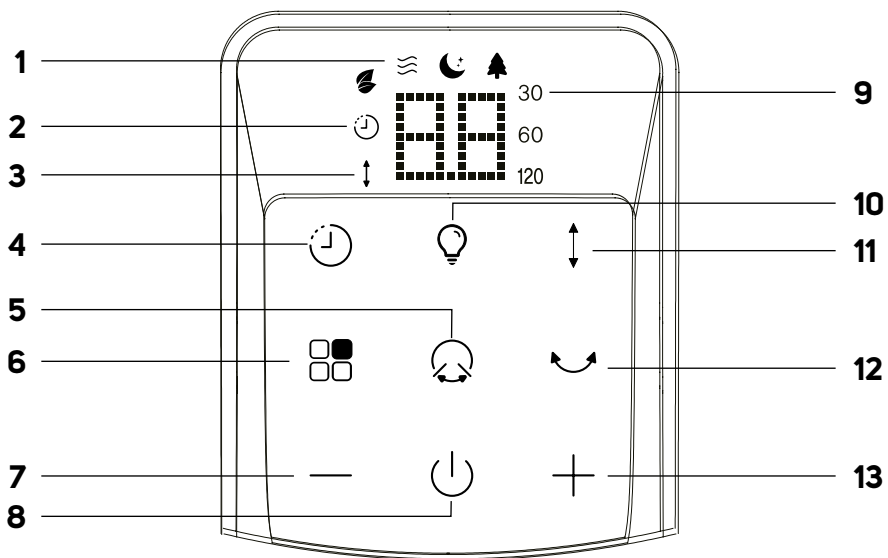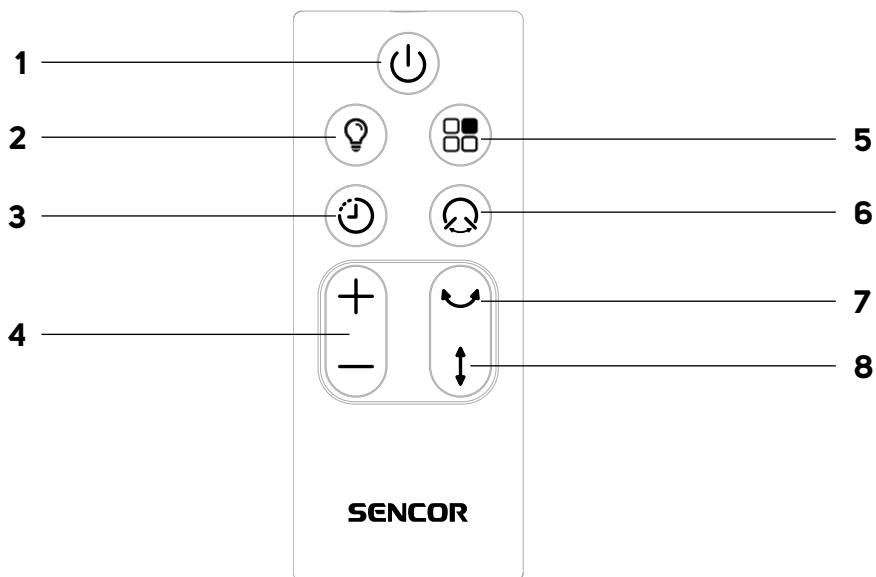
B**C**

D

 
D1

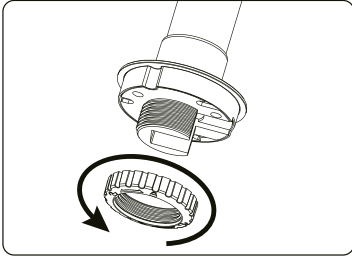


D2

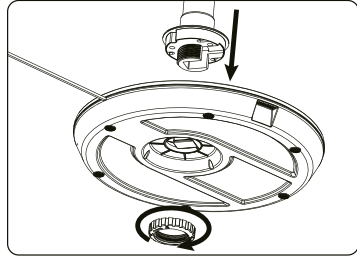 


D3

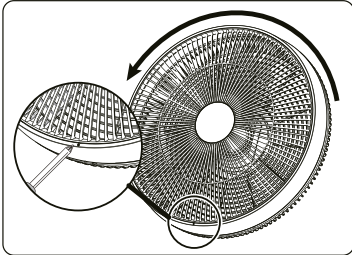 


D4

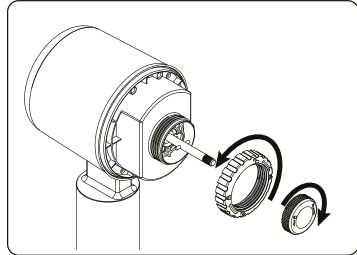 


D5

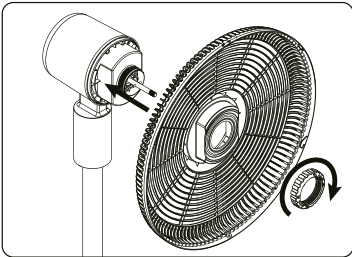 


D6

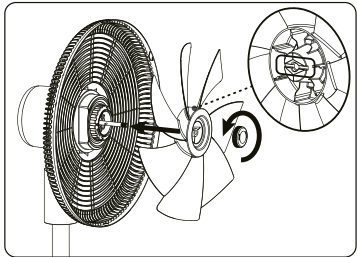 

D7

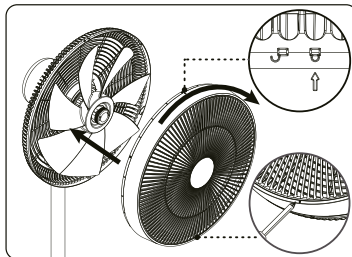 

E

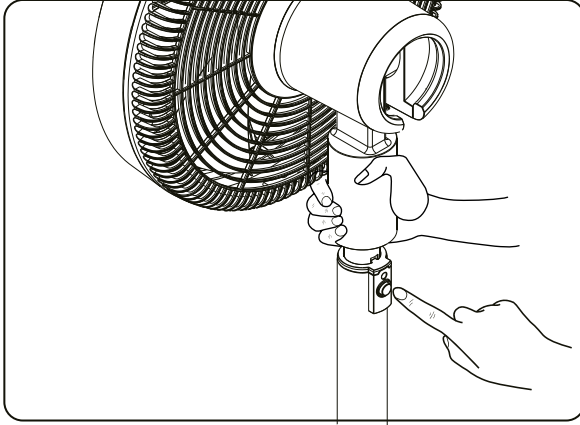 

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cable is damaged.
- The fan is not intended to be mounted on external windows or walls.
- Before removing the protective grille, ensure that the fan is disconnected from the mains.

Additional Important Safety Instructions for Use of the Appliance

- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly earthed socket. Do not use an extension cord.
- The power socket must remain easily accessible in the event of a sudden disconnection.
- The appliance is designed for use in household, offices and similar types of areas. Do not use it in very dusty or humid rooms such as laundries or bathrooms, in areas where chemical or explosive substances are stored, in industrial surroundings or outdoors.
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Make sure that the fan, the power cord and the power cord plug do not touch a hot surface.
- Do not use this appliance with a programmer, timer, remote control system or any other component that would switch the appliance on automatically.
- To prevent electric shock, do not immerse the fan, power cord or power cord plug in water or other liquid, or rinse them under running water.

- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision, when not using it and before assembly, disassembly or cleaning.
- Never touch the appliance with wet or damp hands or when standing on a wet floor.
- Do not carry the appliance by the power cord. Always grasp the body of the appliance with both hands.
- Before using the appliance, make sure it is assembled correctly.
- Unplug the appliance from the power socket by pulling the plug, not the power cord. Otherwise, damage to the power cable or socket could occur.
- Make sure the power cord does not hang over the edge of a table or that it does not touch a hot surface. Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres. Place the appliance only on a clean, flat, dry and smooth surface.
- Do not expose children, the elderly or people who are bedridden to a cold air current for an extended period of time.
- Do not cover the appliance with any items during operation.
- Never stick your fingers or other objects through the protective grille when the appliance is connected to a power socket. This is especially true when the appliance is in operation.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid a hazardous situation arising, do not repair the device yourself or modify it in any way. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

Special safety instructions regarding batteries

- The fan remote control uses a CR 2032 type button cell battery to power it.
- The batteries are not a toy. Ensure that children do not play with the batteries. Keep new and old batteries out of the reach of children. Batteries pose a serious health risk in the event of ingestion (chemical burns with serious consequences or suffocation) within a very short time. If the battery is suspected to be ingested, seek medical help immediately.
- Use only the battery types recommended by the manufacturer.
- Do not combine new and old batteries, various brands or types of batteries (alkaline or rechargeable).
- The batteries must be correctly inserted according to the polarity. Improperly inserted batteries can damage the product, causing the battery to short-circuit or leak.
- Before inserting, check that the batteries are not damaged, deformed or inflated. Using damaged batteries in any way poses a risk of fire, explosion or serious injury.
- After inserting or replacing the batteries, check that the battery compartment cover is not damaged, that it is properly closed to prevent the batteries from falling out. If the battery compartment cover is damaged, cracked or missing, do not use the product and have it repaired.
- Do not use the product with discharged batteries. Replace discharged batteries with new ones. This will prevent possible damage to the product or leakage of the batteries.
- Wash your hands before and after replacing the batteries. You will prevent the transfer of dirt.
- If you do not use the product for an extended period of time, remove the batteries to prevent them from leaking and damaging the product.
- Store the batteries and the product with the batteries in a dry, cool and well ventilated place. The recommended storage temperature is 5 to 45 °C. Do not store batteries or the product with batteries in wet or dusty environments, in extreme temperatures, or in environments where toxic, chemical, or explosive substances are stored or used.
- Do not expose the battery or product with the batteries to direct sunlight.
- Do not throw batteries into a fire or use open flames near them, e.g. candles. The battery may explode when exposed to high temperatures.
- Do not submerge the batteries in water or in any other liquid. Do not place any containers filled with water, e.g. a vase on the batteries.
- Do not expose batteries to mechanical damage, disassemble or deform them. There is a risk of electrolyte leakage, explosion and serious injury due to chemical burns.
- Do not short-circuit the battery. Do not leave the batteries loose, e.g. in a drawer, with metal items (paper clips, coins, keys, etc.). There is a risk of short-circuiting.
- Do not attempt to recharge batteries that are not intended to be rechargeable. There is a risk of explosion and serious injury due to chemical burns.
- Batteries contain environmentally damaging compounds and therefore do not belong in standard municipal waste. Take used batteries for proper disposal at a designated battery collection point.
- In the event of a battery leak, do not touch the leaked electrolyte with your bare hands. Use protective aids (protective gloves, goggles or a respirator). We recommend opening windows or doors to ensure adequate ventilation of the space. When skin is affected, rinse the affected area with clean cold water; rinse the affected eyes with plenty of clean water and seek medical help; when swallowed, immediately contact emergency medical help, rinse mouth, but do not induce vomiting.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



 














Product with protection class II
This symbol on the accumulator or battery means that the used battery must not be added to normal municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.




 

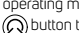

 
FAN DESCRIPTION

A1 Front protective grille	A6 Stand
A2 Rear protective grille	A7 Control panel with display
A3 Fan blades	A8 Power cable
A4 Retractable pole	A9 Base
A5 Retractable pole release button	

DESCRIPTION OF THE CONTROL PANEL

B1 Icons of preset modes	B7  button to adjust fan speed/set the timer
 Eco mode icon	B8  button to switch the fan on/off
 Normal mode icon	B9 Icons of the set range of horizontal oscillation of the fan head
 Night mode icon	B10  button to switch the control panel backlight on/off
 Natural breeze mode icon	B11  button to switch vertical oscillation on/off
B2  timer icon	B12  button to switch horizontal oscillation on/off
B3  vertical oscillation icon	B13  button to adjust fan speed/set the timer
B4  button to set the timer	
B5  button to adjust the horizontal oscillation range of the fan head	
B6  button to select the operating mode	

REMOTE CONTROL DESCRIPTION

C1  button to switch the fan on/off	C4  buttons to set the fan speed/timer
C2  button to switch the control panel backlight on/off	C5  button to select the operating mode
C3  button to set the timer	C6  button to adjust the range of horizontal oscillation of the fan head
	C7  button to switch horizontal oscillation on/off
	C8  button to switch vertical oscillation on/off

PURPOSE OF USE

- The stand fan is used for targeted air circulation in the room to improve the perceived temperature and ensure a more pleasant environment on hot days. Its advantage is the ability to adjust the height and angle of the air flow so that the air flows exactly where it is needed. Thanks to this, it can quickly and effectively cool a specific zone without the need for air conditioning.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.

ASSEMBLY

- The fan is supplied disassembled and must be assembled before use. Follow these steps.
 1. Unscrew the nut counterclockwise and remove it from the bottom of the stand – see figure **D1**.
 2. Insert the bottom part of the stand into the hole in the base and screw the nut from below – see figure **D2**. Make sure that the stand is firmly attached to the base. However, do not tighten the nut with excessive force to avoid damaging the thread.
 3. Using a suitable tool, remove the rubber screw cap in the lower part of the front protective grille. Use a cross head screwdriver to loosen the screw. Remove the screw and put it aside together with the rubber cover. Hold the rear grille with one hand and turn the front grille counterclockwise with the other until the line is aligned with the open lock symbol – see Figure **D3**. This will release the front protective grille.
 4. Unscrew two nuts from the shaft – see Figure **D4**. Each nut is loosened in a different direction.
 5. Place the rear protective grille on the motor head of the fan and secure with a larger nut – see Figure **D5**. Tighten thoroughly.
 6. Fit the fan blades onto the shaft and secure by means of a smaller nut – see Figure **D6**. When installing the blades, check that the groove on the fan blade is aligned with the pin on the motor shaft. Tighten the nut thoroughly.
 7. Place the front protective grille against the rear protective grille so that the arrow on the rear protective grille aligns with the open lock symbol on the front protective grille – see Figure **D7**. Turn the front grille clockwise until the arrow on the rear grille is aligned with the closed lock symbol on the front grille. Insert the screw into the hole in the bottom part of the front protective grille and tighten it using the Phillips screwdriver. Reattach the rubber cap.

Setting the fan height (Fig. E)

1. With one hand, grasp the extended upper part of the pole, which is located under the fan head.
2. Press the button to release the retractable pole with the other hand.
3. Pull up or down to adjust the height of the retractable bar.
4. Release the button and the height of the retractable pole is locked at the given level.



OPERATING THE APPLIANCE

Switching the appliance on

- Fully unwind the power cord and connect the power cord plug in the mains socket.

- If the fan was switched off before disconnecting from the mains, it will automatically switch to the stand-by mode.
- If the fan was switched on before disconnecting from the mains, an audible warning sounds, the control panel lights up briefly, then goes out and the fan switches to standby mode.

Switching the Fan On/Off

- Press the  button briefly to switch the fan on. The fan beeps briefly. It will then start at the lowest speed 1 and "1" will appear on the display.
- To switch the fan off, press the  button. The fan makes a long beep and switches to standby mode. The fan head turns to the central position. To switch off completely, disconnect the plug from the mains socket.



Note:

When the fan is switched off with the button and switched to standby mode, the last set mode and speed are stored in memory (except for the timer). If you disconnect the fan from the mains socket, it will start on the lowest speed when you switch it on again.

Fan Speed Setting




 
 
- The +/- buttons are used to set the fan speed. Press the +/- button repeatedly to set the desired fan speed from 1 to 12, where 1 is the lowest fan speed and 12 is the highest fan speed. The display will show the numerical value of the relevant speed. The +/- icon will light up regardless of the set speed.




Note:

In the eco mode it is not possible to set the fan speed.



Selecting a mode

- Press the  button repeatedly to select the mode in the following order:  normal mode,  sleep mode –  natural breeze mode –  eco mode. Each time it is pressed, the respective indicator light will be lit.

1. Normal mode

- LED display shows current fan speed level. The speed level is adjustable by tapping   keys.

2. Sleep Mode

- LED display shows current fan speed level. The speed level is adjustable by tapping  .
- Fan speed will decrease one level after a certain time period, and will continue to decrease until wind speed level is finally down to 1, after which it will stay at level 1 until you exit the Sleep mode.

3. Natural breeze mode

- LED display shows chosen speed level, and the fan will automatically alternate the speed level to mimic natural breeze.



4. Eco Mode

- LED display shows current speed level, the fan will automatically adjust the speed according to ambient temperature.

Timer Setting



 

- The timer can be used to set both the off and on time.

Sleep timer

- Set the amount of time that the fan will run and after which it will switch off and go into standby mode.
- When the fan is on, press the  button to set the timer. "1" and the  timer icon will start flashing on the display.

- Use the +/- buttons to set the timer time from 0,5 to 8 hours. The display will show the timer value.
- Wait approximately 3 seconds for the time to be saved in memory. The countdown will start and the display will alternate between the remaining time and the set fan speed.
- After the set time has elapsed, the fan turns off and enters standby mode.

On timer




- Set the time after which the fan will turn on.
- While the fan is turned off, press the  button to set the timer. "1" and the  timer icon will start flashing on the display.
- Press the   buttons repeatedly to set the timer time from 0,5 to 8 hours. The display will show the timer value.
- Wait approximately 3 seconds for the time to be saved in memory. The countdown starts.
- After the set time has elapsed, the fan turns on.





Note:

If you need to cancel the on or off timer, repeat the same process as for the setting until "0.0" appears on the display.


Horizontal oscillation

- Press the  button to switch on horizontal oscillation. The fan starts to rotate from side to side.
- Use the  button to set the range in which the fan head will rotate, namely 30°, 60° or 120°. The chosen range icon will illuminate on the display.
- To switch off the horizontal oscillation, press the  button again.

Vertical oscillation

- Press the  button to switch on vertical oscillation. The fan head will start to move up and down.
- To switch off the vertical oscillation, press the  button again.

Backlight of the control panel

- Press the  button to turn the control panel lights on/off.

REMOTE CONTROL

- The functions of the buttons on the remote control and the control panel are identical. To use the remote control, point it at the fan. The maximum range of the signal sent from the remote control is 4 m.



Note:

For the proper functioning of the remote control, it is necessary to ensure direct visibility between the remote control and the base. If there are obstacles between them, transmission of the signal may not occur.

Inserting and Replacing Battery

- From the bottom part of the remote control pull out the battery compartment and insert the 3V CR2032 battery into it. When inserting the battery, make sure the polarity is correct.
- If the battery in the remote control is discharged, replace it with a new battery of the same type.
- If you will not be using the remote control for an extended period of time, we recommend removing the battery. If the battery were to leak into the interior of the remote control, it could be damaged.



Note:

Never put batteries in a fire, short-circuit or damage them in any way. Dispose of them in an environmentally friendly manner at the end of their lifespan. Never dispose of batteries in municipal waste.

CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket before cleaning.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Cleaning the outer casing

- To clean the outer casing, use a cloth slightly dampened with lukewarm water and neutral detergent.
- You can also use a vacuum cleaner with the brush nozzle attached to remove dust from the protective grilles.
- If the fan blades are heavily soiled and need to be wiped, make sure that the fan is turned off and the power cable disconnected from the mains socket. Loosen the screw and then remove the front grill. Wipe the blades with a slightly damp cloth. Then wipe with a dry cloth. Then fit the front grille and secure with screw. Follow the instructions in the "ASSEMBLY" section.

Storage

- If you will not be using the appliance for an extended period of time, unplug the plug from the power socket and clean it according to the instructions in the chapter "Cleaning and Maintenance".
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Remove the battery from the remote control.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage.....	100–240 V-
Rated frequency.....	50–60 Hz
Power consumption.....	33 W
Fan blade diameter.....	36 cm
Maximum fan flow rate.....	36.7 m ³ /min
Operating value.....	3.0 (m ³ /min)/W
Maximum air velocity.....	4.9 m/s

Contact for further information

FAST ČR, a.s., U Sanitasy 1621, 251 01 Říčany, Czech Republic

Noise level

Speed	Noise level (dB)
1	22.7
2	23.8
3	26.3
4	27.8
5	30.9
6	31.7
7	44.6
8	45.7
9	46.6
10	47.5
11	49.7
12	52.5

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz