 
 


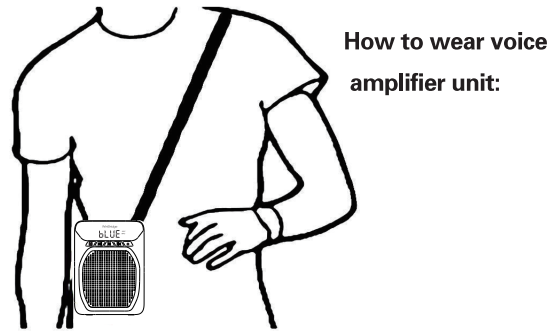

How to wear voice amplifier unit:

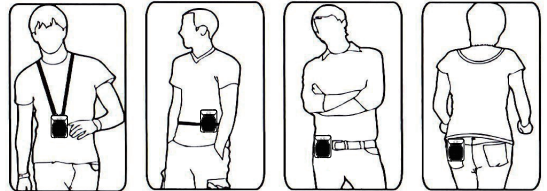

After-sale service

WinBridge provides one year warranty and lifetime technical support.

info@winbridgepower.com
<http://www.winbridgepower.com>

Please be confident that seller support is just a mail away from you in case you find any difficulty. Kindly do not hesitate to write back to us if you need any clarification or any kind of support.

8. FM Radio

- 1) Turn on speaker and pull up ANT, short press MODE to FM mode and the LCD show FM frequency;
- 2) Long press"" enter into automatic channels searching; after searched successfully, the amplify will save the channels automatically;
- 3) Short press"" or "" to choose the saved channels;

Specifications

Output power	≤15W	Frequency reponse	≤200Hz~18KHz
Speaker Impedance	4Ω	Working temperature	-10°C-45°C
Charging Voltage	DC 5V  1A	Charging time	3H-5H
Music mode time	6H-8H (medium volume)	Amplify time	8H-10H

Package included:

- 1* speaker
- 1* headset microphone
- 1* waistband
- 1* DC 5V adapter
- 1* charging cable
- 1* audio cable
- 1* user manual

Please note:

1. Use the included DC 5V power adapter to charge the speaker internal rechargeable battery.
2. Plug adapter into 110~240 AC outlet. Connect the cable end into the DC 5V power input on speaker.
3. It will normally take 3~5 hours to fully charge the battery.
4. When charging is required, a voice prompt will indicate, " Low battery, please charge " , the battery indicator will blink while charging. It will stop blinking when battery is fully charged.
5. Recharge the battery within 48 hours of " low battery " voice prompt. In order to extend the life of the internal battery, please charge it regularly even if system is not being used.
6. It is suggested that you charge the internal battery an additional 1~2 hours after fully charged to extend its life.
7. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and could cause over heating.

7. How to charger speaker

— When working (but not charging) —


Enough Power indication: the battery sign on the screen normally on 

Low Power indication: the battery sign on the screen Blinks 

—Charging speaker with plug included —

In charging status: the indicator  flashes while charging;

Fully charged: the indicator  turn on solid lights after charged fully.

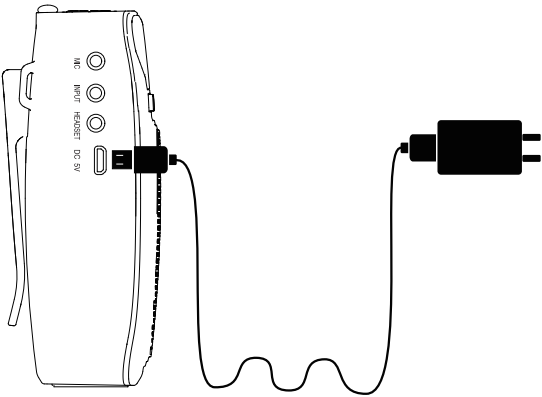

5. How to connect with Bluetooth

1. Click  to switch to Bluetooth mode with a screen shows  , and there will be voice

prompts:  Bluetooth is waiting for connection;



Turn on Bluetooth device and search name " **M700** " to pair.

6. How to play TWS


1. Turn on two M700 speakers, click  button to enter Bluetooth mode, long press one of speaker's M button to enter pairing status, the other one Bluetooth indication become solid lights means these two speakers are connected successfully.



2. Turn on your phone or Bluetooth device and search name" **M700** " to pair.




WinBridge Voice Amplifier User Manual

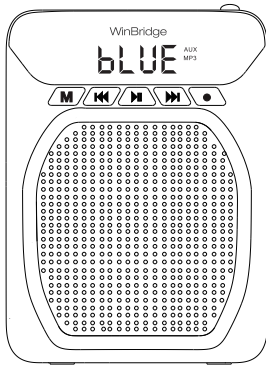

M700

Function Illustration

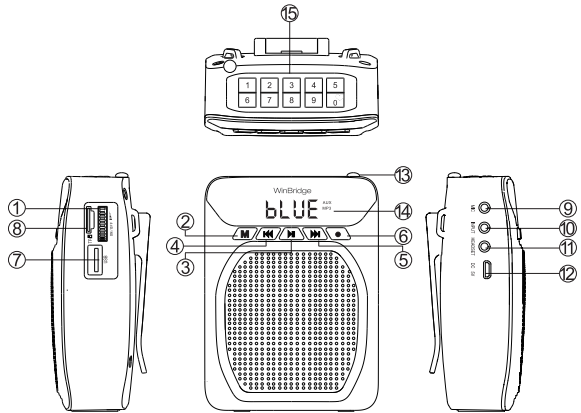

Main Function Description

1. power switch / volume control
2. Model switch among Bluetooth, FM, TF card, USB driver and volume remind;
3. Play/Pause
A: Short press "" to pause and press again to play
B: In playing music mode, long pressed "" to store music with LCD screen show "SRUE"
C: Long press key 0 to play the stored music and long press again to delete music

4. Previous/volume-

long press "" for fast reverse, short press to go to previous music; In headset mode, long press to volume-

5. Next/volume+

long press " " for fast forward, short press to go to next music; In headset mode, long press to volume+

6. Recording

7. USB slot (reading data only)

8. TF card slot

9. MIC slot (support wired MIC)

10. AUX slot

11. Earphone slot

12. DC 5V charging slot

13. Telescopic FM antenna



14. Digital display-screen

15. Number keys (select music by press number key)

Operation Description

1. Plug and play



Turn on speaker with power switch on the side of control panel, plug the headset microphone included into MIC slot, then your voice will be amplified;

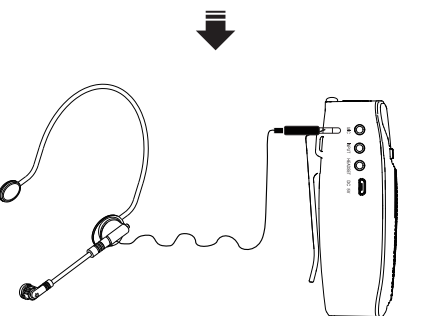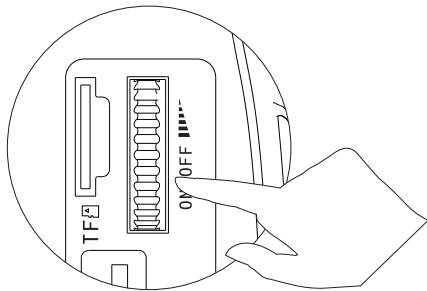

2.Music play via TF card / USB driver


Insert TF card / USB driver into corresponding slot, speaker will play music automatically; Press "" , "" to previous or next song or press number keys on the top of control panel to choose music;

Noted: TF card or USB driver is NOT included;

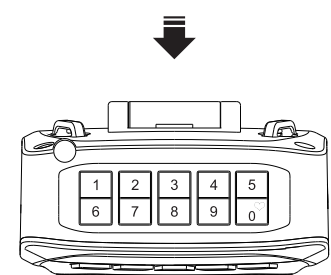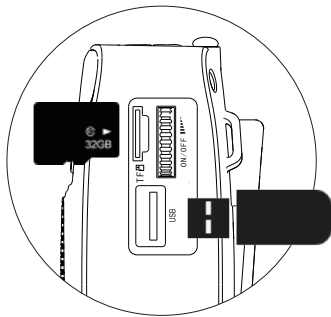

3. How to play recording


1. Under any mode, press  key to start recording with voice prompts "start recording";
2. Plug headset microphone into MIC slot;
3. Click  button to finish and save recording; At this point, speaker will play recording file automatically you just made; Please click  button to pause or resume; Click   button to play previous or next recording file; Click  button again to play USB driver or TF card music;

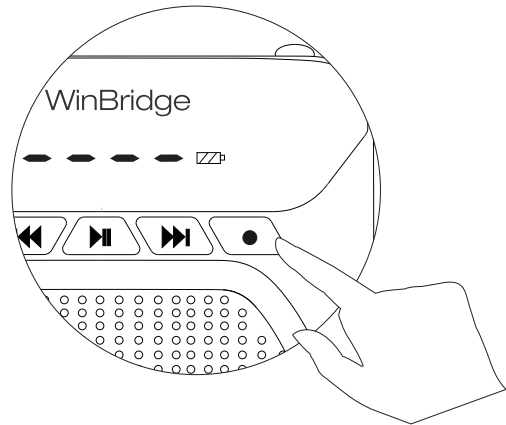

4. Click M button to quit recording and switch to other modes; **Noted:** require a USB driver or TF card for storage and microphone for voice input;

4.Music play via AUX input

Connect speaker to external audio device (with 3.5mm audio output like computer) via audio cable included;

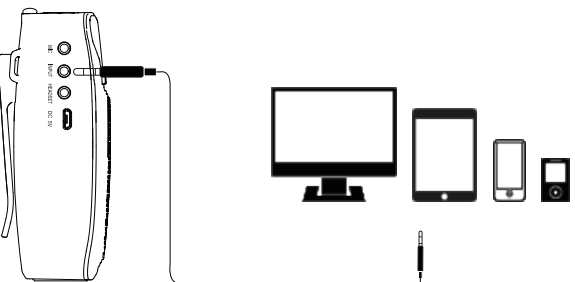

Speaker will play music with LCD screen shows "LINE" ;

