

Electronic Calendar User manual X156	Contents Preface 2 Warning..... 2 Features 3 Packing list 3 Product Description(RK3326/ RK3562)..... 4 Menu icon function 6 Basic settings 7 Frequently asked questions and solutions 10 1	Preface Thank you for choosing our Electronic calendar! Before turning on the machine, please read this manual carefully to understand how to use the machine and precautions. Warning ★ Only use the power adapter, power cord, and other accessories provided by the manufacturer. ★ Do not block or cover the ventilation and heat dissipation holes on the machine. ★ Do not use or store this machine in dusty, humid, or high-temperature environments. ★ If the machine malfunctions, do not attempt to disassemble or repair it yourself. Contact the manufacturer or dealer for assistance. ★ Avoid stepping on the power cord or power adapter to prevent damage that could lead to electrical hazards. If the power adapter's wires are damaged, do not continue using it, as this may pose a safety risk. ★ During thunderstorms or when the machine is not in use for an extended period, unplug the power cord. ★ When in use, do not place the machine on the edge of a table or in areas accessible to children to prevent the machine from falling or causing injury to children. ★ Avoid bumping or dropping the display screen during transportation or use. Do not apply excessive force to the display screen or strike it with sharp or hard objects to prevent damage. ★ Use a clean, soft cloth or a soft cloth with a small amount of mild cleaner to gently wipe the Electronic calendar device. Do not use any corrosive solvents such as alcohol, ammonia, or hydrogen peroxide, as this may damage the surface protective coating. 2	Features • System: RK3326 RockChip Quad-core Cortex-A35, 1.5GHz clock speed Android 8.1system RK3562 RockChip Quad-core 64-bit processor, up to 2.0GHz clock speed Android 13 system • Network: Supports 802.11.ax WiFi • Interface: Type-C and power ports • Peripheral device: built-in 2x3W speakers Packing list Check the product packaging box for the following items. 1. Main unit 2. Power adapter 3. Instruction manual 3	Product description Front view : Left and right views : 4	Rear view: Top view : 5
---	--	---	---	---	--

Menu icon function ➤ BrowserWhen connected to the Internet, simply enter the URL to search for the content you need. ➤ Scheduled power on/offYou can set the startup and shutdown times for this device. ➤ Google Play StoreDownload games and apps. ➤ SettingsCustom function settings, basic settings, network settings ➤ YouTubeVideo sharing, uploading, watching, entertainment, education, music, and more, with live streaming support. ➤ GalleryView photos, videos, local videos, and slideshows. ➤ CalendarCheck the date, add a memo. 6	➤ CalculatorFor easy calculation. ➤ ClockCheck the time, set alarms, stopwatches, and countdown timers. ➤ YT MusicOffers online streaming and download features for songs, albums, playlists, and music videos. ➤ FilesRead files, images, and videos from USB drives Introduction to Basic Settings ➤ WiFiClick on the WiFi option, turn on WiFi, select a WiFi network, and enter the correct password to connect. ➤ MoreContents include flight mode, network sharing and portable hotspot, VPN, reset network settings, Ethernet, and WiFi priority settings. ➤ DisplaySet brightness, wallpaper, sleep time, screen saver, and font size. 7	➤ NoticeSet to turn off or turn on all app notifications. ➤ SoundSet media volume, alarm volume, ringtone volume, select ringtone or mute. ➤ Type-CCheck the box for PC, connect OTG, and uncheck the box for reading USB flash drives. ➤ ApplicationView installed apps ➤ Screenshot settingsSet screenshot delay, screenshot storage location, and display on status bar (must be selected). ➤ StorageYou can check the local storage status and remaining space. ➤ MemoryYou can view the memory usage of each application. ➤ Location informationUsed for network positioning. ➤ SafetySet the screen lock screen password and unknown source (need to be opened when installing the APP). 8	➤ AccountSet up or log in to your account. ➤ GoogleGoogle, services, location information, and security settings. ➤ Language and input methodSet the system language, keyboard, and input method. ➤ Backup and resetBack up data, accounts, and restore factory settings. ➤ Date and timeSet the date and time, and select the country time zone. ➤ Barrier-freeSubtitles, zoom gestures, font size, display size; can be selected in the status bar. ➤ Developer optionsUSB debugging (must be selected; a connection prompt will appear in the upper left corner when the data cable is connected). ➤ About the equipmentYou can view the device model, system version number, and status information. 9	Frequently Asked Questions and Solutions I. Solutions for inability to connect to WiFi networks: 1. The WiFi password may have been entered incorrectly. Please enter the correct password. 2. Turn the WiFi switch off and then on again. 3. Restore factory settings. II. USB cable connected to computer but no response Solution: 1. First, check whether the connection cable between the device and the computer is connected. 2. Check whether the USB debugging switch is turned on. III. Solutions for freezing or crashing during operation or startup: 1. Turn off the power and restart. 2. Contact the manufacturer or dealer. 10
--	--	---	---	--



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.