

# INSTRUCTION MANUAL



## TOASTER

Model:ST-805

## IMPORTANT INSTRUCTIONS

1. Please read these instructions before operating and retain for future reference.
2. To protect against electrical hazard do not immerse any part of the appliance or cord in water or any other liquid.
3. Close supervision is necessary when the appliance is used near children.
4. Always use the appliance on a dry, level surface.
5. Do not use this appliance outdoors.
6. Always unplug from the plug socket when not in use and before cleaning.
7. Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner, return to at authorized service engineer for repair, because special purpose tools are required.
8. In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to authorized service engineer.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
10. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
11. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
12. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
13. Caution-bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
14. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments
15. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
16. Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.
17. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
18. The temperature of accessible surfaces may be high when the appliance is operating.

19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.
22. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a moment.
23. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

### **WARNING!**

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

### **FEATURES OF TOASTER**

1. Full length crumb tray
2. Stop Button with indicator light
3. Defrost button with indicator light
4. Defrost button
5. Electronic variable browning control
6. High lift bread release



### **OPERATION TOASTER**

1. Insert the plug into a suitable mains supply socket and turn the power on.
2. Place two slices of bread, muffins or bagels into the bread slots.
3. Select the desired browning setting, from No.7 on the browning control knob (No.1-lightest,No.7-darkest).When using the toaster for the first time we suggest you toast on No.3. Different types of bread and personal preference may require a different browning setting.
4. Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on the carriage control lever will not click into place.
5. The toaster turns off when the desired toast color is achieved and automatically pops up the toast. The toasting process can be stopped at any time by pressing the stop button.

**TOASTING FROZEN BREAD:** To toast frozen bread, place the bread into the bread slots and select the desired Browning Setting. Press the carriage control lever down until it clicks into place then press the Frozen Button.

#### **HOW TO CLEANING THE TOASTER**

Your toaster comes with a removable, slide out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.

Use a stiff brush to remove any burnt-on crumbs.

Wipe the outside of the toaster with a damp cloth.

Do not use a sharp object or abrasive substance to clean the toaster.

#### **CAUTION**

To prevent electric shock , disconnect from the mains before removing cover .

No user serviceable parts inside.

Refer servicing to qualified service personnel.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

#### **Technical details**

Model No.: ST-805

Mains Voltage: 220-240V ~ 50/60Hz

Power consumption: 1350-1600W