

In the Box



Dash Camera



Rear Camera



Car Charger



Adhesive Cable
Clip×4



 
Easy Pry Tool



Adhesive Pads
(2on Cameras)



Cleaning Cloth

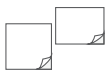

Static Sticker×4



User Manual

≡
Thank
you

Quick Start
Guide



PRODUCT BASIC INTRODUCTION

Cautions

Product Components
Component Guide

PAPAGO!

If you have any questions, need technical support, please don't hesitate to contact us. Our dedicated customer care team is always here for you and will respond within 24 hours.



papagotech@163.com


NO 1

01 Safety Precautions


To prevent personal injury or equipment damage, please read and follow the below safety guidelines carefully:

- 1 Be sure to read and understand the product manual before use, and keep it properly for future reference.
- 2 Use only genuine accessories provided by the manufacturer. The company shall not be liable for any damage caused by non-genuine accessories from other manufacturers.
- 3 Do not disassemble, modify or repair the product by yourself; any damage to the main unit resulting from such actions is not covered by the warranty.
- 4 Do not install the product in high-humidity areas, areas exposed to direct sunlight or extreme high temperatures, environments with flammable and explosive gases or liquids, or any areas that block the driver's line of sight or compromise driving safety.
- 5 In case of abnormal conditions, stop using the product immediately, disconnect the power supply and contact customer service.
- 6 Drive safely! Never operate the app or the device while driving to avoid traffic accidents caused by distraction. Ensure the vehicle is parked in a safe area before any operation.
- 7 Conduct a power-on test before installation, and remove the protective films from the display screen and lens before use.
- 8 Be sure to format the memory card on the main unit before its first use to ensure stable reading and writing performance of the card.
- 9 The vehicle must only be driven after the product is securely installed.

 02 Component Guide

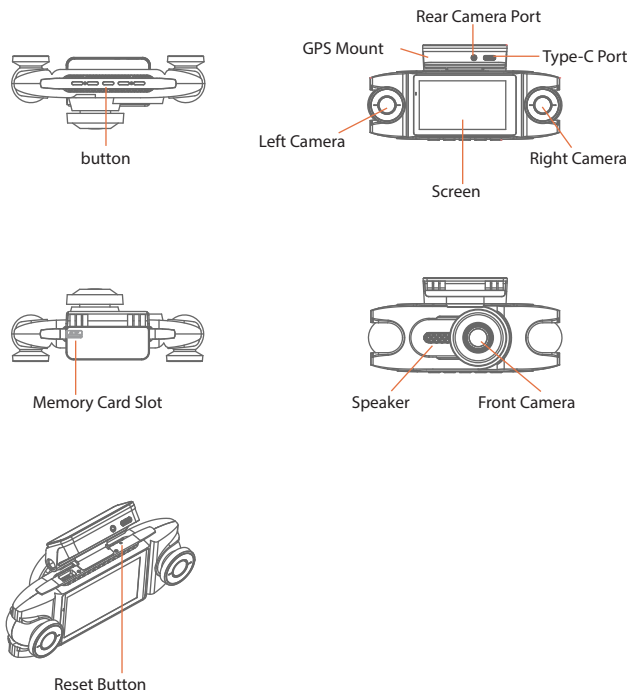

03 Button Functions

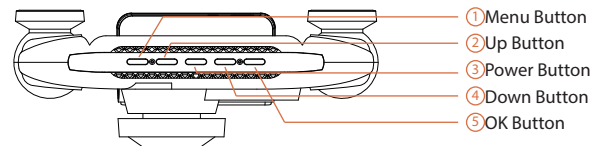 

- ① Menu Button
 - Press Once - to enter/exit settings menu.
 - Press Once - to go back to the previous screen. (in menu mode)
- ② Up Button
 - Press Once (Recording Interface) - take photo.
 - Press Once (Menu Interface) - move up one line .
 - Press Once (Playback Interface) - previous video.
 - Hold 3s - lock/unlock video. (while recording, indicator turns yellow when locked)
- ③ Power Button
 - Press Once - turn screen off/on. (while device is on)
 - Hold 3s - power off/on. (while device is on)
- ④ Down Button
 - Press Once (Recording Interface) - switch front / rear camera, spit screen mode.
 - Press Once (Menu Interface) - move down one line.
 - Press Once (Playback Interface) - play next video.
 - Hold 3s - turn Wi-Fi on/off. (in recording mode)
- ⑤ OK Button
 - Press Once - Pause/Stop Recording.
 - Press Once - confirm/select. (menu mode)
 - Hold 3s - Microphone on/off. (in recording mode)

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.