


PRODUCT DESCRIPTION

Sex machine

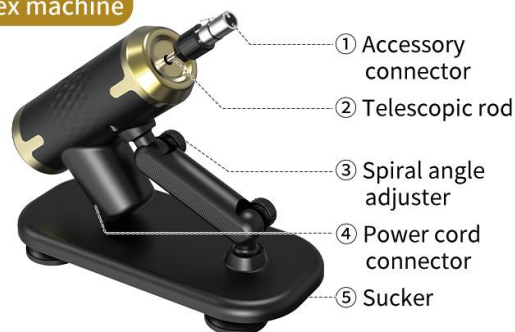

1. Securely connect the accessory you have chosen to the connector on the main body.
2. Connect the power cord. Check the power indicator light to see if it indicates that the machine is ready.
3. Gently hold the accessory with one hand, and simultaneously operate the machine from the lowest to the highest rotational speed through manual power adjustment or remote control at all speeds, checking the operation of the machine.
4. The required angle can be adjusted freely using the spiral-type adjusting screw.
5. The suction cup of the base is only suitable for use on smooth surfaces such as the ground, chair surface, and marble.

Manual version



Remote control version



1. Connect the power supply and press the ON/OFF button on the remote control. The machine will start running.
2. To adjust the propulsion speed, please use the "+" and "-" buttons on the remote control.
3. Press "O" to cycle through 20 different operating modes.
4. Press the power button again to stop the machine.

Friendly reminder: The effective range of this remote control is within 10 meters.

Note: This product is not waterproof, please do not wade through water.

REMOTE CONTROL BATTERY SAFETY INSTRUCTIONS

1. This product's remote control requires CR2032 batteries. If the batteries fail, please replace them yourself. The batteries should be inserted into the correct battery compartment. If the product is not used for a long time, please remove the batteries in a timely manner.
2. The battery used in this product is a non-rechargeable battery, which cannot be charged. It is recommended not to mix different types of batteries or batteries of different ages.
3. The battery must not be exposed to environments such as direct sunlight, heat or similar overheated conditions, as well as humid environments.

PRECAUTIONS

1. This product is only suitable for adults and is prohibited for minors.
2. If you experience any discomfort during use, please discontinue use.
3. Avoid direct sunlight, high temperatures, heavy pressure, moisture, and contamination.
4. Regularly check the product for any damage. If there is any damage, do not use it.
5. Please store it in a place where children cannot reach.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.