

7. Rechargeable batteries can only be charged under adult supervision; The exhausted battery should be removed from the toy;
8. It is necessary to regularly check whether the USB charging cable, plug, housing, and other components are damaged. If any damage is found, they should be stopped from use until they are repaired completely; USB charging cables are not toys; Cannot connect to more than the recommended number of power sources;

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Sample Name: Tesla Cyber Remote Control Car
Model: NO.0855-246 MT1615

Operation Instructions

- Thank you for using our company's toy products. In order to give you a better understanding of this product, please read the following instructions carefully before use. It will bring you a different operating experience.
- This product is suitable for children aged 3 and above. After being assembled/charged by adults, children can play with it.
- ⚠ Warning: Please do not disassemble or modify this product without authorization. Any changes may cause the product to malfunction.


How to install batteries

1. Turn the remote control car and the switch on the remote control to the "OFF" position.
2. Use a Phillips screwdriver to open the battery cover.
3. Insert the battery as shown in the following figure.
4. Close the battery cover.

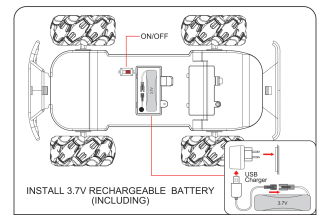

How to play remote control car

1. Turn on the remote control car/remote control switch to complete frequency matching.
2. Operate the joystick and wheel of the remote control to remotely control the vehicle's forward or backward movement, Left or right rotation and spray.
3. When the battery is depleted and the left and right steering becomes unresponsive, Moving forward and backward will also slow down. At this point, the battery needs to be removed and charged.

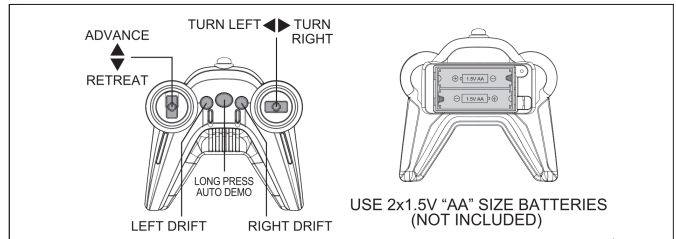

Precautions for battery use

1. The toy car uses one 3.7V rechargeable battery; The remote control uses 2 1.5V AA non rechargeable batteries;
2. Insert and remove batteries using the correct method and polarity;
3. How to remove and insert batteries from toy cars and remote controls: Use a screwdriver to loosen the screws on the battery cover, remove the battery cover, and insert the battery with the correct polarity. Remove the battery, then close the battery cover and tighten the screws;
4. Do not short-circuit, disassemble or put the battery into fire; Non rechargeable batteries cannot be charged; The power terminal must not be short circuited;
5. Different types of batteries or old and new batteries cannot be mixed;
6. If not used for a long time, please remove the battery; Rechargeable batteries should be removed from toys before charging (applicable only to toy cars);