


10000mAh Digital Display Magnetic Wireless PowerBank

JB86
User's Manual

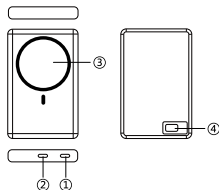

Features:

1. Power bank ON/OFF Button
2. Type-C input/output
3. Wireless charging surface
4. Digital display screen

Product Specifications:

Battery Capacity: 10000mAh/3.85V/38.5Wh
Battery Type: Semi-Solid State Battery
Type-C Input:
DC 5V/3A, 9V/2A, 12V/1.5A (18W Max)
Type-C Output:
DC 5V/3A, 9V/2.22A, 12V/1.67A (20W Max)
Wireless Output: 5W/7.5W/10W/15W

What's included:

- 1x 10000mAh Digital Display Magnetic Wireless PowerBank
- 1x Type-C to Type-C charging cable

- 1x Magnetic Iron Ring
- 1x User's Manual

Instructions:

1. Charging the Power Bank:

- Charge the powerbank **fully** before usage.
- Connect the provided charging cable to a power source and to the Type-C Input (2) on the powerbank.
- The digital display **will** show the remaining battery level with flashing numbers, and "⚡" on the right side will be on while charging. The numbers **will** stop flashing when the power bank is **fully** charged.

2. Charging Electronic Devices with the Power Bank

- Connect the appropriate cable to your mobile phone/device.
- Connect the Type-C tip of a cable to Type-C Output (2).
- Remove the charging cable from your mobile device when **fully** charged.

3. Charging Electronic Devices with the Wireless Charging:

- Place a wireless charging enabled mobile device on the wireless charging surface (3), the mobile device **will** begin to charge automatically. The digital display (4) **will** light up and its lower-right wireless charging symbol "⚡" **will** turn GREEN to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface (3). You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is **fully** charged.

*Note: If the wireless charging symbol "⚡" at the lower right corner of the digital display (4) flashes, an unknown object is being detected between the wireless charging pad and the phone by FOD. The power bank **will** not begin to charge until the object is removed.*

Safety Instructions:

1. Read **all** instructions before use.
2. Use within temperature range: 32°F to 115°F (0°C to 45°C).
3. Avoid overcharging; remove phone once **fully** charged.
4. Optimize performance with 2-3 **full** charge cycles.
5. To reduce the risk of injury, close supervision is required when the product is used near children.
6. Do not expose the device to moisture.
7. Do not use the device in excess of its output rating. Overloading outputs above the rating may result in a risk of fire or injury.
8. Do not use the device if damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
10. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in an explosion.

11. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.

12. Attachments on the back of your phone can impede the effectiveness of the wireless charger and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference **will** not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2A9Q9-M2319Q

FC
MADE IN CHINA

206x99mm