

JVC

Instruction Manual

Wireless Traditional Hi-Fi System

UX-D225B



Before using this appliance, read all safety instructions carefully first in the Safety Warnings booklet and keep them for future reference.

Contents

Safety Warnings	Safety Warnings booklet
Unpacking.....	4
Product Overview	4
Main Unit.....	4
Remote Control	5
Preparation.....	6
Battery Replacement for the Remote Control	6
Remote Control Operation Range.....	7
Connections.....	8
Connecting the FM Aerial.....	8
Speakers Connection	8
Connecting Mobile Devices.....	9
Connecting to the Mains Supply	9
Basic Operation	10
Switching ON / OFF	10
ECO-Power Mode.....	10
Selecting Modes.....	10
Adjust the Speaker Level Settings and Effects	10
System Settings.....	11
Time / Date Settings	11
Backlight.....	11
Language	11
Factory Reset	12
Software Upgrade	12
Software Version.....	12
Clock Operation	13
Setting Time and Date in Standby mode	13
Setting the Sleep Timer	13
DAB Operation	13
First Time Auto Scan.....	14
To Select and Listen to the Found Stations.....	14
Secondary Services	14
Full Scan.....	14
Manual Tuning	14
DRC (Dynamic Range Compression)	15
Preset Stations	15
Recalling Preset Stations.....	15
DAB Display Modes	16
FM Radio Operation.....	17
Tuning in a Station.....	17
Scan Settings.....	17
Audio Settings.....	18
Preset Stations	18
Recalling Preset Stations.....	18
FM Display Modes.....	19

CD/MP3 Operation	19
Compatible Disc Types	19
Playback.....	20
To Skip Search or Search and Play	20
Selecting an Album (for MP3 disc)	20
Repeat Playback	21
Programme Play	21
USB Playback Operation	22
LINE IN (AUX IN) Operation	22
Bluetooth® Operation.....	23
Maintenance.....	24
Cleaning the Unit	24
Handling Discs	24
Cleaning Discs	24
Storing Discs	24
Hints and Tips	25
Product Fiche and Specifications	26

Safety Warnings

DAB all-in-one Hi-Fi

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



Use only power supplies listed in the user instructions.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not ingest the battery. Chemical Burn Hazard.
- Keep new and used battery away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ **AC voltage:** This symbol indicates that the rated voltage marked with the symbol is AC voltage.

== **DC voltage:** This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for Battery Disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

UK Representative

Currys Group Limited (No. 504877)
Currys Newark Campus, Long Hollow Way, Newark, NG24 2NH, UK
<https://www.currys.co.uk>

EU Representative

Currys Ireland Limited (No. 259460)
3rd Floor Office Suite, Omni Park SC, Santry, Dublin 9, Republic of Ireland
<https://www.currys.ie>

UK & EU Contact details: business.standards@currys.co.uk

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVCKENWOOD Corporation,
used by Currys Group Limited under license.

(Safety-JVC DAB Hi-Fi System-260513V8)

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

- Main Unit
- Speaker × 2
- Remote Control & AAA Battery × 2
- Aerial
- 3.5 mm to 3.5 mm Stereo Audio Cable
- Instruction Manual & Safety Warnings
- Quick Start Guide




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Centre on **0818 810575**.

Product Overview


Main Unit

Front View

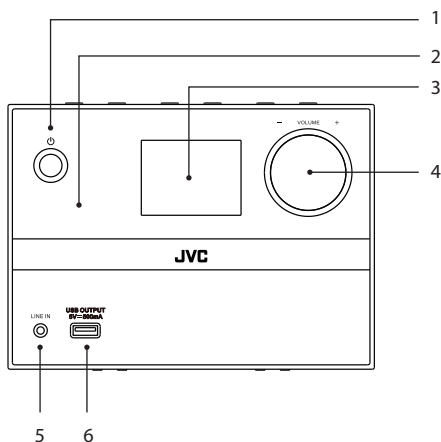


1. **⏻ Standby Button**
2. **Remote Control's Sensor**
3. **Display**
4. **VOLUME+/- Dial**
Turn clockwise/anticlockwise to increase/decrease volume.
5. **LINE IN (AUX IN) Socket**
6. **USB OUTPUT 5V 500mA Socket**

Top View

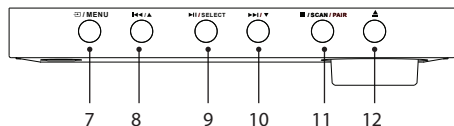


Rear View

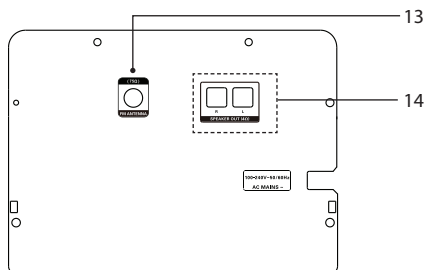

7. **Source / MENU Button**
8. **I<=</>/> Button**
9. **II / SELECT Button**
10. **>=>/> Button**
11. **>=> / SCAN / PAIR Button**
12. **Open/Close Button**
13. **FM ANTENNA (75Ω) Socket**
14. **SPEAKER OUT (4Ω) L/R Sockets**


Remote Control

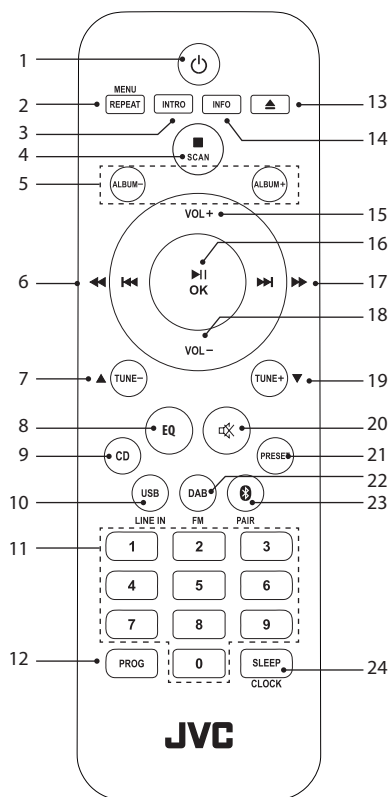

1. **Standby Button**
2. **REPEAT/MENU Button**
3. **INTRO Button**
4. **>=>/SCAN Button**
5. **ALBUM+/ALBUM- Button**
6. **I<=</>/> Button**
7. **>=>/TUNE- Button**
8. **EQ Button**
9. **CD Button**
10. **USB/LINE IN Button**
11. **Number Pad**
12. **PROG Button**
13. **>=>/Open/Close Button**
14. **INFO Button**
15. **VOL+ Button**
16. **OK/>=> Button**
17. **>=>/>=> Button**
18. **VOL- Button**
19. **>=>/TUNE+ Button**
20. **Mute Button**
21. **PRESET Button**
22. **DAB/FM Button**
23. **>=>/PAIR Button**
24. **SLEEP/CLOCK Button**

Preparation

Battery Replacement for the Remote Control

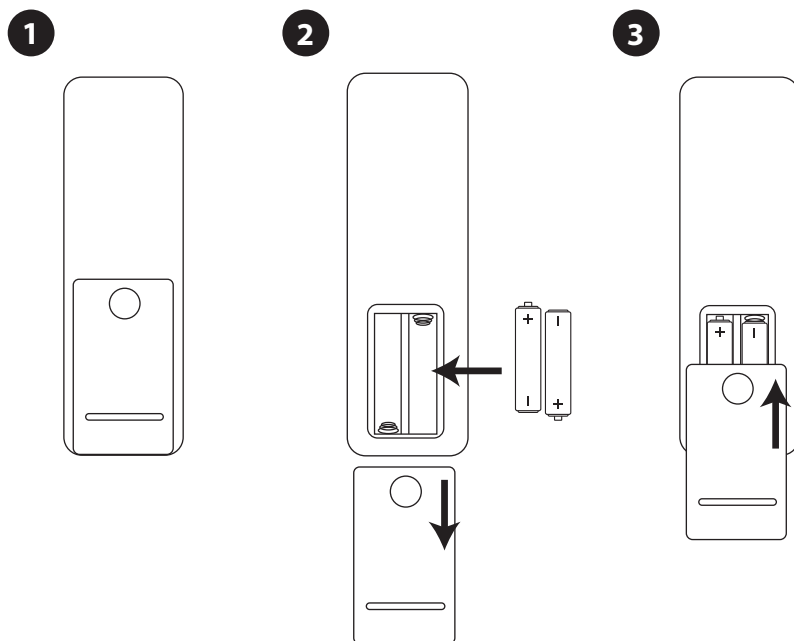

Handling the Battery


- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly by following the polarity (+ and -) indications in the battery compartment.
- When the battery is exhausted, the remote control will not function.
- Only use the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.

Handling the Remote Control

- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- When the battery is exhausted, the remote control will not function.

Remote Control Operation Range

- Point the remote control to the unit no more than 6 meters from the remote control sensor and within 60° horizontally and 20° vertically of the front of the unit.
- Please note that the operating distance may vary depending on the brightness of the room.

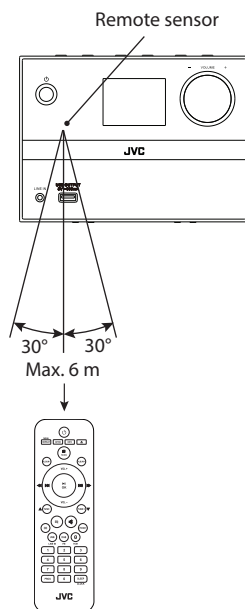


- Make sure that there is no obstacle between the infrared remote sensor of the unit and remote control. If you install the unit on rack, etc., the remote controllable range may decrease depending on the thickness or colour of glass door of rack.
- Do not expose the infrared remote sensor to direct sunlight or other strong light, such as inverter fluorescent light.

Connections

Connecting the FM Antenna


Fully extend the aerial. Connect to the **FM ANTENNA (75Ω)** socket on the rear of the unit.

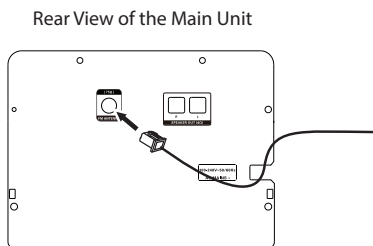

- Do not overtighten, this could damage the aerial.
- To avoid noise, keep the aerial away from the unit, the connecting cables and the mains cable.


Speakers Connection

Connect the speaker cables at the back of the speakers to the **SPEAKER OUT (4Ω) L/R** sockets at the rear of the unit.

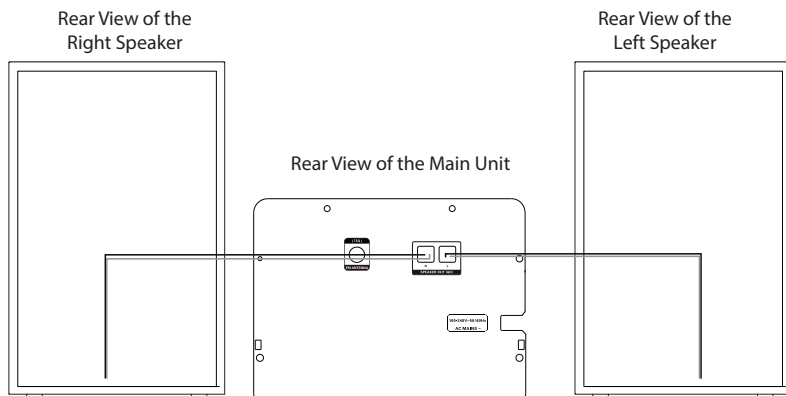

Connecting Mobile Devices

Connect the **LINE IN** (AUX IN) socket on the front of the main unit to the headphone jack on a mobile device with an 3.5 mm to 3.5 mm stereo audio cable illustrated below.

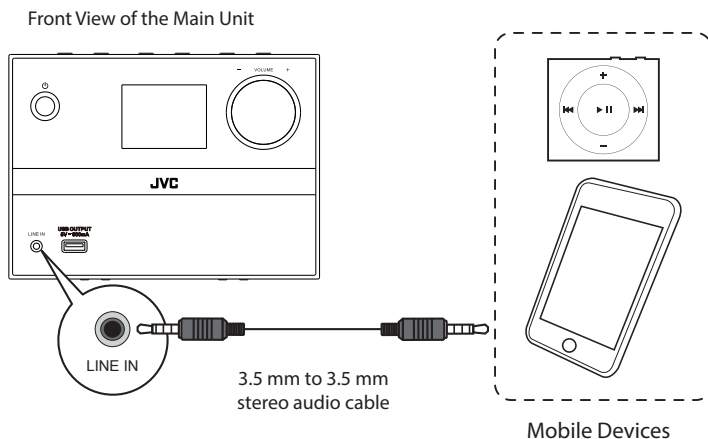


Connecting to the Mains Supply



- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Make sure the mains plug is firmly inserted into the mains socket.
- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.
- Use the mains cable as the disconnect device. The disconnect device shall remain readily operable.

Unwind the mains cable to its full length. Insert the mains plug into the mains socket.

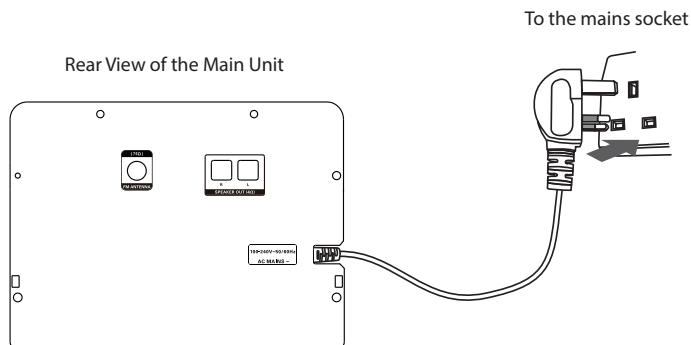

Basic Operation

When you first connect the unit to the mains socket, the unit will show “**JVC**”, and then the unset time clock. The display will show “**Time is not set**”, and “**00:00**” flashing. If the unit can receive a DAB signal in your location, it will synchronize to the current local time.

Switching ON / OFF

- Press  Standby button on the unit or remote control to switch the unit on. Your unit will switch on in **DAB** mode and automatically scan for DAB radio stations (first time you switch on ONLY). Otherwise it will switch on in the last mode you had been using.
- Press  Standby button on the unit or remote control again to switch the unit back into standby mode. The display will show the clock.



- To switch the unit off completely, remove the mains plug from the mains socket.
- To save energy, turn the unit off completely when not in use.

ECO-Power Mode

This unit features an ECO-Power/Standby mode. It automatically turns to Standby mode after 15 minutes if the unit is idle in **Bluetooth**, **DAB**, **CD** or **USB** mode or the external unit is disconnected, or switched off.

Selecting Modes

Press  button on the unit to enter **Source** menu, and then press  or  on the remote control to switch between **DAB/DAB+**, **FM**, **Bluetooth**, **CD**, **USB**, **LINE IN** mode. The selected mode will show on the display.



Alternatively, you can directly press the followings buttons on the remote control to switch to your desired mode:

-  to switch to **Bluetooth** mode.
- **CD** to switch to **CD** mode.
- **USB/LINE IN** to switch to **USB/LINE IN** mode.
- **DAB/FM** to switch to **DAB/FM** mode.

Adjust the Speaker Level Settings and Effects

Adjust the Volume

To increase or decrease the volume, turn the **VOLUME+/-** dial on the unit or press **VOL+ / VOL-** button on the remote control.

Mute Sound

If you wish to turn the sound off, press  button. Press  button again, or turn the **VOLUME+/-** dial on the unit, or press **VOL+ / VOL-** button on the remote control to resume normal listening.

Preset Equalizer

You can adjust the sound reproduced simply by choosing from 5 preset equalizers.

During play, press the **EQ** button on the remote control repeatedly to select: **POP / ROCK / JAZZ / CLASSIC / FLAT**.

System Settings



You may use both the main unit and remote control to select and confirm an option on the display menu.

Select an option

- Press **◀◀/▲** or **▶▶/▼** on the unit, or **◀◀/◀◀** or **▶▶/▶▶** on the remote control.

Confirm your option

- Press **▶▶/SELECT** on the unit, or **OK/▶▶** on the remote control.

Time / Date Settings

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/◀◀** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** to confirm.
2. Press **◀◀/◀◀** or **▶▶/▶▶** to select **<Time>**. Press **OK/▶▶** to confirm.
3. Press **◀◀/◀◀** or **▶▶/▶▶** to select your desired options, and then press **OK/▶▶** to confirm setting.

Set Time/Date	Here you can manually set the time and date.
Auto update	Choose how you want the time to be automatically updated. Update from Any / Update from DAB / Update from FM / No Update
Set 12/24 hour	Set 24 hour or Set 12 hour display
Set date format	Select between DD-MM-YYYY and MM-DD-YYYY .

Backlight

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/◀◀** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** to confirm.
2. Press **◀◀/◀◀** or **▶▶/▶▶** to select **<Backlight>**. Press **OK/▶▶** to confirm.
3. Press **◀◀/◀◀** or **▶▶/▶▶** to select your desired options, and then press **OK/▶▶** to confirm setting.

Timeout	10 sec / 20 sec / 30 sec / 45 sec / 60 sec / 90 sec / 120 sec / 180 sec / On
On level	High / Medium / Low
Dim level	High / Low / Off

Language

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/◀◀** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** to confirm.
2. Press **◀◀/◀◀** or **▶▶/▶▶** to select **<Language>**. Press **OK/▶▶** to confirm.
3. Press **◀◀/◀◀** or **▶▶/▶▶** to select between **<English>**, **<Deutsch>**, **<Italiano>** and **<Français>**, and then press **OK/▶▶** to confirm setting.

Factory Reset

If you want to delete all your stations and settings, you can return your radio back to the default setting by running a **System Reset**.

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/▶▶** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** on the remote control to confirm.
2. Press **◀◀/▶▶** or **▶▶/▶▶** to select **<Factory Reset>**. Press **OK/▶▶** on the remote control to confirm.
3. Press **◀◀/▶▶** or **▶▶/▶▶** to select **<Yes>**, and then press **OK/▶▶** on the remote control to confirm.



After system reset, all tuned stations, preset stations settings will be erased then your radio will switch back on.

Software Upgrade

The software upgrade option is for service only.

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/▶▶** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** on the remote control to confirm.
2. Press **◀◀/▶▶** or **▶▶/▶▶** to select **<Software Upgrade>**. Press **OK/▶▶** on the remote control to confirm.
3. Press **◀◀/▶▶** or **▶▶/▶▶** to select **<Yes>**. Press **OK/▶▶** on the remote control to confirm.

Software Version

This information may be requested when dealing with technical support issues.

1. Press and hold **REPEAT/MENU** button on the remote control, and then press **◀◀/▶▶** or **▶▶/▶▶** to select **<SYSTEM>**. Press **OK/▶▶** on the remote control to confirm.
2. Press **◀◀/▶▶** or **▶▶/▶▶** to select **<SW Version>**. Press **OK/▶▶** on the remote control to confirm.

Clock Operation

Setting Time and Date in Standby mode

1. In **Standby** mode, press and hold **SLEEP/CLOCK** button on the remote control. The display will show the "**Set time**" menu, and the hour indicator will blink.
2. Press **◀◀/◀◀** or **▶▶/▶▶** button to set the **hour**.
3. Press the **OK/▶▶** button to confirm. The minute indicator will blink.
4. Press **◀◀/◀◀** or **▶▶/▶▶** button to set the **minute**.
5. Press the **OK/▶▶** button to confirm.
6. The display will now show the "**Set date**" menu, and the day indicator will blink.
7. Press **◀◀/◀◀** or **▶▶/▶▶** button to set the **day**.
8. Press the **OK/▶▶** button to confirm. The month indicator will blink.
9. Press **◀◀/◀◀** or **▶▶/▶▶** button to set the **month**.
10. Press the **OK/▶▶** button to confirm. The year indicator will blink.
11. Press **◀◀/◀◀** or **▶▶/▶▶** button to set the **year**.
12. Press the **OK/▶▶** button to confirm.



- If no button is pressed in approximately 10 seconds, the unit exits clock setting mode automatically.
- If a power failure occurs or the unit is disconnected from the mains, the clock setting will be lost.

Setting the Sleep Timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn o by itself rather than play all night.

While the unit is in On mode, press **SLEEP/CLOCK** on the remote control repeatedly to set the sleep time between **15 minutes / 30 minutes / 45 minutes / 60 minutes / 90 minutes / 120 minutes / Off**.

DAB Operation

Select DAB mode

- **Using the Remote Control**

Press **DAB/FM** button repeatedly on the remote control to select **DAB/DAB+** mode.

- **Using the unit**

Press **☐** button to enter **Source** menu, and then press **◀◀/▲** or **▶▶/▼** button to select **DAB/DAB+** mode. Press **▶▶/SELECT** button to confirm.

First Time Auto Scan

If the unit is connected to the mains power and then switched on to **DAB** mode for the first time, the unit will automatically start scanning. During the scan the display will show a slide bar that indicates the progress of the scan and the amount of stations that have been found so far.

Once the scan has finished, the unit will select the first alphanumerically found station.

To Select and Listen to the Found Stations

Press **◀◀/▲** or **▶▶/▼** button on the unit, or **▲/TUNE-** / **▼/TUNE+** on the remote control. Then press **▶II/SELECT** on the unit, or **OK/▶II** on the remote control to confirm.

Secondary Services

The unit will show ">>" before the name of the station to indicate primary services, and "<<" after the name to indicate secondary services on **Station List**.

These secondary services contain extra services that are related to the primary station. e.g. a sports station may want to add extra commentaries.

Full Scan

The full scan will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.

- **Using the Remote Control**

Press **■ / SCAN** button to activate auto scan.

Or

1. Press and hold **REPEAT/MENU** button. Select **FULL SCAN**.
2. Press **OK/▶II** to start auto scan.

- **Using the main unit**

Press and hold **▶II/SELECT** button. Select **FULL SCAN**. Press **▶II/SELECT** button to start auto scan.

All the stations that have been found will be stored automatically.

Manual Tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press and hold **REPEAT/MENU** on the remote control, and then press **◀◀/▲** or **▶▶/▼** on the unit, or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<Manual tune>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.
2. Press **◀◀/▲** or **▶▶/▼** on the unit, or **▲/TUNE-** / **▼/TUNE+** on the remote control to cycle through the DAB channels, which are numbered from **5A** to **13F**.

DRC (Dynamic Range Compression)

If you are listening to music with high dynamic range in a noisy environment, you may wish to compress the audio dynamic range.

1. During **DAB** mode, press and hold **REPEAT/MENU** on the remote control.
2. Press **◀◀/▲** or **▶▶/▼** on the unit, or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<DRC>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.
3. Press **◀◀/▲** or **▶▶/▼** on the unit, or **▲/TUNE-** / **▼/TUNE+** on the remote control to select between **<DRC off>**, **<DRC low>** and **<DRC high>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.

Preset Stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

To store a preset, you must first be listening to the station that you would like to save.

1. Press and hold **PRESET**. The display will show **"Preset Store"** menu.
2. Press **▲/TUNE-** / **▼/TUNE+** to select your desired preset station number.
3. Press **OK/▶II** button to confirm.
4. The station will be stored and the screen will then show **"Preset ## stored"**.

Recalling Preset Stations

To recall a preset, you must first have stored preset stations in the unit.

• Using the Remote Control

Press **◀◀/◀◀** or **▶▶/▶▶** to select your desired preset station.

OR

Simply recall the preset station by pressing **0-9** on the remote control.

OR

1. Press **PRESET** to enter the preset menu.
2. Press **▲/TUNE-** / **▼/TUNE+** to select your desired preset station number.
3. Press **OK/▶II** button to confirm.

• Using the main unit

1. Press **PRESET** on the remote control to enter the preset menu.
2. Press **◀◀/▲** or **▶▶/▼** to select your desired preset station number.
3. Press **▶II/SELECT** to confirm.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

DAB Display Modes

Press **INFO** on the remote control, the display will switch through the following display modes.

DLS (Dynamic Label Segment)

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions. The message usually includes information, such as programme details etc.

Signal Error

This displays a number showing the error rate. If the number is 0, it means the signal received is error free and the signal strength is strong. If the error rate is high, it is recommended to re-orient the aerial or re-position the unit.

Programme Type

This describes the “style” or “genre” of the programme that is being broadcast.

Ensemble

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

Frequency


This displays the frequency of the present station, such as “220.352” (MHz).

Audio Bit Rate

The display will show the digital audio bit rate being received.

Date

This displays the current date provided automatically by the broadcaster.

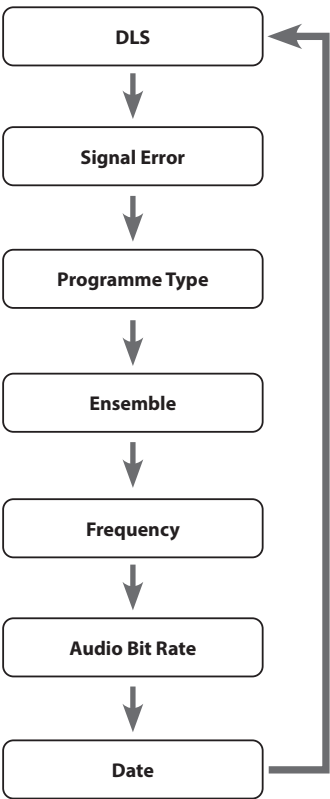

FM Radio Operation



- Make sure that you have correctly connected and fully extended the antenna.
- The search may not stop at a station with a very weak signal.
- If reception is still poor, try to adjust the FM aerial location.

Select FM mode

• Using the Remote Control

Press **DAB/FM** button repeatedly on the remote control to select **FM** mode.

• Using the main unit

Press  button to enter **Source** menu, and then press **◀◀/▲** or **▶▶/▼** to select **FM** mode. Press **▶II/SELECT** button to confirm.

Tuning in a Station

Auto Tuning

Press  / **SCAN** / **PAIR** on the unit, or  / **SCAN** on the remote control to start auto tuning. Press again to stop the auto tuning.



The search may not stop at a station with a very weak signal.

Manual Tuning

Press and hold **▲/TUNE-** / **▼/TUNE+** on the remote control to start the forward or reverse scanning. The display will show the frequency being searched. Once a station has been found, the scanning will stop automatically. Continue to change the frequency until you find the station you want.



With FM radio it may be necessary to fine tune each station by pressing **▲/TUNE-** / **▼/TUNE+** button on the remote control repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Scan Settings

By default, FM scans stop at any available station. This may result in a poor signal-to-noise ratio (hiss) from weak stations.

1. Press and hold **REPEAT/MENU** on the remote control to enter **FM** menu, and then press **◀◀/▲** or **▶▶/▼** on the unit or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<Scan setting>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.
2. Press **◀◀/▲** or **▶▶/▼** on the unit or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<All stations>** or **<Strong stations only>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.

Audio Settings

By default, all stereo stations are reproduced in stereo. For weak stations, this may result in a poor signal-to-noise ratio (hiss).

1. Press and hold **REPEAT/MENU** on the remote control to enter **FM** menu, and then press **I◀◀/▲** or **▶▶/▼** on the unit or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<Audio setting>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.
2. Press **I◀◀/▲** or **▶▶/▼** on the unit or **▲/TUNE-** / **▼/TUNE+** on the remote control to select **<Stereo allowed>** or **<Forced mono>**. Press **▶II/SELECT** on the unit or **OK/▶II** on the remote control to confirm.

Preset Stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

To store a preset, you must first be listening to the station that you would like to save.

1. Press and hold **PRESET**. The display will show **"Preset Store"** menu.
2. Press **▲/TUNE-** / **▼/TUNE+** to select your desired preset station number.
3. Press **OK/▶II** button to confirm.
4. The station will be stored and the screen will then show **"Preset ## stored"**.

Recalling Preset Stations

To recall a preset, you must first have stored preset stations in the unit.

• Using the Remote Control

Press **I◀◀/◀◀** or **▶▶/▶▶** to select your desired preset station.

OR

Simply recall the preset station by pressing **0-9** on the remote control.

OR

1. Press **PRESET** to enter the preset menu.
2. Press **▲/TUNE-** / **▼/TUNE+** to select your desired preset station number.
3. Press **OK/▶II** button to confirm.

• Using the Main Unit

1. Press **PRESET** on the remote control to enter the preset menu.
2. Press **I◀◀/▲** or **▶▶/▼** to select your desired preset station number.
3. Press **▶II/SELECT** to confirm.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

FM Display Modes

Press **INFO** on the remote control, the display will switch through the following display modes.

Radio Text

The broadcaster can include a message that displays information about the current programme.

Programme Type (PYT)

This describes the “style” or “genre” of the programme that is being broadcast.

Name


The display will show the name of the radio station.

Audio Bit Rate

The display will show the digital audio bit rate being received.

Date

This displays the current date provided automatically by the broadcaster.

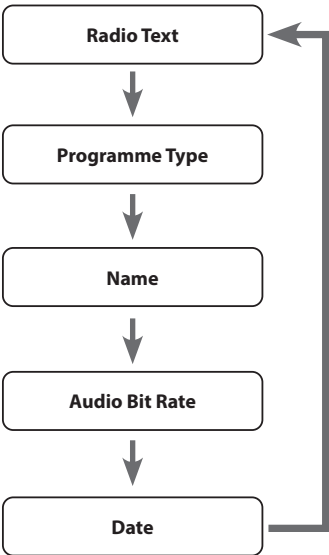

CD/MP3 Operation

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable - Audio/MP3)		AUDIO / MP3
CD-RW (CD-Rewritable - Audio/MP3)		AUDIO / MP3
AUDIO-CD (Compact Disc Digital Audio)		AUDIO



- Some recorded files may not be able to be played due to the type and format of disc or condition of the recording.
- If you are having trouble playing a certain disc, it is recommended to use USB input instead for best MP3 playback.

Select DISC mode

- **Using the Main Unit**

Press  button to enter **Source** menu, and then press /▲ or ►/▼ button to select **DISC** mode. Press ►/SELECT button to confirm.

- **Using the Remote Control**

Press **CD** button on the remote control to enter **DISC** mode.

Playback

1. In **DISC** mode, press ▲ button on the unit or remote control to open the disc tray.
2. Place the disc with the label side up into the CD compartment, and then press the ▲ button on the unit or remote control to close the tray.
3. After closing the disc tray, the unit will read the disc and play it automatically.



- If there is no disc or the disc can't be read, "**No Disc**" will show on the display.
- If in stop mode, please press ►/SELECT on the unit, or **OK/►/SELECT** on the remote control to start playing the disc.

4. Press ►/SELECT on the unit, or **OK/►/SELECT** on the remote control to pause the playback. To resume playback, press ►/SELECT on the unit, or **OK/►/SELECT** on the remote control again.
5. Press ■ / **SCAN** / **PAIR** on the unit, or ■ / **SCAN** on the remote control to stop the disc playing. Press ▲ button if you want to remove the disc.

To Skip Search or Search and Play

- Press  once or more to skip to beginning of the current track or the previous track.
- Press  once or more to skip forward to the next track.
- Press and hold  /  to search for the position that you intend to start playing. Release to resume normal playback.

Selecting an Album (for MP3 disc)

- Press **ALBUM+/ALBUM-** on the remote control to select the next/previous album, and play the first track of this album.

Repeat Playback

ONE and ALL Repeat Play

- **CD Disc**

Press the **REPEAT/MENU** button repeatedly to set the function.

First press : To repeat the same track.

Second press : To repeat playing all tracks on a disc.

Third press : To randomly play all tracks.

Fourth press : To cancel the repeat playing.

- **MP3 Disc**

Press the **REPEAT/MENU** button repeatedly to set the function.

First press : To repeat the same track.

Second press : To repeat playing all tracks on a disc.

Third press : To repeat playing album.

Fourth press : To randomly play all tracks.

Fifth press : To cancel the repeat playing.

Programme Play

You can program up to 20 tracks to play in any desired order.

1. Make sure the disc is inserted and in **STOP** mode.
2. Press **PROG** button on the remote control to enter the programme mode.
3. Press **ALBUM+/ALBUM-** button to select desired folder (for **MP3 disc**).
4. Press **◀◀/▶▶** or **▶▶/▶▶** to select the desired track number.
5. Press **PROG** button to store.
6. Repeat steps 3-4 to program more tracks.
7. Once it is completed, press the **▶II/SELECT** on the unit, or **OK/▶II** on the remote control to start programme play.
8. Press **■ / SCAN / PAIR** on the unit, or **■ / SCAN** on the remote control once to stop the programme play. Press twice to clear programme.



Opening the CD tray and closing it again will cancel the programme and erase the memory.

USB Playback Operation

By connecting a USB mass storage device (including USB flash memory, USB flash players or memory cards) to this unit, you can enjoy the device's stored music through the unit.

Insert the USB device's USB plug into the **USB OUTPUT 5V 500mA** socket at the front of unit.


- **Using the Main Unit**

Press the  button to enter **Source** menu, and then press /▲ or /▼ to select **USB** mode. Press /SELECT button to confirm.

- **Using the Remote Control**

Press **USB/LINE IN** button repeatedly on the remote control to select **USB** mode.

1. Press **ALBUM+/ALBUM-** button to select next/previous album, and play the first track.
2. Other playback features are the same as if you were playing an CD.

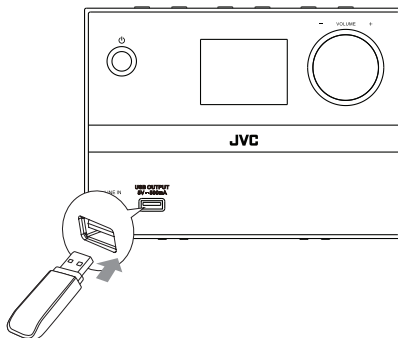

- The player supports the USB music file format of MP3 only.
- If your USB device is loaded with MP3 files but the display keeps showing '**NO SONG**' on the display, the format of your USB device might not be compatible with the unit.
- The unit can support USB devices with up to 32 GB of memory.
- The unit may not be compatible with all USB devices, this is not an indication of a problem with the unit.

LINE IN (AUX IN) Operation

Select LINE IN mode

- **Using the Main Unit**

Press the  button to enter **Source** menu, and then press /▲ or /▼ to select **LINE IN** mode. Press /SELECT button to confirm.

- **Using the Remote Control**

Press **USB/LINE IN** button to enter **LINE IN** mode.

1. Operate your audio device directly for playback features.
2. Turn the **VOLUME+/-** dial on the unit or press the **VOL+/VOL-** button on the remote control to adjust the volume to your desired level.

Bluetooth® Operation

Select Bluetooth mode

• Using the Main Unit

Press  to enter **Source** menu, and then press /▲ or ►/▼ to select **Bluetooth** mode. Press /SELECT button to confirm.

• Using the Remote Control

Press /PAIR button to enter **Bluetooth** mode.

Pair your device

1. Activate your Bluetooth® device and select the search mode. “**UX-D225B**” will appear on your Bluetooth® device list.
2. Select “**UX-D225B**” and enter “**0000**” for the password if necessary. If connection is successful, and the unit will prompt a tone, and the display will show “**Connected**”.
3. To disconnect the Bluetooth® function,
 - Switch to another function on the unit;
 - Disable the function from your Bluetooth® device.
 - Press /PAIR button on the remote control.



To reconnect your device to the unit, you may also press and hold /PAIR button for about 3 seconds on the remote control. Make sure it has been paired with the unit.

If your Bluetooth® device supports A2DP, play music via your device.

If your Bluetooth® device supports AVRCP, use supplied remote control to control play.

- To pause/resume playback, press /SELECT on the unit, or **OK**/ on the remote control.
- To skip backward/forward to a track, press /▲ or ►/▼ on the unit or /◀/▶/▶▶ on the remote control.
- Turn the **VOLUME**+/- dial on the unit or press the **VOL**+/**VOL**- button on the remote control to increase or decrease the volume.



- The operational range between the unit and the device is approximately 10 metres.
- Before connecting a Bluetooth® device to the unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- If no other Bluetooth® devices paired with this unit within 1 minutes, the unit will recover to its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.


Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.

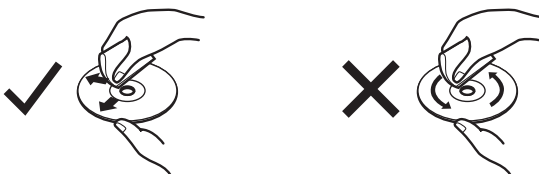

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Centre on **0818 810575**.

General

Problem	Solution
No power.	• Ensure the mains plug is connected. • Make sure that you select the ON mode.
The remote control is not function.	• Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
No sound from the unit.	Please try either one of the solutions below: • Make sure that the unit is not muted. Press the  or the VOL+/VOL- on the remote control, or turn the VOLUME+/- dial on the unit to resume normal listening. • Press  on the unit or on the remote control to switch the unit to standby mode. Then press the button again to switch the unit on. • Unplug the unit from the mains socket, then plug them again. Switch on the unit.
The unit does not respond when pressing any buttons.	• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

CD

Problem	Solution
Disc in place but the unit won't play.	• Make sure you've selected CD mode. • Make sure the disc label is facing up. • Make sure the disc is clean. • PAUSE mode may be activated, deactivate it. • Disc may be damaged or dirty; check and clean the disc.
Disc skips	• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.

Radio

Problem	Solution
Poor radio reception.	Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	FM - Weak signal. Search manually. - If reception is still poor, adjust the position of the aerial. DAB - No DAB coverage in your area or poor reception. Adjust the position of the unit. - Perform a system reset and then a DAB full scan.

USB

Problem	Solution
Unable to insert USB device	Insert the USB device the other way round.

Bluetooth®

Problem	Solution
I cannot find "UX-D225B" on my Bluetooth® device.	- Ensure the Bluetooth® function is activated on your Bluetooth® device. - Ensure you have paired your unit with the Bluetooth® device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

System Section		
Input Rating		100 - 240 V ~ 50/60 Hz, 20 W
USB Output		5 V $\overline{=}$ 500 mA
Frequency Band		FM: 87.5 - 108 MHz DAB/DAB+: 174.928 - 239.200 MHz
Speaker Output Power		15W $\times$ 2
Compatible Disc format		CD, CD-R, CD-RW, MP3
Bluetooth®	Bluetooth® Version	Bluetooth® V5.0
	Maximum power transmitted	4 dBm
	Frequency bands	2402 - 2480 MHz

Ecodesign Information		
Power Consumption Information	Standby Power Consumption (when the unit is operating at standby mode)	≤ 0.8 W
	Network Standby Power Consumption	N/A
Time interval for power management function switches the unit automatically into standby mode		The unit should switch to standby mode automatically when the unit is not playing audio signal for 15 minutes.
Power consumption in network standby if all wireless network ports are activated		N/A
How to activate wireless network port: N/A		
How to deactivate wireless network port: N/A		
USB Memory compatible size		32 GB
Net Weight		Main Unit: 1.7 kg Speakers: 2.3 kg
Unit Dimension (W) × (D) × (H)		Main Unit: 180 mm × 234 mm × 136 mm Speaker: 155 mm × 128 mm × 254 mm
Remote control battery type		AAA (1.5V x 2)

Features and specifications are subject to change without prior notice.

For the latest version of the Safety and Instruction Manual, please visit the official website below (other websites may not contain the full and most updated version):

<https://www.currys.co.uk/services/repairs-maintenance/product-service-manuals.html>

**Declaration of Conformity (RED)**

Hereby, Currys Group Limited declares that the radio equipment type [UX-D225B] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [UX-D225B] is in compliance with Radio Equipment Regulations 2017 (S.I. 2017/1206).

The full text of the UK declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

For Help and Support Call

UK: 0344 561 1234

Ireland: 0818 810575

This product is distributed and warranted exclusively by Currys Group Limited.

"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(IB-UX-D225B-260424V2)