 



FUNCTION

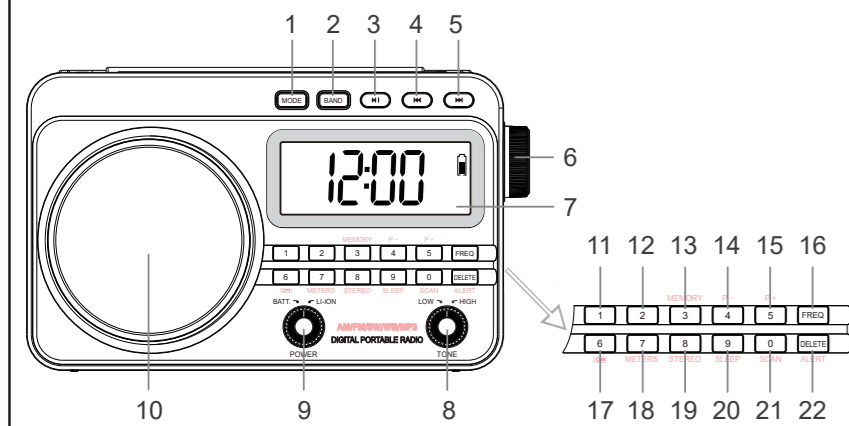

- 1.MODE Switch Button
- 2.BAND Switch Button
- 3.Play/Pause Button
- 4.Previous Song/Downward adjust/Fast Rewind Button
- 5.Next song/Upward adjust/Fast Forward Button
- 6.Power ON/OFF/Volume knob
- 7.LCD display
- 8.LOW/HIGH tone selector
- 9.BATT/LI-LON selector
- 10.Speaker
- 11.Number 1
- 12.Number 2
- 13.Numbe 3/Manual memory storage


-1-

 - 14.Numbe 4/Downward to call out the preset station
- 15.Numbe 5/Upward to call out the preset station
16. Frequency input
- 17.Numbe 6/Lock button
- 18.Numbe 7/SW band switching
- 19.Numbe 8/FM stereo button
- 20.Numbe 9/Sleep Timer setting
- 21.Numbe 0/Auto Scan button
- 22.Exit/Delete/Alert button

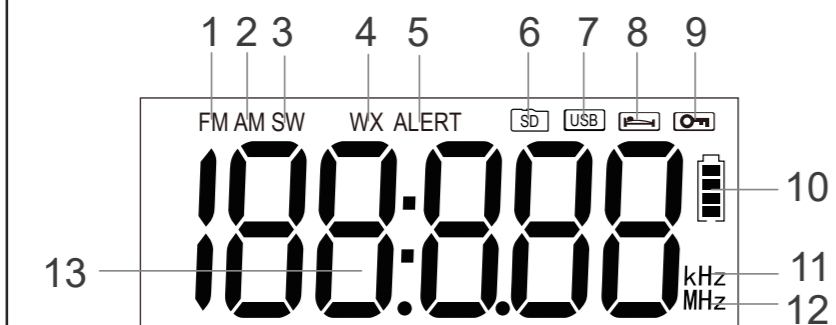

- 1.FM band
- 2.AM band
- 3.SW band
- 4.WX band
- 5.Auto-Alert
- 6.SD card play
- 7.USB Play
- 8.Sleep Timer
- 9.Locking key
- 10.Power indicator
- 11.AM unit
- 12.FM/SW/WB unit
- 13.Frequency display

 -2-

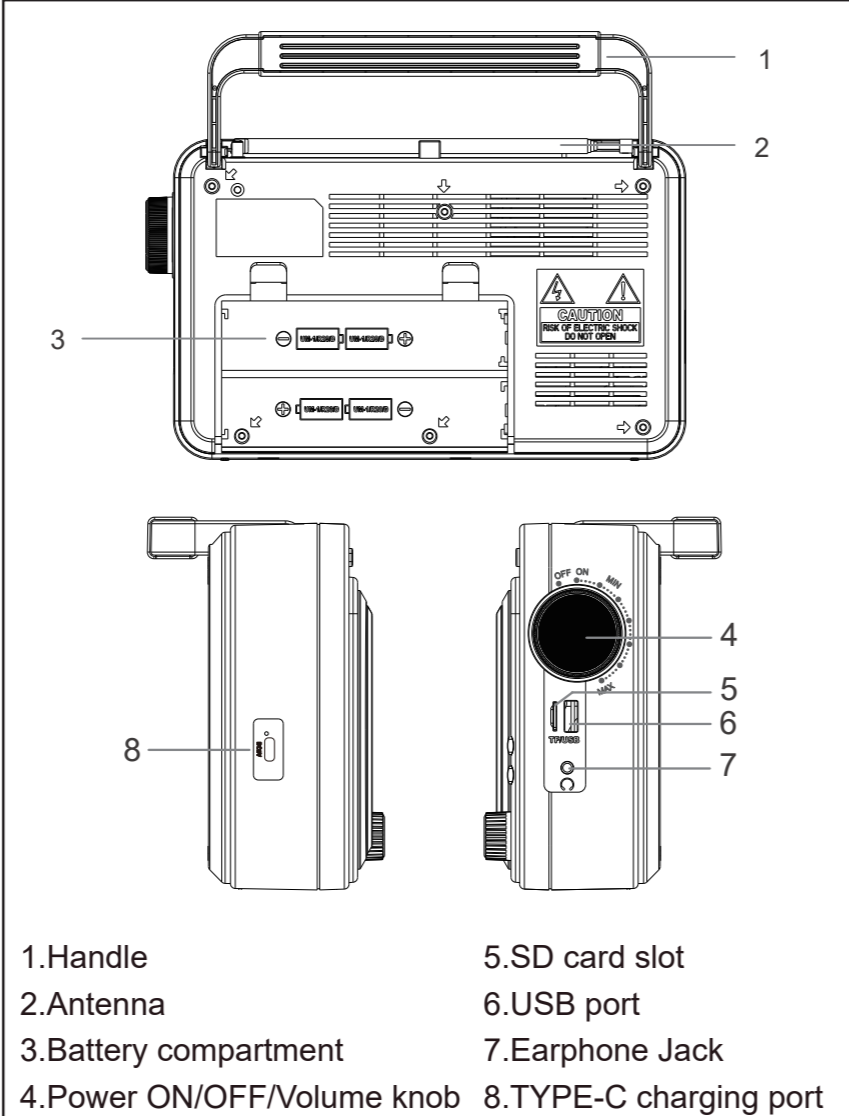

- 1.Handle
- 2.Antenna
- 3.Battery compartment
- 4.Power ON/OFF/Volume knob
- 5.SD card slot
- 6.USB port
- 7.Earphone Jack
- 8.TYPE-C charging port

-3-

CONTENTS

| | |
|----------------------------|----|
| RADIO OPERATION | 5 |
| FM/AM/SW MODE | 5 |
| WX MODE | 7 |
| MP3/USB MODE | 7 |
| SLEEP TIME SETTING | 9 |
| EARPHONE | 9 |
| TONE ADJUSTMENT | 10 |
| LOCK SWITCH | 10 |
| POWER INDICATOR | 10 |
| BATT/LI-LON SELECTOR | 11 |
| USE THE ANTENNA | 12 |
| SAFETY INSTRUCTIONS | 12 |
| WARRANTY | 13 |

-4-

RADIO OPERATION

- Rotate the volume adjustment knob on the right to turn on the radio.
- Rotate the volume knob to the "OFF" position and the radio will be turned off.

FM/AM/SW MODE

- Turn on the radio, then Short press the "BAND" button to switch to FM/AM/SW mode.
- Short press the (FM/AM) button to manually select the radio station.
- Long press the (FM/AM) button for 2 seconds and release it; It will automatically pause when it searches for a station and play the searched station.

Preset Stations Manually:

- Press the (FM/AM) button to choose the station you want to preset.
- Long press the "3" memory button for 2 seconds, the serial number of the preset station will flash.
- Short press the "4"/"5" button to choose the number you want to preset between "P01-P40".
- Finally, press the "3" memory button to save the preset settings or wait five seconds for auto save.
- After preset successfully, press the "4"/"5" button to select the "P01-P40" preset station you want.

-5-

Preset Station Automatically:

- Long press the "0" SCAN button for 2 seconds to scan the stations.
- When stations search is completed, the radio will automatically save the received stations as preset stations "P01-40" and play the first station currently stored.
- After scanning, press the "4"/"5" button to call out the preset stations (P01-40).

Manual-Set Radio:

- Under FM/AM/SW mode, Short press the (FM/AM) button to adjust frequency up or down.
- Short press the (FREQ) button, the LCD will display stations "P01-40" and play the first station currently stored.
- Short press the number (0-1-2-3-4-5-6-7-8-9) button to enter the radio frequency you want.

NOTE: When the number is entered incorrectly, short press the (DELETE/ALERT) button to cancel.

- Confirm automatically or press the (FREQ/TIME) button when the input is completed.
- SW receiving range: 4.75-21.85MHz.
- In the SW mode, there are 9 stations of SW in the setting for quicker selection of SW station.
- Short press the (7) memory button to select.

-6-

- The LCD will display: (SW: 4.75MHz-5.95MHz-7.10MHz-9.50MHz-11.65MHz-13.60MHz-15.10MHz-17.50MHz-21.45MHz).

WX MODE

- Short press the "BAND" button to switch to WX mode.
- Short press the (WX) button to select the received weather frequency points, which are:
 - 1-162.400MHz, 2-162.425MHz,
 - 3-162.450MHz, 4-162.475MHz,
 - 5-162.500MHz, 6-162.525MHz,
 - 7-162.550MHz

- When the radio is turned off, long press the (DELETE/ALERT) button for 2 seconds to enter the automatic warning "ALERT" state, and "ALERT" flashes on the LCD display.

NOTE: In the automatic warning mode, all the buttons will not work unless the ALERT mode is removed.

- Long press the (DELETE/ALERT) button for 2 seconds or rotate the Power ON/OFF knob to exit the automatic warning mode.

MP3/USB

- Short press the (MODE) button to switch to "MP3" mode. (when not connected, LCD will display "----")

-7-

- Insert "SD Card" or "USB flash disk" to play songs. When the "flash disk" is inserted, short press the (BAND) button to switch to "SD/USB".
- Press the (PREV) button to adjust the last/next song.
- Long press the (PREV) button to fast forward/fast rewind play.

Manual-Entry Song Catalogue

- Press the (PAUSE) button to play/pause.
- In the MP3 play state.
- Press the (FREQ/TIME) button, the LCD will display "----".
- Short press the number (0-1-2-3-4-5-6-7-8-9) button to enter the song catalog number.
- When the input is completed, confirm automatically or press the (FREQ/TIME) button to confirm.

 
NOTE: When the number is entered incorrectly, short press the (DELETE/ALERT) button to cancel.

- **NOTE:**
- SD flash disk maximum support 256G
- USB flash disk maximum support 256G
- Support playback format: MP3/WMA/WAV
- If the sound has vibration, please adjust the volume.
- When "NULL" character appears in the display, it is due to the factor of overloaded songs or "flash disk" is damaged, please replace the normal "flash disk" to use.

-8-

SLEEP TIME SETTING

- In the play mode, long press the (9/SLEEP) button for 2 seconds to enter the sleep setting, the LCD will display sleep indicator "S" and shutdown time "10".
- Then short press the (9/SLEEP) button to select sleep shutdown time. The sleep time can be set: 10-30-60-90 (minute).
- After setting, wait "5 seconds" for the automatic confirmation.

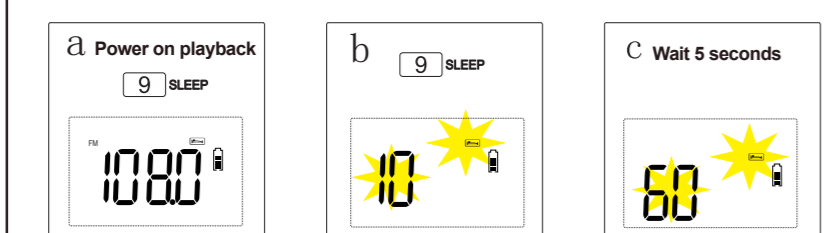

NOTE: When the radio shutdown based on the setting sleep time, all the buttons will not work. To work again, just turn off the power knob and turn it back on.

EARPHONE

- This radio is designed with an "EARPHONE" port. To avoid affecting others just insert the earphone to its jack.
- **NOTE:** After listening, please unplug your headphones so that you can hear the weather alert message.

 
-9-

- When listening to FM band radio, please plug the stereo earphones into the jack and short press the (8) button to switch the effect.



TONE ADJUSTMENT

- When the TONE knob indicates "LOW", it is bass quality.
- When the TONE knob indicates "HIGH", it is treble quality.

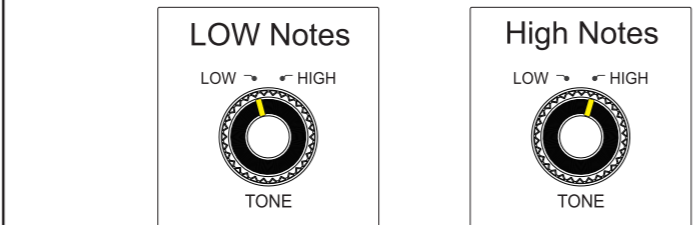

LOCK SWITCH

- Long press the "6" key for 2 seconds, the lock symbol "L" will show on the display. When you lock the screen, other buttons can't work at this time.
- Long press the "6" key for 2 seconds again to unlock the radio.

POWER INDICATOR

- During charging, the charging indicator shows blue light, and the battery symbol on the screen will flash.


-10-

- After fully charge, battery symbol on the screen will stop flashing.
- Please use 5V /1A power adapter to charge the radio. The fully charge time is about 5 hours.
- Battery indicator reference:

| | | |
|--------------------------|--|------|
| A. 100% for 4-bar power: | | 100% |
| B. 75% for 3-bar power: | | 75% |
| C. 50% for 2-bar power: | | 50% |
| D. 25% for 1-bar power: | | 25% |
| E. 3% for 0-bar power: | | 3% |


BATT/LI-LON SELECTOR

 - When the knob is turned to "BATT", it is powered by dry cell batteries.
- When the knob is turned to "LI-LON", it is powered by a lithium battery.

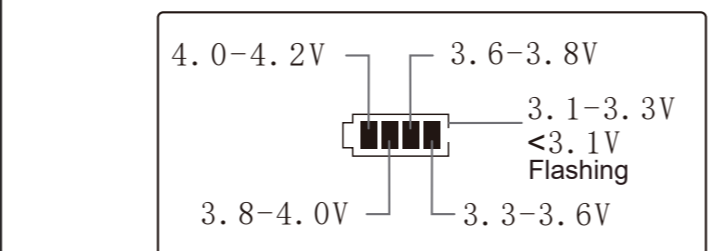

AAA Dry batteries

 -11-

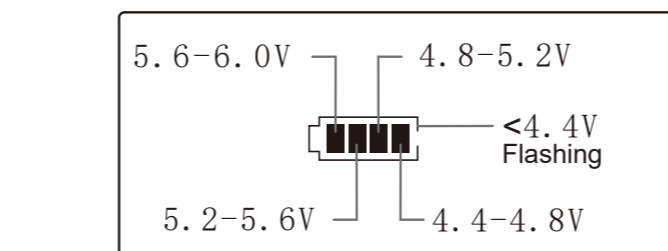

USE THE ANTENNA

- When listen to AM/FM radio, please pull out the antenna, expand the length and find the good position to achieve the best reception.
- **Note:** Best area to received in the window are a no electronic interference.

SAFETY INSTRUCTIONS

- Avoid violent impact or fall to the ground.
- Do not place in direct sunlight, high temperature or humid places.
- Do not use, install or store in the fireplace and other places near the fire.
- If there is debris into the machine please find qualified maintenance personnel to check before use.
- When cleaning the housing use a soft cloth with a wet detergent solution to wipe. Do not use alcohol thinner and other strong solvents to clean.

-12-

- When cleaning the housing use a soft cloth with a wet detergent solution to wipe. Do not use alcohol thinner and other strong solvents to clean.
- In walking or driving, please try not to use the headset may cause the risk of traffic accidents.
- Do not pull or fold the headset wire which may cause the headset wire internal copper wire breakage.
- Keep the appropriate volume to listen you can pay attention to the surrounding environment to ensure safety.
- Please unplug the USB charging cable when not in use for a long time.
- In the dry and cold season chemical fiber silk, and other items that easily generate static electricity will affect or damage the sensitive devices inside the radio. This machine has corresponding protection measures but please try to avoid friction with the above items.

WARRANTY

- This am fm radio has full 12-month warranty against manufacturing defects. The warranty period begins from the date of purchase.

-13-

| | |
|------------------------------|--|
| Frequency range | FM: 87.5-108MHz (Europe/USA) FM: 76-108MHz (Japan) AM: 520-1710kHz (USA) AM: 522-1710kHz (Japan/Europe) SW: 4.75-21.85MHz WX1: 162.400MHz WX3: 162.450MHz WX5: 162.500MHz WX7: 162.550MHz WX2: 162.425MHz WX4: 162.475MHz WX6: 162.525MHz |
| MP3 play format | MP3&WAV&WMA |
| Maximum support flash memory | SD/256G / USB/256G |
| Radio memoery | FM=40 AM=40 SW=40 |
| TYPE-C input | 5V, 1A |
| LI-ION working voltage | 2.7-4.2V |
| Power source | 4000mAh/3.7V Li-ion |
| Charging time(USB) | 4-5 h |
| Battery powered | DC: 4x1.5V UM-1 |
| Power consumption | 6W |
| Product material | Hips, Metal |
| Speaker | φ52mm/6Ω/3W |
| Dimensions | 253*97*200mm/9.96*3.8*7.87in |
| Weight | 798g/1.76lb |

-14-

User Manual AM/FM/SW/WB/MP3 DIGITAL RADIO



Thank you for purchasing our products. Please read this manual carefully before using this product. If you encounter any difficulties or problems during usage, please contact us for further assistance.

-15-



MADE IN CHINA