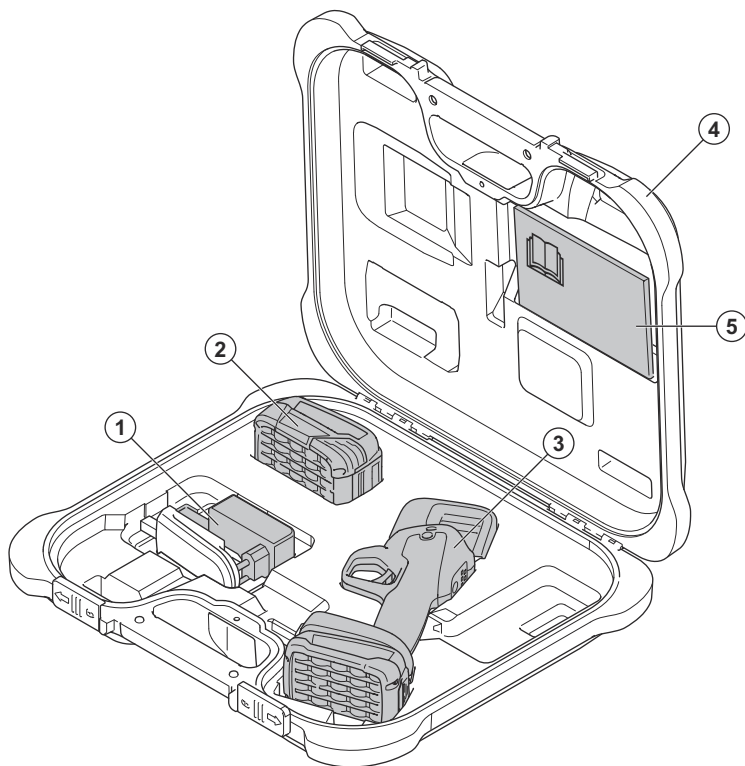

Aspire PS30X-BOX



1. Battery charger
2. Battery
3. Aspire PS30X-P4A
4. Aspire PS30X-BOX
5. Operators manual/Quick guide

Note: The Aspire PS30X-BOX is sold empty. The products shown in the Aspire PS30X-BOX are not included.



www.husqvarna.com

Original instructions



1144807-26

Rev. A



2025-11-26