

设计版本号	产品名称 Product name		比例 scale	日期 Date	设计师 Designer		审核 Audit	
Rev_V0_EN	DR-HTF023S_美规UG		1: 1	20260424	Dove		Susie	
	材质印刷与 技术要求	材质: 157G铜版纸双面覆哑膜 印刷要求: 双面彩色印刷, 图稿清晰、不开裂、不发皱。 对折要求: 上下风琴折页 色值要求: 蓝 C90 M70 Y0 K0 		字体 Fonts	Manrope	尺寸 Size	单页尺寸: 160*130 mm 总长: 520MM	
Hesung innovation 和生创新								

图纸设计禁止修改，尺寸以实际刀模图为准

DREO

Smart Tower Fan
753S

User Guide

Model No.: DRO1T023S
Rated Power: 30W
Power: 120V~60Hz

Scan to read the full user manual

Only DREO experts give all the support you need

- Faster response.
- Excellent customer support.
- Hassle-free returns.
- Professional product guidance!
- Satisfying after-sales experience.

Reach out to us, it's easy!

[support@dreo.com](#) [www.dreo.com](#)
[\(888\) 290-1688](#) Mon - Fri, 9:00 am-5:00 pm PST/PDT

Down

Store

Up

Pipe

Keep two base halves upside down and slot them in a crossed position, then insert the pipe on one half onto the slots on the other half.

Press down on the edges to snap the two base halves together.

Place the fan on the carton box with the front side facing upwards.

Remove the screw nut on the bottom of the fan.

Loosen

Thread the cord through the center hole and attach the base to the fan bottom.

Fit the base onto the fan and secure by screwing the nut back on.

Thread the cord through all REAR cord keepers, then set the fan upright.

CAUTION

Do not operate the tower fan if the base has not been installed.
Make sure to thread the cord through all rear cord keepers.

Control Panel

① Decrease Button
Decrease fan speed (1~12 speed levels).

② Mode Button
Switch between Normal/Natural/Sleep/Auto Mode.
Long press for 3 seconds to turn off automatically.

③ Increase Button
Increase fan speed (1~12 speed levels).

④ Oscillation Button / WiFi Connection
Adjust without device.
Long press for 3 seconds to start network settings and connecting.

⑤ Height Adjustment Button
Touch to automatically raise or lower the fan. Touch again to stop.
The fan height can also be adjusted via the remote control or app. Set a target height (44-50 inches) in the app.
The display will show UP or DOWN while the fan moving.

⑥ Timer Button
Select to set a timer (0-12h).

⑦ Power Button (On/Off)
Touch to turn the fan on or off.

Remote Control Pairing

Pairing a new remote control to an existing fan
If your remote control is unpaired and not working, follow the steps below:

- Long press and ON YOUR REMOTE CONTROL to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.

LED Display

① Normal Mode

② Natural Mode

③ Sleep Mode

④ Auto Mode

⑤ Height Adjustment

⑥ WiFi Connection

⑦ Timer

⑧ Height Unit (inch)

⑨ Oscillation

⑩ Fan Speed/Timer Hour/LPM

Working Modes

Normal Mode

Fan runs at the fixed speed.

Natural Mode

Fan speed goes up and down intermittently to replicate the natural breeze.

Sleep Mode (Auto On)

Balance comfort and noise by automatically decreasing fan speed as you fall sleep. Speed decreases once every 30 minutes, twice at most per use.

Auto Mode

Fan automatically increases speed when the room temperature is higher and decreases speed when the temperature is lower.

Note:

- If the fans turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.
- The display adjusts automatically based on the ambient lighting conditions. You can enable or disable this feature in the app.

Connecting to the DREO App

Scan the QR code to download the DREO app.

Search "DREO" on Google Play or the App Store.

Launch the DREO app and sign in or create an account.
Tip: Verify your email address to continue.

Hold the button for 3 seconds to start Wi-Fi connection settings.
Tip: The icon will keep flashing when pairing.

Tap **+ Add Device** and select **Smart Tower Fan 753S**.
Tip: Enable Bluetooth and plug in the appliance.

Now you can control the appliance on your app!
Tip: To reset network setup, hold the button for 5 seconds.

*To learn more, please go to user manual [www.dreo.com](#)

IMPORTANT SAFETY INSTRUCTIONS

READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

Do not cover the air inlet and outlet while in operation.

Do not use the appliance near flammables and combustibles.

General Safety

- Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Operation Safety

- Place the appliance on a flat, dry surface before use.
- Do not immerse in water and any other liquids.
- Do not use the appliance until the base is installed.
- Do not insert your fingers, pencil, and any other objects into the grilles while in operation.
- Do not attempt to repair or modify any electrical/mechanical functions on the appliance. All servicing should be performed by qualified personnel only.

Electricity Safety

- Makesure that the voltage of your electricity supply is the same as that indicated on the appliance.
- Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
- Do not operate any fan with a damaged cord or plug. Discard the fan or return to an authorized service facility for examination and/or repair.
- Do not run the cord under carpets. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from the traffic areas and where it will not be tripped over.

WARNING:

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

WARNING:

To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g., parts made at home using a 3D printer).

WARNING:

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Cleaning Instructions

- Always turn off and unplug the appliance before cleaning.
- Gently wipe off the dust with a soft, dry cloth.
- Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air filter.
- DO NOT use cleaning agents.
- DO NOT use abrasive scrubbers.
- Fire or electrical shock hazard. DO NOT immerse the main unit in water. Never allow water to get inside the appliance.
- Exercise caution when cleaning. Any servicing should be performed by an authorized service representative.
- Store in a cool, dry area and keep the cable out of trip-hazard areas to avoid tripping hazards.

User Service Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please shut off power and follow the below instructions or consult a qualified electrician.

- Unplug the plug and remove from the receptacle or other outlet device. Do not touch the exposed metal part.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully. Push the fuse from the other side to remove the fuse.
- Risk of fire. Replace fuse only with Same, 125 V, 1A fuse.
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

WARNING

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.

Battery Replacement

- Remove the battery cover in the direction indicated by the arrow.
- Replace with two new AAA 1.5V batteries. Make sure that the positive (+) and negative (-) terminals are positioned correctly.
- Push the battery cover back into place.

WARNING

- Replace with new batteries of the same type when replacement is required.
- Remove the batteries when the remote control is unused for a long period of time.
- Do not attempt to destroy or dismantle the batteries.
- Do not dispose of the batteries in a fire as batteries may explode or leak.
- Chemical burn hazard. Keep batteries away from children.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-cad, Ni-mh, etc.) batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove used batteries promptly.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that causes undesired operation. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause a radio reception problem, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a wall outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR HOUSEHOLD USE ONLY

READ AND SAVE THESE INSTRUCTIONS

DREO CUSTOMER CARE

12-MONTH LIMITED WARRANTY

What Is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes as accordance with this User Manual.

Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will last two (2) months from the date of manufacture printed on your product label.

What Is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. Additionally, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or misuse of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;
- Any tampering or complete altered, modified and/or dismantled products;
- Reduction in battery discharge time due to battery age or use (see applicable);
- Products with altered or removed serial numbers;
- Cleaning any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product;
- Defects caused by repair attempts, services, improper maintenance, or alterations to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you through this limited warranty will not extend the duration of this limited warranty.

Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED. THE LIMITED WARRANTY OF MERCHANTABILITY OF THE PRODUCT, IF ANY, SHALL NOT BE AVAILABLE FOR THE PRODUCT. THIS WARRANTY DOES NOT COVER ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IN ACCORDANCE WITH THE LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL DAMAGES OR LOSS OF ANY NATURE THAT YOU MAY SUFFER FROM ANY SUCH DAMAGE. Some limitations do not allow limitations on implied warranties but the inclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

Limited Remedies

If your product is

	裁切线	图层使用规范： 1、备注信息图层为非印刷区域，展示印刷物料基础信息。 2、刀板线、备注工艺、尺寸层展示印刷工艺部分。 3、画面信息层展示印刷展示图片与文字。 *电子文档为Adobe Illustrator制作
	正折线	
	反折线	
	出血位	
	粘胶区域	

					品、包装等信息！
					*OEM信息： 委托方及被委托方 信息（名称、地址、 邮编、电话、生产 许可证、卫生许可 证）
设计师	审核	产品负责人	法规	采购	