

Electric Callus Remover

User's Manual

EN



SENCOR®

SPE 4110BL
SPE 4111RS
SPE 4112VT

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

TABLE OF CONTENTS

| | |
|---|----|
| IMPORTANT SAFETY NOTICE | 3 |
| DESCRIPTION OF THE ELECTRIC CALLUS REMOVER | 6 |
| WHAT IS HARD SKIN?..... | 7 |
| PURPOSE OF USING THE ELECTRIC CALLUS REMOVER | 7 |
| POWER SOURCE | 7 |
| INSERTING AND REMOVING THE ABRASION ROLLER..... | 7 |
| USING THE ELECTRIC CALLUS REMOVER | 9 |
| CARE OF FOOT SKIN AFTER USING THE CALLUS REMOVER | 9 |
| CLEANING AND MAINTENANCE..... | 9 |
| TECHNICAL SPECIFICATIONS | 10 |
| INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS..... | 10 |
| DISPOSAL OF USED BATTERIES | 10 |
| DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT | 10 |


IMPORTANT SAFETY NOTICE

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be operated by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers. Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance out of reach of children that are younger than 8 years of age. Do not allow children to play with the appliance.
- This device is designed for home use and is used to remove hard skin from the feet of adults. Do not use it on children's feet or for any other reason than its designated purpose. Failure to uphold this could lead to damage.
- Do not expose the device to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

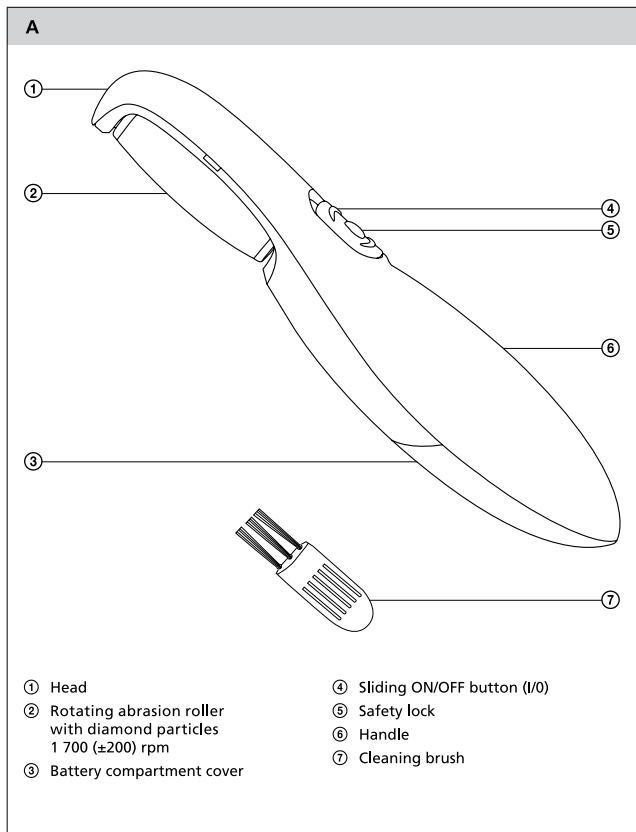
- Do not place the device near heaters, open fires or other equipment that is a source of heat.
- Only use the device with its original abrasion roller.
- Prior to each use, make sure that the device is not damaged and that the abrasion roller is properly secured in the file head. If the device shows any signs of damage, do not use it.
- Use the device at a sufficient distance from the bath, wash basin or other containers filled with water.
-  • Do not use the device in the bath or shower. Do not clean it under a water tap, do not spray it with water or any other liquid or submerge it in water or any another liquid.
- Do not leave the device running without supervision.

- Do not use this device on irritated, red, injured or burnt/scalded skin, pigmented moles, skin growths, warts or on skin affected by eczema or rash, etc. You should also not use the device to remove healthy skin. Otherwise skin layers may be damaged.
- Diabetics and persons with high blood pressure should first consult with their physician about using this device.
- Always switch off the device after using.
- Keep the batteries out of the reach of children as they may present a hazard. If a child swallows a battery, immediately seek medical help.
- Do not attempt to short circuit or break the battery or throw it into a fire. Do not subject the battery to direct sunlight, fire, etc.
- To avoid a hazardous situation arising, do not repair the device yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

DESCRIPTION OF THE ELECTRIC CALLUS REMOVER



WHAT IS HARD SKIN?

- Hard skin is a completely normal phenomenon, which appears mainly on feet. The origin of hard skin may be induced by wearing improper footwear, by obesity, an incorrect manner of walking, bone deformation or extremely dry skin. If you suffer increased formation of hard skin, you should search for the cause and try to eliminate it. You can ask your physician for advice.
- As a preventative measure, give your feet regular rest, enjoy a refreshing bath and treat the skin with an appropriate cream.

PURPOSE OF USING THE ELECTRIC CALLUS REMOVER

- The electric callus remover is used to remove hard skin from the feet of adults. Its use is very simple, fast and effective. By moving the callus remover in a gentle, circular motion, it efficiently and safely removes undesirable dead skin. Your feet will once again be soft and smooth to the touch.

POWER SOURCE

- Three batteries of the type LR03/AAA (3x 1.5 V) are used to power the device.

Inserting, removing and replacing batteries

- Slide the battery compartment cover A③ off and insert batteries. The battery compartment has a textile band for easier removal of batteries. Prior to inserting the batteries, stretch out this band across the battery compartment and hold down its free end with your thumb. Place batteries in the compartment one by one and observe correct polarity as indicated inside the compartment. Close the cover A③. Proper closure of the cover A③ is indicated by an audible snap.



Note:

Do not combine new and used batteries or batteries of various types, e.g. alkaline and rechargeable batteries.

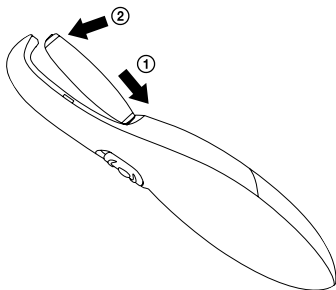
- In the event that the batteries are flat, replace them with new ones. Prior to removing batteries, pull on the textile band located inside the battery compartment. This releases the batteries and makes their removal easy.
- If you are not going to use the device for an extended period, we recommend removing the batteries.

INSERTING AND REMOVING THE ABRASION ROLLER

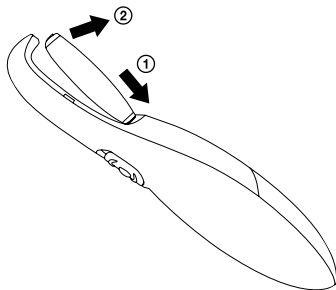
- Insert the abrasion roller A② into the head A① so that the flexible white shaft located at one end of the abrasion roller A② fits into the drive shaft. The drive shaft is located in the lower part of the head A①. Press the abrasion roller A② towards the head A① so that the other end of the abrasion roller A② would fit into the metal clamp in the upper part of the head A①. When the abrasion roller A② is secured in the head properly, you will hear an audible snap.

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

B

- To remove, press the abrasion roller A② down towards the handle A⑥ and remove it by pulling out from the head A①.

C

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

USING THE ELECTRIC CALLUS REMOVER

- Prior to each use, make sure that the callus remover is not damaged and that the abrasion roller A② is properly secured in the head A①.
- Remove socks or stockings from the feet. Place a towel or mat under the feet to capture removed skin.
- The skin you want to remove using the callus remover must be dry. To switch on the callus remover, press the safety lock A⑤ and simultaneously slide button A④ upwards to the ON position. The abrasion roller A② starts rolling. Place it up against the dry skin. When using, make sure the abrasion roller A② does not come in contact with clothing.
- By gentle circular motions, slowly and carefully remove hard skin. Do not push down too hard on the skin. Treatment of a given area should not last longer than two to three seconds. You can damage the skin by remaining too long at one area or by pressing too hard on the skin. Treat all areas where you want to remove hard skin in the same manner.
- To switch off the callus remover, press the trigger lock A⑤ and simultaneously slide button A④ downwards to the OFF position.

CARE OF FOOT SKIN AFTER USING THE CALLUS REMOVER

- After removing hard skin, apply body lotion, oil or a suitable cream. Do not apply antiperspirant or other preparations to the treated areas, which could cause skin irritation.

CLEANING AND MAINTENANCE

- Before starting to clean the callus remover, make sure it is switched off.
- After each use, clean the abrasion roller A② using the supplied brush A⑦.
- To clean the outer surface of the head A① and handle A⑥, you can use a slightly moistened rag. Then wipe everything so that it is thoroughly dry.
- This callus remover is not designed to be washed under the water tap. Do not spray it with water or any other liquid or submerge it in water or any another liquid.
- Do not use abrasive cleaning products, thinners, solvents, etc. for cleaning.

Replacing the abrasion roller

- If signs of wear appear on the abrasion roller, replace it with a new one.
- You can find a replacement abrasion roller A② in brick-and-mortar stores and Internet shops.

Electric Callus Remover

SPE 4110BL / SPE 4111RS / SPE 4112VT

TECHNICAL SPECIFICATIONS

| | |
|-------------------------------|------------------------------------|
| Power | 4.5 V (3× batteries type LR03/AAA) |
| Rotating abrasion roller..... | 1 700 (±200) rpm |
| Noise level | 76 dB(A) |

The declared noise emission level of the appliance is 76 dB(A), which represents a level A of sound power with respect to a reference sound power of 1 pW.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED BATTERIES



Batteries contain environmentally damaging substances and therefore do not belong in standard household waste. Take the batteries to an appropriate collection point, which will take care of their ecological disposal. You can obtain the contact for the nearest collection point from your town council or from your retailer.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.