

Size=503 x 84 mm (Front)



PORTRONICS

HARMONICS PRIME

Wireless Stereo Headset



User Manual

PACKAGE CONTAINS

- Harmonics Prime 1N
- Charging Cable 1N
- User Manual 1N
- Extra Eartips 2 N

SPECIFICATIONS

- Dual pairing: Yes
- Driver: 10mm
- Supported profile: HFP, A2DP, HSP, AVRCP
- Bluetooth version: 6.0
- Neckband charging time: Up to 60 minutes
- Stand by time: 300 Days
- Playtime: Up to 50 hours @ 60% volume
- EQ modes: 3 Inbuilt EQ Modes
- Bluetooth range: 10m
- Water resistance: IPX5
- Fast Charging- Charge for 10 mins, use for 10 Hours

POWER ON

Long press the multifunction button for 3 seconds, the red and white LED will blink alternatively for 1 second indicating that it's powered on.



Long press for 3 seconds

POWER ON
(indication)

POWER OFF
(indication)

Long press the multifunction button for 3 seconds, the red and white LED will blink alternatively for 1 second indicating it's powered off.

 
PAIRING

- Long press the multifunction button for 3 seconds, the device will be in pairing mode once powered on.
- Red and white LED will flash alternately indicating the device is in pairing mode.
- Turn on the Bluetooth on your smartphone or laptop and open the Bluetooth menu.
- Select 'Add Device' and from the list of devices select 'Portronics Harmonics Prime'.
- The White light flashes 2 times every 4 seconds indicating that your neckband is paired.
Note: The device will automatically turn off if not connected within 5 minutes.



RESET

- Please reset the device, if you are having trouble connecting or using your Harmonics Prime.
- Before resetting, make sure that your device is fully charged.
- Press and hold the Mode button for 8 second, when power is on or device is connected.
- The red and white LED will flash 3 times, indicating that Portronics Harmonics Prime has been reset.



Press the Mode button for 8 seconds (indication)

CHARGING

Plug the Type-C cable to the charging port of the neckband.

On charging mode, LED will be in solid red.

Solid red LED

Charging

Once charged, LED will be in solid white.

Solid white LED

Fully Charged

Size=503 x 84 mm (Back)

CONTROLS		SAFETY FOR YOU AND YOUR NOISE AIRWAVE	
Play/Pause Press the multifunction button once Previous Song Long press - Next Song Long press + Volume Up Short press + Volume Down Short press -	Answer/End a Call Short press the multifunction button once Reject Call Long press the multifunction button for 2 seconds Voice Assistant Press the multifunction button thrice Gaming Mode Long press the mode button for 2 seconds Switch Call Long press the multifunction button for 2 seconds EQ Mode Short press the mode button to switch between the 3 EQ modes	Follow these tips to get best out of your new Harmonics Prime - Do not expose the neckband to liquids, moisture or humidity as they have electronics and battery inside. - Don't use abrasive cleaning solvents to clean your new neckband. Wipe them down with a slightly damp cloth if and when necessary. - Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible. - Do not expose the neckband to extremely high or low temperature as this may damage the battery or even deform the plastic parts. - Don't throw the neckband in a fire to dispose it. The internal battery may explode. - Don't try to disassemble your neckband. There are no user serviceable parts inside it. - Try not to drop the neckband and keep them away from sharp objects such as keys in your pockets. - Only charge your neckband from 5V USB ports such as phone chargers and laptops or PCs - Never listen to music at high volume or you may permanently damage your hearing. - Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.	 PORTRONICS www.portronics.com For Support Visit : www.portronics.com Email : help@portronics.com Contact No. : +91 9555245245 (Working Hours : Monday - Saturday, 10:00am - 6:00pm)  E-Waste Management E: info@3recycler.com For E-Waste & ROHS compliance refer to www.portronics.com/ewaste