 


G306

FCC ID :2AFSG-G306

USER MANUAL

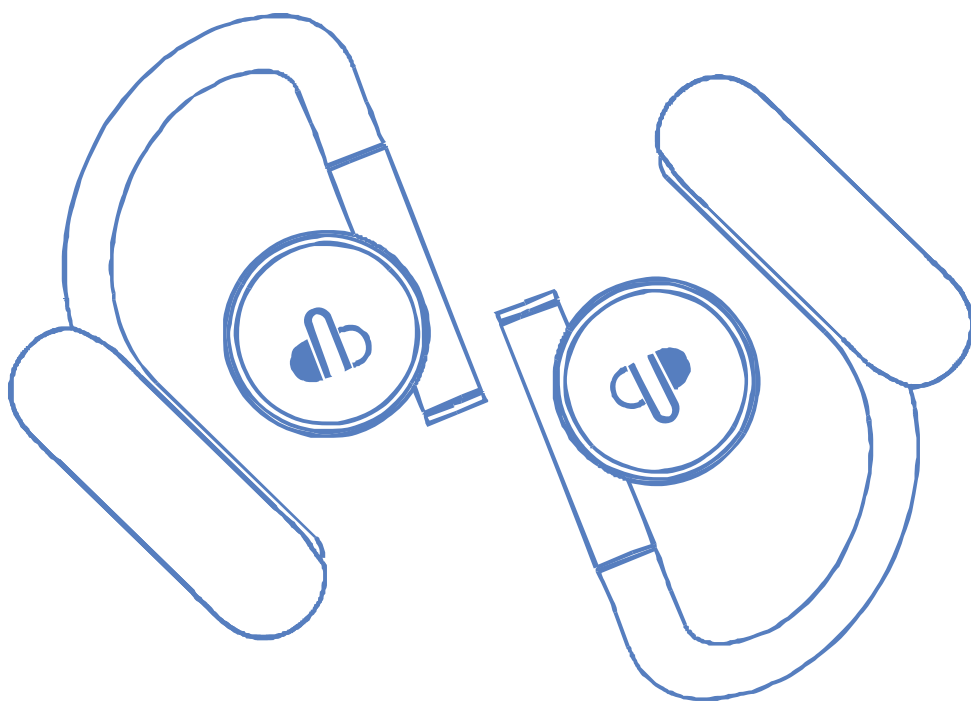

CONTACT US

☎ 1 (402) 413-1968 (US) Mon-Fri 9am-5pm (PST)

✉ support@chifenchy.net

This manual is for reference only, the specific functions and appearance shall prevail in real product. Please read this user guide before using and keep it for future reference.


Packing List

- ① Charging Case x1
- ② Type-C Cable x1
- ③ Wireless Earphones x 2
- ④ User Manual x1


Specifications

Model Name	G306
Bluetooth Name	DB306
Bluetooth Version	V5.4
Support	HSP, HFP, A2DP, AVRCP
Transmission Range	>100feet (without obstacle)
Earphones Battery Capacity	70mAh
Charging Case Battery Capacity	500mAh
Charging Port	Type-C
Earphone size	1.9*1.9*0.49in
Earphone weight	0.32oz
Charging case size	4.36*2.4*0.93in
Charging case weight	1.98oz

 
Product Overview

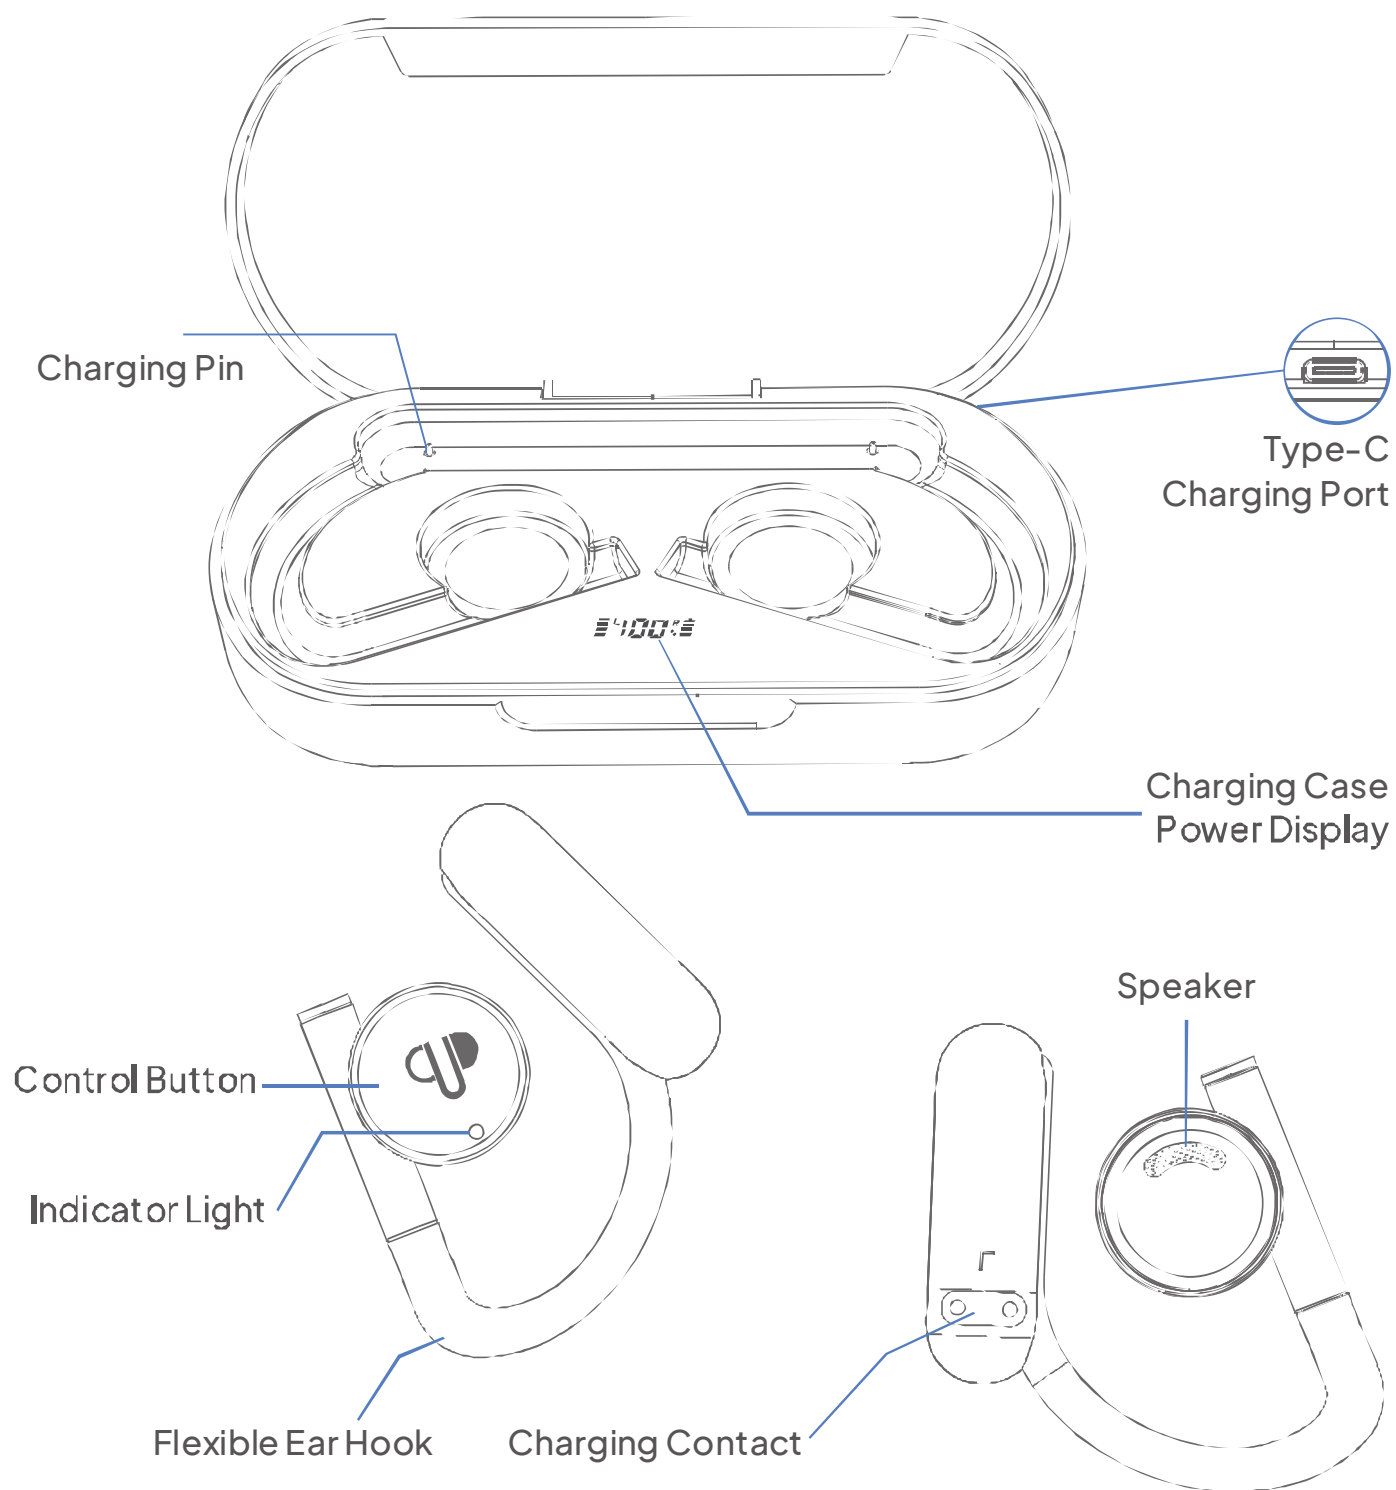

How to Wear

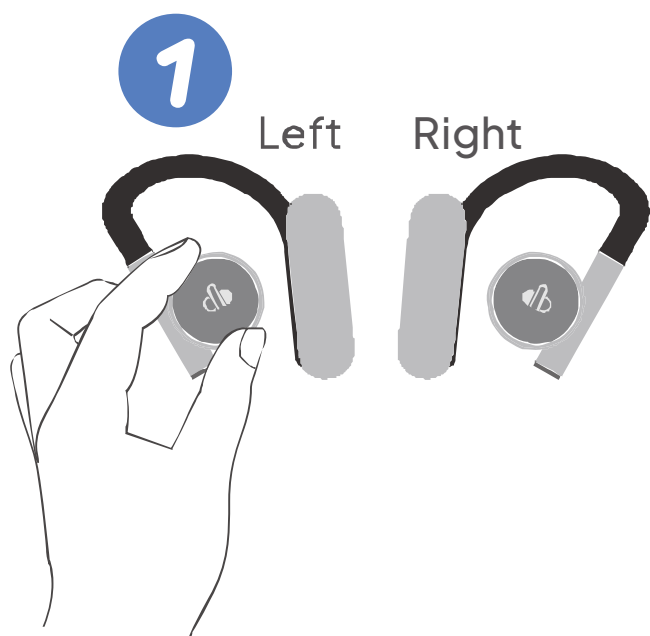 

Pick up an earphone

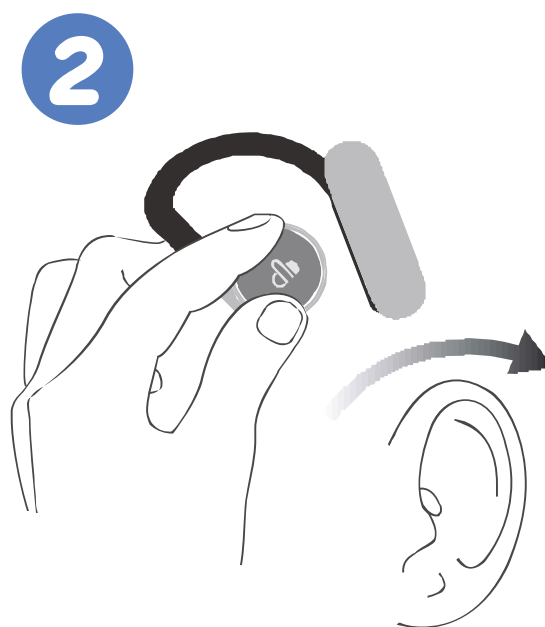 

Hook the end of the earphone onto the ear



 
Rotate along ear curve




Adjust to fit

Caution

Please remove the protective film and fully charge the earphones before using.

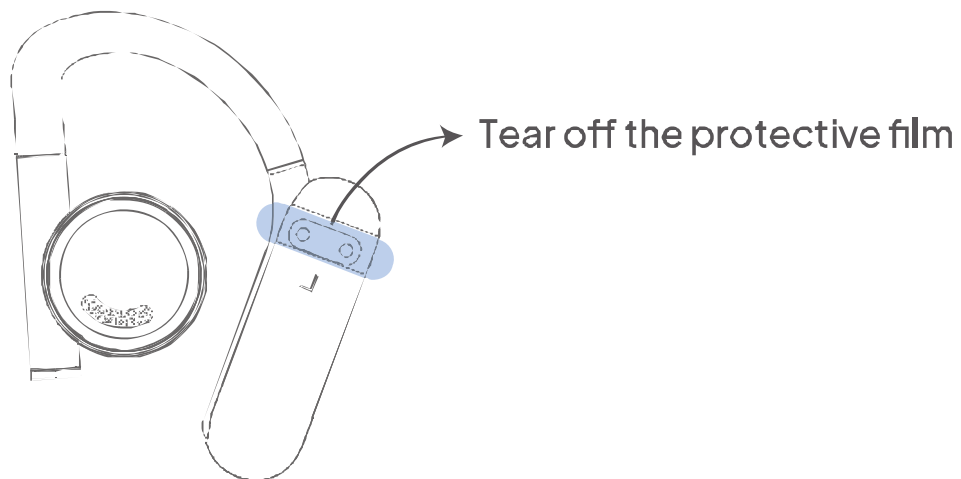

 The ear hooks and ear shells are adjustable. You can adjust the ear shells according to your needs to change the distance between the speaker and the ear, thereby changing the sense of hearing.


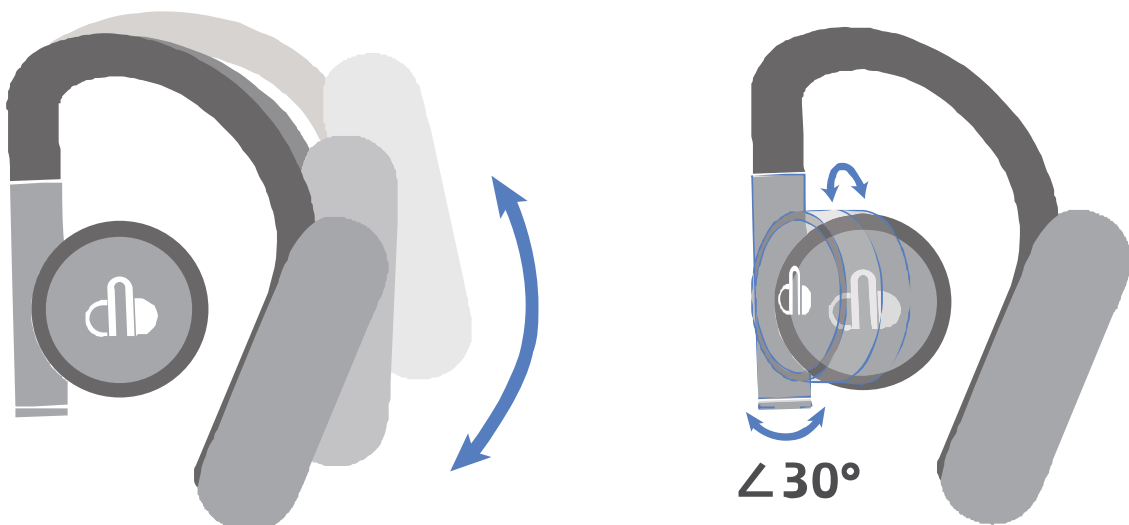


Power On/Off

Turn on

Open the case, the earphones will power on automatically.
Or press and hold the left & right earphones for 3 seconds to power on.

 
 
Indicator Light: Red and blue lights flash alternately.

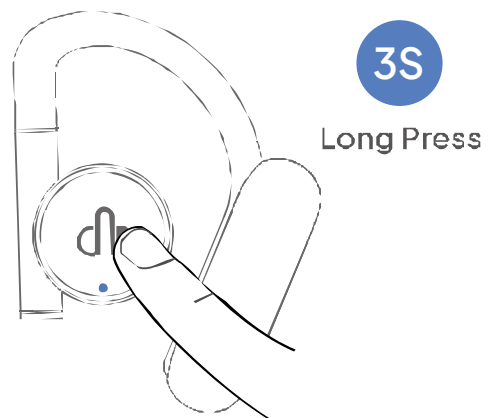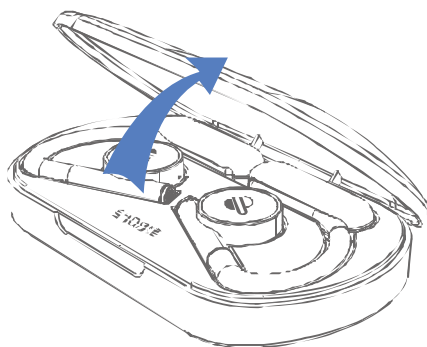

Turn off

After putting the earphones into the charging case and closing it, the earphones will automatically turn off and start charging.
Or press and hold the earphones for 15 seconds to turn them off.

  Indicator Light: The red light flashes 2 times and then turns off.

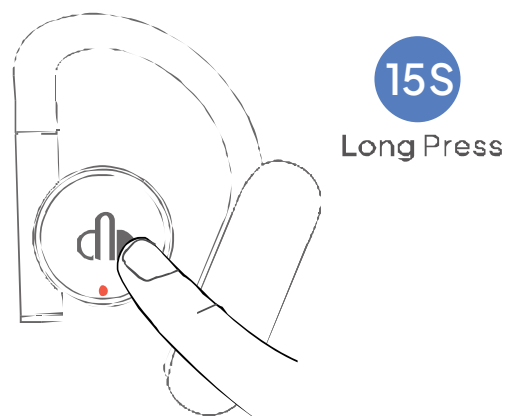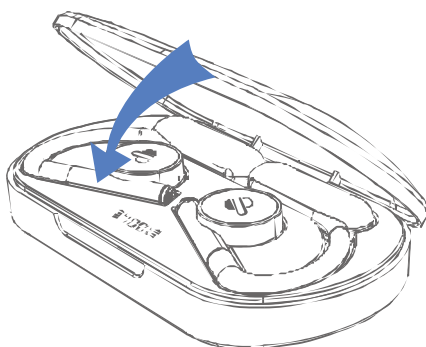


Note: Earphones will automatically turn off after 10 minutes of no connection.

Bluetooth Connection


First Time Pairing

Step 1 - Take twin earphones out from charging case, they will automatically power on and enter pairing mode.

 Indicator light: the main earphone - the red and blue light flashes alternately, the auxiliary earphone - the light is off

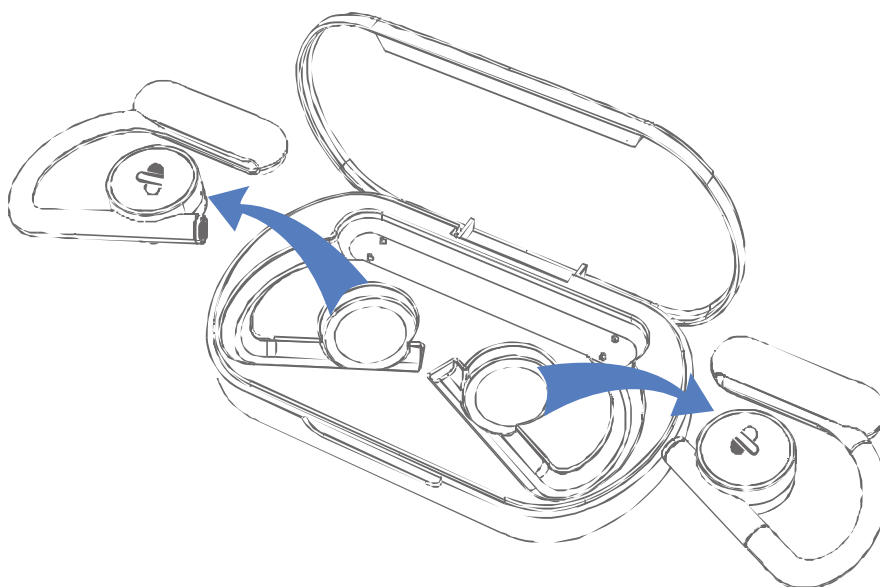

 
Step 2 - Turn on the bluetooth function of the device, "DB306" will appear on the bluetooth search page, click "DB306" to pair, and the LED light of the earphones will turn off after the pairing is successful.

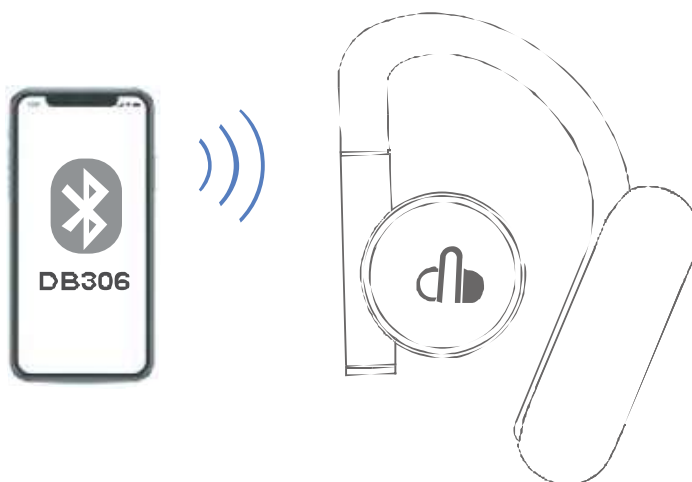

Bluetooth Connection

For Second Time Use

 If the earphones have already connected with your device, and the bluetooth setting of this device is on, in the second time using, when you take out the earphones from the charging case, they will connect with your device automatically.

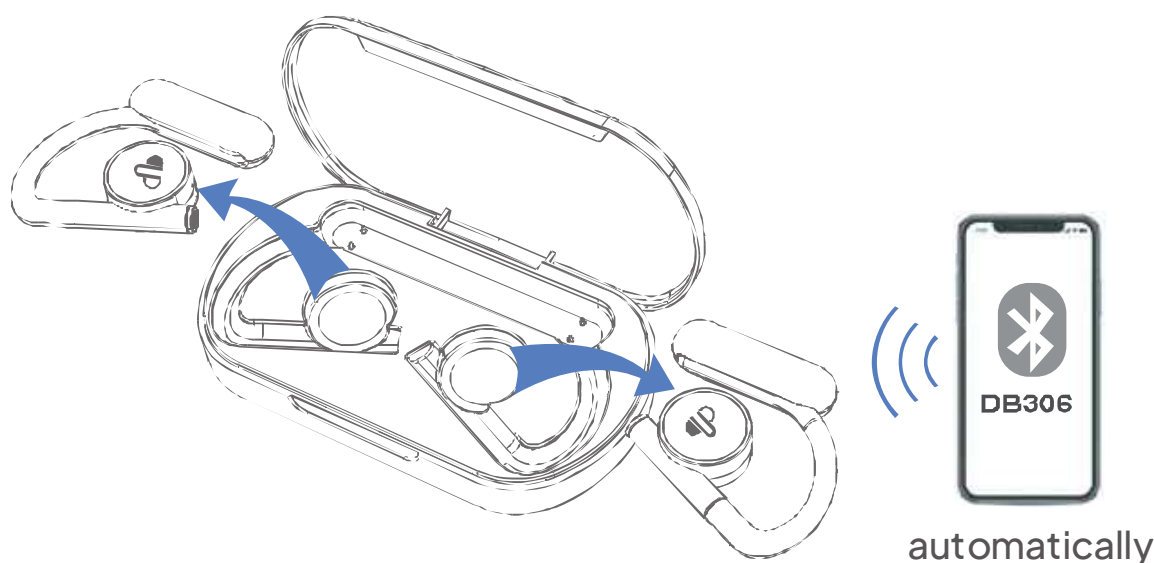


Pair with Other Device

DB306 earphones bluetooth has memory function, it usually auto connects with the last paired device.

Therefore, if you want to pair them with other devices, you should prevent the "DB306" from connecting with the last paired device. It can be prevented by the following methods.

- ① Turn off the bluetooth of the last paired device,
- ② Turn on the bluetooth of the last paired device, and delete "DB306" from this device.
- ③ Quickly tap the earphones 5 times to clear the earphones history.

 Multi-Function Operations

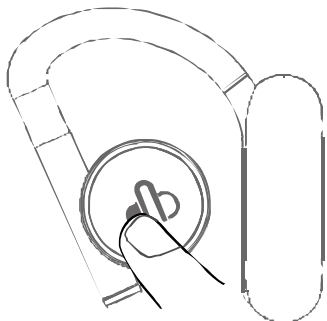

“ L ” or “ R ” Earphone



Music Mode

Play/Pause	Once-tap either earphone
Next Song	Double-tap Right earphone
Previous Song	Double-tap Left earphone
Volume +	Long Press 2s on Right earphone
Volume -	Long Press 2s on Left earphone

Voice Assistance

Siri	Triple-tap either earphone
------	----------------------------

For Call

Answer/End Call	Once-tap either earphone
Reject Call	Long Press 2s on either earphone

 
Restore the factory settings of the earphones

Five clicks on either earphone

Indicator light: the red light flashes 2 times and then goes out

Charge by Type-C cable

Place earphones into charging case properly, then use the included Type-C charging cable to connect the charging case, and plug the other end into power supply with a adapter (not included), they will start charging.

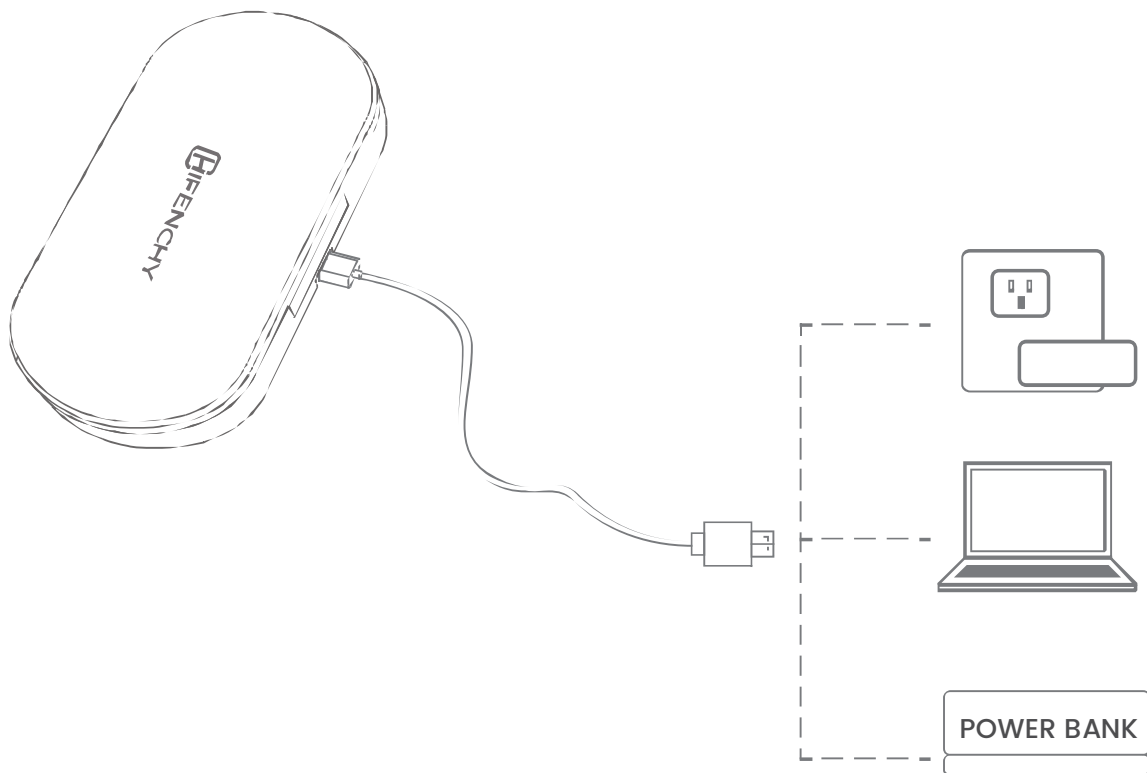

Note:

If the power of the earphones is lower than 10% (voltage is lower than 3.55V), you will hear the voice prompt of "Battery low". If there is no charging and the voltage of the earphones is lower than 3.2V, it will automatically shut down.

 
Maintenance

After a period of use, the charging metal contacts of the earphones may be polluted by sweat and dirt, causing the earphones to fail to turn on or charge; and the protective grille of both earphones may accumulate earwax and dust, resulting in muffled volume.


If you experience issues with the earphones not charging, use a clean, soft cloth to gently wipe the charging metal contacts to remove sweat and dirt.

If you experience earphone sound muffled, not as loud as when you first started using it. Use a soft brush or cotton swab to gently remove earwax and dust from the grille. Avoid using sharp objects to avoid damage.


Charging Pin

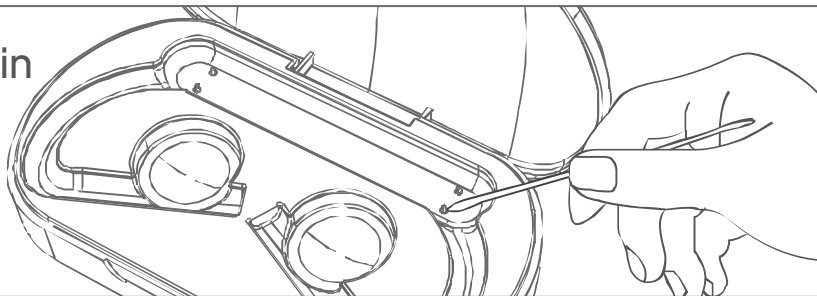

Charging Contact

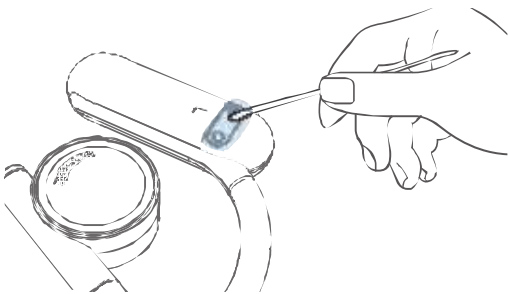 

Protective Grille

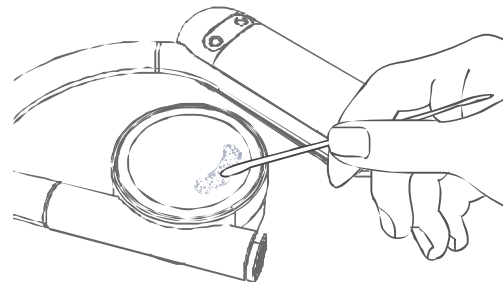 

Q: Why these earphones can not pair with my mobile phones?

A: 1. Please make sure the earphones are full charged and power on.

2. Please make sure the bluetooth of your phone is turn on.

3. Remove the protective film from the bottom of the earphones.

4. Please make sure that this is the first time the earphones is connected. If the earphones has been connected to your other devices before connecting to the phone, please turn off the bluetooth of other devices first.

5. If above 4 points have no problem, please put earphones into the case again and close the case, hold on for 1min, then open the charging case and reconnect earphones with your phone.

Q: Why does the music cut in or cut out.

A: First, please do not let the distance between these earphone and your phone be more than 100 feet (without obstacle). If the distance is less than 100 feet, please take steps as follow:

1. Put earphones back into case and close it, find "DB306" in the bluetooth list and click "Forget the device" on your phone.

2. After 10s later, open the case and reconnect these earphones with your phone.

Q: Are these earphones sweat proof and waterproof?

A: These earphones are IPX7, it is sweatproof and waterproof. As for electronic product, our recommendation is not to put the earphones in the water.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Important Note:

Radiation Exposure Statement

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Customer Service



Customer Service Phone

1 (402) 413-1968



Email

support@chifenchy.net

The 12-month warranty has been automatically activated for you,
please feel free to contact us if you have any questions