 


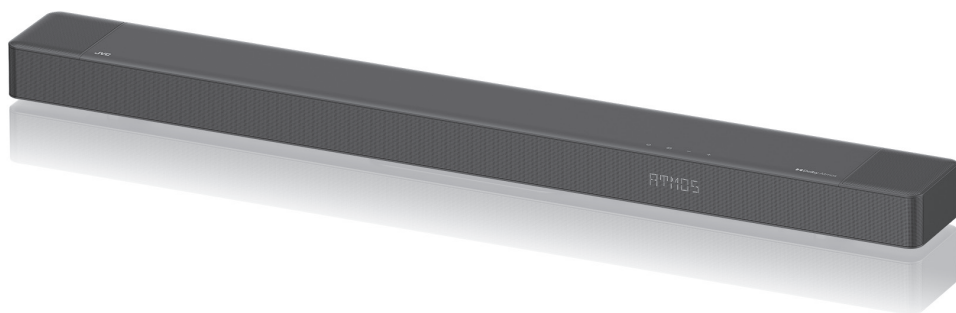

Instruction Manual

3.1.2CH Dolby Atmos Soundbar with built in subwoofer

TH-D565B



Safety Warnings - Soundbar

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Attention should be drawn to the use of apparatus in moderate climates.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.

- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not ingest the battery, chemical Burn Hazard.
- Keep new and used battery away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.

- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

== DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or
you need plain good advice, we're
always on hand to help.
UK: 0344 561 1234
IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works.

Copyright © 2012-2024 Dolby Laboratories. All rights reserved.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

UK Representative and Responsible Person

Currys Group Limited (No. 504877)
1 Portal Way, London, W3 6RS, UK
<https://www.currys.co.uk>

EU Representative and Responsible Person

Currys Ireland Limited (No. 259460)
3rd Floor Office Suite, Omni Park SC,
Santry, Dublin 9, Republic of Ireland
<https://www.currys.ie>

UK & EU Contact details: business.standards@currys.co.uk

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

Contents

Unpacking.....	3
Product Overview	3
Main Unit.....	3
Remote Control	5
Preparation.....	6
Battery Replacement for the Remote Control	6
Remote Control Operation Range.....	6
Wall Mounting.....	7
Speaker Placement.....	8
Connections.....	9
Dolby Atmos®	9
Method 1: HDMI Hub Connection	10
Method 2: Optical Connection	12
Method 3: AUX Connection	13
Connecting to the Mains Supply	14
General Operation	14
Standby / ON	14
Automatic Power Off Function	14
Selecting Modes.....	15
Adjusting the Speaker Level Settings and Effects	15
Audio Format Display	15
USB Operation.....	16
Bluetooth® Operation	16
Maintenance.....	17
Hints and Tips	17
Product Fiche and Specifications	19

Thank you

for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

- Main Unit
- Remote Control (Batteries included)
- Mains Cable
- HDMI Cable
- Wall Bracket × 2
- Screw × 2
- Dowel × 2
- Instruction Manual and Safety Warnings
- Quick Start Guide



- To get the most from this product, you may need to buy an optical and 3.5 mm stereo audio cable.
- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Centre on **0818 810575**.

Product Overview

 
Main Unit

Front View



1. Remote Control Sensor
2. Display

Top View

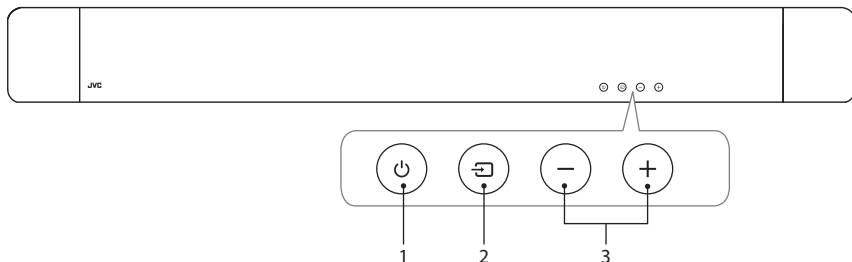

1. Button

Switch the unit between **On** and **STANDBY** mode.

 
2. SOURCE Button

Press to select between **E-ARC/ARC**, **OPT**, **AUX**, **USB** and **BLUETOOTH** mode.

3. **+/- Volume Button**

Adjust the volume.

Rear View

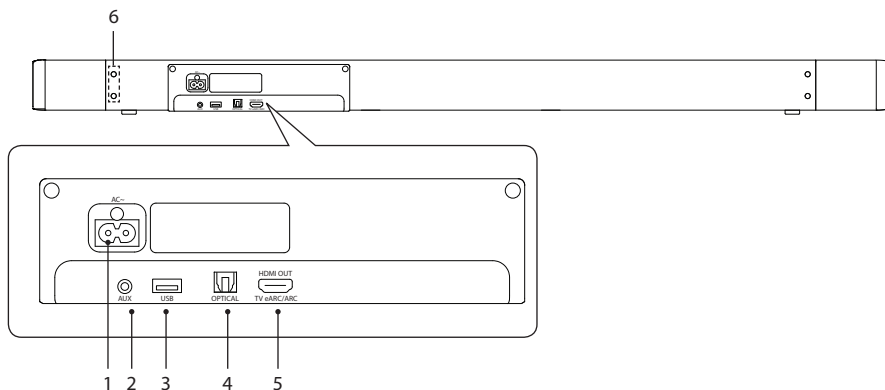

1. **AC~ IN Socket**

Connect a power cord.

2. **AUX Socket**

3. **USB Socket**

4. **OPTICAL Socket**

5. **HDMI OUT (TV eARC/ARC) Socket**

6. **Wall bracket screws**

Remote Control

1. Button

Switch the unit between **On** and **STANDBY** mode.

2. SOURCE Button

Press to select between **E-ARC/ARC**, **OPT**, **AUX**, **USB** and **BLUETOOTH** mode.

3. +/- Volume Button

Press to increase/decrease the volume.

4. BASS +/- Button

Press to increase/decrease the bass level from **-2** to **+2** mode.

5. MOVIE Button

Press to switch into **MOVIE** EQ mode.

6. DOLBY ATMOS Button

Press to switch **DOLBY ATMOS** mode ON/OFF in **E-ARC/ARC** and **OPT** mode.

7. Button

- Press to enter **BLUETOOTH** mode.
- Press and hold to activate the pairing function or disconnect the existing paired Bluetooth device in Bluetooth mode.

8. Button

- Press  button to skip to the previous track (**PREV**) in **BLUETOOTH** and **USB** mode.
- Press  button to skip forwards to the next track (**NEXT**) in **BLUETOOTH** and **USB** mode.

9. Button

 
- Play/pause/resume playback in **BLUETOOTH** mode.

10. Mute Button

Press to mute/un-mute the unit.


11. SOUND MODE Button

Press to select between different EQ effects (**MOVIE** / **MUSIC** / **NEWS**).

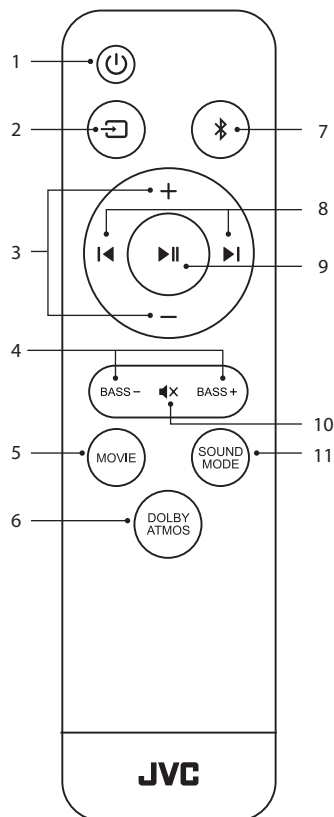

Preparation

 Battery Replacement for the Remote Control

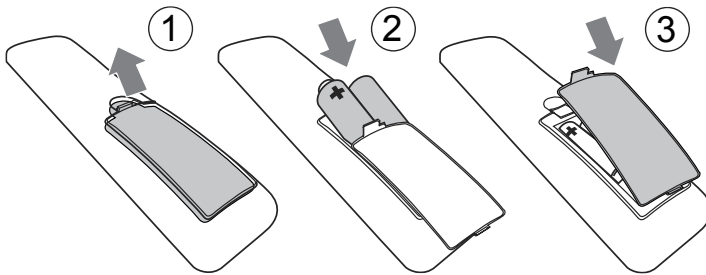

Handling the Battery

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control

- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Remote Control Operation Range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 6 metres away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

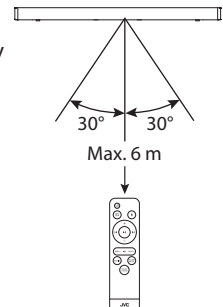


Wall Mounting




- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the soundbar.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

 1. Drill 2 parallel holes ($\varnothing$ 3-8 mm each according to wall type) in the wall. The distance between the holes should be 860 mm. Firmly fix 1 dowel (included) into each hole in the wall if necessary. Fix two screws (included) onto the wall.

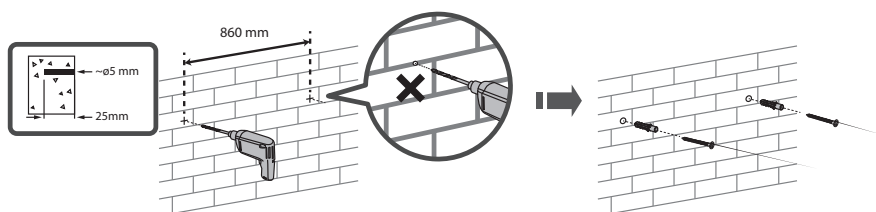


2. Leave approximately 3 mm between the wall and the screw's head.

 
~3 mm



 3. Loosen the 4 screws at the back of the unit.

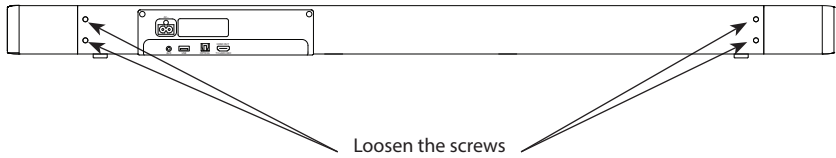


 4. Install the wall mounting brackets with the 4 loosened screws into the back of the unit.

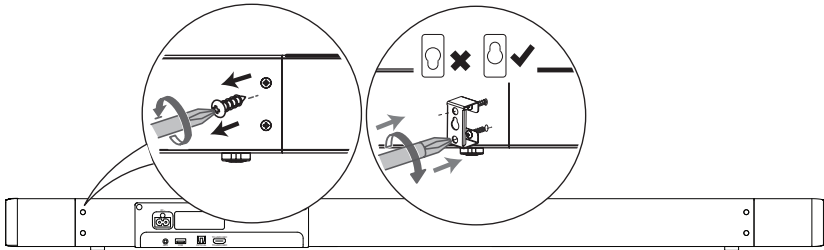

5. Lift the unit with the attached wall mounting brackets over the heads of the screws and slot into place.

 Speaker Placement

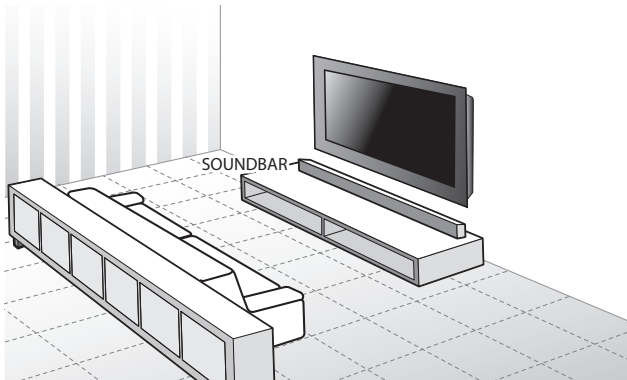

Soundbar

Soundbar carries most of the dialogue as well as music and effects.

- If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centred with the TV screen.
- If your TV is attached to a wall, you can mount the soundbar on the wall directly below the TV screen.

Connections



This section involves various methods of connecting the product to other external components. Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Dolby Atmos® gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit dolby.com/technologies/dolby-atmos.

For using Dolby Atmos



Dolby Atmos® is available only in **E-ARC/ARC** mode. For the details of the connection, please refer to **"Method 1: HDMI Connection"**.

Dolby Atmos®

1. To use Dolby Atmos® in **E-ARC/ARC** mode, your device (e.g. TV, video game console, etc.) has to support Dolby Atmos®.
2. Make sure that **"No Encoding"** is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos/Dolby Digital format, the soundbar will show **DOLBY ATMOS / DOLBY AUDIO / PCM AUDIO**.



- The full Dolby Atmos experience is only available when the soundbar is connected to the source via a **HDMI 2.0 cable**.
- The soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

Method 1: HDMI Hub Connection



Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using your TV as a hub



- **Ensure to use an HDMI cable that can support the ARC function.**
- HDMI-CEC will be called different names by different manufacturers – please refer to your owner's manual for details on setting up HDMI-CEC and ARC.
- While using an HDMI cable for ARC function, CEC (Consumer Electronics Control) provides interoperability between the unit and various devices (e.g. TV). However, this unit is not guaranteed to fully operate with all HDMI-CEC enabled devices. This is NOT a defect.

 
The ARC (Audio Return Channel) function allows sound to travel to and from your eARC/ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure that your TV is both HDMI-CEC and eARC/ARC compliant and set up accordingly.

When correctly set up, you can adjust the volume output (+/- and **Mute** button) of the soundbar with the TV remote control.

When you switch your TV on/off with your remote control, your soundbar will also be switched on/off. Be patient that it might take a few seconds for your TV to tell your soundbar to switch on or off.

Use this method to connect all your devices into your TV.

1. Connect an HDMI cable from your soundbar's **HDMI OUT (TV eARC/ARC)** socket to the **HDMI eARC/ARC** socket on your eARC/ARC-compliant TV.
2. After connection, press  button on the unit or on the remote control to switch the unit on.
3. Press  **SOURCE** button on the unit or remote control repeatedly to select **E-ARC / ARC** mode to play audio from your input device.

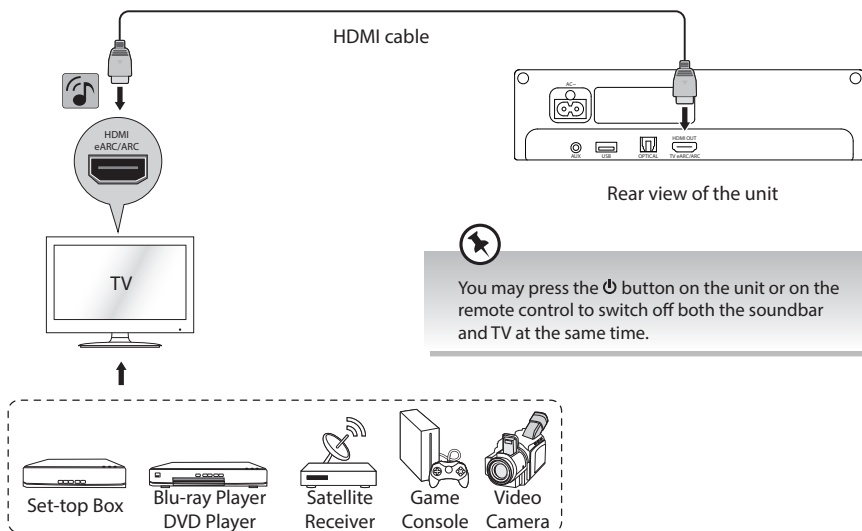


The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. The display will show **"Unsupported sound format. Please refer to Instruction Book to change sound format to PCM"**. This is NOT a defect. Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby** (Refer to the user manual of the input source device for its audio setting details) with HDMI output.

Method 2: Optical Connection

Use an optical cable (not included) cable (not included) to connect the soundbar's **OPTICAL** socket to the **OPTICAL OUT** socket of the external device. The simplest option is to connect your soundbar directly to your TV. If you connect the soundbar to another external device (e.g. Blu-Ray player), you will hear the sound from that device through the soundbar.

After the connection is completed,

 1. Press **⏻** on the unit or remote control to switch on the unit.
2. Press **⏮** **SOURCE** button on the unit or remote control repeatedly to select **OPT** mode.

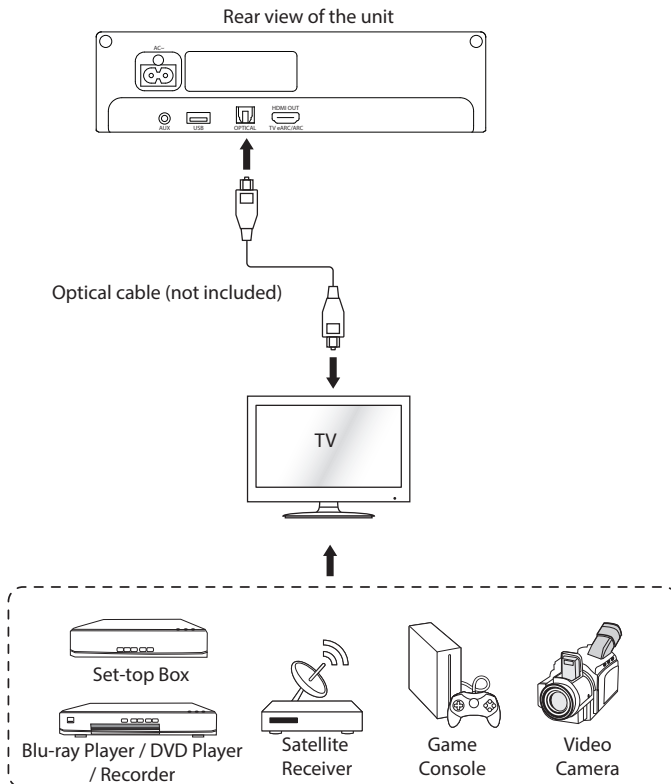

The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. The display will show **"Unsupported sound format. Please refer to Instruction Book to change sound format to PCM"**. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** (Refer to the user manual of the input source device for its audio setting details) with Optical input.




DO NOT connect the soundbar to the TV through its Yellow/Red/White sockets.

Method 3: AUX Connection

Use a 3.5 mm to RCA stereo audio cable (not included) or a 3.5 mm to 3.5 mm stereo audio cable (not included) to connect the soundbar's **AUX** socket to the **AUDIO OUT/ HEADPHONES** sockets of the external device.

After the connection is completed,

 1. Press **⏻** on the unit or remote control to switch on the unit.
2. Press **⏮** **SOURCE** button on the unit repeatedly or remote control to select **AUX** mode.

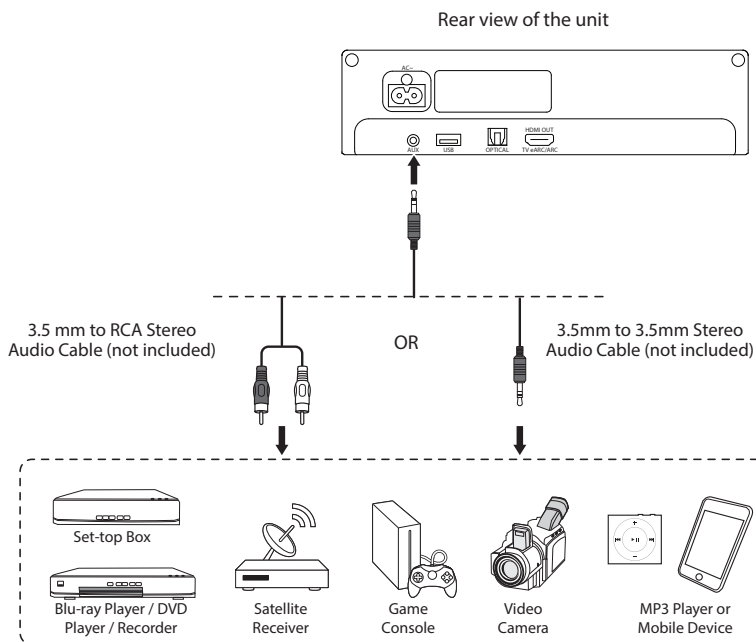

- Ensure the colours on the RCA Stereo Audio Cable plugs match with the colours on the input and output sockets.
- DO NOT connect the soundbar and TV by using the **AUX** socket.

Connecting to the Mains Supply

 
The soundbar is designed to operate with the supplied mains cable.



- Connecting the unit to any other power source may damage the unit.
- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Make sure the mains plug is firmly inserted into the mains socket.
- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.
- The mains cable is designed for this JVC soundbar only. DO NOT use the mains cable for other purposes.

Soundbar

Unwind the mains cable to its full length. Connect the end of the cable to the **AC~ IN** socket at the rear of the unit and then connect the mains plug to the mains socket. Make sure the mains plug is fully inserted into the mains socket.

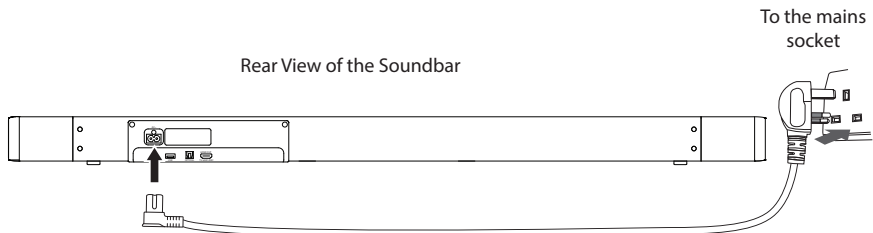

General Operation

Standby / ON

When you first connect the unit to the mains socket, the unit will be in **STANDBY** mode.

- Press  on the unit or on the remote control to switch the unit on.
- Press  on the unit or on the remote control again to switch the unit back to **STANDBY** mode.



After the unit is idle for about 10 seconds, the display will automatically dim. The display will switch off if the unit is idle for another 10 seconds. The display brightness will return normal once you press any button (except  button).

Automatic Power Off Function

The unit automatically turns to **STANDBY** mode after about 15 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.



- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

Selecting Modes

Press **SOURCE** button on the unit repeatedly to select between **AUX**, **USB**, **BLUETOOTH**, **E-ARC/ARC** and **OPT** mode.

The display will show the selected mode.

Display	Mode
ARC	HDMI ARC
E-ARC	HDMI e-ARC/ARC
OPT	Optical
AUX	Auxiliary input
USB	USB
BLUETOOTH	Bluetooth

Adjusting the Speaker Level Settings and Effects

Adjusting the Volume

- Press **+/-** to adjust the volume.
- If you wish to turn the sound off, press **⏻** button on the remote control. Press **⏻** button again, or press **+/-** on the unit or remote control to resume normal listening.

Select Equaliser (EQ) Effect

Press the **SOUND MODE** button on the remote control to select the preset equaliser effects.

- **MOVIE**: Create a surround listening experience. Ideal for watching movies.
- **MUSIC**: Create two-channel or multi-channel stereo sound. Ideal for listening to music.
- **NEWS**: Recommended for listening to news.

Adjusting the Bass Level

Press **BASS +/-** button on the remote control to adjust the bass level from **-2** to **+2**.

Switch Dolby Atmos On/OFF

Press **DOLBY ATMOS** button on the remote control to switch **DOLBY ATMOS** on/off.

Audio Format Display


The unit will show the status message below according to the selected audio format from your source device.

Display	Audio Format
PCM AUDIO	PCM AUDIO
DOLBY AUDIO	Dolby Digital Dolby TrueHD Dolby Digital Plus
DOLBY ATMOS	Dolby Atmos - Dolby TrueHD Dolby Atmos - Dolby Digital Plus

USB Operation

By connecting a USB mass storage device (e.g. USB flash memory, USB flash players [not included]) to this unit, you can enjoy the device's stored music through the unit.

 1. Press  **SOURCE** button on the unit or remote control repeatedly to select **USB** mode. The display will show "**USB**". The unit will start playback automatically. If there is no USB device connected, the display will show "**NoUSB**".
2. Press  button to pause / resume playback.
3. Press  /  button to skip backward / forward a track.

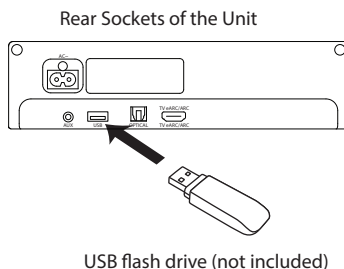

- The player supports the USB music file format of MP3 only.
- The unit can support USB devices with up to 32 GB of memory.
- The unit may not be compatible with all USB devices, this is not an indication of a problem with the unit.

Bluetooth® Operation

Pairing the unit with a *Bluetooth*® device to listen to music:

First time pairing

1. During **On** mode, press  **SOURCE** button on the unit repeatedly or  button on the remote control to select **BLUETOOTH** mode.
2. Activate your *Bluetooth*® device and select the search mode. "**TH-D565B**" will appear on your *Bluetooth*® device list.
3. Select "**TH-D565B**" enter "**0000**" for the password if necessary. The display will show **CONNECTED**.

To disconnect the Bluetooth® function, you can:

- Switch to another function on the unit;
- Disable the function from your *Bluetooth*® device.
- Press and hold  button on the remote control.

If your *Bluetooth*® device supports AVRCP, use the supplied remote control to control play.

- To pause / resume playback, press  on the remote control.
- To skip to a track, press  /  button on the remote control.
- To increase/decrease volume, press **+/-** button on the unit or remote control.



- The operational range between the unit and the device is approximately 8 metres.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the device's capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

Maintenance



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Centre on **0818 810575**.

Problem	Solution
No power.	• Ensure the mains plug is connected. • Make sure that you select the On mode.
The remote control does not function.	• Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	• The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with alcohol.
No sound from the soundbar.	Please try either one of the solutions below: • Make sure that the unit is not muted. Press ⏏ button or +/- button to resume normal listening. • Press ⏻ on the unit or on the remote control to switch the soundbar to STANDBY mode. Then press the button again to switch the soundbar on. • Unplug the soundbar from the mains socket, then plug it in again. Switch on the soundbar. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM mode while using digital (e.g. HDMI/OPTICAL) connection. • The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect.
TV has display problem while viewing HDR content from HDMI source.	• Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Problem	Solution
I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing	• Ensure the Bluetooth function is activated on your Bluetooth device. • Re-pair the Soundbar with your Bluetooth device. • The Soundbar has a Bluetooth® function that can receive a signal within 8 metres. Keep a distance within 8 metres between the Soundbar and your Bluetooth® device.
The unit does not respond when pressing any buttons.	• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

Product Fiche and Specifications

Brand		JVC
Model		TH-D565B
Main Unit Input		AC 100-240V~ 50/60 Hz
Main Unit Power Consumption		45 W
USB Output (For playback only, charging is not recommended and may not be compatible)		5 V $\equiv$ 500 mA max.
Speaker Output Power		Front speaker: 15Wrms $\times$ 3 Upward speaker: 15Wrms $\times$ 2 Subwoofer: 60 Wrms
Bluetooth®	Version	V5.3
	Maximum Transmitted Power	8.0 dBm
	Frequency bands	2402 MHz - 2480 MHz
Ecodesign Information		
Information on Power Consumption	Power Consumption of Standby mode	0.4 W
	Network Standby Power Consumption	0.4 W
Time interval for Power management function switches the unit automatically into standby or network standby mode		Switch to standby or network standby mode within 15 minutes when not in use
Power consumption in network standby if all wired network ports are connected and all wireless network ports are activated		0.4 W
How to activate wireless network port: • No wireless network port How to deactivate wireless network port: • No wireless network port		
Net Weight		4.1 kg
Dimension		1060 mm (W) $\times$ 68 mm (H) $\times$ 121 mm (D)

Features and specifications are subject to change without prior notice.

For the latest version of the Safety and Instruction Manual, please visit the official website below (other websites may not contain the full and most updated version):

<https://www.currys.co.uk/services/repairs-maintenance/product-service-manuals.html>

**Declaration of Conformity (RED)**

Hereby, Currys Group Limited declares that the radio equipment type [TH-D565B] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [TH-D565B] is in compliance with Radio Equipment Regulations 2017 (S.I. 2017/1206).

The full text of the UK declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

For Help and Support Call
UK: 0344 561 1234
Ireland: 0818 810575

This product is distributed and warranted exclusively by Currys Group Limited
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(IB-TH-D565B-250425V1)