


# Moki EXO Bluetooth Headphones

## OVERVIEW / CONTENTS

- Moki EXO Kids Bluetooth Headphones
- USB to MicroUSB charge cable
- 3.5 mm - 3.5 mm stereo audio cable
- User Guide

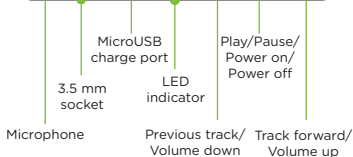

## CHARGING

*Please charge headphones before first use*

Connect the supplied charge cable to a USB port on a PC or USB charge adaptor. Confirm orientation and connect the MicroUSB to the port on your headphones.

The LED on the headphones will glow solid RED indicating the headphones are charging. Depending on the power of the charge port used, charge time will be 2-4hrs.

When headphones are fully charged the LED will turn off. Disconnect charge cable.

*Note: Headphones will not work if charge cable is still connected.*



## PAIR WITH BLUETOOTH DEVICES

*You must pair your Moki headphones with a Bluetooth device before it can be used wirelessly.*

You only need to pair your headphones to each play device once. They will automatically reconnect to each device when turned on in their vicinity. If two or more devices are available, the last device paired will be the one that reconnects.

## FIRST TIME USE / PAIR TO NEW DEVICE

On your Bluetooth play device go to "Settings" >> "Bluetooth" - turn on Bluetooth

*Play device should automatically start searching for new play devices. (Some older players may require you to select "search for / add new device")*

•With the headphone off, HOLD the "Play / Pause" button for about 5 seconds until the LED starts blinking RED / BLUE which indicates it is now searching for a new Bluetooth device. (If headphones do not pair with a new device within 90 seconds they will enter "Standby mode")

•On your phone or play device under "Bluetooth" you will see Moki Kids listed under "Available devices"

•Select "Moki Kids" on your device to pair your headphones (older devices may require a code to complete pairing. Enter "0000" if requested).

•When pairing is successful the LED on your Moki EXO Kids Bluetooth Headphones will glow solid blue.

Moki headphones may be paired to PCs and laptops with Bluetooth capability. Go to your computers' Bluetooth settings and follow the prompts to connect in a similar way as described above. After pairing ensure the "Sound Output" is set to "Play through Bluetooth", (not "Internal Speakers"). Some computers may require Bluetooth audio output to be enabled each time you connect.

## SPECS

**Speaker diameter:** 40mm  
**Impedance:** 32Ω  
**Sensitivity:** 96dB @1KHz  
**Rated power:** 3.2mW  
**Frequency response:** 20Hz-2000Hz

**Bluetooth Mode:**  
**Bluetooth Version:** Version 2.1+EDR  
**Remote control to the player:** Volume up and down, Previous /Next, Pause/Play  
**Range:** 10m  
**Frequency response:** 20Hz - 20,000Hz  
**Play time:** Approximately 8 hours  
**Standby time:** Approximately 100 hours