 


3+
for age

User Manual

v25.7

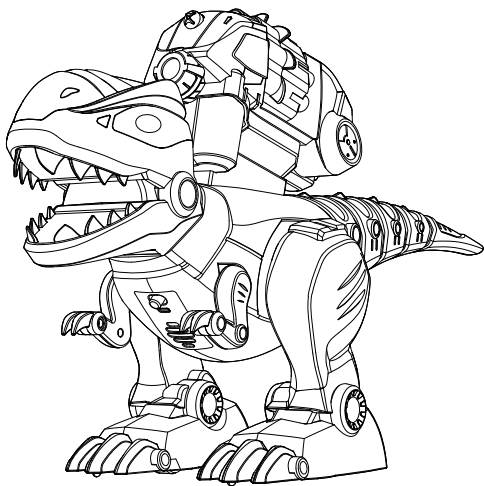

8809

+1 (888)892-0155 | Mon-Fri 9:00AM - 7:00PM (PST)



rukotoy.com

CONTACT US FOR MORE TECH SUPPORT

+1 (888)892-0155 | Mon-Fri 9:00AM - 7:00PM (PST)

+1 (732) 207-0697



Content

1. CAUTIONS AND ADVICE	1
1.1 Care and Maintenance	1
1.2 Special Notes for Adults	2
1.3 Battery Warnings	2
1.4 Pay Attention to Safe Use	3
 2. PRODUCT LIST	 5
 3. HOW TO CHARGE	 6
3.1 Transmitter	6
3.2 Dinosaur	6
 4. DINOSAUR AND TRANSMITTER DIAGRAM	 7
 5. REMOTE CONTROL BUTTON FUNCTIONS	 9
 6. TURNING ON AND STANDBY MODE	 14
6.1 Turn on / turn off	14
6.2 Standby Mode	14

Please note: Product colors shown in the manual are for illustrative purposes only. Actual product color may vary.

1. CAUTIONS AND ADVICE

- The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, and battery packs should not be disposed of with regular household waste. Batteries are harmful to both health and the environment. Please help protect the environment and reduce health risks by disposing of them properly.
- If the toy is no longer in use, please remove the built-in rechargeable battery (using common household tools if needed) or unscrew the battery compartment for replaceable batteries. Once the battery is removed, dispose of it in accordance with local recycling or disposal regulations.



1.1 Care and Maintenance

- Always remove the batteries from the toy if it won't be used for an extended period (for transmitter only).
- Gently wipe the toy with a clean cloth.
- Keep the toy away from direct heat sources.
- Do not submerge the toy in water, as this could damage the electronic components.

1.2 Special Notes for Adults

- Before the first use, review the user instructions with your child.
- This toy is intended for use in domestic settings only (house and garden).
- Assembly should be done under adult supervision (including battery changes, spare part replacements, trimming, etc.).
- Parental guidance is recommended when installing or replacing batteries.
- Do not alter or modify the toy in any way.

1.3 Battery Warnings

- Non-rechargeable batteries should never be recharged.
- Rechargeable batteries must be removed from the toy before charging (for transmitter only).
- Rechargeable batteries should only be charged under adult supervision.
- Never mix different types of batteries or combine new and used batteries (for transmitter only).
- Only use batteries of the same or equivalent type as recommended.
- Ensure batteries are inserted with the correct polarity.
- Remove exhausted batteries from the toy (for transmitter only).
- Do not short-circuit the battery terminals.
- Avoid mixing alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries (for transmitter only).

- When this appliance is no longer in use, please remove all batteries and dispose of them separately. Take electrical appliances to the local collection points for waste, electrical and electronic equipment. Other components can be disposed of in domestic waste.



1.4 Pay Attention to Safe Use

- Never dispose of the battery in fire or heat.
- Do not use or store the battery near heat sources such as fire or a heater.
- Do not strike or throw the battery against a hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- Only use the charger specifically designed for this battery when recharging.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery or pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins, etc.
- Do not disassemble or modify the battery.
- Charge the battery every 6 months.
- The built-in toy battery cannot be replaced.

Notes:

 
- The toy may malfunction due to electrostatic discharge or interference. If the toy does not respond, please reset it.
- For optimal performance, use new alkaline batteries in the toy.
- Only use the recommended charger with this toy.
- The toy should only be connected to Class III equipment.
- Keep this manual for future reference, as it contains important information.

Battery requirements(Transmitter):

Power supply: 

Characteristics: DC 3V

Quality and type: 2 x 1.5V "AA" /LR6 (not included)

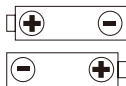
**Battery requirements (Tyrannosaurus):**

Power supply: 


Characteristics: DC 3.7V

Quality and type: 1 x 3.7V Li-Po rechargeable battery (included)

 Capacity: 800 mAh



 
2. PRODUCT LIST

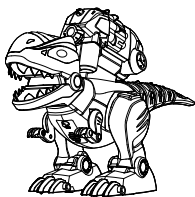

Tyrannosaurus



 Transmitter

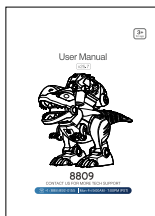

Instruction manual



 
Charging cable



Foam darts

3. HOW TO CHARGE

3.1 Transmitter

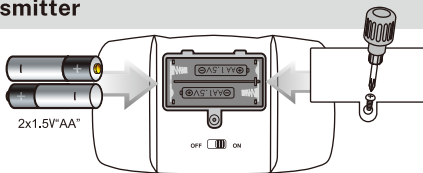

- Use a Phillips-head screwdriver to open the battery compartment lid of the controller.
- Insert two 1.5V "AA" batteries into the battery compartment.
- Replace the lid and tighten it with the screw.
- Switch the ON/OFF button on the back of the transmitter to turn it on before use.

3.2 Dinosaur

- The battery is located on the chest of the dinosaur.
- To charge the battery, insert the provided USB cable into a power source. USB C to USB C charging cable can not be charged.
- Make sure to turn off the dinosaur before charging.
- A light on the dinosaur will turn on during charging. When fully charged, the light will turn off.
- The charging time is about 2 hours and the playing time is about 1 hour.

