

DE127 RC BOAT User Manual

Please read this manual carefully before using the product and follow all instructions for proper operation.




For safety protection, the boat is designed to work only when placed in water.

Installing the Batteries

As shown: Open the boat cover and insert the 3.7V rechargeable battery into the battery compartment in the correct orientation, then connect it.

As shown: Insert 2 x 1.5V AA batteries into the battery compartment in the correct orientation.

Warning:
1. When installing batteries, be sure to observe the polarity of both the batteries and the battery compartment. Do not install batteries in reverse.

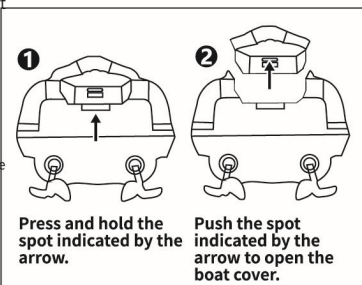

Operating Instructions

Connect the boat battery and the remote control battery, then turn on the remote control switch. The remote control will flash briefly and then turn off — this means pairing is successful. The boat has a water activation switch. Even after successful pairing, you must put the boat in water for it to work properly. Do not press any buttons on the remote control during pairing.

Forward



When the left control stick is pushed upward, the remote control boat moves forward.

Turn Right




When the left control stick is pushed upward and the right control stick is pushed to the right, the remote control boat turns right.

Turn Left



When the left control stick is pushed upward and the right control stick is pushed to the left, the remote control boat turns left.

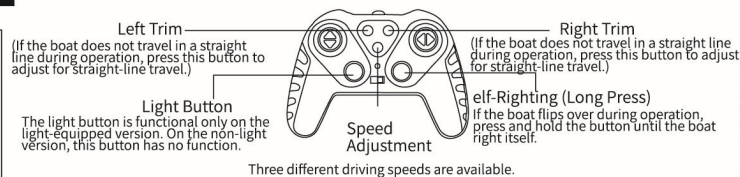

Battery Precautions

Connect the rechargeable battery to the compatible charging cable for this product. Charge for 2-4 hours. The USB light will be on during charging and turn off when fully charged. Do not use a fast charger.

1. When installing batteries, make sure to match the positive and negative terminals with those in the battery compartment. Do not reverse the polarity.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries.
4. Rechargeable batteries should be recharged promptly after use. Even if not used, they should be recharged once a month to ensure normal battery life.
5. Non-rechargeable batteries must not be recharged. Do not mix or use batteries or charging cables that are not compatible with this product, as this may cause undesirable consequences.

6. Rechargeable batteries should be removed from the model before charging.
7. Do not short-circuit the power terminals.
8. Do not connect to more than the recommended number of power sources.
9. The model must only be charged using the USB cable provided by the manufacturer. The USB cable is not the model.
10. Exhausted batteries should be removed from the toy.

Low Battery Warning:

When the battery power is too low, the power indicator light on the remote control will flash and be accompanied by a beeping sound. At this point, you should operate the boat to return as soon as possible to avoid loss of control.

A small amount of water or moisture inside the boat during use is normal. After use, shake off any water and wipe the surface dry to keep it in a dry condition.

The self-righting function may not operate properly when the battery is low or near low voltage. Operate with care to avoid the boat flipping over.

Safety Warnings

1. This product must be used under the direct supervision of an adult.
2. This model boat is not a toy and is intended for use by persons aged 8 years and above only.
3. After use, wait for the battery to cool down before recharging.
4. Before operating the model boat, ensure that the sailing area is clear of people to avoid injury. The water surface must be free of weeds or debris to prevent the propeller from getting tangled or the boat from being damaged.
5. The effective remote control range is approximately 40-50 meters. Do not exceed the effective control range to avoid loss of control.
6. This product contains small parts. Do not swallow them to avoid risk of choking.
7. Keep a safe distance from the high-speed rotating blades to avoid risk of entanglement or injury.
8. The motor becomes hot during operation. Do not touch it to avoid risk of burns.
9. To ensure compliance with the electromagnetic environment requirements for aeronautical radio stations, the use of any type of model remote control is prohibited within a radius of 5,000 meters from the center point of an airport runway.
10. During periods and within areas where radio control restriction orders are issued by relevant state authorities, use of the model remote control must be stopped as required.
11. Regularly inspect the USB cable and other parts for damage. If damage is found, stop using the product until it has been properly repaired.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.