

nutribullet®

PERSONAL BLENDER



User guide



WARNING! To reduce the risk of serious injury, read the User Guide before operating your nutribullet® Personal Blender. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

IMPORTANT SAFEGUARDS.

READ THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY. WHEN OPERATING YOUR NUTRIBULLET®, REMEMBER: SAFETY COMES FIRST.

⚠ WARNING! TO AVOID THE RISK OF SERIOUS INJURY, CAREFULLY READ ALL INSTRUCTIONS BEFORE OPERATING YOUR NUTRIBULLET®. WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING IMPORTANT INFORMATION. READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.

IF YOU LET ANYONE ELSE USE YOUR NUTRIBULLET®, MAKE SURE THAT THEY UNDERSTAND THE HEALTH AND SAFETY INFORMATION IN THIS USER GUIDE, AS WELL AS ANY ADDITIONAL SAFETY OR USAGE INSTRUCTIONS PROVIDED. EACH PERSON USING A DEVICE SHOULD READ THE USER GUIDE COMPLETELY AND BECOME FAMILIAR WITH THE SAFE OPERATION OF THE UNIT.

GENERAL SAFETY INFORMATION

- Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. This appliance is intended to be used in household and

similar applications such as: staff kitchen areas in shops, offices, and other working environments, farm houses, by clients in hotels, motel, and other residential type environments, and bed and breakfast type environments.

- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- **DO NOT USE OUTDOORS. ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.**

HEAT & PRESSURE SAFETY

⚠ WARNING! TO AVOID PERSONAL INJURY, NEVER BLEND HOT, WARM OR CARBONATED INGREDIENTS OR LIQUID IN THE NUTRIBULLET®

CUP! FRICTION FROM THE EXTRACTOR BLADES WHEN BLENDING CAN CAUSE INGREDIENTS TO HEAT AND GENERATE INTERNAL PRESSURE IN THE SEALED CUP. STARTING WITH HOT OR WARM INGREDIENTS ALLOWS MORE HEAT AND PRESSURE TO BUILD INSIDE THE CUP WHEN BLENDING. THIS MAY CAUSE THE CUP TO SEPARATE, EXPELLING HOT CONTENTS OR EXPOSING THE BLADE, BOTH OF WHICH MAY CAUSE INJURY. ALWAYS START THE BLENDING PROCESS WITH ROOM TEMPERATURE OR REFRIGERATED INGREDIENTS AND LIQUIDS (21°C/70°F OR COOLER).

⚠ WARNING! NEVER BLEND CARBONATED LIQUIDS OR EFFERVESCING INGREDIENTS (E.G., BAKING SODA, BAKING POWDER, YEAST, ETC.). PRESSURE FROM RELEASED GASES CAN CAUSE A SEALED NUTRIBULLET® CUP TO BURST, RESULTING IN POSSIBLE INJURY AND/OR PROPERTY DAMAGE.

⚠ CAUTION: SOME PROTEIN POWDERS INCLUDE EFFERVESCENT INGREDIENTS. ALWAYS CHECK THE INGREDIENTS OF ALL SUPPLEMENTS AND POWDERS BEFORE ADDING. NOTE: WHEN BLENDING SUPPLEMENTS

POWDERS THE CONTENTS MAY PRESSURIZE BY THE FOAMING CAUSED BY AIR EMULSIFYING WITHIN THE SUPPLEMENT POWDER. ALWAYS EXERCISE CAUTION WHEN OPENING.

⚠ WARNING! NEVER RUN FOR MORE THAN 3 CONSECUTIVE 55-SECOND CYCLES. ALLOW AT LEAST A MINUTE OR MORE BEFORE STARTING ANOTHER BLENDING ANOTHER CYCLE.

⚠ WARNING! IF THE CUP IS WARM TO TOUCH ALLOW IT TO COOL COMPLETELY BEFORE CAREFULLY OPENING, POINTED AWAY FROM YOUR BODY TO AVOID INJURY.

- After blending, allow the contents to settle and carefully release any pressure that may have built up during the extraction process by slowly unscrewing the container from the Blade assembly. Have the container pointed away from you in case there is any built-up pressure.
- **DO NOT** run for more than 3 consecutive 55-second intervals to prevent the contents from overheating and pressurizing.
- If you need to blend for more than one cycle, allow the Motor Base to shut off completely, carefully open the Cup to release any built-up pressure, and wait at least

one minute before starting another cycle.

- **DO NOT ALLOW BLENDED MIXTURES TO SIT IN A SEALED CONTAINER FOR LONG PERIODS OF TIME! DO NOT** leave your blended mixture in a sealed nutribullet® Cup either unrefrigerated or for a prolong period of time. The contents will spoil and ferment producing gases that will pressurize the contents of the Cup that may cause the Cup and Extractor Blade to violently separate, potentially resulting in bodily injury and property damage. If you will not immediately consume or use the blended mixture, remove the Extractor Blade, cover the Cup with a vented lid or plastic wrap or transfer to a vented container, and refrigerate.
- **NEVER** use the Extractor Blade as a storage lid.
- If you are unable to untwist the Cup from the Extractor Blade, **NEVER** leave the sealed contents out for a prolonged period of time. Immediately contact Customer Service and securely dispose of the Cup outside so you or others will not be injured if fermentation causes the Cup to separate.
- **DO NOT OVERFILL.** Filling above the MAX line can result in leakage and may create a dangerous pressurization which can cause the Cup and

Extractor Blade assembly to separate.

EXTRACTOR BLADE SAFETY

⚠ WARNING! NEVER STORE ANY EXTRACTOR BLADE IN THE MOTOR BASE UNATTACHED TO A NUTRIBULLET® CUP. AN EXPOSED BLADE CAN PRESENT A LACERATION HAZARD.

⚠ WARNING! BLADES ARE SHARP! HANDLE CAREFULLY. USE CARE WHEN HANDLING ANY BLADE. TO AVOID LACERATION INJURY, DO NOT HANDLE OR TOUCH ANY BLADE EDGE.

- **AVOID CONTACT WITH MOVING PARTS!** Keep hands and utensils out of and away from the Extractor Blade while blending food to reduce the risk of severe personal injury.
- **ALWAYS** securely tighten the Extractor Blade to the Cup to prevent leakage and always check for leakage before operating.
- **NEVER** attempt to disengage the Cup from the Motor Base if leakage occurs. **UNPLUG** the unit and wait for the Blades to come to a complete stop before attempting to remove the Cup.
- **ALWAYS** wait until the Blades comes to a complete stop

before removing the Cup/Extractor Blade from the Motor Base. Removing container prior to the blades stopping may cause bodily injuries and damage to the Extractor Blade coupling or motor gear.

- **NEVER BLEND WITHOUT LIQUID AS DOING SO MAY DAMAGE THE EXTRACTOR BLADE OR MOTOR.**
- The cyclonic action® of your nutribullet® requires the use of liquids to make smoothies and other nutritious beverages. The nutribullet® is not intended to be used as an ice crusher or without liquids. Always add liquid to your smoothie.
- **NEVER** overload the Cup with ice as it may stop the blades from turning causing the Cup to separate and exposing the blades.
- Remove all utensils from the Cup before blending.
- **DO NOT USE** the Extractor Blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the Extractor Blade.
- We recommend replacing your Extractor Blade every 6 months (depending on use) or as needed for optimal performance.
- Always periodically inspect your Extractor Blade for damage ensuring that the blades rotate freely and that

the gasket is not missing or damaged. If damaged or compromised in any way, immediately discontinue use and contact customer service.

- Certain configurations may contain a Milling Blade. This blade can be used for milling herbs, spices, grains, and seeds.
- Keep hands out of the Cup while blending to reduce the risk of severe injury to persons or damage to your nutribullet®. A scraper or spatula may be used, but must be used only when the blender is not running.

ELECTRICAL SAFETY

- Do not use this product in locations with different electrical specifications or plug types. Do not operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If damaged the appliance should be replaced.

POLARIZED PLUG INFORMATION

- Your nutribullet® has a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will correctly fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. For your safety, do not modify the plug or Motor Base in any way. Doing so will increase risk of injury and void the product's warranty.
- The use of third-party attachments, including canning jars, is forbidden and may cause fire, electric shock, personal injury, or product damage and will void the warranty.
- To avoid risk of electric shock, never immerse the cord, plug, or Motor Base of blender in water or other electrical current conducting liquids. Discontinue use if the cord, plug, or Motor Base is damaged.
- Always **UNPLUG** the nutribullet® when it is not in use or **BEFORE** assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the nutribullet® until all parts have stopped moving.

- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow cord to touch hot surfaces, including the stove.
- If the motor stops working, unplug the Motor Base and let it cool for an hour before attempting to use it again. Your nutribullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down sufficiently.

VENTILATION

⚠ **WARNING! TO PREVENT A FIRE HAZARD, THE OPENINGS ON THE BOTTOM OF THE MOTOR BASE SHOULD BE FREE OF DUST OR LINT AND NEVER OBSTRUCTED AS THEY ARE PROVIDED FOR VENTILATION TO ENSURE RELIABLE MOTOR OPERATION TO PREVENT OVER HEATING. NEVER PLACE YOUR NUTRIBULLET® ON TOP OF FLAMMABLE MATERIALS SUCH AS NEWSPAPERS, TABLECLOTHS, NAPKINS, DISHTOWELS, PLACE MATS, OR OTHER SIMILAR TYPE OF MATERIALS.**

⚠ **WARNING! ALWAYS OPERATE THE NUTRIBULLET® ON A LEVEL SURFACE, LEAVING**

UNOBSTRUCTED SPACE BENEATH AND AROUND THE MOTOR BASE TO PERMIT PROPER AIR CIRCULATION. SLOTS ON THE BOTTOM OF THE MOTOR BASE ARE PROVIDED FOR VENTILATION TO ENSURE RELIABLE OPERATION AND TO PREVENT MOTOR OVERHEATING.

MICROWAVE & STOVE-TOP HEATING SAFETY

⚠ WARNING! NEVER BLEND HOT, WARM OR CARBONATED INGREDIENTS!

- After blending room temperature or cooler ingredients (21°C/70°F or less), transfer mixture to an unsealed, microwave-safe container or to a stove-top pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients, they may feel cool to the touch, but still be hot inside.
- Do not place any of the nutribullet® parts in a microwave, oven or stove-top pot or immerse in boiling water as this may result in damage to the accessory.
- Avoid blending the following seeds and pits in the nutribullet®, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry

pits, plum pits, peach pits, and apricot pits. Fruit pits may also cause damage to the Blade and Cup.

MEDICAL SAFETY

- The information contained in this user guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

MEDICATION INTERACTIONS:

- If you are taking any medication, especially cholesterol lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the smoothie recipes contained in the Recipe Guide.

ADDITIONAL INSTRUCTIONS FOR PROPER USAGE

- **TO AVOID LEAKAGE, DO NOT OVERFILL THE CUP!** Do not use this blender for anything other than its intended use.
- **NEVER** use the sanitize or heat cycle on any nutribullet® part or accessory. This may cause warping and possibly hazardous conditions.

- **NEVER** place a nutribullet® Cup in the freezer or use the Cup as a storage container in the freezer.
- Cup and Extractor Blades are specific to the exact model of nutribullet®. Use of incompatible parts (parts from other models) may result in damage to your nutribullet® or create safety hazards. When replacing Cups or an Extractor Blade or ordering additional accessories from **nutribullet.com**, or by contacting Customer Service, please specify the model for parts that are compatible with your unit.
- Periodically inspect all nutribullet® components for damage or wear that may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged. Discontinue use and replace blending vessels if you detect cracking, cloudiness, or other damage to the vessel, tabs on the vessel or actuator tabs of the Motor Base. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the Motor Base is unobstructed and clean. Never operate your nutribullet® with damaged components. If your nutribullet® malfunctions in any way, immediately discontinue use and contact

Customer Service at **1 (800) 523-5993**. You may purchase new nutribullet® Cups, and Extractor Blades at **nutribullet.com** or by contacting Customer Service.

- **WE RECOMMEND REPLACING YOUR CUP EVERY SIX MONTHS.**
- If you have any comments, questions, or concerns, please go to **nutribullet.com**. Or call Customer Service at: **1 (800) 523-5993**.

!SAVE THESE INSTRUCTIONS!

Contents



- 11 What's included**
- 12 Assembly guide**
- 13 nutribullet® cup assembly & use**
- 15 Care & maintenance.**
 - 15 How to clean the nutribullet®
 - 17 Replacement parts
- 18 nutribullet® one-year limited warranty**
- 21 Product registration**

 
What's included




motor base



24 oz cup

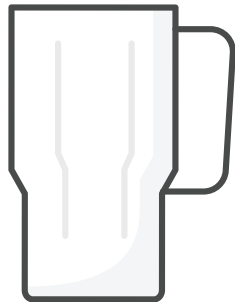

21 oz
handled cup

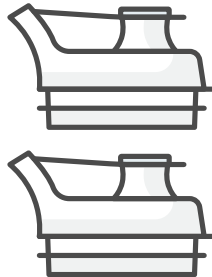 


two to-go
lids



extractor blade

 Assembly guide

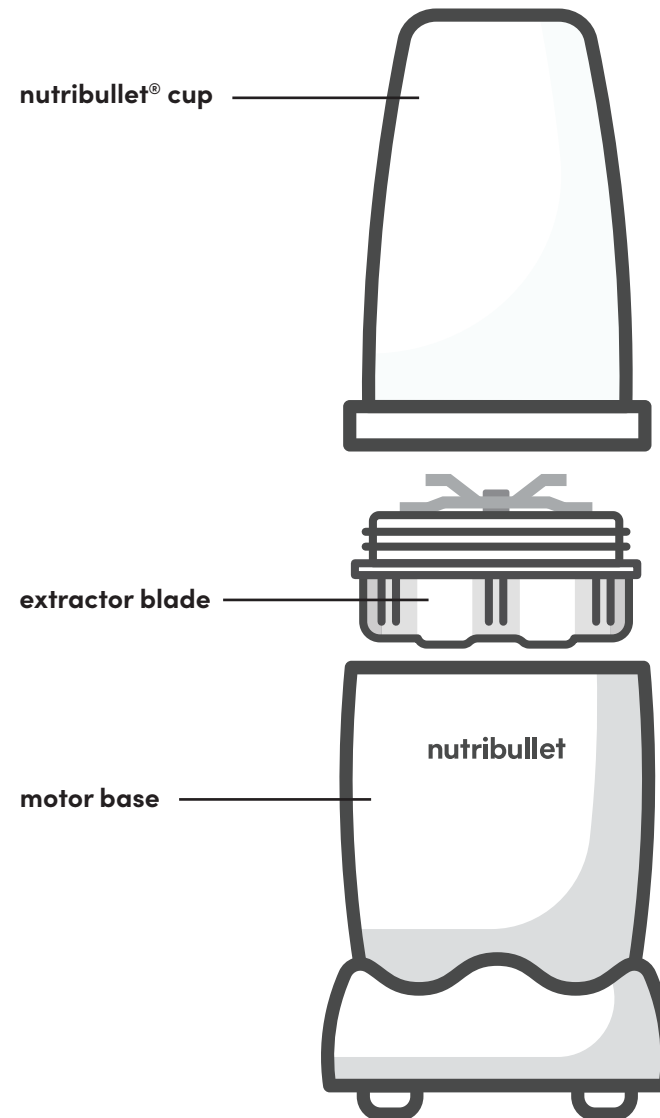

Product configurations may vary. To see our full list of nutribullet® accessories please visit [nutribullet.com](https://www.nutribullet.com)

nutribullet® cup assembly & use

PLEASE KEEP THESE
IMPORTANT SAFEGUARDS
IN MIND WHEN USING
THE NUTRIBULLET®:

⚠ **CAUTION! BLADES ARE SHARP.** Handle with care to avoid bodily injury. NEVER store any exposed Extractor Blade in the Motor Base unattached to a nutribullet® Cup.

- NEVER blend hot or warm ingredients, carbonated liquids, or effervescent ingredients. Only blend room-temperature or refrigerated ingredients (21°C/70°F or cooler).
- NEVER attempt to open a nutribullet® Cup if it feels hot or warm to the touch. The contents may be heated and pressurized, causing the Cup to violently separate when opened, and potentially resulting in bodily injury.

⚠ **WARNING! DO NOT** run for more than 55 seconds per interval. NEVER exceed 3 consecutive 55-second intervals, and carefully open the container between each interval.

- 1 Review all warning and caution statements in the Important Safeguards section (pg. 2-8) before proceeding to Step 2.

 


- 2 Place the **Motor Base** on a clean, dry, level surface such as a counter or table.



- 3 Add ingredients and liquid to the **nutribullet® Cup**.


NOTE: Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

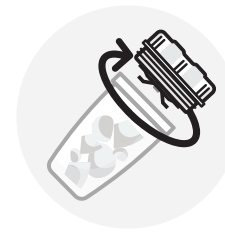

- 4 Place the **Extractor Blade** onto the **Cup** and twist until it is tightly sealed.



 - 6 Turn the **Cup** upside down and place it onto the **Motor Base**, aligning the tabs on the **Cup** to the tabs on the **Motor Base**. Gently push and twist. The blending cycle is automatically activated and will stop after 55 seconds.

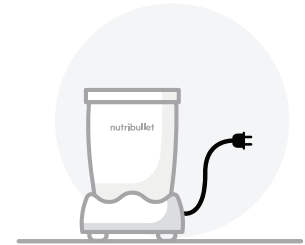

- 5 Plug the power cord into an electrical outlet.



- 7 Unlock the assembly by gently pushing and untwisting the **Cup** counterclockwise.

NOTE: Blending should not require longer than one interval (55 seconds) to yield smooth and creamy results.

⚠ **WARNING! Do not remove the Extractor Blade from the nutribullet® Cup until blending has completely ceased and blades come to a complete stop. Never run the nutribullet® while empty.**

nutribullet® accessories are not intended to be used in the microwave as it may damage the accessories.

Never leave the nutribullet® unattended while in use.

DO NOT use the Extractor Blade as a storage lid or leave out a blending mixture sealed for a prolonged period of time. The contents may ferment causing the Cup to violently separate, which can result in in bodily injury or property damage.

Care & maintenance

Cleaning the nutribullet® is easy, simply place any of the pieces (except for the Motor Base and Extractor Blade) on the **TOP RACK** of the dishwasher or hand wash with warm soapy water and rinse.

Here's how to clean the nutribullet®:

STEP 1:

The most important thing — ALWAYS UNPLUG the Motor Base from the power supply outlet when it is left unattended, before assembling, disassembling, changing accessories or approaching parts that move in use or when cleaning. Do not attempt to handle the appliance until all parts have stopped moving!

STEP 2:

Remove the Cup/Extractor Blade assembly from the Motor Base.

STEP 3:

Clean the individual components (Motor Base, Extractor Blades, nutribullet® Cups) as follows:

MOTOR BASE:

- For the most part, the Motor Base doesn't really get dirty, but if you neglect to twist the Extractor Blade on to the Cup tightly, liquids can leak out and get into the base and stick to the activator buttons.
- To avoid risk of injury, **NEVER** use your hands or utensils to clean the white actuator tabs while the nutribullet® is plugged in.
- Do not remove the rubber or plastic liners inside the Motor Base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the inside and outside of the Motor Base until clean.
- Pay particular attention to the white actuator tabs on the inside of the Motor Base to loosen any sticky debris from drips and spills. If necessary, you may use a small brush to scrub the area to ensure it is kept clean.



WARNING! Never submerge the Motor Base in water.

EXTRACTOR BLADE:

- **DO NOT REMOVE THE GASKET** as this will permanently damage the Extractor Blade and cause leakage. If after washing as indicated above additional disinfecting is desired, you may rinse with a 10% vinegar/water solution or with lemon juice. If, over time, the gasket becomes loose or damaged, you may order a new Extractor Blade at nutribullet.com or contact Customer Service.
- Dry the Extractor Blade completely. It is helpful to turn the blade on its side in your dish drainer to ensure **BOTH SIDES** of the Extractor Blade are completely dried.

NUTRIBULLET® CUPS & TO-GO LIDS:

- These items are all **TOP RACK** dishwasher safe. We recommend rinsing them and giving them a quick brush with a dish brush to remove any dried debris before washing them in the dishwasher. **NEVER** use the sanitize cycle to wash the Cups as this may warp the plastic.

- Regularly check the 3 tabs on the side of the Cup (cracking, crazing, breakage or rounding). Also, ensure that the blades to the Extractor Blade rotates freely and that gasket is not missing or damaged. If damaged, replace immediately to prevent possible personal injury.
- **NEVER USE A CUP WITH A BROKEN, DAMAGED, OR MISSING TAB AS DOING SO MAY CAUSE THE CUP AND MOTOR BASE TO SEPARATE EXPOSING THE BLADE ASSEMBLY!**

STUBBORN CLEAN UP:

- If ingredients dry inside the nutribullet® Cup, make your cleanup a snap by filling the Cup about 2/3 full with room temperature (21°C/70°F or less) water and screw on the Extractor Blade. Place the Cup/Extractor Blade assembly on the Motor Base for about 20–30 seconds. This will loosen the stuck ingredients, and with a light scrub and rinse, you'll be all finished.

Replacement parts

To order additional parts and accessories, please visit our website at nutribullet.com/shop/accessories or feel free to contact Customer Service: 1 (800) 523-5993.

Do not use after-market replacement parts for your nutribullet®. Use of after-market replacement parts may result in damage to your nutribullet® or create safety hazards resulting in bodily injury or damage.

nutribullet® one-year limited warranty

LIMITED WARRANTY FOR NUTRIBULLET®

nutribullet®'s limited warranty obligations are confined to the terms set forth below:

nutribullet®, LLC ("nutribullet®") warrants this nutribullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase or date of delivery of the product. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and this limited warranty is valid, at its option nutribullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally

equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes nutribullet®'s property. When a refund is given, your product becomes nutribullet®'s property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at **1 (800) 523-5993** or contact us via email from our website at **nutribullet.com**, simply click the contact us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our customer service department you will be asked for your name, address, telephone number and to provide proof of

the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate nutribullet® serial number(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This nutribullet® One-Year Limited Warranty applies only to nutribullet® products distributed by or for nutribullet® that can be identified by the “nutribullet®” trademark, trade name, logo and bar code. nutribullet®’s One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by nutribullet®, LLC.

Normal wear and tear is not covered by this limited warranty. This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. nutribullet®, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. nutribullet® is not liable for any damage to products not covered by this warranty (e.g., Cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any nutribullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET® CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No nutribullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY.

NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Product registration

Please visit nutribullet.com/register or call **1 (800) 523-5993** to register your new nutribullet® Blender. You will be asked to enter the Serial Number* of your product, along with the purchase date and place of purchase. The information you submit is for product registration. Failure to complete product registration does not diminish your warranty rights.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering your product, you acknowledge that you have read and understood the instructions for use, and warnings set forth in the accompanying instructions.



**How to find serial number
under the Motor Base.**

Capital Brands Distribution, LLC | nutribullet.com | All rights reserved.

nutribullet® and the nutribullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NB10150_260817