

Hair clipper

USER'S MANUAL

EN



SENCOR®

SHP 100

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with the use of similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user manual in a safe place for future use.

Keep the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

CONTENTS

IMPORTANT SAFETY NOTICE	3
INTRODUCTION	4
PRODUCT DESCRIPTION	4
INSTRUCTIONS FOR USE	4 - 5
CLEANING AND MAINTENANCE	6
DISPOSAL OF USED BATTERIES	6
TECHNICAL SPECIFICATIONS	7
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	8

IMPORTANT SAFETY NOTICE


- 1) This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 2) Children must be supervised to ensure that they do not play with the product.
- 3) Never use accessories that have not been delivered with this product or are not intended for it.
- 4) Under no circumstances should you try to repair or amend the product on your own - danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty.
- 5) Never use the product if you have wet hands or feet.
- 6) Do not use or store the product near flammable or volatile substances.
- 7) Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 8) Do not place the product near heaters, open fires or other appliances or equipment that are sources of heat.
- 9) This product is designed for household use. Do not use in industrial surroundings or outdoors!
- 10) Never use this product on animals.
- 11) Do not use the product for purposes other than those intended.
- 12) Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or in any other liquid.
- 13) Never use the product near a bathtub, wash basin or any other container filled with water.
- 14) Use extra care if the product is used near children. Always keep the product away from the reach of children.
- 15) Do not use this product on open wounds, cuts, sunburns or blisters.
- 16) Keep this product at a safe distance from hair and eyes.
- 17) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 18) For plugging the product into the mains socket, use only the type of adaptor included with the product. Never use a different type of adapter with the product.
- 19) The manufacturer takes no responsibility for damages caused by incorrect use of the product and its accessories.

INTRODUCTION

This hair clipper for wet and dry hair and beards can be set to 10 different lengths using two cutting length attachments. This appliance is suitable for cutting wet and dry hair. The cutting unit can be easily cleaned under running water.

The cutting system is made from ceramic material, which ensures a better and more precise cut and is very gentle to the skin.

PRODUCT DESCRIPTION

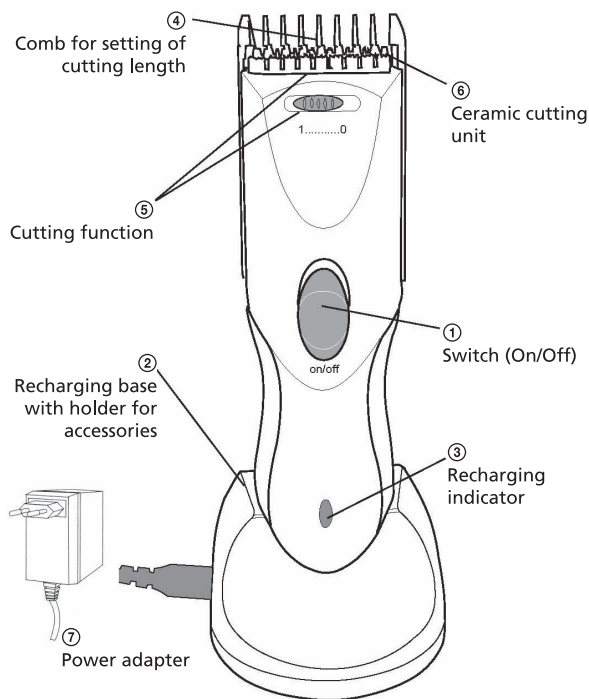

HAIR CLIPPER INSTRUCTIONS

The hair clipper can be used either cordless or can be powered from the mains.

Using the power adapter:

If you want to use the hair clipper immediately, connect the power adapter and plug the adapter into a suitable power outlet (230 V).

If you only wish to recharge the hair clipper for later use, you can place it on the supplied recharging stand and connect the adapter.

Hair clipper

SHP 100

EN

Recharging batteries:

Before first use and also for all future recharging, the device should be recharged for a time of 12 hours. Place the device in the recharging base ② and then connect the power adapter into a power outlet. The recharging process is indicated by a small red recharging indicator ③. After the clipper is fully recharged it can be used for approximately 50 minutes.



Tip:

To ensure a long battery life, you should fully discharge the batteries before recharging. Discharge the battery by using the device until it stops working.

Operation

Before using the hair clipper:

The hair to be cut should be clean and dry or wet. Hair should be thoroughly combed and without knots. Put a towel around your neck so that cut hair does not fall behind your collar.

Using the hair clipper:

- 1) Select one of the two clear comb attachments to set the cutting length ④. When using the shorter attachment you can set the cutting length to 4, 8, 12, 16 or 20 mm. With the longer attachment you can set the length to 24, 28, 32, 36 or 40 mm.
- 2) Insert the comb attachment into the side rails on the body of the hair clipper and set the required cutting length using the oval spring safety lock located on the bottom side of the comb attachment - press it against the device and at the same time move the comb attachment to the required position. Before commencing to cut hair, ensure that the attachment is always securely fixed.
- 3) Move the switch On/Off ① up to position „On“ (Zapnuto) and begin to cut.



Tip:

We recommend not to initially cut your hair or beard too short.

Hair clipper functions:

Select the required length of the comb attachment and using the top slide switch ⑤ set the cutting function. Using this function you can reduce the amount of hair without changing their length.

Cutting contours and shaving the nape of the neck:

Remove the comb attachment from the device. The ceramic cutting unit ⑥ makes it possible to follow contours in hard to reach places and also to cleanly shave the hair line on the nape of the neck.

After finishing using the hair clipper, move the On/Off Switch ① down to the „Off“ position.

CLEANING AND MAINTENANCE

Cleaning the body of the clipper:

You can clean the body of the hair clipper using a lukewarm moist cloth. Do not use harsh cleaning fluids, paint thinners or solvents. These can damage the surface of the appliance.



Caution:

Do not submerge the body of the hair clipper under water because it contains parts under live current (recharging battery)!

Cleaning of the cutting head:

- 1) Turn off the device and remove the power plug from the mains.
- 2) Remove the comb attachment from the device. Using your thumb push the cutting unit back and pull it out.
- 3) Using the cleaning brush supplied, remove the remaining hairs from the cutting head.
- 4) After the cutting unit is fully dry insert it back into the device by placing the bottom lug on the cutting head into the bottom opening in the upper part of the hair clipper body, then firmly press on the cutting head until you hear a click.



Tip:

The cutting head can also be cleaned under running water. However, the water temperature should not exceed 70° C.

Lubrication of the head:

- 1) Remove the comb attachment from the device. Using your thumb push the cutting unit back and pull it out.
- 2) Place one or two drops of the supplied oil in between the cutting blades and spread it evenly. After using up the supplied oil use only oil not containing acids (e.g. oil for sewing machines).
- 3) Wipe off excess oil using a cloth.
- 4) Then insert the cutting head back into the device by placing the bottom lug on the cutting head into the bottom opening in the upper part of the hair clipper body, then firmly press on the cutting head until you hear a click.

DISPOSAL OF USED BATTERIES

Rechargeable batteries are included with this product. Used batteries do not belong in domestic waste. Dispose of batteries at designated battery disposal points.

Hair clipper

SHP 100

EN

TECHNICAL SPECIFICATIONS

Power adapter:

Input current: 100 - 240 V AC (alternative), 50/60 Hz

Output current: 3 V DC (direct), 1 000 mA

Protection category (relating to protection against injury by electric shock):..... II

Body of clipper:

Battery: 2x 1,2 V Ni-MH, 600 mAh (integrated)

Protection category (relating to protection against injury by electric shock): II

Noise level: 68 dB (A)

The declared noise emission level for this appliance is 68 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Supplied parts:

- 1) Hair clipper
- 2) Recharging base with holder for accessories
- 3) Power adapter:
- 4) 2 Comb attachments
- 5) Comb
- 6) Scissors
- 7) Cleaning brush
- 8) Oil for cutting unit
- 9) User's manual
- 10) Warranty card

Text and technical parameter changes reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.