

Niight Spiral LED Whip Light (12V)

LED Whip Light Mounting:

1. Mount base on the vehicle position where you want to mount the whip light.
2. Lift damping ring and get base insert into the light to connect.



Electrical Hook-up:

1. Plug-and-play the quick disconnect connectors on the whip and harness kit. Please note that arrow must be inline to connect and then screw together.




2. Connect whip lights to power (opt either methods below)

- a. Connect red wire to ACC+ 12V wire in fuse box, and connect black wire to Ground. Do not connect directly to the battery.
- b. Connect whip lights to the rocker switch first before going to battery. You can opt either one of the wiring methods of the switch at the top of page 1.


— 1 —

5-PIN ROCKER SWITCH

Wiring Method A with switch indicator light always on:

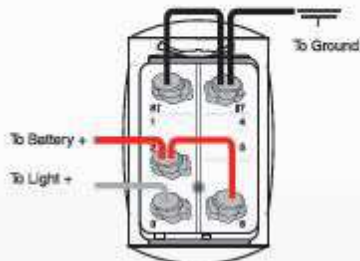


Wiring Method B switch indicator light stay on only when light switch is on:

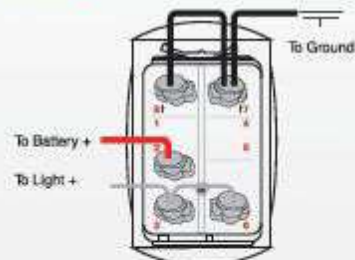

PIN-TAB OUTS: 1-Upper Light Pos. (M) 2-Lower Light Pos. (M) 3-Common to relay, accessory or earth/ground 4-Upper Light Pos. (+) 5-Lower Light Pos. (+)

— 2 —

Niight

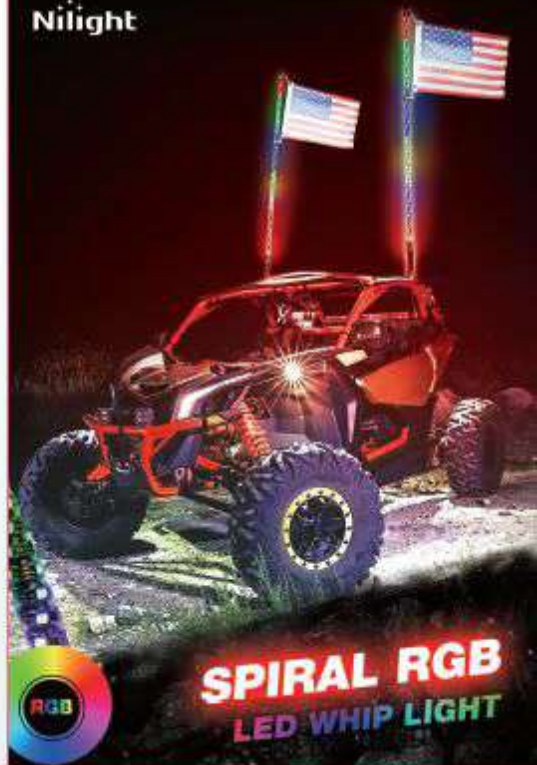

RF Remote Control:



Power on/ Pause

Auto Play & Setup Menu

- Switch into auto playing 360 modes.
- In the Off state, you can press **On** and hold for 5 seconds to enter setup menu, and then follow the RGB sequence adjustment guidelines to complete the sequence setting. Then press **Off** to exit.

Shutdown

- Auto sleep when shutdown.

10 Speeds speed adjustment

- S+: Speed +
- S-: Speed -

360 modes switching

- M+: Mode +
- M-: Mode -

13 levels brightness adjustment

- Right wheel: Brightness +
- Left wheel: Brightness -



Monochrome display

Press these color buttons, whip light displays the corresponding colors.

— 3 —



RGB sequence adjustment

In the OFF state, press **On** and hold 5 seconds to enter setup menu. Then press **Off** to adjust the bottom 3 colors sequence and **Off** shows red, green and blue as below picture showed. Then press **Off** to save.



One-to-one remote control mode

Press **On** and hold for 5 seconds to make remote control and whip light into one-to-one matching mode (only your own remote can control your whip light).



Remove one-to-one remote control mode

Press **On** and hold for 5 seconds to cancel the one-to-one control mode. (Other same style remote can control your whip light).

Additional Tips:

1. To avoid your whip lights are interfered by others' remote, you can set your whip light and remote into one-to-one matching mode by pressing pink button and hold for 5 seconds when you first install it. If your remote indicator lights up but can not control whips, try to hold and press White button and see if it responds.
2. To avoid pairing your lights with others' light, do not setup one-to-one remote control mode when there is other same style whip lights around. You can go somewhere else to setup or have others' whip light turn off first.
3. When you find the led whip lights do not display the same color light as the color button you press, follow the above RGB Sequence Adjustment guidelines to correct it.
4. When you lost your remote control and get a new remote for the light, to get the new remote control works, first remember to use new remote to remove the one-to-one remote control mode you setup on the whip light in the past.

— 4 —



SPIRAL RGB LED WHIP LIGHT

