

# SENCOR®

SWK 0940BK



## DUAL WALL VARIABLE TEMPERATURE ELECTRIC KETTLE

Translation of the original manual




# SENCOR®


SWK 0940BK



**A**

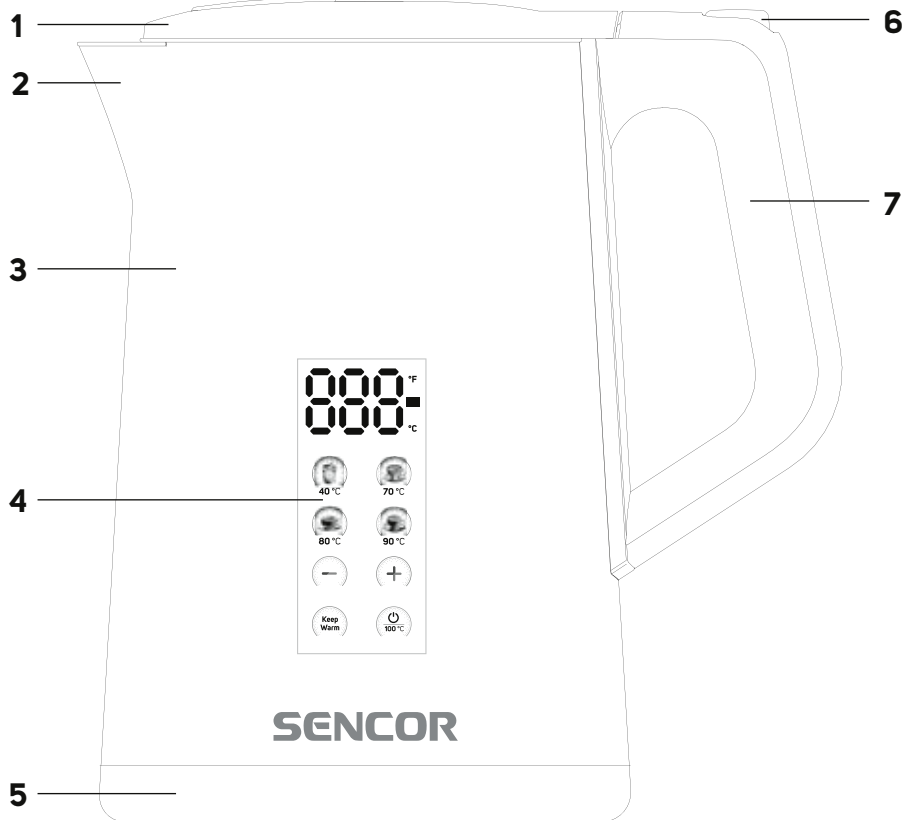

# B

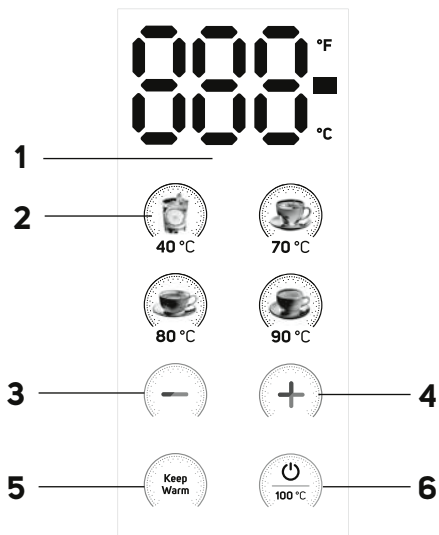



## Important Safety Instructions

### **READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 years and supervised.
- Keep the appliance and its power cord out of reach of children younger than 8 years of age.
- If the mains cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cable is damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
  - kitchenettes in shops, offices and other workplaces;
  - agriculture;
  - hotels, motels and other residential spaces;
  - bed and breakfast establishments.

- Do not submerge the kettle or its base in water or another liquid.
- If the kettle is overfilled, hot water may splash out.



**WARNING:**

Do not open the lid while the water is boiling.



**CAUTION:**

Position the lid so that the steam is directed away from the handle.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.



**CAUTION:**

Make sure the appliance is switched off before removing it from the base.



**WARNING:**

Prevent the plug from getting wet.

- Rinse the inside of the kettle with clean water. Follow the cleaning instructions in the “Cleaning and Maintenance” section.



**WARNING:**

Incorrect use may lead to injury.

- The surface of the heating element contains residual heat after use. Do not touch the hot surface.

- 
- Before connecting the kettle to power, make sure that its power ratings match those of the wall socket.
  - Connect the kettle only to a properly grounded socket.
  - Do not place the kettle on windowsills, sink drain trays or unstable surfaces. Always place it on a stable, flat and dry surface.
  - Do not place the kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.

- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Only use the kettle to heat up drinking water. Do not use it to warm up other liquids or food.
- Do not fill the kettle with water when placed on the base. Remove the kettle from its base before filling. When filling, make sure that the water level covers at least the minimum mark and does not exceed the maximum mark.
- Before turning the kettle on, make sure that the lid is closed properly.
- Do not turn on the kettle when it is empty. Incorrect use may negatively affect the appliance's lifetime. In case of accidental start-up without water, the kettle is equipped with a safety lock to protect it from damage.
- Use the handle for lifting and carrying the kettle.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Do not pour ice-cold water into the kettle when it is hot.
- Always turn off the kettle and disconnect it from the power socket if it's not to be used or if it's to be left unattended or before moving or cleaning it.
- Unplug the kettle from the power socket by pulling the plug, not the cord. Otherwise, damage to the power cable or socket could occur.
- To avoid the risk of electric shock, do not repair and/or make any adjustments to the electric kettle by yourselves. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

---

## PREVENTION OF HOUSEHOLD ACCIDENTS

Hot or boiling liquids pose a significant risk to children, and even minor burns can be serious. Observe basic household injury prevention rules and exercise increased caution when children are near hot or boiling liquids. If necessary, explain to children the risks associated with hot or boiling liquids. In the event of burns or scalds, immediately rinse the affected area under a stream of cold water and seek medical assistance if required.

---

## EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



This product meets all the basic requirements of the applicable EU directives.

# EN Dual wall variable temperature electric kettle


## User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file defect claims or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.



### Note:


Do not fill the kettle above the maximum level as water may splash out of the spout while it is boiling. Check that the lid is properly closed before plugging the fork into the power socket.

- Place the kettle on the base. Insert the power plug into a power socket. A beep will sound and temperature of the water in the kettle will appear on the display.
- Press the  button. The temperature on the display will gradually increase as the water in the kettle is heated.
- As soon as the water in the kettle reaches the required temperature, the kettle will automatically turn off and an acoustic alert will sound.
- Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark.

## DESCRIPTION OF THE KETTLE

<b>A1</b> Lid	<b>A4</b> Control panel
<b>A2</b> Spout	<b>A5</b> Base with a central connector
<b>A3</b> Body of the kettle with a watermark inside	<b>A6</b> Lid open button
	<b>A7</b> Handle

## CONTROL PANEL

<b>B1</b> Display (shows the current or set temperature)	<b>B4</b> + button to increase temperature
<b>B2</b> Beverage buttons	<b>B5</b> Keep Warm button to select preset temperatures
<b>B3</b> – button to decrease temperature	<b>B6</b>  On/Off button

## INTENDED USE

- The SWK 0940BK kettle is designed to heat up drinking water to your chosen temperature. At the same time, it is possible to activate the keep warm function, when the kettle will maintain the set temperature for a maximum of 1 hour.
- The double-walled design of the kettle provides increased safety against burns.

## BEFORE FIRST USE OF THE KETTLE

- Remove all wrapping material from the kettle and its base. Check that the kettle and its accessories are not damaged. Remove the protective foil from the control panel.
- Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. To boil water in the kettle proceed according to the instructions in the chapter "Using Your Kettle". Repeat this process 2 to 3 times.
- Now the kettle is ready for use.

## USING YOUR KETTLE

### Heat water to 100 °C


- Place the base on a stable, even and clean surface. Fully unwind the power cord.
- Press the button to open the lid and the lid will open. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark, but must not exceed the maximum mark. The marks are placed inside the kettle. After filling, close the kettle lid.






### Warning:


Do not fill the kettle when placed on the base, not even through the spout.

## HEATING WATER TO A PRESET TEMPERATURE AND MAINTAINING THAT TEMPERATURE

- This function makes it possible to maintain the set temperature in the kettle after heating the water for a maximum of 1 hour.
  - When the temperature sensor detects that the water temperature inside the kettle has dropped, the kettle switches on and reheats the water to the temperature you set. The kettle will then turn off.
- Perform steps 1 to 3 from previous part "Heating water to 100 °C".
  - Press one of the "Beverage buttons" to select the preset temperature. Then press the **Keep Warm** button – see table below.
  - The kettle will automatically start heating after 3 seconds.
  - The temperature on the display will gradually increase as the water in the kettle is heated.
  - As soon as the water in the kettle reaches the required temperature, the kettle will automatically switch to the keep warm mode and three sound alerts will sound.
  - The kettle will keep the temperature for up to 1 hour.
  - After the set time has elapsed, the kettle automatically switches off.
  - Press the  button during the heating process or keep warm mode to turn the kettle off manually.

### Temperature table

ICON	USAGE
 40 °C	Infant formula, baby cereals, etc.
 70 °C	Green tea
 80 °C	White tea

ICON	USAGE
	Instant coffee
100 °C	Black tea



**Note:**

The Keep Warm function is not active for a temperature of 100 °C to prevent the water from boiling out and damaging the kettle.



**Note:**

If the water temperature inside the kettle is higher than the set temperature, the kettle will beep and not start. The actual temperature in the kettle will appear on the display.



**Warning:**

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, after reaching a certain temperature the thermostat will interrupt the electric circuit and turn off the kettle. You can run it again after several minutes, until the heating bottom has cooled down.




**Note:**

A sound is made each time a button is pressed. This is normal.

**Heating water to a required temperature**

1. Perform steps 1 to 3 from previous part "Heating water to 100 °C".
2. Press one of the "Beverage buttons" to select the preset temperature; or manually adjust the temperature in the range from 40 °C to 95 °C using the +/- buttons.
3. The kettle will automatically start heating after 3 seconds.
4. The temperature on the display will gradually increase as the water in the kettle is heated.
5. As soon as the water in the kettle reaches the required temperature, the kettle will automatically turn off and three sound alerts will sound.

**For water heated in this way, the kettle will not maintain its temperature.**

6. Press the  button during the heating process to turn the kettle off manually.

**CLEANING AND MAINTENANCE**

- Before cleaning, make sure that the kettle is unplugged from the mains socket and let it cool down.



**Warning:**

Do not immerse the kettle, base, power cord or plug in water or any other liquid.



**Warning:**

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface. None of the components of this appliance are dishwasher safe.

- To clean the external parts of the kettle use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent.
- After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- Clean the base using a dry cloth only.

**REMOVING LIMESCALE DEPOSITS**

- As the limescale deposited in the kettle may adversely affect its lifetime, remove it regularly depending on the kettle use frequency.
- In addition, by removing the limescale, you can save electricity and shorten the water boiling time without affecting the drink taste.
- During standard use (3 to 5 times per day), we recommend limescale deposits be removed:
  - once a month in areas with hard and very hard water;
  - once every two to three months in areas with soft and medium-hard water.
- Scale build-up increases the noise level of the kettle.
- To remove the scale, we recommend the Sencor SESXD 001 liquid agent. Follow the dosage and procedure instructions on the packaging of the descaling agent.

**Cleaning the Filter**

- The kettle is equipped with a removable limescale filter. This filter is very fine and captures limescale pieces that might come loose when the water boils. In order to ensure proper functioning, it is necessary to clean the filter regularly.
- Open the lid and remove the filter from the inner wall of the spout.
- Wash the appliance under running water. For heavier soiling, wipe the filter with a soft sponge.
- Put it back on the inner wall of the spout.

**STORAGE**

- If you are not going to use the appliance for an extended period of time, disconnect the plug from the mains socket, allow the appliance to cool down, and clean it according to the instructions in the "Cleaning and Maintenance" section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

**TECHNICAL SPECIFICATIONS**

Rated voltage range.....	220–240 V~
Rated frequency.....	50/60 Hz
Rated power input.....	1,850–2,200 W
Capacity.....	1.7 l

**Values Provided according to Commission Regulation EU 2023/826**

Off Mode	
Power consumption in off mode	0.4 W
Time needed for the equipment to automatically reach off mode	–
Standby Mode	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
Networked Standby Mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–



## **INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at the designated municipal waste disposal site.

.....

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

### **For business entities in European Union States**

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

### **Disposal in other countries outside the European Union**

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)