


beurer

FC 55




EN Powered body brush
Instructions for use

 
CE

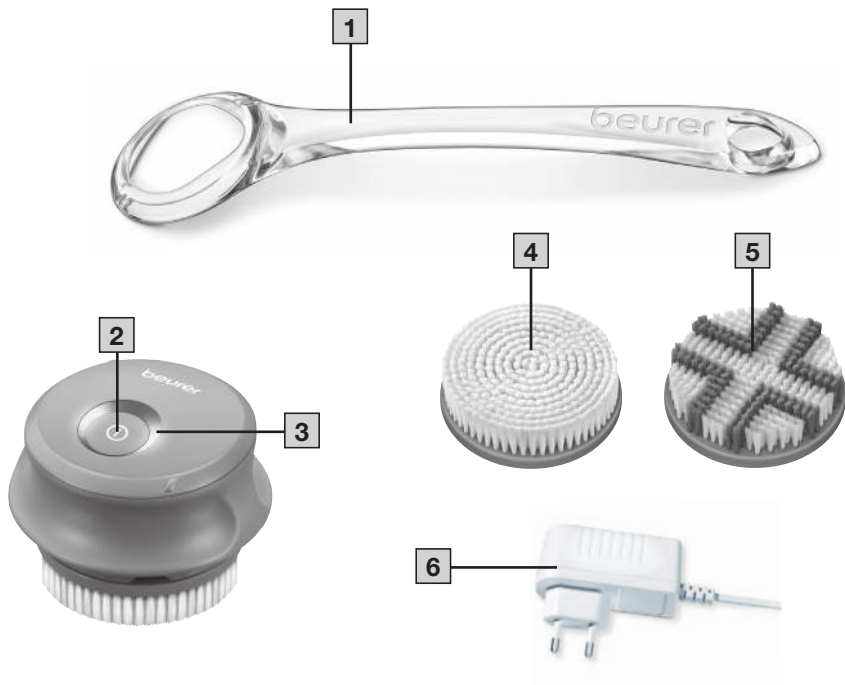


A

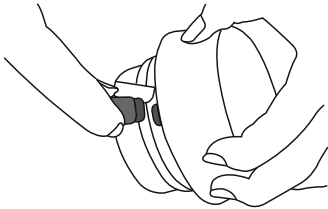 


B

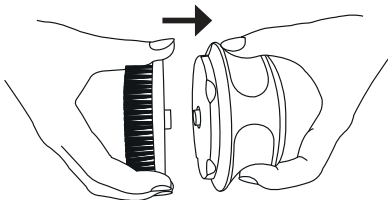 

C

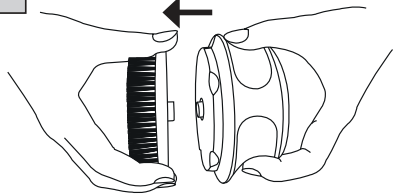 

D

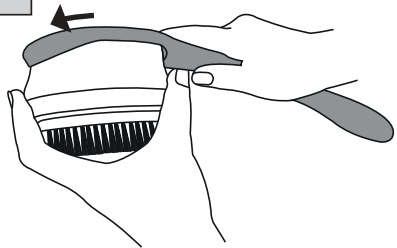 



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

WARNING

- The device is intended only for domestic/private use, not for commercial use.
- This device may be used by children over the age of eight and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to adhere to this instruction will void the warranty.

Table of contents

1. Included in delivery	4
2. Signs and symbols	4
3. Intended use	5
4. Warnings and safety notes	5
5. Device description	6
6. Initial use	6
6.1 Charging the body brush battery	6
6.2 Choosing and fitting a brush attachment	6
6.3 Attaching the handle	6
7. Use	6
7.1 Cleansing treatment function	6
7.2 Exfoliation treatment function	6
8. Cleaning and maintenance	6
9. Disposal	7
10. Accessories and replacement parts	7
11. What if there are problems?	7
12. Technical data	7
13. Warranty/service	7

1. INCLUDED IN DELIVERY



















Check that the exterior of the delivery cardboard packaging is intact and make sure that all components are present. Before use, ensure that the device and accessories show no visible damage and all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 x body brush
- 1 x cleansing attachment
- 1 x exfoliation attachment
- 1 x handle
- 1 x mains adapter
- 1 x set of these instructions for use

2. SIGNS AND SYMBOLS

The following symbols appear in these instructions for use and on the device:

	WARNING Warning notice indicating a risk of injury or damage to health
	IMPORTANT Safety note indicating possible damage to the device/accessory
	Suitable for use in a bath or shower.

	Observe the instructions for use
	The device is double-protected
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	Do not dispose of batteries containing hazardous substances with household waste
	Manufacturer
	Note Note on important information
	Only use indoors
	Separate the packaging elements and dispose of them in accordance with local regulations.
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	This product satisfies the requirements of the applicable European and national directives.
	United Kingdom Conformity Assessed Mark
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU.
	Polarity
	Direct current
	Energy efficiency level 6
	Protected against solid foreign objects that are 1 mm in diameter and larger, and against splashing water from all sides
	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	Importer symbol

3. INTENDED USE

The beurer FC 55 body brush with its rotating brush attachments has been specially developed to cleanse the skin of your body. The body brush has a normal cleansing attachment and an exfoliation attachment. You can gently exfoliate your body and therefore ensure soft and radiant skin by using the exfoliation attachment.

The body brush not only cleanses your skin, it also improves circulation. The body brush is waterproof and can thus also be used in the shower and bath.

The body brush has slow and fast speed settings.

The body brush is suitable only for private use, not for medical or commercial purposes. The body brush must only be used on the human body. Do NOT use the body brush on the face or pubic area. Do NOT use the body brush on animals. The body brush is not suitable for children under 8 years. The body brush is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

Do NOT use the body brush if one or several of the following warnings applies to you.

4. WARNINGS AND SAFETY NOTES

WARNING

- Before using the body brush, read the safety notes through carefully. Non-observance of the following information may result in personal injury or material damage. Store these instructions for use and make them accessible to other users. Make sure you include these instructions for use when handing over the device to third parties.
- Danger of suffocation due to packaging material. Keep packaging material away from children.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.
- Keep the mains adapter away from water.
- Do **NOT** use the body brush
 - on broken skin.
 - on open wounds.
 - if you suffer from a skin disease or irritated skin.
 - immediately after sunbathing.
 - if you are taking medication that contains steroids.

NOTES ON HANDLING BATTERIES

- If your skin or eyes come into contact with fluid from the battery cell, flush out the affected areas with plenty of water and seek medical assistance.
- Risk of explosion! Never throw batteries into a fire.
- Do not disassemble, split or crush the batteries.
- Only use chargers specified in the instructions for use.
- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times.
- Fully charge the battery prior to initial use.
- In order to achieve as long a battery service life as possible, fully charge the battery at least twice a year.

IMPORTANT

Only specialist personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. In the event of a fault or damage, have the device repaired by a certified specialist workshop.

5. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- 1 Handle
- 2 ON/OFF/speed button
- 3 LED indicator lamp
- 4 Cleansing attachment: For daily cleansing
- 5 Exfoliation attachment: For revitalising exfoliation
- 6 Mains adapter

6. INITIAL USE

6.1 Charging the body brush battery

Charge the battery of the body brush for 2 hours before initial operation.

WARNING

Before starting the charging process, make sure that your hands and the mains adapter are dry.

To charge the body brush battery, proceed as follows:

1. Ensure that the body brush is switched off.
2. Connect the body brush to the mains adapter. **A**
3. Insert the mains adapter into a suitable socket.
4. While charging is in progress, the LED lights for the ON/OFF/speed button light up alternately in a circle. Once the body brush battery has been fully charged, the LED lights for the ON/OFF/speed button light up permanently.

6.2 Choosing and fitting a brush attachment

The device has 2 different attachments.

Cleansing attachment: For daily cleansing

Exfoliation attachment: For exfoliating in the shower and in the bath in order to gently remove excess skin cells

1. Carefully fit your desired attachment onto the body brush as shown until you can hear and feel it click into place. **B**
2. To remove the attachment again after use, pull it carefully off the body brush. **C**

6.3 Attaching the handle

You can optionally also fit a handle onto the body brush. Hard-to-reach areas (e.g. the back) are easier to reach by using the handle.

To fit the body brush onto the handle, screw the body brush into the handle as shown. **D**

7. USE


7.1 Cleansing treatment function

The cleansing treatment function using the cleansing attachment is ideally suited to daily cleansing of the skin.

To start the cleansing treatment function, proceed as follows:

1. Ensure that the cleansing attachment is attached to the body brush.
2. To switch on the body brush, press the ON/OFF/speed button. The cleansing attachment starts to rotate. We recommend that you start by using the slow speed setting. To choose the fast speed setting, press the ON/OFF/speed button again.
3. Gently move the body brush in circular motions over your skin. Start with your feet and work upwards from there in the direc-

tion of your legs, buttocks, stomach, back, chest, arms and hands. Do NOT use the body brush on the face or in the pubic area. If you have problems reaching your back with the body brush, use the additional handle. If the treatment is unpleasant, stop using the device or reduce the speed setting.


 To ensure comfortable treatment, do not press the rotating brush attachment too firmly on to the skin. Treat each section of skin for a maximum of 20 seconds.

4. To end the cleansing treatment function, press the ON/OFF/speed button again. The body brush switches itself off.

7.2 Exfoliation treatment function

The exfoliation treatment function using the exfoliation attachment is ideally suited for gentle exfoliation to remove dead or dry skin cells. Do not carry out treatment more often than 2x a week. Always carry out the exfoliation treatment in the shower or bath. To start exfoliating, proceed as follows:

1. Ensure that the exfoliation attachment is attached to the body brush.
2. Moisten the exfoliation attachment.
3. Moisten your skin.
4. Apply a shower gel or cleansing lotion directly onto the bristles of the exfoliation attachment.
5. To switch on the body brush, press the ON/OFF/speed button. The exfoliation attachment starts to rotate. We recommend that you start by using the slow speed setting. To choose the fast speed setting, press the ON/OFF/speed button again.
6. Gently move the body brush in circular motions over your skin. Start with your feet and work upwards from there in the direction of your legs, buttocks, stomach, back, chest, arms and hands. Do NOT use the body brush on the face or pubic area. If you have problems reaching your back with the body brush, use the additional handle. If the treatment is unpleasant, stop using the device or reduce the speed setting.

 To ensure comfortable treatment, do not press the rotating brush attachment too firmly on to the skin. Treat each section of skin for a maximum of 20 seconds.

7. To end the exfoliation treatment function, press the ON/OFF/speed button again. The body brush switches itself off.
8. Cleanse your skin thoroughly with water to remove any residue from your skin.
9. Pat your skin dry with a towel and then apply a moisturising cream using even, circular movements.
10. Clean the attachment thoroughly with water after each use.

8. CLEANING AND MAINTENANCE

Cleaning the attachments

IMPORTANT

Before beginning cleaning, pull the attachment off the body brush.

- Clean the attachment thoroughly with water after each use.

Cleaning the body brush

- Clean the body brush using only the methods specified.
- Clean the body brush after use with a soft, slightly damp cloth. If it is very dirty, you can also moisten the cloth with a mild soapy solution. Do not use any abrasive cleaning products.

- Protect the body brush from knocks, moisture, dust, chemicals, drastic changes in temperature and nearby sources of heat (ovens, heaters).

Replacing attachments

- In order to ensure optimum cleansing of your skin, we recommend that you replace the attachments after 4 months of use.

9. DISPOSAL

The empty, completely flat batteries must be disposed of using specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries. Remove the battery from the body brush by removing the covers from the 5 screws and loosening the screws.

The codes below are printed on batteries containing harmful substances:

Pb = Battery contains lead

Cd = Battery contains cadmium

Hg = Battery contains mercury



For environmental reasons, do not dispose of the device in the household waste at the end of its service life.

Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).

If you have any questions, please contact the local authorities responsible for waste disposal.

The device battery must be disposed of separately. The battery must not be disposed of with domestic waste.

For information on disposal, please contact the authorised seller or the public authority responsible for waste disposal.

10. ACCESSORIES AND REPLACEMENT PARTS

Available commercially or from the relevant service address (as specified in the service address list).

Brush type	Replace	Item number and/or order number
Cleansing attachment	After 4 months	605.14
Exfoliation attachment	After 4 months	605.15

11. WHAT IF THERE ARE PROBLEMS?

Problem	Solution
The device does not charge.	Ensure that the mains adapter is connected to a functioning socket. If you have connected everything correctly and the device still fails to charge, contact Customer Services.
The device will not switch on.	Charge the device as described in these instructions for use. If it is still not possible to switch on the device, contact Customer Services.
The device does not cleanse as well as it did to begin with.	The attachment's bristles are worn. Replace the attachment. If you do not have any replacement attachments, they can be reordered (see "11. Replacement parts and wearing parts").

If you cannot find a solution to your problem here, contact our Customer Services.

12. TECHNICAL DATA

Supply Input: Output:	100–240 V~; 50/60 Hz; 0.2 A 5.0 V — 0.5 A; 2.5 W
Average active efficiency:	≥ 73.16 %
No-load power consumption:	≤ 0.1 W
Dimensions	Device with attachment: 7.2 x 10 x 10 cm Handle: 39 x 9.7 x 3.9 cm
Weight	Device with attachment: approx. 270 g Handle: approx. 140 g
Battery: Capacity Nominal voltage Type designation	800 mAh 3.7 V Lithium-ion

13. WARRANTY/SERVICE

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



Beurer UK Ltd., Suite 16, Stonecross Place, Yew Tree Way, WA3 2SH Golborne, United Kingdom



Beurer GmbH • Söflinger Straße 218 • 89077 Ulm, Germany • www.beurer.com
www.beurer-gesundheitsratgeber.com • www.beurer-healthguide.com

