



Assembly Instructions & User's Manual


Member's Mark 12Ft Pre-Lit Multicolor Lightshow Tree

Item Number: 990500773/990500774

Model Number: 67-560SM

For Inquiries, Spare parts, or Replacementparts

- Sam's Club Customer Assistance: 1-888-746-7726
- Supplier Customer Assistance: 1-800-833-3390

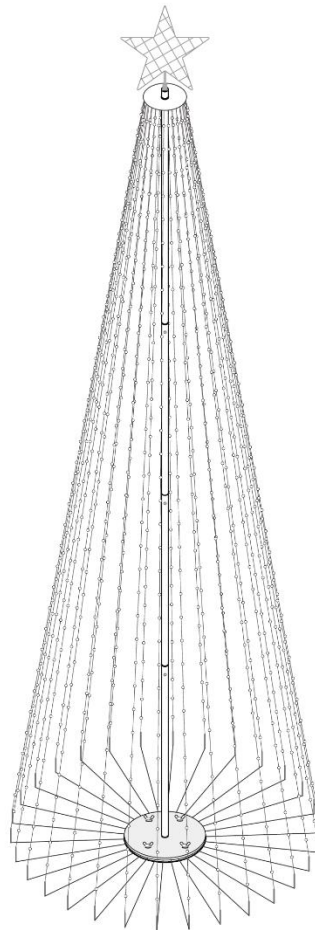



**THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**



Assembly Instructions & User's Manual

Table of Contents

Quality Statement.....	3
Important Safety Information	3
Before Assembly	3
Care & Use	4
Product Information	4
Tools.....	6
Step 1 – Step 5	6
 Warning.....	13
 Danger	14
Troubleshooting.....	14
Care & Use Instructions	14
Installation	15
Storage Instructions.....	15
Technical Data	16
Limited Warranty	16



Assembly Instructions & User's Manual

Quality Statement

Questions or Comments? We would love to hear about your Member's Mark experience!
Visit us at: samsclub.com

Important Safety Information

- Please read all instructions carefully before assembling this product.
- Where applicable, and for your safety, assembly by an adult is strongly recommended.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.
- Hardware may loosen overtime. Periodically check that all connections are tight.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar source of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is not a toy. This is an electric product. For decorative use only. To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.
- **SAVE THESE INSTRUCTIONS**

Before Assembly

- Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.
- The shipping box can provide an ideal work surface if none is available.
- Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.
- To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.



Assembly Instructions & User's Manual

- **DO NOT USE** power tools unless explicitly identified in this manual as required for use during assembly. Power tools can damage fasteners, hardware, and/or components.
- Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly.

Care & Use

- Use a soft, clean cloth that will not scratch the surface when cleaning.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store in a cool, dry location protected from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.



Product Information

Product Dimensions - Height: 12' ; Diameter: 60"



Assembly Instructions & User's Manual

Part	Description	Quantity
A	Base with 30 folding frame arms	1
B	30 Light Strings with Control Box	1
C	Power Adapter with White Wire Tie	1
D1	Middle Section Pole	3
D2	Top Section Pole	1
E	Star Tree Topper	1
F	Remote Control and (2)AAA Batteries	1
G	Wing Nuts	5
H	Button Head Socket Screw	4
I	Base Stand Plate Cover	1
J	Top Section Harness Disk	1
K	Ground Stakes	10
L	10 spare Springs and Plastic Ties	1

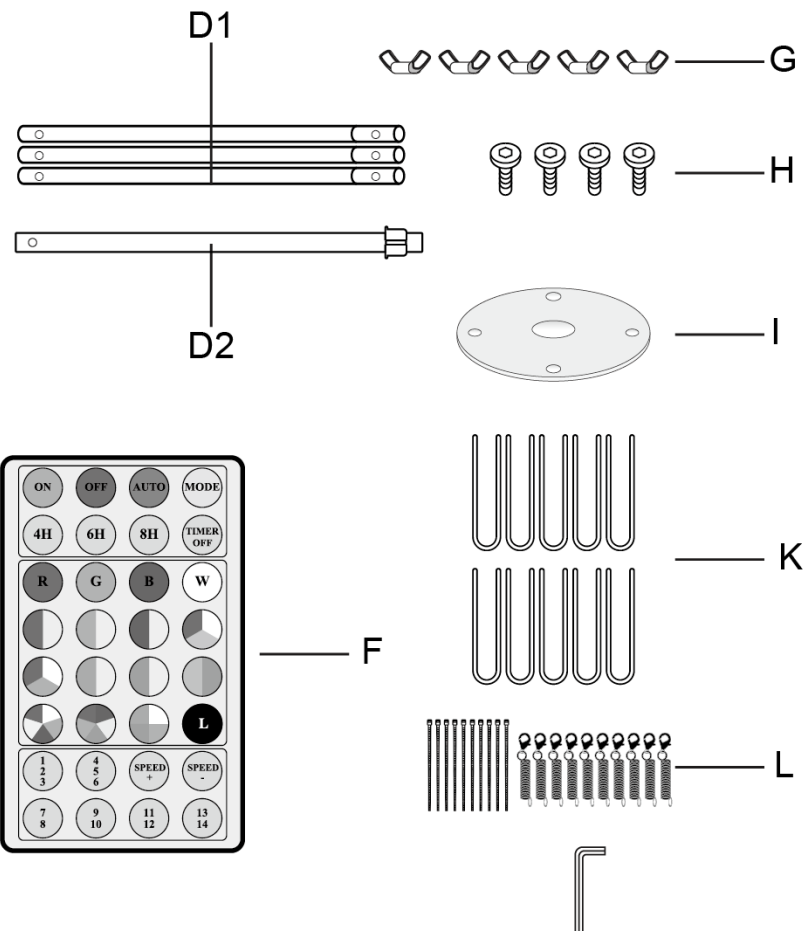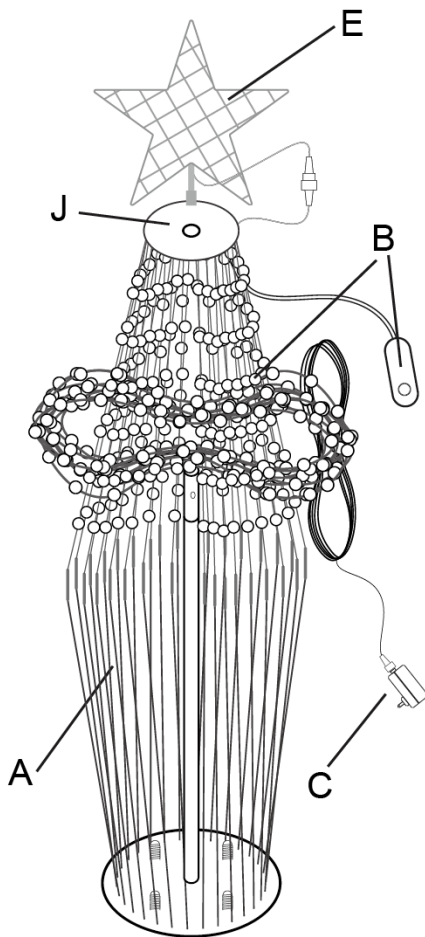





Assembly Instructions & User's Manual

Tools

Hex wrench (Included)
Qty: 1

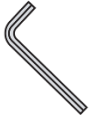

Step 1 – Step 5

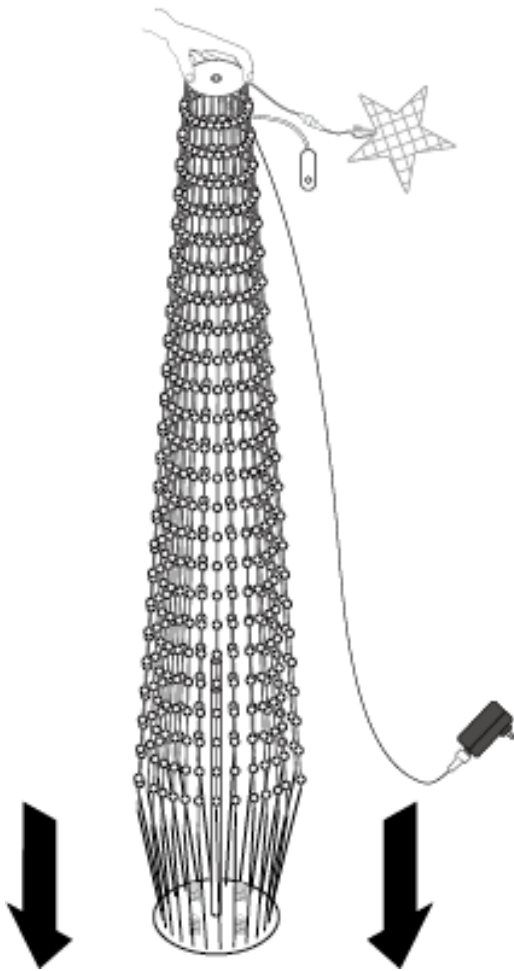


Step 1:


- Select a suitable location for the tree sculpture. Using a tape measure, the area should be flat and able to support a 12 ft. high by 5 ft. diameter tree. **IMPORTANT:** Ensure there are no overhead power lines within a 12-foot radius of the surrounding area to prevent any potential hazards.
- Carefully unwrap all parts from packaging.
- Untie the twisted ties on the 30 Light Strings (B).
- Grasp the wire Harness Disk (J) and lift.
- Unfold the 30 folding frame arms of Base (A).



Assembly Instructions & User's Manual

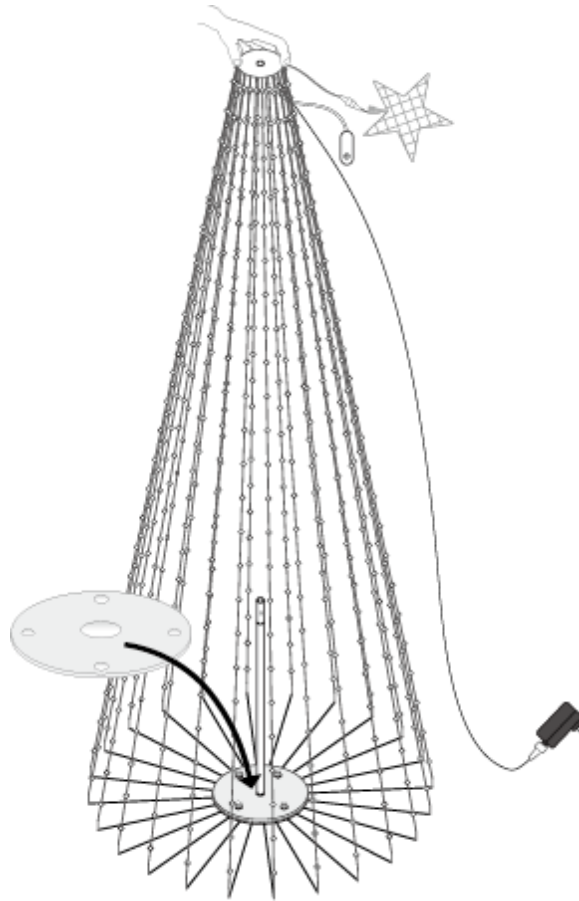


Step 2: Insert the Base Stand Plate Cover (I) onto bottom rod of Base (A) as shown (Do not install hardware at this step).

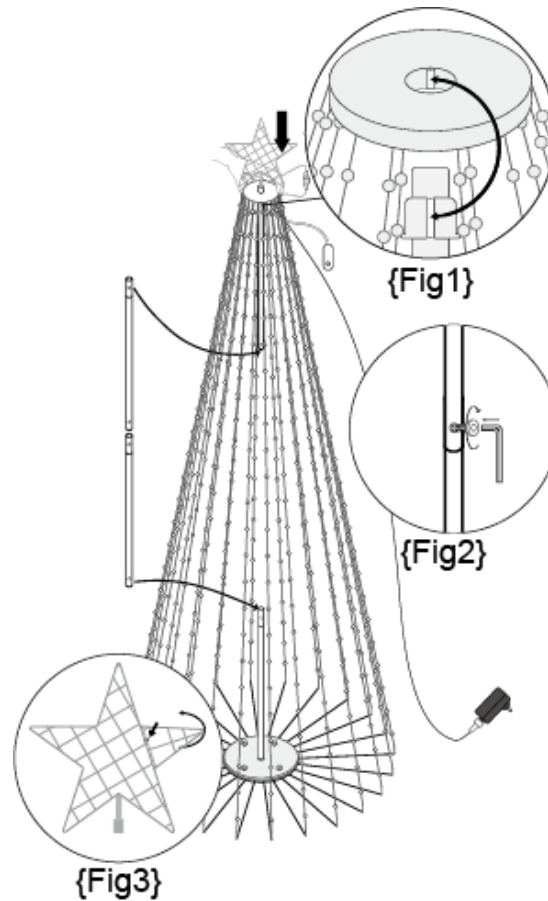

Step3:

- Insert the Top Section Pole (D-2) into the Harness Disk (J). Align the matching marks on the pole and the harness disk before fully seating the pole (see {Fig1}).
- Connect the three Middle Section Poles (D-1) together. Attach the top end of Middle Pole assembly into the bottom of the Top Pole (D-2), then attach the bottom end of Middle Pole assembly onto the bottom pole of Base (A).
- Secure the pole sections together using the Button Head Socket Screw (H)(see {Fig2}).
- Unfold and lock the star frame of Star Topper (E) (see {Fig3}), then attach it to the top of Top Pole (D2).


Assembly Instructions & User's Manual

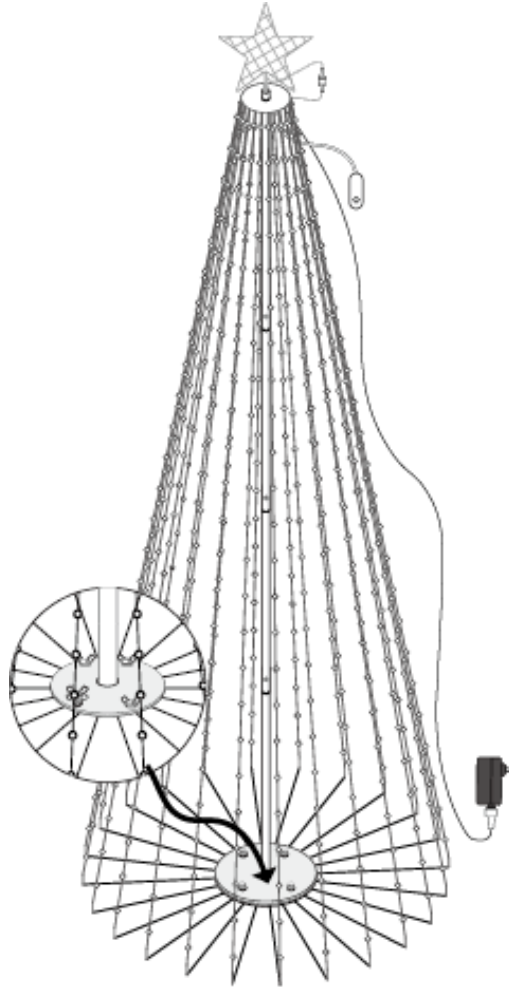

Step 4:

- Align the four holes on the Base Stand Plate Cover (I) with the bolts on the Tree Base (A), then press down on the plate cover and secure it using the four Wing Nuts (G).

Assembly Instructions & User's Manual

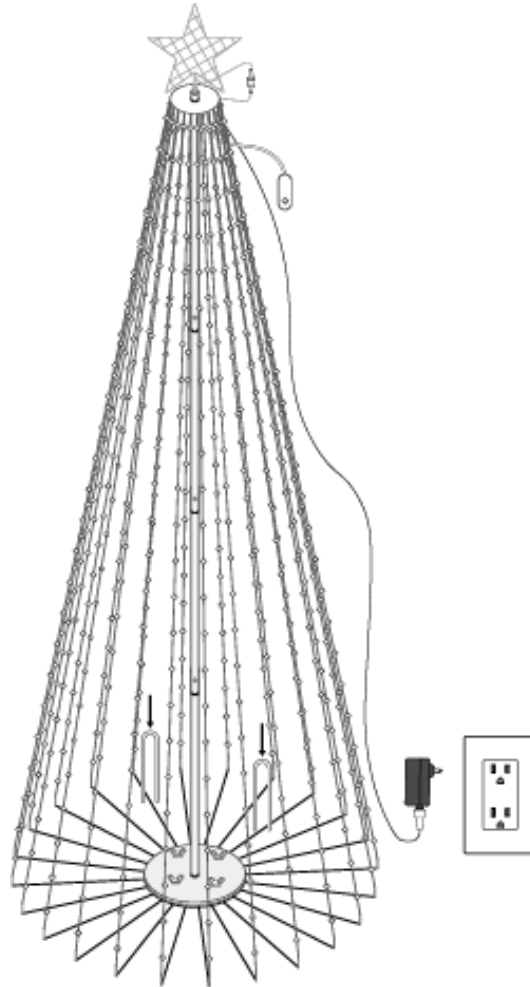

Step 5:


- Use the Ground Stakes (K) to secure the base frame arms to the ground.
- Plug the Power Adapter (C) into a GFCI outlet.

Note:

To ensure the best appearance of tree string lights, use spare springs to replace any worn out springs (L).



Assembly Instructions & User's Manual

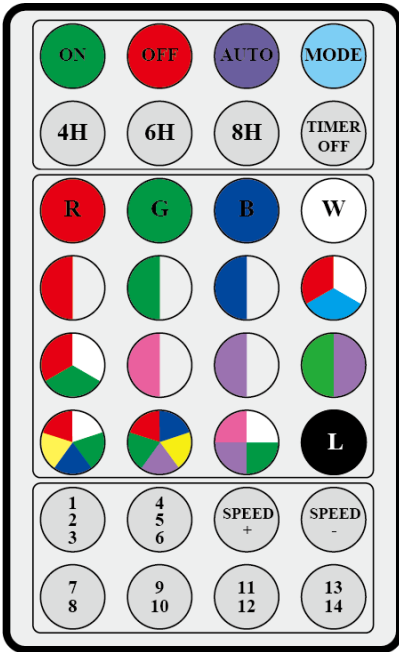

Remote Control Use

1. This remote control adopts Radio Frequency (RF) technology for operation. INDOOR USE ONLY.
2. Timer settings are not affected by switching functions; press "TIMER OFF" to cancel the timer at any time.
3. All color and dynamic effects are pre-programmed; press "AUTO" to activate automatic circulation of all functions (Cycles through Functions 1-14 + 5 text functions).

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible


for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Assembly Instructions & User's Manual

Remote Controller Introduction

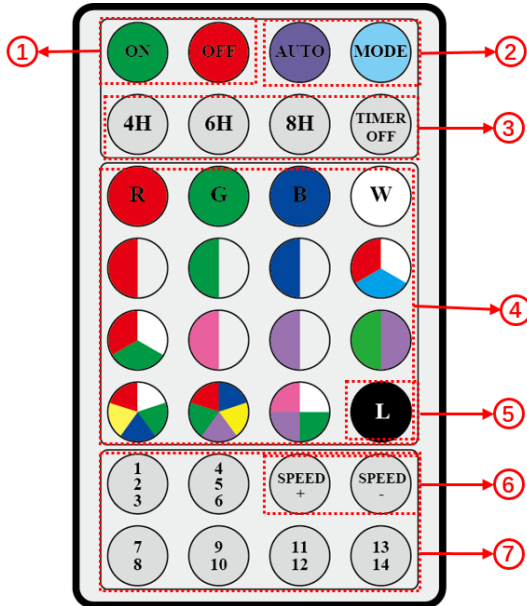


1. Power On / Off
2. AUTO & MODE Switch
 - AUTO – cycles through dynamic modes automatically
 - MODE – Press to change to next Dynamic Mode
3. Timer Settings:
 - 4H – 4 Hours On, 20 Hours Off
 - 6H – 6 Hours On, 18 Hours Off
 - 8H – 8 Hours On, 16 Hours Off
 - TIMER OFF – Turn off timer
4. Select Static Colors
5. Select Text Modes (5 built-in Dynamic Text effects)
 - Merry Christmas
 - Happy Holidays
 - Let it Snow
 - Merry & Bright
 - Feliz Navidad
6. Adjust Speed of Dynamic Modes (5-Speed Settings)
7. Select Dynamic Modes
 - **Dynamic Modes 1-3**
 - 1. Gradient Color Changing
 - 2. Sequential Transformation
 - 3. Multicolor chasing
 - **Dynamic Modes 4-6**
 - 4. Blue base sequential chasing
 - 5. Sequential stacking
 - 6. Blue base spiral
 - **Dynamic Modes 7-8**
 - 7. Color Changing Spiral
 - 8. Red/Green/white spiral
 - **Dynamic Modes 9-10**
 - 9. White base spiral
 - 10. Multicolor Twinkling
 - **Dynamic Modes 11-12**
 - 11. Multicolor cascading
 - 12. Blue/white twinkling
 - **Dynamic Modes 13-14**
 - 13. Red/White spiral
 - 14. Teal/warm white spiral



Assembly Instructions & User's Manual

Warning

- 1. Please note that changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 2. This is not a toy. This is an electric product. For decorative use only. To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- 3. Small parts, keep batteries out of reach of children.
- 4. Use only 2 pcs of AAA batteries for remote controller.
- 5. Do not dispose of the battery in fire as the battery may leak and explode.
- 6. Do not expose the remote controller to moisture.
- 7. Batteries must be recycled or disposed of properly. Replace only with 2 pcs of AAA batteries. Dispose of as per the requirements of your local municipality.
- 8.. The controller and remote controller (if included) can only be used with this product.
- 9. If the supply cord or wires are damaged, the product should be discarded.
- 10. Risk of Electric Shock. When used outdoors, install only to a covered Class-A GFCI protected receptacle that is waterproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
- 11. Risk of Fire. Installation involves special wiring methods to run wiring through a building structure, consult a qualified electrician.
- 12. When used outdoors, install only to a Class-A GFCI protected receptacle where the transformer is protected from water or rain while plugged in (completely covered by the outlet box while plugged in. Do not use where only part of the transformer is protected from rain or water (outlet boxes where there is only a partial cover shall not be used for outdoor installations). This power unit is intended to be correctly oriented in a vertical or floor mount position.

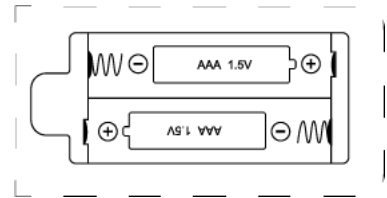



Assembly Instructions & User's Manual

! Danger

- 1. Always unplug your tree from its power source before assembling or disassembling.
- 2. The Product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
- 3. For the replacement, please directly contact our customer service.
- 4. Use only the size and type of battery specified.
- 5. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reverse battery may cause damage to the device.
- 6. If the battery in the device is consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
- 7. Do not try to recharge the battery as it is not intended to be recharged, it can overheat and rupture. (follow the battery manufacturer's instructions)
- 8. The batteries should not be exposed to excessive heat such as sunshine or fire.
- 9. Clean the battery contacts and those of the device prior to battery installation.

Troubleshooting

Ensure the product is disconnected from the power source before attempting to service.

If Tree does not illuminate properly

1. Ensure that all tree sections are properly connected into each other, and the cord is plugged firmly into the wall outlet. (if the tree comes with a foot pedal, try stepping on the On/Off button).
2. Check for loose connection between light string plugs and extension cord.

Care & Use Instructions



Assembly Instructions & User's Manual

NOTE: Use only adapter model: JT-DC300V1600-G3. Do not use this adapter with any other product.

NOTE: LEDs in this set are non-replaceable. Tampering with this set will void the warranty.

Installation

1. This product can be installed in either indoor or outdoor locations, but avoid splashing water from falling onto, or reaching the transformer.

2. General information -

2.1 Damage may occur to this product if used in extreme temperatures.

2.2 Do not change the wiring on the end product.

2.3 Please use correct voltage for your product by checking the nameplate information on the transformer.

3. After finishing the installation, please plug into a 120V AC/60Hz electrical outlet.

CAUTION: This lighting string is rated 99.6 Watts (0.83Amps), do not overload.

Storage Instructions

1. Unplug adapter/Power cord from wall outlet first.

2. Disassemble the tree from the top to the bottom. Start with tree top and gently lift straight up to remove from section below, reversing assembly procedure.

3. Continue by gently re-grouping light strings in groups of five (5) using wire ties and place them back inside the long clear plastic bag in which it was originally packed. Simply reverse steps during assembly process for easier assembly next holiday season.

4. Carefully place all tree section into the original packing box.

5. When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.



Assembly Instructions & User's Manual

Technical Data

Rated Voltage: 120 V ~ 60 Hz

Rated Power Input: 48 W

Rated Current: 30VDC 1.6 A

Limited Warranty

This product is covered by the Sam's Club Member Satisfaction Guarantee.

Please visit samsclub.com for more information.

NOTE: Please consider recycling all applicable packaging material.

Distributed by Sam's West Inc.
2101 SE Simple Savings Dr.
Bentonville, Arkansas 72716-0745
Made in China