

✓ **INSTALLATION CHECKOFF LIST**

**Doors**

- ☐ Handles are secure and tight
- ☐ Door seals completely to cabinet on all sides
- ☐ Freezer door is level across the top

**Leveling**

- ☐ Refrigerator is level, side to side and tilted 1/4" (6mm) front to back
- ☐ Toe grille is properly attached to refrigerator
- ☐ Cabinet is setting solid on all corners

**Electrical Power**

- ☐ House power turned on
- ☐ Refrigerator plugged in

**Ice Maker**

- ☐ House water supply connected to refrigerator
- ☐ No water leaks present at all connections - recheck in 24 hours
- ☐ Ice Maker is turned ON.

**Final Checks**

- ☐ Shipping material removed
- ☐ Fresh Food and Freezer controls set
- ☐ Crisper Humidity controls set
- ☐ Registration Card sent in

 
Refer to your *Owner's Use and Care Manual* for additional information about your refrigerator.

**5 LEVELING AND ADJUSTING**


All four corners of your refrigerator must rest firmly on a solid floor. Your refrigerator is equipped with adjustable front rollers or front leveling screws to help level your unit.

**To level cabinet or change door height:**


1. Remove toe grille.
2. Use flat-blade screwdriver or 3/8" socket wrench to adjust front rollers. Use adjustable wrench to adjust leveling screws.

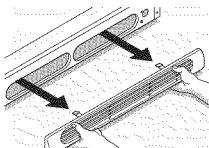

Toe Grille

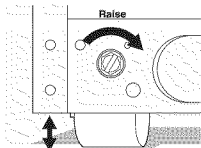 

Adjustable Front Roller  
(some models)

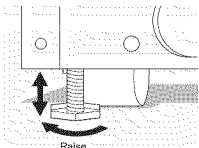 


Stationary Front Roller  
with Leveling Screw  
(some models)


**NOTE**

 Raise the front of the refrigerator enough so the doors close freely when opened halfway. The refrigerator should slope 1/4" to 1/2" from front to back. Then level the refrigerator from side to side.

**Tools Necessary:**

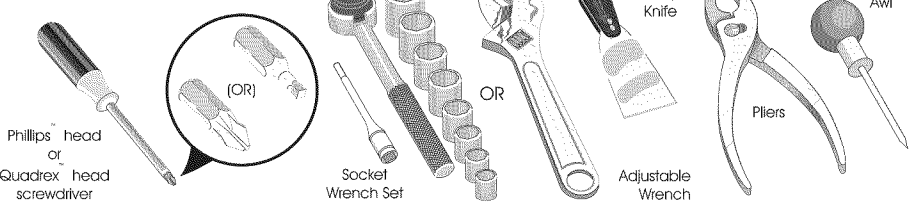

**1**

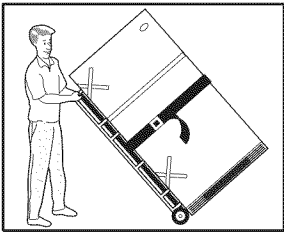 


**HAND TRUCKING**

- Load refrigerator from side of cabinet only.
- Do not run retaining straps over handles.
- Do not over-tighten retaining straps.
- Never use refrigerator handles to move the refrigerator.
- Remove tape from doors only after unit is in place.

**2**

 
**SHIPPING MATERIAL**

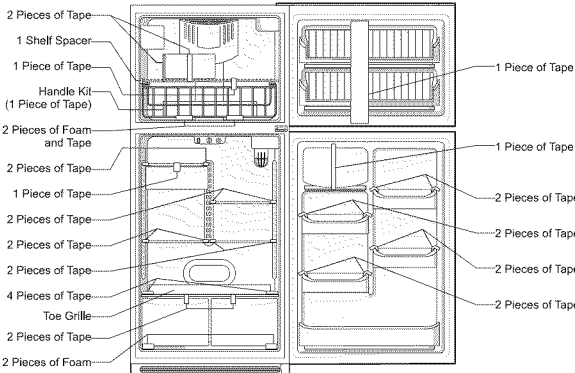

Remove Shipping material. (Features may vary per model.)


**3**

 **WATER SUPPLY**

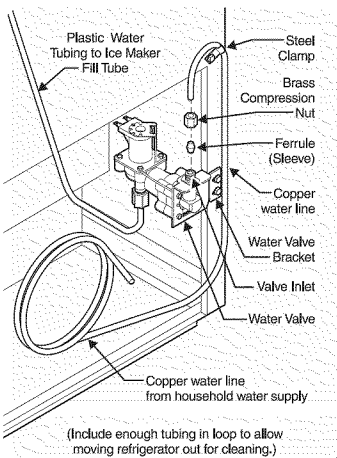

Connect water supply - check for water leaks. **Turn icemaker OFF if water supply is not connected immediately. Connecting to a reverse osmosis system is not recommended.**

 The water valve on the back of the refrigerator will Click/Buzz if the water valve is closed.

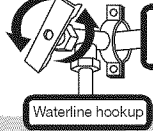

Be certain the water valve is open and there are no leaks.

**4**

**INSTALLATION CLEARANCES**

 
Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections:

- Sides & Top.....3/8"
- Back.....1"

**NOTE**


If you are installing your refrigerator beside a wall, leave 1/2" minimum between hinges and wall to allow for the door to swing open.

**6**

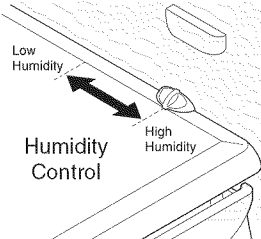


**CONTROLS**

 When changing controls, wait 24 hours before making additional adjustments.

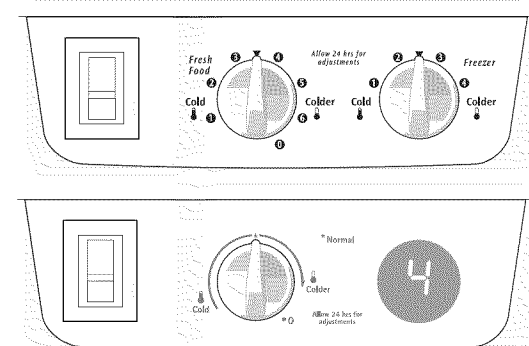


 (For models with LED display, 3 to 5 is normal operating range.)

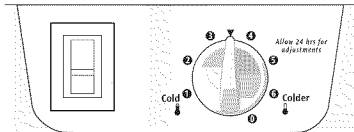

**8**

 
**DOOR REMOVAL  
(IF NECESSARY)**

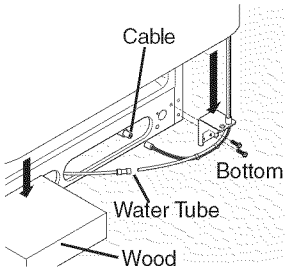



**7**

**ICEMAKER**

 Ensure icemaker is turned ON.

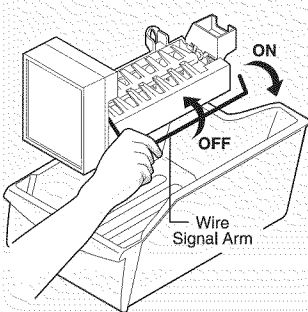

  If you need to remove the doors to get your refrigerator into the house please see "Door Removal and Reversal Instructions" in your *Use & Care Manual*.

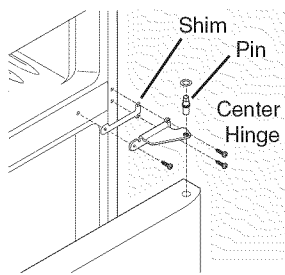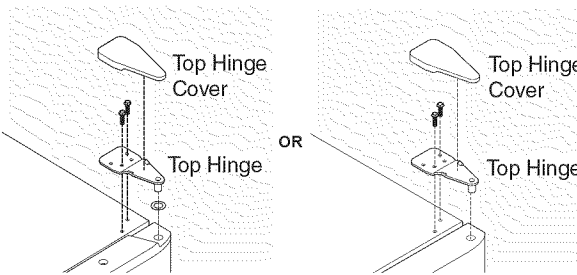

**9**

- ✓ See "Normal Operating Sights & Sounds" in the *Use & Care Manual* so you understand the sounds you may hear once your refrigerator is running.
- ✓ Please read entire *Use & Care Manual* to become aware of important safety instructions and to become familiar with your new refrigerator.
- ✓ Send in Registration card to register your refrigerator.
- ✓ Congratulations! You are ready to enjoy your new refrigerator.

**IF YOU ARE DISSATISFIED WITH THE  
INSTALLATION, PLEASE CALL THE STORE  
YOU PURCHASED IT FROM.**



