



# USER MANUAL

## Dryer

AHPD8800W  
AHPD8800GB

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.  
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

# CONTENTS

|                                 |           |
|---------------------------------|-----------|
| <b>SAFETY INSTRUCTIONS</b>      | <b>02</b> |
| <b>SPECIFICATIONS</b>           | <b>09</b> |
| <b>PRODUCT OVERVIEW</b>         | <b>10</b> |
| <b>QUICK START GUIDE</b>        | <b>11</b> |
| <b>PRODUCT INSTALLATION</b>     | <b>13</b> |
| <b>OPERATION INSTRUCTIONS</b>   | <b>16</b> |
| <b>CLEANING AND MAINTENANCE</b> | <b>25</b> |
| <b>TROUBLE SHOOTING</b>         | <b>27</b> |
| <b>DISPOSAL AND RECYCLING</b>   | <b>29</b> |



Read all instructions and explanations before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on then ensure that the new owner always receives these operation instructions.

# SAFETY INSTRUCTIONS

Please read the user manual carefully before using the appliance. It provides important information on safety, installation, operation and maintenance. This will protect you and prevent damage to the appliance. An improper usage can cause personal injuries and damage to properties. Failing to follow these instructions shall void any warranty.

Keep the user manual for future reference. If the appliance is sold or passed on, make sure that the new owner always receives these safety instructions.

## Intended Use

- This appliance is intended to be used in domestic household and similar household installation environments.
- This appliance is intended to dry textiles in household amounts suitable for domestic appliances, which have been washed with water and which are marked on the manufacturer's care label as being suitable for tumble drying.
- This appliance is intended for indoor usage only, not intended for outdoor, built in or commercial usage or shared use, i.e. by several families in an apartment building.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

## NOTE

All other types of usage are not permitted. Manufacturer is not liable for damage caused by improper usage or incorrect operation.

## Safety with children

- Children under 3 years shall be kept away from the appliance or continuously supervised.
- Children should be supervised that they do not play with the appliance.
- Children from the age of 8 can use the appliance safely after they have been given appropriate supervision or instruction concerning use of appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- Children as well as pets may climb onto or into the appliance. Always close the door after use.
- Children may hide things in the appliance. Check the appliance before every operation.
- Surfaces of appliance may become very hot during operation. Keep children and pets far away from the appliance while it is operating.

## Explanation of Symbols



### DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### WARNING OF ELECTRICAL VOLTAGE

This symbol indicates that there is a danger to life and health of persons due to voltage.



### WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### NOTE

The signal word indicates important information (e.g. damage to property), but not danger.



### OBSERVE INSTRUCTIONS

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

## Refrigerant Safety

### ⚠ WARNING

- In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.



The appliance contains an environmentally friendly but flammable R290 refrigerant. Keep away from open flame and other sources of ignition.



 Risk of fire and explosion due to damage to the tumble dryer.

Refrigerant R290 (propane) is a flammable and explosive gas if it leaks in the event of damage.

Take measures to protect the tumble dryer against damage. Do not make any alterations to the tumble dryer.

## Installation Location and Surrounding

- The appliance must be installed in a clean place, where dirt, dust or fluffs do not accumulate. Air must be able to circulate freely around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the appliance.
- Do not install the appliance on a carpet floor. Because an obstruction of the openings by a carpet can damage the appliance.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not operate the appliance in rooms with a temperature of below 2°C. This can cause damages by frost to components, like hoses, which may burst or split. If it is unavoidable, make sure to pour out the condensate water completely after every use. (see "Cleaning and Maintenance")
- Do not use the appliance in humid and drenching environments or rooms containing explosive or caustic gas.
- Never use flammable sprays or substances in the immediate proximity of the appliance.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of door is restricted.
- Do not stack this dryer on washing machine without stacking kits. If you want to stack this dryer on a washing machine, please purchase the independent parts. Installation shall be done by the manufacturer, its service agent or similarly qualified persons to avoid any hazards.
- Must not be installed in a non-stationary location like on a ship.
- Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.

## WARNING

- Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance. Risk of Fire!

## Installation

- Pay attention to the chapter “Product Installation”.
- Remove all packaging material before operating the appliance. Otherwise, serious damage may result.
- Before setting up the appliance, check it for any externally visible damage.
- Do not install or use a damaged appliance.
- Do not disassemble or install the dryer without any instruction or supervision.
- Lint must not be allowed to accumulate around the tumble dryer.
- After installation, leave the appliance to stand for 2 hours.
- Before drying laundry for the first time, the appliance shall be operated once a machine cleaning program. (see “Operation Instructions”)

## Electrical Connection

- The appliance corresponds to protection class I and may only be connected to mains plug with a protective conductor protected by a fuse complying with the data in the “Technical specifications” table or by the rating plate (fuse rating, voltage and frequency).
- If needed, the grounding installation has to be made by a qualified electrician. Ensure that the appliance is installed in accordance with the local regulations.
- Don't use multiple plugs, extension cords or similar. Risk of overheating!
- The electrical socket must be easily accessible after installation so that the appliance can be disconnected from the electricity supply if needed.
- Always pull at the plug, not at the cable.
- Do not bend, clamp or damage the power cord and the power plug.
- Make sure the power cord is not trapped by the appliance, or it can get damaged.
- Always unplug the appliance if it is not being used.
- Do not pull the plug out of the mains outlet if there is flammable gas around. Risk of explosion!
- If the appliance appears high temperature abnormally, please unplug the mains plug immediately. Call the Customer Service!

## **WARNING : Electric shock hazard**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- If the appliance is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons. Never try to repair an appliance which is defective or presumed to be defective.
- Never pour water over the appliance for cleaning purpose.
- Do not make any technical alterations to the appliance.
- Do not climb or sit on the appliance.
- Never pull out power plug with wet hands.

## **Operation**

- Pay attention to the maximum load quantity of this appliance and the reduced load quantity of the single programs. The load quantity is expressed in kilogram dry laundry. (see "Program Description")
- Do not dry unwashed and uncleaned items in the tumble dryer.
- Do not dry laundry before being spun in a washing machine or spin extractor.
- Items that have been soiled with substances such as vegetables or cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, hair care products, nail varnish remover, wax and wax removers should be washed manually in hot water with an extra amount of detergent before being dried in the appliance. Risk of Fire! Risk of Explosion!
- Fabric softener or similar products should be used as recommended in the instructions by manufacture. Risk of Fire!
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to appliance components, which can therefore cause damage to the laundry.
- Take care to remove lighters and matches before drying the laundry.

- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance. Risk of Fire!
- Do not dry any textiles that contain padding or fillings that are damaged (e.g. pillows, jackets). The filling may fall out and cause a fire hazard. Risk of Fire!
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the laundry is properly inserted and distributed.
- Do not operate the dryer without the door lint filter and without the water container.
- Take care when opening the door after using the steam function. Take a step back and wait until the steam has evaporated. Risk of scalding! (Suitable for the dryer with steam function)
- Do not lean on the opened door of the appliances.
- Condensed water is not drinking water. It can cause health problems in both people and animals if consumed.
- If it is unavoidable that fabrics containing vegetable or cooking oil or which have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent (this will reduce, but not eliminate, the hazard).

## **WARNING**

- Never stop a tumble dryer before the end of the drying program unless all items are quickly removed and spread out so that the heat is dissipated.

## **Maintenance**

- Pay attention to the chapter “Cleaning and Maintenance”. Always unplug the appliance before cleaning and maintenance and after each use.
- The lint filters have to be cleaned and the water container have to emptied after each drying program.
- Clean the appliance with a damp rag moistened with clean water and do not spray it directly with water.
- Never use any industrial chemicals as cleaning solvents, which are flammable, explosive or toxic. Do not use gasoline and alcohol for cleaning the appliance. Only select cleaning solvents, that are suitable for machine cleaning. Risk of fire and explosion!
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning. Risk of fire and explosion!

- Fill steam generators only with liquids specified by the manufacturer. (Suitable for the dryer with steam function)
- Do not touch the heat exchanger with your hand, which may cause an injury. Please wear gloves when cleaning. (Suitable for the dryer with access to the heat exchanger)
- The appliance should not be overturned during normal use or maintenance.



## OBSERVE INSTRUCTIONS

- For repairs it is recommended to consult a qualified repair service (e.g., a professional repairer, certified dealer or an authorized customer service center) in order to avoid a hazard. Manufacturer will not be responsible for damages caused by the intervention of not authorized persons. Failing to follow these instructions shall void any warranty.

## Transport

Before transporting the appliance prepare it to following instructions:


- Disconnect the appliance from the power supply and pull the mains plug out of the socket.
- Remove the external drain hose from the house installations (see “Product Installation”)
- Empty the water container of the appliance. (see “Cleaning and Maintenance”)
- Check if the door and the water container are closed properly.
- This appliance is heavy. Never transport or carry the appliance alone, always with the assistance of another person.
- Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.
- Transport with care. If the dryer can't be transported erectly, the dryer can be tilted to right less than 30°.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Before reinstallation of appliances check it for any externally visible damage.
- After transportation, leave the appliance to stand for 2 hours.



## CAUTION

- Incorrect transportation can cause personal injuries and damage to properties. Ensure that the appliance is properly secured during transportation.
- When lifting the machine, there is a risk of cuts in the lower area. Protective gloves must be worn.

# SPECIFICATIONS

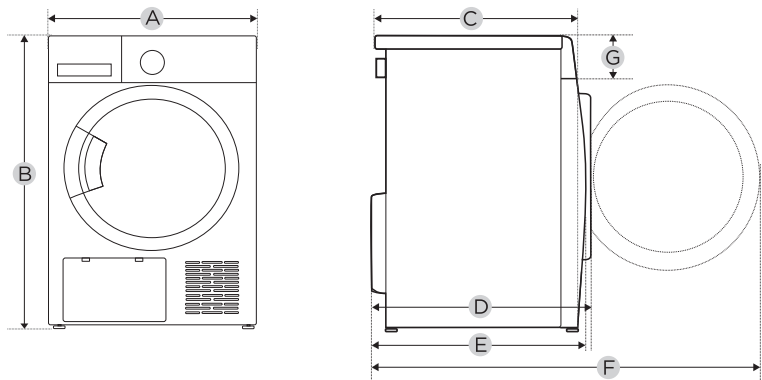


|                         |                         |
|-------------------------|-------------------------|
| Model                   | AHPD8800W<br>AHPD8800GB |
| Rated capacity          | 8.0kg dry load          |
| Rated input power       | 650W                    |
| Power Supply            | 220-240V~,50Hz          |
| Weight                  | 43kg                    |
| Refrigerant             | R290                    |
| Quantity of refrigerant | 90g                     |
| GWP                     | 3                       |
| CO <sub>2</sub> e       | 0.00t                   |
| Ambient temperature     | +2°C ~ +35°C            |
| Dimension               |                         |
| A                       | 595mm                   |
| B                       | 850mm                   |
| C                       | 524mm                   |
| D                       | 600mm                   |
| E                       | 550mm                   |
| F                       | 1040mm                  |
| G                       | 135mm                   |

## NOTE

- The rated capacity is the maximum load quantity in kg dry weight that can be dried at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.

# PRODUCT OVERVIEW

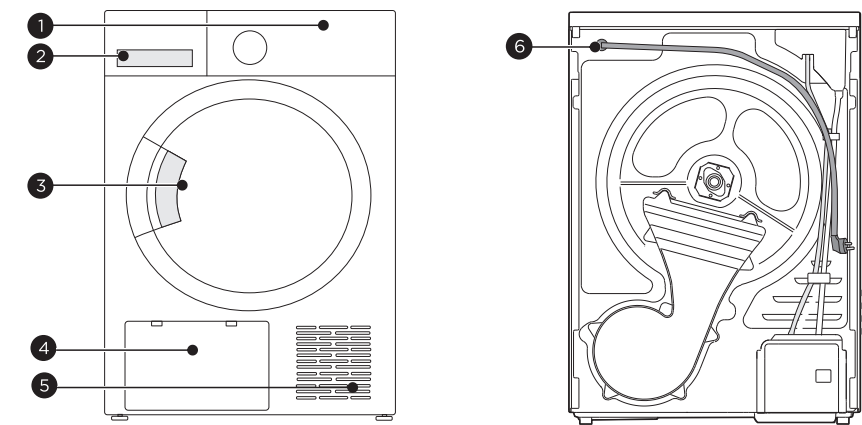

|   |                 |
|---|-----------------|
| 1 | Control panel   |
| 2 | Water container |
| 3 | Door            |


|   |                   |
|---|-------------------|
| 4 | Maintenance cover |
| 5 | Air inlet         |
| 6 | Power cord        |

## NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.

## Accessories

- The following parts are optional for specific models.
- If your dryer has following parts, please wear gloves to install them as per the instruction below .

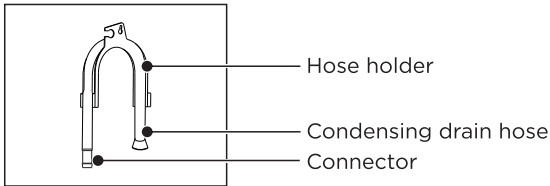

# QUICK START GUIDE




## CAUTION


- Before operation, please make sure the machine is installed properly. See chapter "Product Installation".

## 1. Before drying


1. Insert the mains plug

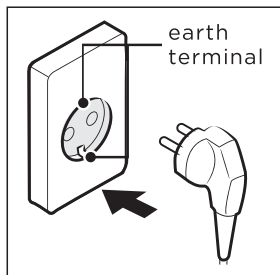

2. Load the laundry

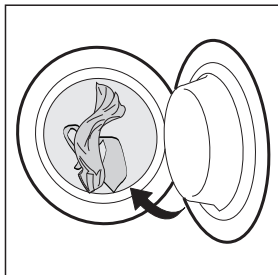


3. Close the door

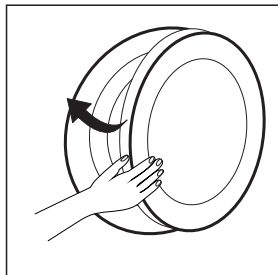


## 2. Drying


1. Power on

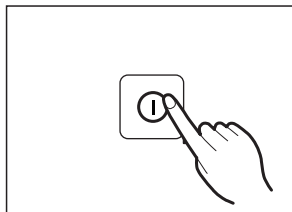


2. Select program

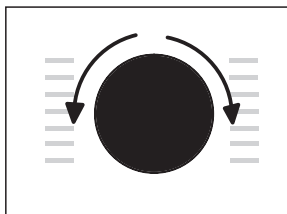

3. Select options or remain default settings

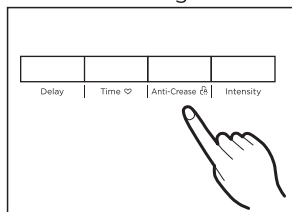

4. Press Start/Pause to start the program

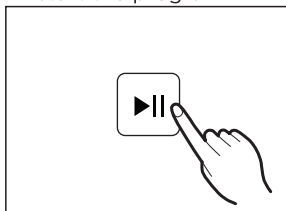


## NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.


### 3. After Drying

A acoustic signal is given and “End” will be displayed.


1. Open the door and take out laundry

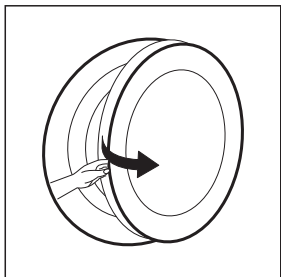


2. Pull out the water container

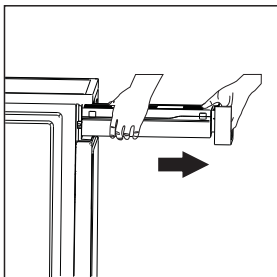


3. Pour out condensation water

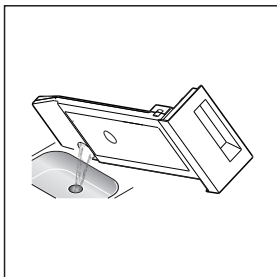

4. Clean the lint filter

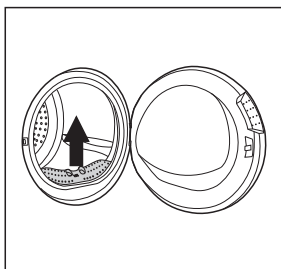

5. Unplug the mains plug

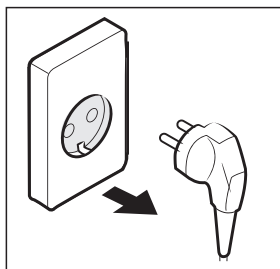

### NOTE

- If the socket with a switch is used, please press the switch to turn off the power directly.

# PRODUCT INSTALLATION




## Installation Area

### ⚠ WARNING

Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, firm and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 2 °C .
5. Keep far away from the heat sources such as coal or gas burning appliances.
6. Place the product with its back surface to the wall (for heater models).

It is recommended that, for your convenience, the machine is positioned close to your washing machine.  
To keep vibration and noise within minimum level when the dryer is in use, it must be placed on a firm and level surface.

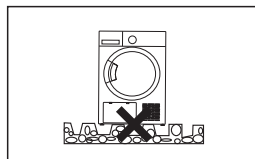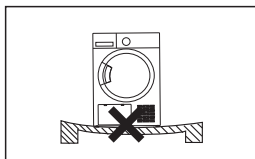
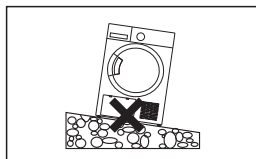


### 💡 NOTE

- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.

## Unpacking the Tumble Dryer

1. Remove the cardboard box and styrofoam packing.
2. Lift the appliance and remove the base packaging.
3. Remove the tape securing of the power supply cord.

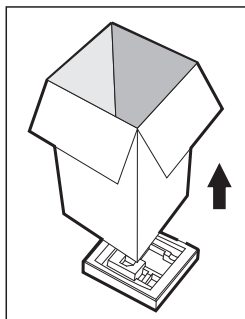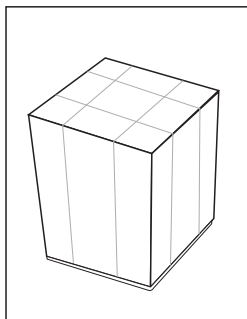


## **⚠ WARNING**

- Packaging material (e.g. foils, styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.
- Children can become entangled in the packaging film or swallow small parts and suffocate. Do not allow children to play with the packaging.

## **Disposal of packaging material**

- The packaging is designed to protect the appliance from damage during transportation. The packaging materials are environmentally friendly and should be recycled. Recycling the packaging can reduce the use of raw materials in the manufacturing process and the amount of waste in landfill sites.

## **Level Adjusting**

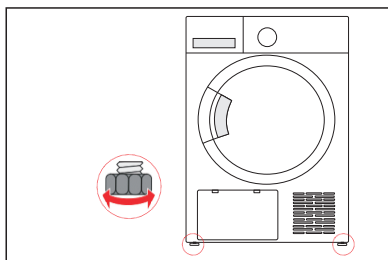

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet by hand or using a tool.

## **💡 NOTE**


- The feet must never be removed.

## Install external drain hose


### ⚠ WARNING

- Do not kink, crush or protract the drain hose.
- Position drain hose properly.


1. Pull out the upper drain hose

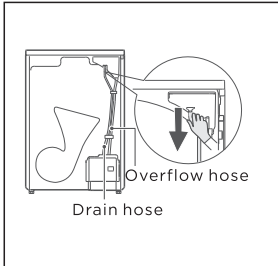

2. Put the external drain hose into the floor drain

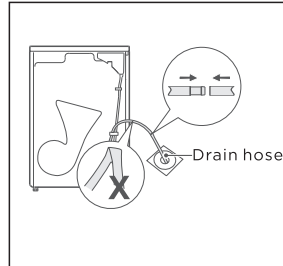

3. Put the hose holder in the washing basin or any other sink.

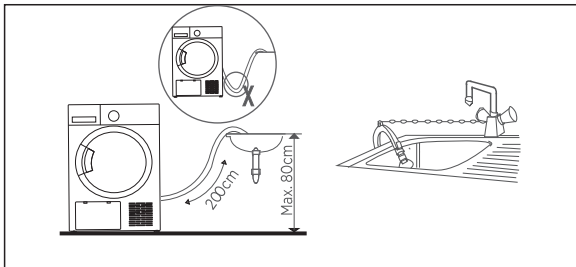

# OPERATION INSTRUCTIONS

## Before Each Drying

- Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum.
  1. Put some clean rags into the drum.
  2. Insert the mains plug, press [  ].
  3. Select the [Refresh] Program, press [  ] button.
  4. After finishing this program, please follow the “Cleaning and Maintenance ” to clean the door lint filter.
- During drying, the compressor and the water will generate some noise which is entirely normal.

## NOTE

- 1.Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
- 2.Do not dry dripping wet laundry. The dryer may be damaged.
- 3.For uniform drying result, sort the laundry according to fabric type and select the appropriate drying program.
- 4.Before drying, please close zips, hooks and eyelets, button, tie fabric belts, etc, with the exception of the jackets.
- 5.Remove all objects from pockets such as lighters and matches.
- 6.Remove underwires from bras that are not sewn in or protect bras in a laundry bag.
- 7.Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
- 8.Do not over dry the clothes, because over dried clothes can easily get creases and increase energy consumption.
- 9.Do not dry the textiles containing rubber or similar elastic materials.
- 10.The door shall be opened only after the program of the tumble dryer is finished to avoid being scalded by hot steam or overheating of the tumble dryer.
- 11.Clean the lint filter and empty water container after each use to avoid extension of drying time and increase of energy consumption.
- 12.Do not dry clothes after dry-clean process.

The reference weight of dry clothes (weight per item)


|                                                                                                                   |                                                                                                                        |                                                                                                                |
|-------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <br>Sweater<br>(mixed 800g)      | <br>Jacket<br>( cotton 800g )         | <br>Jeans<br>(800g)           |
| <br>Bath Towel<br>(cotton 900g ) | <br>Single bedsheet<br>(cotton 600g ) | <br>Work clothes<br>( 1120g)  |
| <br>Pyjamas<br>( 200g)           | <br>Shirt<br>(cotton 300g )           | <br>T-Shirt<br>(cotton 180g ) |
| <br>Underwear<br>(cotton 70g )   | <br>Socks<br>(mixed-weave 50g )       |                                                                                                                |

 **NOTE**

Only dry laundry suitable for tumble drying. Regard the laundry care labels:

-  Symbol for tumble dryer
-  Normal drying: Laundry items can be safely dried at a medium temperature.
-  Gentle drying: in case of fabrics with this symbol please use cycles dedicated to them with usage of Fabric Guard option. .
-  Do not tumble dry: The laundry is not suitable for tumble drying.

## Control Panel

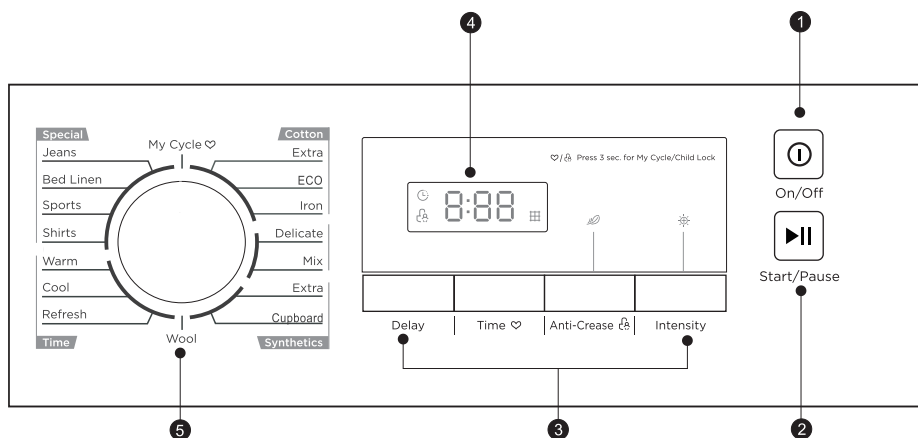

### 1 On/Off

Switch the tumble dryer on or off.

### 2 Start/Pause

Press the button to start or interrupt the drying program.

### 3 Options

By selecting the options, you can change the program settings or select additional functions.

### 4 Display

The display shows you the settings, the estimated remaining time and status messages.

### 5 Programs

Various drying programs can be selected depending on your needs and the type of laundry to be dried.



## NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.

## Display



Child lock



Clean lint filter warning



Delay



Intensity



My Cycle



Anti-crease



Remaining Time indicator/Error message

## Before Starting the Appliance

1. Inset the mains plug into the socket.
2. Put your laundry loosely inside the drum.
3. Close the door. Take care not to trap any items.
4. Switch on the appliance.

## Program Selector

1. When the LED display screen brightens up, rotate the program knob to select the desired program.
2. Select the [Delay], [Time], [Intensity], [Anti-Crease] options for additional function.
3. Press the [ ▶|| ] button.
4. Press the [ ⓘ ] button after the program has completed.

## Program Start

The drum will rotate after the program starts. The estimated remaining time will be displayed.

## Program End

1. The drum will stop rotating after the program ends. The display will show "End" and related LED will illuminate. The dryer will start [Anti-Crease] function if user doesn't remove the load. Please press [ ⓘ ] button after unloading the tumble dryer to disconnect from the power and draw the mains plug.
2. Deal with any problems according to "Trouble Shooting" chapter. If there is an unexpected stop during the drying process or the dryer shows an Error Code refer to list of "Error Codes".

## WARNING

Do not switch the dryer off before the drying program has finished. If this is done, the laundry must be hung up or spread out to cool it down for avoiding risk of the laundry igniting itself.

| Program             | Max Load | Description                                                                                                                                                                                                                                                                                          |
|---------------------|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cotton Extra        | 8.0kg    | For single or multi-layer cotton laundry to be dried completely for direct storage.                                                                                                                                                                                                                  |
| ECO <sup>1</sup>    | 8.0kg    | The eco program is suitable to dry wet cotton laundry. It's the most efficient program in terms of energy consumption.                                                                                                                                                                               |
| Cotton Iron         | 8.0kg    | For single layer cotton laundry to remain damp for ironing.                                                                                                                                                                                                                                          |
| Delicate            | 1.0kg    | Suitable for drying delicate fabrics.<br>Note:<br>Do not exceed the maximum loading quantity.                                                                                                                                                                                                        |
| Mix                 | 6.0kg    | For drying mixed loads made of cotton, synthetics including mixed fabrics.                                                                                                                                                                                                                           |
| Synthetics Extra    | 2.5kg    | For thick or multi-layer synthetic fabrics to be dried completely .                                                                                                                                                                                                                                  |
| Synthetics Cupboard | 2.5kg    | To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby cloths or socks.                                                                                                                                                                                                |
| Wool                | 1.0kg    | To refresh your dry wool items and make them fresher and fluffier.                                                                                                                                                                                                                                   |
| Jeans               | 4.0kg    | Special program for jeans trousers and jeans jackets as well as casual clothing made from denim.<br>Note:<br>Dry inside out.                                                                                                                                                                         |
| Bed Linen           | 5.0kg    | To dry bed linen, bed sheets or other large items.                                                                                                                                                                                                                                                   |
| Shirts              | 1.0kg    | The program is dedicated to shirts and blouses. Default setting of the drying level is cupboard dry, which makes manual cupboard easier. To avoid creases hang laundry on hanger for final dry-off or iron immediately after end of program.<br>Note:<br>Do not exceed the maximum loading quantity. |
| Warm                | —        | Blow warm air into the dryer bucket to warm clothes, and the timing can be adjusted between 10 to 150 minutes.                                                                                                                                                                                       |
| Cool                | —        | Blow cold air into the dryer bucket, and the timing can be adjusted between 10 and 30 minutes.                                                                                                                                                                                                       |
| My Cycle            | —        | Define and save your favourite program.                                                                                                                                                                                                                                                              |
| Refresh             | 2.0kg    | To refresh clothes kept at closet for a long time or to remove odors. Min. 20 min to max. 180 min.(in 10 min. steps)                                                                                                                                                                                 |
| Sports              | 3.0kg    | Special program for iron-free sportswear and functional textiles, made from thin polyester fabrics.                                                                                                                                                                                                  |

1.The Eco program is the energy saving program and is suitable for drying normal wet cotton laundry. It's the most efficient program in terms of energy consumption for cotton laundry.

## NOTE

- The max load is the maximum load quantity in kg dry weight that can be dried at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.
- Time drying programs do not automatically detect the residual moisture of the laundry to be dried. If the laundry is still damp after drying program, it's advisable to repeat the program if necessary and adjust the program duration. The duration of program can be adjusted by usage of Time button.

## Options

### Delay

#### Delay

This function can be used to delay the start of the drying program by up to 24 hours. When the delayed program starts, the time on the display starts to count down.

1. Place the laundry in the drum and make sure that the appliance door is closed.
2. Press the [ ① ] button, then turn the program selector to choose the desired program.
3. Press the [Delay] button to set the desired time. Press it repeatedly to change the delay time.
4. After the [ ►|| ] button has been pressed, the tumble dryer is in operating mode. The drying process is starting automatically when the delay time has elapsed.
5. If you press the [Delay] button again, the program pauses.
6. If you want to cancel the delay function, please press the [ ① ] button, or turn the program selector also cancel the delay function.

### Time

#### Time

The duration of time controlled program can be adjusted individually by the option [Time]. The drying time can be set in 10 minute steps. Once the preset time has elapsed, the program ends automatically.



#### Intensity

You can set the dryness of the laundry using the [Intensity] button. The Intensity function can only be selected before the program starts.

Note:

This option is available for some programs.

### Anti-Crease

#### Anti-Crease

At the end of the drying program, a 30-minute anti-crease function is activated as standard. The duration of this function can be set to 0-30-60-90-120 minutes.

This function prevents the laundry from wrinkling.

The laundry can be removed during the anti-crease function.



#### My Cycle

Used to define and save your favourite program, which is used frequently.

1. Select the desired program and other drying functions.
  2. Press and hold the [Time] for 3 seconds until the beep sounds and the desired program has been saved.
  3. Turn the program selector to the [My Cycle] position, then you can start your favourite program.
- If you want to change the [My Cycle] settings, repeat the steps (1) and (2)



### Child Lock

This tumble dryer is equipped with a special child lock function that prevents children from pressing buttons carelessly or operating the appliance incorrectly.

1. To activate the child lock, press the [Anti-crease] button for 3 seconds while the tumble dryer is running, paused or in standby mode.
2. To deactivate the child lock, press the [Anti-crease] button again for 3 seconds.

| Program             | Delay | Time | Intensity | Anti-Crease |
|---------------------|-------|------|-----------|-------------|
| My Cycle(ECO)       | Y     | N    | N         | Y           |
| Cotton Extra        | Y     | N    | Y         | Y           |
| ECO                 | Y     | N    | N         | Y           |
| Cotton Iron         | Y     | N    | N         | N           |
| Delicate            | Y     | N    | N         | Y           |
| Mix                 | Y     | N    | Y         | Y           |
| Synthetics Extra    | Y     | N    | Y         | Y           |
| Synthetics Cupboard | Y     | N    | Y         | Y           |
| Wool                | Y     | N    | N         | N           |
| Refresh             | Y     | Y    | N         | Y           |
| Cool                | Y     | Y    | N         | N           |
| Warm                | Y     | Y    | N         | Y           |
| Shirts              | Y     | N    | Y         | Y           |
| Sports              | Y     | N    | Y         | Y           |
| Bed Linen           | Y     | N    | Y         | Y           |
| Jeans               | Y     | N    | Y         | Y           |



### NOTE

- Y: Means available; N:Means not available

# CLEANING AND MAINTENANCE


## NOTE

- The first notification that appears on the display after the dryer is powered on to clean the door filter or empty the water container is only a general reminder.

### Cleaning and Care

#### Empty the water container

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensation water into the basin.
3. Install the water container.

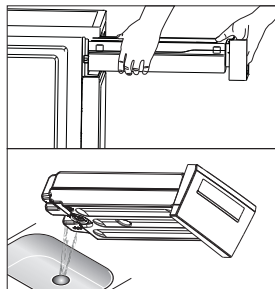

## NOTE

- Empty the water container after each use. Once the water container is filled completely, the program will be paused and the "E20" will light or blink on the display. After the container is emptied, the dryer can be restarted by pressing [▶||] button.



#### Clean the lint filters

This dryer has a primary door lint filter for additional protection.

Make sure you clean the lint filter after each program to avoid increased energy consumption and program time.

#### Clean the door filter

1. Open the door.
2. Take out the door lint filter.
3. Open the lint filter and remove the fluff on the filter screen. You can use a vacuum cleaner to remove the lint or clean it by hand.
4. Throw lint in the garbage bin and do not wash it down the drain to avoid micro plastics in the used water system.

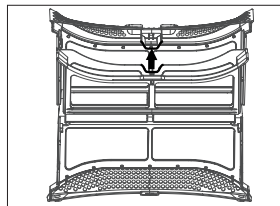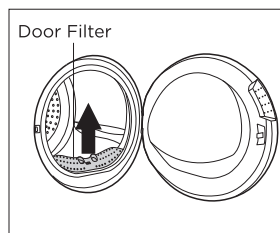


## NOTE

- To ensure the double-layer filter can be closed smoothly, the middle slot need to be aligned.
- Take notice of the correct orientation before to insert the door filter.

## Clean the heat exchanger

### ⚠ WARNING

- Do not touch the heat exchanger with your hand, which may cause an injury.
- As necessary, approx. once every month, remove the fluff from the heat exchanger using a vacuum cleaner with a dusting brush attached.
- Clean the heat exchanger without applying any pressure. Otherwise the heat exchanger could be damaged. The dryer will not dry if the cooling fins are damaged or bent.

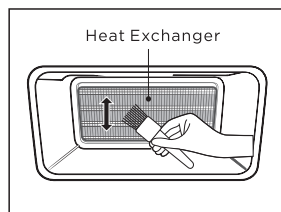

## Foreign objects removal

- In case of foreign objects fall inside below the filter compartment, remove the filter, open the heat exchanger area compartment and remove the foreign object making sure not to touch the heat exchanger with bare hands to avoid injuries.


## Clean Tumble dryer

### ⚠ WARNING

- Disconnect the power cord before cleaning!
- Do not spray directly with water.
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.
- Please wear gloves when cleaning.

#### After each use:

- Prepare a damp rag moistened with clean water.
- Clean the door, especially the inner window.
- Clean the sealing around the door opening.
- Clean the humidity sensor inside the drum.
- Take out the door lint filter, clean the sealing and air flow openings.
- Before starting the dryer, make sure that all parts are dried.

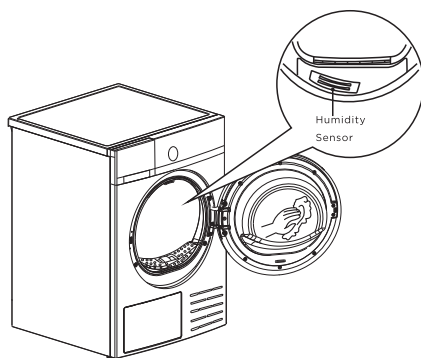

### 💡 NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.

# TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please draw the mains plug and call the customer service.

| Problem                                                                                                       | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display is not on                                                                                             | <p>Check if the power supply works.</p> <p>Check if the mains plug is inserted.</p> <p>Check the selected program.</p> <p>Press the [On/Off] button.</p>                                                                                                                                                                                                                                                                                                                                               |
| "E20" is lighting or blinking                                                                                 | <p>Check the water container. If it's full, please pour out the condensation water and restart the dryer.</p> <p>If the container is not full, please restart the dryer directly.</p> <p>If the "E20" is still lighting or blinking after you have finished the first two steps, please call the customer service.</p> <p>When the dryer is powered on standby, the "E20" will always on only as a reminder. After startup, the "E20" will disappear. Please perform maintenance after each cycle.</p> |
| "  " is lighting or blinking | <p>Clean the lint filter.</p> <p>When the dryer is powered on standby, the "" icon will flash to remind the user to clean the filter . After startup, the "" icon will disappear. Please perform maintenance after each cycle</p>                                                                                                    |
| Dryer does not start                                                                                          | <p>Connect the tumble dryer to the mains plug.</p> <p>Turn on the tumble dryer.</p> <p>Check the the door is closed.</p> <p>Check the program is set.</p> <p>Press the [Start/Pause] button.</p>                                                                                                                                                                                                                                                                                                       |
| Degree of dryness was not reached or drying time too long                                                     | <p>Clean lint filter and heat exchanger.</p> <p>Empty the water container.</p> <p>Check the drain hose.</p> <p>Check installation place is appropriate.</p> <p>Keep the air inlet clean.</p> <p>Use higher drying intensity level program or time program.</p>                                                                                                                                                                                                                                         |
| There are humming noises                                                                                      | <p>The compressor is operating. These noises are quite normal and do not indicate a fault.</p>                                                                                                                                                                                                                                                                                                                                                                                                         |
| The dryer switches off at the end of the program                                                              | <p>The dryer switches off automatically for energy saving. This is not a malfunction but a normal function.</p>                                                                                                                                                                                                                                                                                                                                                                                        |

## Error Codes

| Description | Possible Cause                                   | Solution                                               |
|-------------|--------------------------------------------------|--------------------------------------------------------|
| <i>E20</i>  | Container is full                                | Empty water container                                  |
|             | Water pump failure or water level sensor failure | Please contact customer service if the problem occurs. |
| <i>E33</i>  | Temperature sensor error                         |                                                        |
| <i>E82</i>  | PCB communication error                          |                                                        |

## WARNING

- Self-repair or non-professional repair may create safety risk and will void the warranty.
- If the LED displays other prompt and the dryer does not work, please call the customer service.

## NOTE

The instruction was also available on the website XXX.


# DISPOSAL AND RECYCLING

## Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product:  
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment. The appliance maybe contain flammable gas (R290), refer to the refrigerant type listed on the rating plate. Contact your municipal authority for information on how to discard the appliance correctly.

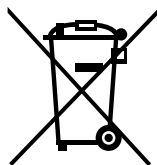

## Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



## Customer Service

For repairs, especially those involving electrical or mechanically complex components, it is recommended to consult a qualified repair service (e.g., a professional repairer, certified dealer or an authorized customer service center). Spare parts and information on repair and maintenance may be intended for professional repair services only.

In case of questions, please contact our local customer service center.

## WARNING

Risk of electric shock

- Never try to repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger.
- Improper repair will void the warranty and subsequent damages can't be recognized!

# Warranty Card

artusi.com.au

## Worldwide Appliances Pty Limited

A.B.N. 45868077422

48-50 Moore Street, Leichhardt N.S.W 2040  
Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

## WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

## PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at [www.artusi.com.au](http://www.artusi.com.au). Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

## WARRANTY

### 1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

### 24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances\* – Benchtop Models and Portable Gas Models

### 2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor\*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in artusi products.

### 3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

**Continued over...**

## 4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

## 5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

## 6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

## 7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you

for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## 8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

**All warranty service calls must be booked via the online service request form:**

**[www.com.au/#asr](http://www.com.au/#asr)**

**01082016**

**DON'T FORGET TO REGISTER YOUR WARRANTY ONLINE NOW AT:**  
**[www.com.au/warranty-registration](http://www.com.au/warranty-registration)**

[illegible]

## NOTES

[illegible]



**FOLLOW US ON:**



/artusi\_kitchen\_laundry\_outdoor



/au.linkedin.com/company/worldwideappliances

**artusi.com.au**

Australia National Telephone Number 1300 694 583

Our showrooms opening hours in each state are available on our website

**NSW & ACT (Head Office)**

48-50 Moore Street  
Leichhardt

**Victoria**

2r/131 Church Street  
Hawthorn

**QLD**

Contact  
head office

**WA & NT**

Contact  
head office

**DISCLAIMER**

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.