
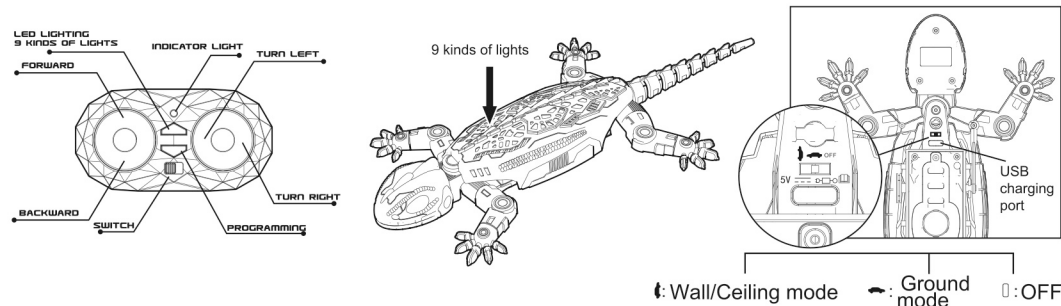



RC WALL CRAWLER GEOCKO INSTRUCTION MANUAL

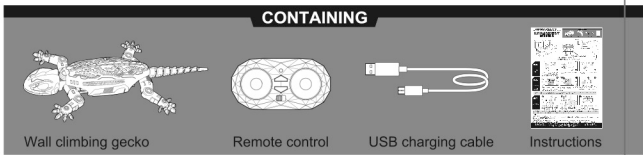


↑ Wall/Ceiling mode ↓ Ground mode ○ OFF

STEP 1


HOW TO INSTALL THE BATTERY

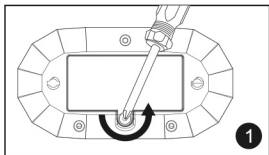

1. Open the battery cover with a screwdriver. If there are used batteries, please pull up one end of each battery and remove the batteries from the battery box. Do not use sharp tools or metal tools when removing or installing batteries.

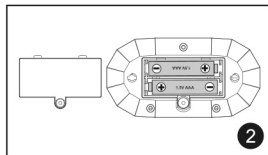

2. Install new 2x1.5v AAA batteries according to the polarity diagram (+/-) inside the battery box. (Batteries not including)

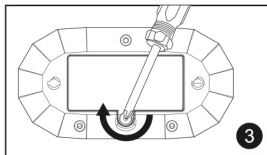


3. Close the battery cover tightly. Reasonably recycle or dispose of batteries in accordance with local laws and regulations.


STEP 2

HOW TO CHARGE


THE CHARGING PORT IS LOCATED AT THE REAR OF THE RACING CAR

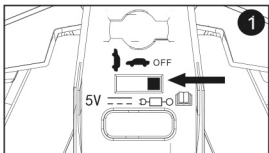

1. Move the power switch on the vehicle to the (OFF) position.

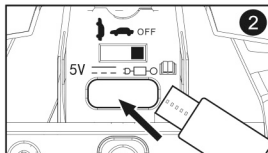

2. Insert the USB into the computer. Insert the other end into the charging port on the vehicle for charging.

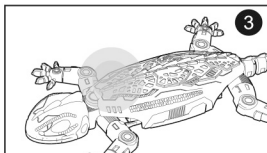


3. The indicator light display red when you are charging, and the green light means fully charged.

Approximately driving time: 20-25 minutes Approximately full speed charging time: 90 minutes
Remember: Taking 10-15 minutes to wait for the battery cool down before charging.


Attention: Please use the original usb charging cable configured with the product and an adapter that cannot be connected to a voltage greater than 5v to charge the product

STEP 3


HOW TO PLAY

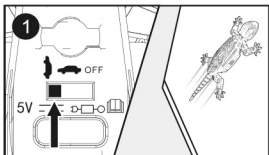

1. To drive on wall or ceiling, the switch must be positioned at "wall / ceiling mode". Please put the vehicle on the wall or ceiling meanwhile you hear the motor is working.

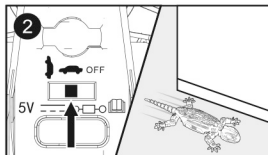

2. For the "ground mode", the fan will not turn on, but the lights on the vehicle will light up and drive normally on the ground. Ground driving is relatively energy-efficient.

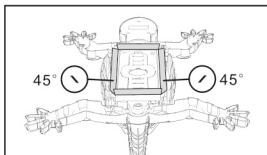

3. The bottom sealing strip can be adjusted outward 45° to ensure appropriate wall suction.

DO NOT REMOVE THE BOTTOM SEALING STRIP
If the sealing strip does not adhere to the wall, the product will not be able to operate normally!


CAUTION: ONLY USE ON SMOOTH AND CLEAN SURFACES. ANY CRACKS, PROTRUSIONS, OR OPENINGS CAN CAUSE IT TO LOSE SUCTION AND DETACH FROM WALLS/CEILINGS. MUD OR DEBRIS CAN ENTER THE FAN AND CAUSE DAMAGE.

THIS PRODUCT IS ONLY FOR INDOOR USE. BEFORE USE, PLEASE CHECK IF THE SEALING STRIP ON THE BOTTOM OF THE CAR IS 45°. PLEASE ADJUST IT BEFORE USE.

WARNING: ASPHYXIATION HAZARD - CONTAINS SMALL PARTS AND IS NOT SUITABLE FOR USE BY CHILDREN UNDER 3 YEARS OLD.


USING THE CONTROLLER

1.) Forward/Backward

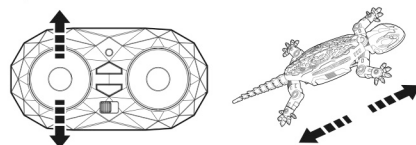

The left control key controls the wall climbing gecko to crawl forward and backward.


2.) Left turn/ Right turn

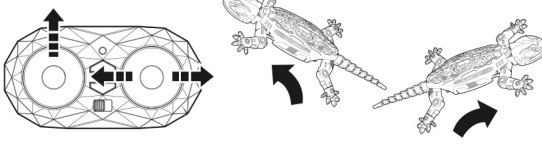

Turn the left remote control button up and the right remote control button left or right to control the crawling direction of the wall climbing gecko.


3.) Rotation: By pushing the joystick on the controller, you can rotate your wall climbing gecko around a certain point.

1.) RIGHT SPIN

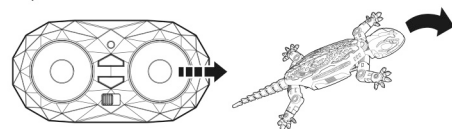


Press the right remote control button to the right, and the wall climbing gecko will rotate clockwise.

2.) LEFT SPIN

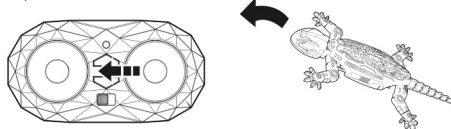


Press the remote control button on the right to the left, and the wall climbing gecko will rotate counterclockwise.


INSTRUCTIONS FOR USE

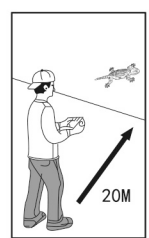

1. The remote control and the wall-crawling spider must be within 20 meters of each other.

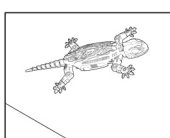

2. It can only be used on smooth and clean surfaces, and the tires should be cleaned with a damp cloth before each use. Do not use on damp surfaces.

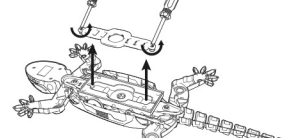

2. Use a screwdriver to remove the bottom cover plate, which can clean the dust and prevent the suction port from being blocked and the suction force from being insufficient.

INSTRUCTIONS FOR ORGANIZING CLOTH STRIPS

FIGURE 1

Figure 1, the cloth strip is under the car, which is incorrect as it will affect the stability of the car climbing the wall

FIGURE 2

Figure 2, the fabric strip is concave into the car shell, which is incorrect and can also affect the stability of the car climbing the wall.

FIGURE 3

Figure 3, it is correct to have all the fabric strips facing outward at 45°.

Attention: if the normal function of the product is interfered with or interrupted, strong electromagnetic interference may cause problems. To reset the product, please completely close it and then reopen it. If normal operation has not been restored, please move the product to another location and try again. To ensure normal performance, replace the battery as a low battery may not fully function.

Safety measures: - when turning on the power switch, keep your hands and loose clothing away from the rotor - turn off the controller and toys when not in use - remove the battery from the controller and do not use it - suggest adult guidance - put your toy in your sight so that you can constantly monitor it - it is recommended to use a new alkaline battery in the controller for maximum performance.

Note: it is recommended that parents provide guidance when installing or replacing batteries. Toys may malfunction and require users to reset the toys.

Includes 1 * 3.7v battery pack. requires 3 * 1.5v aaa (lr 03) alkaline battery (not included)

Maintenance and upkeep: please gently wipe the toy with a clean and damp cloth.

Do not use toys to be directly heated, and do not immerse them in water, otherwise electronic components may be damaged.

Special precautions for adults: plugs, outer packaging, and other components should be regularly checked for damage. If there is any damage, do not use this charger to charge the toy until the damaged parts are repaired.

Special battery instructions: this toy is equipped with a lithium polymer battery. special instructions for lithium polymer batteries: do not charge without supervision. please charge in a separate area. Stay away from flammable materials. Please avoid direct exposure to sunlight. the battery is at risk of explosion, overheating, or ignition. Do not disassemble, modify, heat or short-circuit the battery.

Do not throw the battery into fire or place it in a hot place. do not drop or subject it to strong influence.

Battery safety information: as a small item, batteries must be replaced by adults; Follow the polarity diagram of the pad inside the battery box (+/-); Non rechargeable batteries cannot be charged; Rechargeable batteries can only be charged under adult supervision; Rechargeable batteries should be removed from toys before charging; Different types of batteries or old and new batteries cannot be mixed; The battery should be placed with the correct polarity; The exhausted battery should be removed from the toy; The power terminal must not be short.

Please use the recommended toy charger to charge the toy. Please turn off the toy switch before charging. Do not disassemble, modify, or short circuit the battery due to heating. it is necessary to regularly inspect the wires, plugs, casing, and other components for damage. If any damage is found, it should be stopped from use until it is repaired properly.

FCC Statement

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.