

1. Precautions

- 1. Do not disassemble, modify, or repair the metronome by yourself to avoid short circuits.
- 2. Do not use the metronome in high temperature, humid, dirty, or strongly vibrating environments.
- 3. Do not drop the metronome or let it fall on hard surfaces to prevent malfunction.
- 4. Do not clean the metronome surface with alcohol or other diluted liquids to avoid damage.

The diagram illustrates the Metronome IDM-007 from two perspectives. The front view (left) shows a large rectangular display screen (2) at the top, a crown-shaped logo (3) in the center, and four control buttons: '1/4', '1/2', '3/4', and 'B.T.' (4). A large circular dial (5) is positioned below the logo. The side view (right) shows a USB port (6), a power button (7), and a large circular speaker grille (8). The device is labeled 'METRONOME IDM-007' at the bottom of the front panel.

- 

In power-off state, press and hold the " " and " " buttons simultaneously until the display lights up. This will clear all saved parameters and restore factory settings: Beat = 4/4, Tempo = 120, Rhythm Pattern = , Count-in = 0, Sound = Voice.

Button	Operation	The LCD screen is not flashing	The Pre-beat is flashing	The Rhythm is flashing
B.T	Tap	Sever the current Bluetooth connection	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Turn on/off the Bluetooth	Exit Pre-beat selection	Exit Rhythm selection
$\frac{3}{4}$ / PRE	Tap	Adjust the Beat	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Select the Pre-beat	Select the Pre-beat	Select the Pre-beat
/	Tap	Adjust the Sound	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Rhythm selection	Rhythm selection	Rhythm selection
/	Tap	Play/pause the metronome	Exit Pre-beat selection	Exit Pre-beat selection
	Long press it for 2 seconds	Turn on/off the unit	Turn on/off the unit	Turn on/off the unit
Adjust the knobs	Turn it clockwise	Speed up the tempo	Increase the Pre-beat	Increase the Rhythm
	Turn it counter-clockwise	Slow down the tempo	Reduce the Pre-beat	Reduce the Rhythm

1. When powered off, press and hold "♫/▶" until the display lights up.
2. Set the parameters according to Section IV.
3. Short press "♫/▶" to start the metronome.
4. Adjust to a comfortable volume using the volume knob.

Tempo Range: 30–252 bpm
Beats: 0/4, 1/4, 2/4, 3/4, 4/4, 3/8, 6/8
Count-in: 0–6
Sounds: Voice, Mechanical Metronome,
Electronic Metronome, Cowbell, Woodblock
Rhythm:
Speaker: 1.5W * 2
Bluetooth Version: 5.2
Operating Frequency: 2402MHz–2480MHz
Bluetooth Max. RF Power: 0dBm
LE Max. RF Power: -1dBm
Battery: Rechargeable Lithium Battery (3.7V, 1100mAh)
Weight: 260g
Dimensions: 80 (L) × 70 (W) × 163 (H) mm

- iDM-007 Metronome x1
- User Manual x1
- Charging Cable x1

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.