 
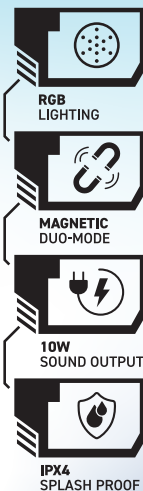 


VIVITAR®

MAGNETIC WIRELESS SPEAKER

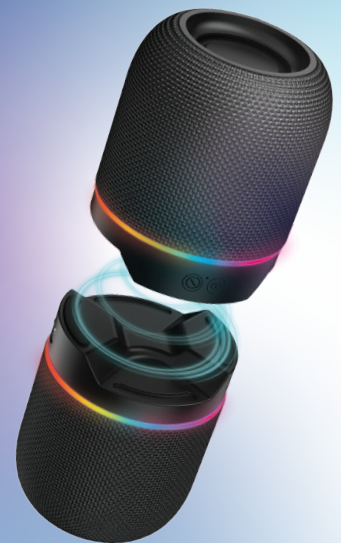

Important Safety Precautions

When using your VIVITAR Magnetic Wireless Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER
2. Do not submerge the speaker in water. Do not place the speaker on wet surfaces.
3. Only clean using a clean, soft cloth.
4. Products may contain small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose the speaker to excessive heat or fire.
6. Do not expose the speaker to extreme cold or hot temperatures to avoid battery damage.
7. Do not attempt to repair the speaker yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose the speaker to excessive physical force.
9. Do not charge while the speaker is in contact with water, as electric shock may occur.
10. Unplug charging cable when not in use or during thunderstorms.
11. Do not play music while the speaker is charging.
12. Please recycle or dispose of your device properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your device for further information.
13. Do not leave your wireless speaker unattended while magnetically attached to any surface.
14. Keep the wireless speaker away from any magnetically sensitive devices to avoid damage.



BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Introduction

Thank you for purchasing the iConcepts 2-in-1 Magnetic Wireless Speaker, item V60115BT. In order to have the best experience, please read this manual carefully before using the wireless

Package Contents


- 2 Magnetic Wireless Speakers
- Charging Cable
- User's Manual With Warranty Information

A Closer Look

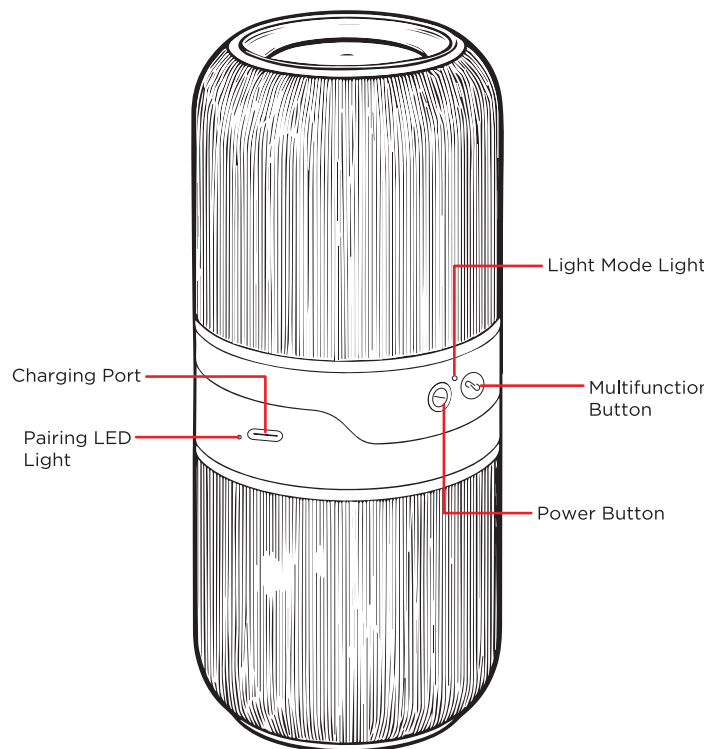


Charging

Insert one end of the included charging cable into the Charging Port of your speakers. Each speaker must be charged separately.

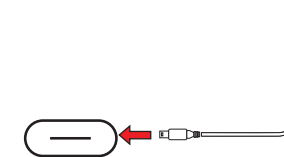

Insert the other end of the charging cable into a suitable USB charging adapter (not included).

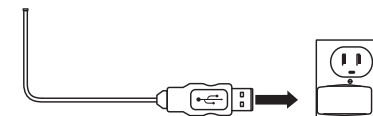

Please charge both speakers fully before first use.

VIVITAR®

VIVITAR®

© 2026 Sakar International
195 Carter Drive Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, INC. and any use of such marks by Sakar International is under license.




s Manual

V60115BT-BLK

Powering ON/OFF

Press and hold the Power button for two to three seconds to power ON/OFF the speaker.

Press and Hold

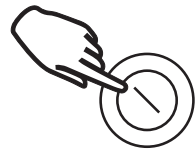

Mode Selection

Power ON your speaker. Press the Multifunction button to switch between available audio modes.


Press



WARNING: While changing audio modes, the sound may be very loud. Please exercise caution while changing audio modes.

Bluetooth Pairing

Once powered ON, set your speaker to Bluetooth mode.

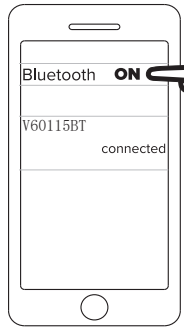

Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as “V60115BT”.

NOTE: Disconnect through your connected device or by changing modes.

After successfully pairing, the speaker’s Pairing LED Indicator light will flash blue.

Changing Light Modes

Your speaker has different light modes that can be set. To cycle through the available light modes, press the Multifunction button twice.

Press Twice to Cycle Light Modes.



Speaker’ s Controls

Multifunction Button:

- Press twice to cycle through available light modes.
- Press to cycle through available audio modes.
- Press and hold to pair with another V60115BT speaker.
- While paired with another speaker, press and hold to disconnect.

Power Button:

- Press and hold to power ON/OFF the speaker.
- Press twice to recall the last called number.
- Press to answer an incoming call.
- Press during a call to hangup.
- Press twice to decline an incoming call.
- While in FM Radio Mode, press to scan for radio stations. Press again during scanning to stop at the current station.

Additional Features

TWS Pairing:

TWS Pairing enables the speaker to pair with another V60115BT Magnetic Wireless Speaker to play music in sync.

Power ON both speakers. Press and hold the Multifunction button to turn ON True Wireless Stereo. Enable TWS for both speakers.

When both Speakers are ON and have TWS enabled, they will automatically pair together. When paired, go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as ‘V60115BT’.

To unpair the two speakers, press and hold the Multifunction button.

Additional Features (Continued)

Magnetic Base:

The speakers have a magnetic base, enabling them to connect together for easy storage, or to be placed on flat meagnetic surfaces. Before using the magnetic base, inspect and wipe away any dust or grime from the base with a dry towel.

WARNING: Keep the speakers away from any magnetically sensitive devices to avoid damage.

FM Radio:

To listen to music from local radio stations in FM radio mode, set the speaker to the corresponding mode. Press the Power button to scan for available FM stations. Press again to stop at the current selected station.

CAUTION: While in FM Radio mode, the volume may be very loud. Please exercise caution while changing audio modes.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information: Call (800) 592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

