


FIRMAN[®]

OPERATOR'S MANUAL 33 TON GASOLINE LOG SPLITTER

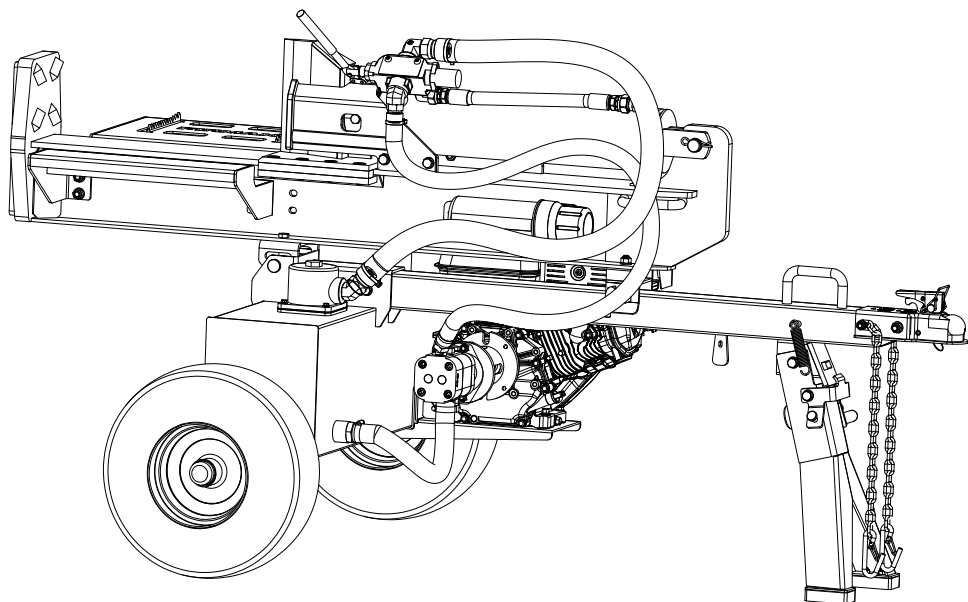

GS3301

Rev:00

Record product information to reference when ordering parts or obtaining warranty coverage.

STOP

DO NOT RETURN
TO STORE!

CALL US FIRST
1-844-347-6261



FOR QUESTIONS
OR SERVICE INFORMATION

SERIAL NUMBER: _____

PURCHASE DATE: _____

INTRODUCTION

Table of Contents

Introduction 1

Features Controls and on Product Hazard Labels..... 6

Assembly 11

Operation 19

Maintenance - Storage..... 29

Troubleshooting- Specifications 36

Parts Diagrams - Parts Lists 38

Service - Warranty..... 43

REGISTER YOUR PRODUCT

Register your product using the QR code provided or at www.firmanpowerequipment.com.



INTRODUCTION

Thank you for purchasing a FIRMAN log splitter. You have selected a high-quality, precision engineered log splitter designed and tested to give you years of satisfactory service.

This manual contains safety information to make you aware of the hazards and risks associated with log splitter products and how to avoid them. It is important that you read and understand these instructions thoroughly before attempting to start or operate log splitter. Save these original instructions for future reference.

All information in this publication is based on the latest production information available at the time of approval for printing. The manufacturer reserves the right to change, alter or otherwise improve the log splitter and this documentation at any time without prior notice.




SIGNAL WORDS

 DANGER	 WARNING	 CAUTION	NOTICE
Indicates a hazard which, if not avoided, will result in death or serious injury.	Indicates a hazard which, if not avoided, could result in death or serious injury.	Indicates a hazard which, if not avoided, could result in minor or moderate injury.	Indicates information considered Important, but not hazard-related.

	Operator's Manual - Failure to follow warnings, instructions and operator's manual could result in death or serious injury.
	Eye and Ear Protection - Always wear safety goggles or safety glasses with side shields, and as necessary a full face-shield as well as full ear protection when operating this product.
	Footwear - Always wear safety shoes or heavy boots when operating the machine.
	Gloves - Always wear nonslip, heavy-duty protective gloves when operating this product.
	Safety Alert Symbol - Indicates a potential personal injury hazard.
	Fire- Fuel and its vapors are extremely flammable which could cause burns or fire resulting in death or serious injury. Engine exhaust could cause fire resulting in death or serious injury.
	Skin Injection Hazard - High pressure hydraulic oil can inject under your skin. Make sure all fittings are tightly secure before applying pressure. Relieve system pressure before servicing.
	Always keep hands away from the wedge and the hydraulic cylinder. Moving parts can crush or cut.

 INTRODUCTION

	Always keep feet away from the wedge slide and the hydraulic cylinder. Moving parts can crush or cut.
	Hot Surface- Muffler could cause burns resulting in serious injury.
	Open Flame alert - Fuel and its vapors are extremely flammable and explosive. Keep fuel away from smoking, open flames, sparks, pilot lights, heat, and other ignition sources.
	Hold logs on sides when loading. Keep hands and feet away from cylinder, wedge, and partially split logs.
	Never place hands or any part of the body between a log and any part of the log splitter. Do not split logs against the grain. Split logs end to end in the direction of the grain only.
	Toxic Fumes- Engine exhaust contains carbon monoxide, a poisonous gas that will kill you in minutes. You cannot smell it or see it.
	Clearance - Keep all objects including others at least 10 feet (3m) from this machine. Only one person should operate the log splitter and load the logs.
	Never operate on an incline. Make sure the log splitter is on a level surface. Block tires and ensure support leg is secure to prevent unintended movement of the log splitter during operation.



WARNING! This product can expose you to chemicals including gasoline engine exhaust and lead and lead compounds, which are known to the state of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warning.ca.gov.

Training

1. Read the Operator's Manual completely before attempting to use this log splitter.
2. Do not allow anyone to operate your log splitter who has not read the Operator's Manual or has not been instructed on the safe use of the log splitter.
3. Never allow children or untrained adults to operate this machine.
4. Many accidents occur when more than one (1) person operates the log splitter. If a helper is assisting in loading logs to be split, never actuate controls until helper is clear of the area.
5. Never allow anyone to ride on the machine.
6. Never transport cargo on the log splitter.
7. High fluid pressures are developed in hydraulic log splitters. Pressurized hydraulic fluid escaping through a pin hole opening can puncture skin and cause severe blood poisoning. Therefore, the following instructions should be heeded at all times.
 - 7a. Do not operate the unit with frayed, kinked, cracked or damaged hoses, fittings, or tubing.
 - 7b. Stop the engine and relieve hydraulic system pressure before changing or adjusting fittings, hoses, tubing, or other system components.
 - 7c. Do not adjust the pressure settings of the pump or valve.
 - 7d. Do not check for leaks with your hand. Leaks can be detected by passing cardboard or wood over the suspected area. Look for discoloration. If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.
8. Keep the operator zone and adjacent area clear for safe, secure footing.
9. The log splitter is equipped with a spark arrestor for use near unimproved forest, brush, or grass covered land. Make sure you comply with local, state, and federal codes. Take appropriate fire-fighting equipment with you.
10. Log splitters should be used only for splitting wood. Do not use for other purposes unless the manufacturer provides attachments and instructions.
11. Only split wood with the grain. NEVER split perpendicular to the grain.
12. Keep the area of operation clear of all persons, particularly small children.

Preparation

1. Be thoroughly familiar with all controls and with proper use of the equipment.
2. Safety Gear:
 - 2a. Always wear safety shoes or heavy boots when operating the machine.
 - 2b. Always wear safety goggles or safety glasses with side shields, and as necessary a full face-shield when operating or servicing the machine.
 - 2c. Never wear jewelry or loose-fitting clothing that might become entangled in moving or rotating parts of the machine.
 - 2d. Always wear full ear protection when operating the machine.
3. Make sure the log splitter is on a level surface. Block tires and ensure support leg is secure to prevent unintended movement of the log splitter during operation.
- 3a. Always operate the log splitter from the manufacturer's indicated operator zone.
4. Logs should be cut as squarely as possible.

INTRODUCTION

5. Fuel:

- 5a. Use an approved fuel container.
- 5b. Never add fuel to a running or hot engine.
- 5c. Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors.
- 5d. Replace gasoline cap securely and clean up any spilled fuel. If fuel is spilled on clothing, change clothing immediately.
- 5e. Never fill fuel containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place container on the ground away from your vehicle before filling.
- 5f. Keep the fuel nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock open device.

Operation


WARNING! Before starting and using this log splitter, read and follow all the on product labels and safety information contained in the Operator's manual. Failure to follow all on product labels and Operator's manual could result in death or serious injury to the operator or bystanders.

- 1. Be sure to confirm all hose connections and hose clamps are tight before each use. It is possible for connections to vibrate loose over time.
- 2. Never leave the machine unattended with the engine operating.
- 3. Never operate the machine when under the influence of alcohol, drugs or medication.
- 4. The machine owner shall instruct all operators to read and understand the operators manual to ensure safe log splitter operation.
- 5. Always operate the log splitter with all safety equipment in place and all controls properly adjusted for safe operation.
- 6. Always operate the log splitter at manufacturer's recommended speed.
- 7. Always keep hands and feet clear of moving parts and partially split logs during the splitting operation.
- 8. When loading a ram-type log splitter, place your hands on the sides of the log, not the ends. Never place your hands or any part of your body between a log and any part of the log splitter.
- 9. On ram-type log splitters, never attempt to split more than one (1) log at a time unless the ram has been fully extended and a second log is needed to complete the separation of the first log.
- 10. On ram-type log splitters on which the logs are not cut square, the longest portion of the log should be rotated down and the most square end placed against the foot plate.
- 11. Only split logs with the grain of the wood.
- 12. Use only your hand to operate the log splitter controls.
- 13. Do not refuel until the engine has been turned off and cooled for at least 2 minutes.

Maintenance and Storage

- 1. Always shut off the engine while repairing or adjusting the log splitter except as recommended by the manufacturer.
- 2. Clean debris and chaff from the engine cylinder, cylinder head fins, recoil starter cover, and muffler areas. Clean engine muffler spark arrestor and inspect it regularly (follow manufacturer's service instructions). Replace, if damaged.
- 3. Never store the unit indoors with fuel in the tank. Fumes might reach an open flame spark. Allow the engine to cool before storing in any enclosure.
- 4. Clear debris from movable parts, but only when the engine is shut off.
- 5. Check to be sure all nuts and bolts are tight to ensure the equipment is in safe working condition.


Log Splitter

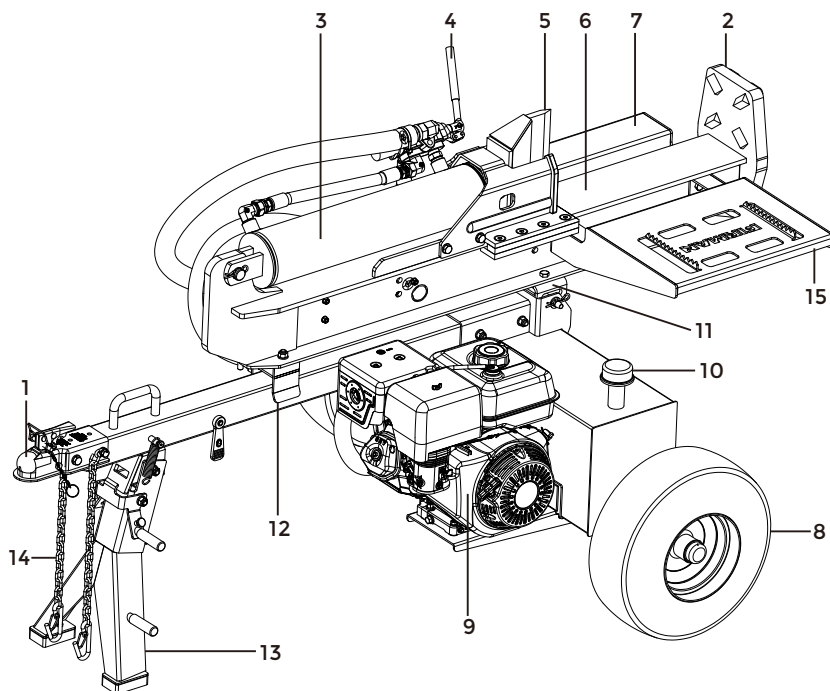

1. 2 in. (5.1 cm) Ball Coupler
2. Foot Plate
3. Hydraulic Cylinder
4. Control Valve Handle
5. Wedge
6. Beam
7. Log Cradle
8. Tires
9. 389cc FIRMEN Engine
10. Vent Cap
11. Beam Pivot
12. Beam Lock Assembly
13. Tongue Stand
14. Safety Chains with Hooks
15. Log Table



***We are always working to improve our products. Therefore, the enclosed product may differ slightly from the image on this page.**

FEATURES, CONTROLS AND ON -PRODUCT HAZARD LABELS

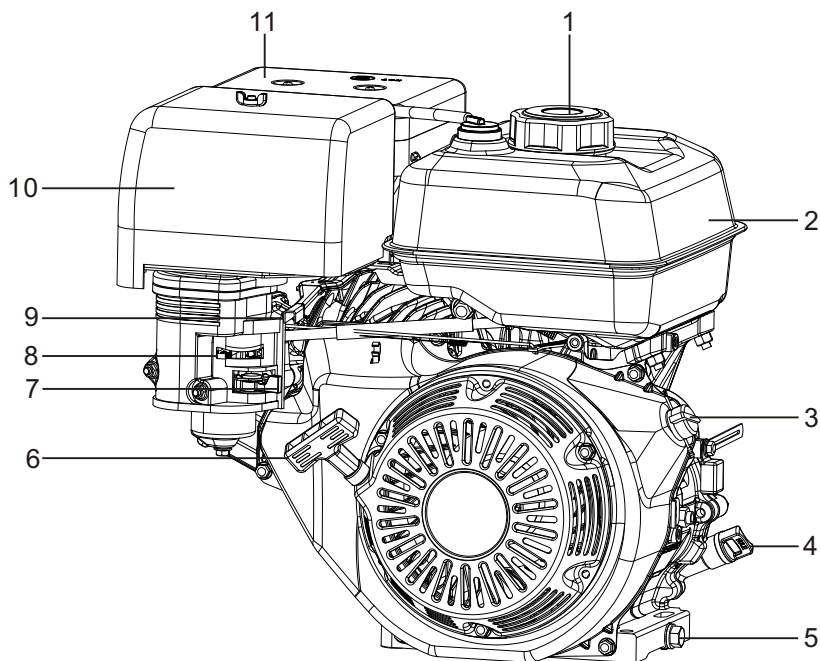

- 1. Fuel Cap
- 2. 1.1 Gal (4.2L) Fuel Tank
- 3. Engine Switch
- 4. Oil Fill Cap/Dipstick
- 5. Oil Drain Bolt
- 6. Recoil Starter
- 7. Fuel Valve
- 8. Choke Lever
- 9. Throttle
- 10. Air Filter
- 11. Muffler

FEATURES, CONTROLS AND ON -PRODUCT HAZARD LABELS

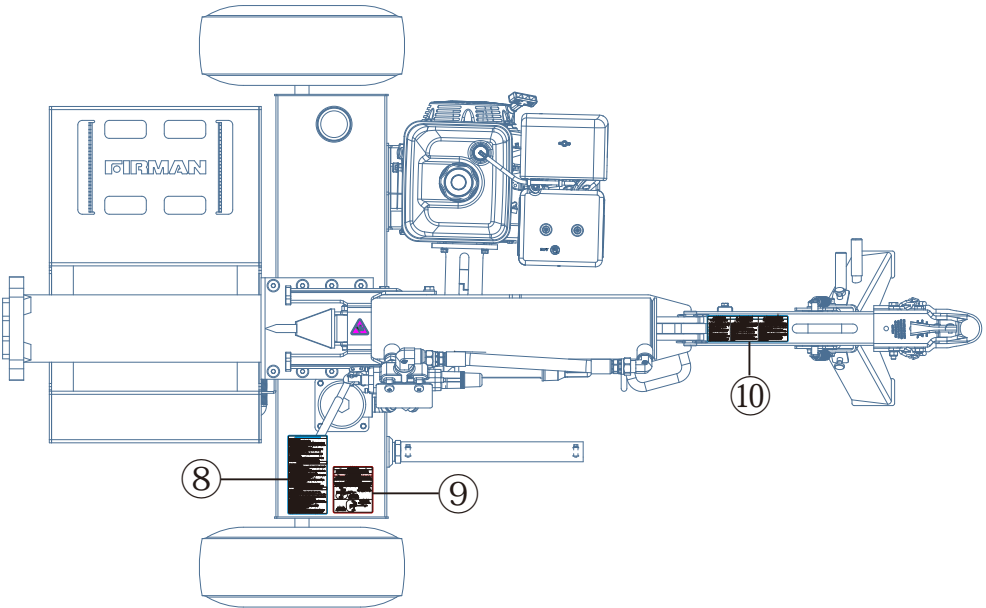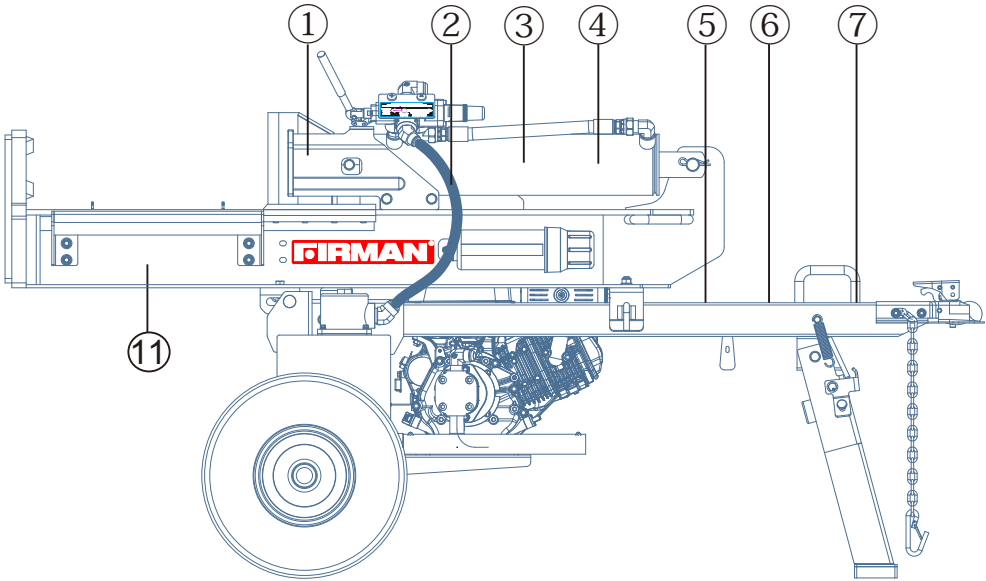

FEATURES, CONTROLS AND ON -PRODUCT HAZARD LABELS

1



⚠ DANGER
PINCH POINT HAZARD KEEP CLEAR DURING OPERATION

⚠ PELIGRO
PELIGRO DE PINZAMIENTO-MANTÉNGASE ALEJADO DURANTE SU FUNCIONAMIENTO

⚠ DANGER
DANGER OF POINT OF PINCEMENT SE TENIR À L'ÉCART PENDANT LE FONCTIONNEMENT

2



⚠ WARNING ⚠ ADVERTENCIA ⚠ AVERTISSEMENT

DO NOT let hoses touch hot surfaces or cutting areas.
NO permita que las mangueras toquen superficies calientes o áreas de cortar.
NE laissez pas les tuyaux toucher les surfaces chaudes ou les zones de coupe.

3







4



⚠ WARNING
DO NOT TOUCH HOT PARTS
- Hot Surface

⚠ ADVERTENCIA
NO TOQUE LAS PARTES CALIENTES
- Superficie Caliente

⚠ AVERTISSEMENT
NE PAS TOUCHER LES PARTIES CHAUDES
- Surface Chaude

5

⚠ WARNING	⚠ ADVERTENCIA	⚠ AVERTISSEMENT
Before towing check that beam latch pin is completely locked.	Antes de enganchar el remolque, compruebe que el pasador de enganche de la viga está completamente bloqueado.	Avant de remorquer, vérifiez que la goupille de verrouillage de la poutre est complètement verrouillée.
FOR RESIDENTS OF CALIFORNIA This product can expose you to chemicals including gasoline engine exhaust and lead and lead compounds, which are known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov .	PARA LOS RESIDENTES DE CALIFORNIA Este producto puede exponerlo a productos químicos, incluidos los gases del motor de gasolina, plomo y compuestos de plomo, que el estado de California reconoce como causantes de cáncer y el monóxido de carbono, que el estado de California reconoce como causante de defectos de nacimiento y otros daños reproductivos. Para obtener más información, visite www.P65Warnings.ca.gov .	POUR LES RÉSIDENTS DE LA CALIFORNIE Ce produit peut vous exposer à des produits chimiques y compris les gaz à l'échappement des moteurs à essence, le plomb et les composés de plomb, qui sont connus dans l'état de Californie pour provoquer le cancer et le monoxyde de Carbone, connu dans l'état de Californie pour causer des malformations congénitales ou d'autres troubles de la reproduction. Pour plus d'informations, rendez-vous sur www.P65Warnings.ca.gov .

6




⚠ WARNING
Pinch point could cause injury.
Keep hands clear.

⚠ ADVERTENCIA
Punto de pinzamiento, puede causar lesiones.
Mantener las manos alejadas.

⚠ AVERTISSEMENT
Point de pincement, risque de blessure.
Éloigner les mains.

7

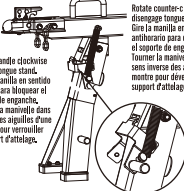

Rotate counter-clockwise to disengage tongue stand.
Gire la manilla en sentido antihorario para desbloquear el soporte de enganche.
Tourner la manivelle dans le sens inverse des aiguilles d'une montre pour déverrouiller le support d'attelage.

Rotate handle clockwise to lock tongue stand.
Gire la manilla en sentido horario para bloquear el soporte de enganche.
Tourner la manivelle dans le sens des aiguilles d'une montre pour verrouiller le support d'attelage.

NOTICE AVISO AVIS

1. Use hand/foot to engage or disengage the tongue stand lock.
2. Only disengage the tongue stand lock when attaching the log splitter to be towed.
3. Ensure the tongue stand is secured using the rubber strap on the tongue prior to moving.
1. Usar la mano o el pie para activar o desactivar el seguro del soporte de enganche.
2. Desactivar el seguro del soporte de enganche solo al acoplar la cortadora de troncos para ser remolcada.
3. Antes de mover, asegúrese de que el soporte de enganche quede fijado con la correa de goma del enganche.
1. Utiliser la main ou le pied pour verrouiller ou déverrouiller le support d'attelage.
2. Ne déverrouiller le support d'attelage que lors de l'accrochage de la fendeuse de bûches pour remorquage.
3. Avant tout déplacement, vérifiez que le support d'attelage est fixé à l'aide de la sangle en caoutchouc.

FEATURES, CONTROLS AND ON -PRODUCT HAZARD LABELS

8

OPERATING INSTRUCTIONS

• SPLITTING LOGS

1. Ensure that the log splitter is on a stable, flat surface.

2. Start the engine and advance throttle to the maximum.

3. Position log onto the beam so against the foot plate. NOTE: Always split log in the direction of the grain.

4. Move the control handle toward the foot plate to extend the wedge or move the control handle away from the foot plate to retract the wedge.

• IF LOG BECOMES STUCK ON WEDGE

A log can become stuck to wedge if the wedge becomes embedded in the log and the log doesn't split and separate. If this happens NEVER attempt to remove a stuck log by:
- Relying on the hydraulic force of the log splitter.
- Adding attachments to the log splitter.

• ALWAYS REMOVE THE LOG MANUALLY BY FOLLOWING THIS PROCEDURE:

1) Ram should be fully retracted.

2) Remove stuck log from wedge manually with a pry bar or sledge hammer. CAUTION: log pieces can fly off as they separate from the wedge.

3) DO NOT attempt to re-split a stuck log once it has been removed from wedge.

INSTRUCCIONES DE USO

• ABRIENDO TRONCOS

1. Asegúrese de que la cortadora de troncos se encuentra sobre una superficie estable y plana.

2. Arranque el motor y ponga la marcha al máximo.

3. Coloque el tronco en la viga control y respáquelo.

NOTA: Nunca intente retirar un tronco atascado.

4. Mueva la palanca de control hacia el respáque para extender la cuña o aleje la palanca de control del respáque para retirar la cuña.

• SI EL TRONCO QUEDA ATASCADO EN LA CUÑA

Un tronco puede atascarse en la cuña si ésta se incrusta en el tronco y éste no se parte y separa. Si esto ocurre, NUNCA intente desmontar un tronco atascado:
- Utilizando la fuerza hidráulica de la cortadora de troncos.
- Añadiendo accesorios a la cortadora de troncos.

• SIEMPRE RETIRE EL REGISTRO MANUALMENTE SEGÚN EL SIGUIENTE PROCEDIMIENTO:

1) El cilindro debe estar totalmente retraído.

2) Retire manualmente el tronco atascado de la cuña con una palanca o un mazo.

PRECAUCIÓN: los troncos de troncos pueden salir volando al separarse de la cuña.

3) NO intente volver a separar un tronco atascado una vez que se haya retraído de la cuña.

INSTRUCTIONS D'UTILISATION

• FENDRE DES BŰCHES

1. Assurez-vous que le fendeur de bûches se trouve sur une surface stable et plane.

2. Démarrez le moteur et avancez la manette des gaz au maximum.

3. Placez la bûche sur la poutre, contre la plaque de base. REMARQUE: fendez toujours la bûche dans le sens du grain.

4. Déplacez la poignée de commande vers la plaque de pied pour étendre la cuë ou déplacez la poignée de commande de la plaque de pied pour rétracter la cuë.

• SI LA BŰCHE RESTE COINCÉE SUR LA CALE

Une bûche peut rester coincée sur la cale si la cale s'incruste dans la bûche et que celle-ci ne se fend pas et ne se sépare pas. Si cela se produit, ne tentez JAMAIS de retirer une bûche coincée en:
- En vous fiant à la force hydraulique de la fendeuse de bûches.
- Ajoutant des accessoires à la fendeuse de bûches.

• RETIREZ TOUJOURS LA BŰCHE MANUELLEMENT EN SUIVANT CETTE PROCÉDURE:

1) Le vérin doit être complètement rétracté.

2) Retirez manuellement la bûche de la cale à l'aide d'un levier ou d'un marteau de forgeron.

ATTENTION: des morceaux de bûche peuvent s'envoler lorsqu'ils se séparent de la cale.

3) N'essayez PAS de refendre une bûche coincée une fois qu'elle a été retirée de la cale.

9

⚠ WARNING


EQUIPMENT OPERATION SHALL ONLY BE PERFORMED IN THE DESIGNATED OPERATOR ZONE BY ONE PERSON

⚠ ADVERTENCIA

EL MANEJO DEL EQUIPO SÓLO PODRÁ SER REALIZADO EN LA ZONA DESIGNADA PARA EL OPERADOR Y POR UNA SOLA PERSONA

⚠ AVERTISSEMENT

L'UTILISATION DE L'ÉQUIPEMENT NE DOIT ÊTRE EFFECTUÉE QUE PAR UNE SEULE PERSONNE DANS LA ZONE RÉSERVÉE À L'OPÉRATEUR.

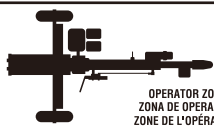

HORIZONTAL OPERATION
USO HORIZONTAL
FONCTIONNEMENT HORIZONTAL



VERTICAL OPERATION
USO VERTICAL
FONCTIONNEMENT VERTICAL

10

⚠ WARNING

TO AVOID SERIOUS INJURY OR DEATH

- Read the Operation Manual on how to attach the coupler to the hitch ball and how to tow safely.
- DO NOT tow log splitter at night or in low-visibility conditions.
- Ensure the correct ball size is being used.
- Do not exceed hitch ball or coupler load limits.
- Attach and secure safety chains prior to towing.
- Do not exceed max towing speed of 45 mph.
- Avoid sharp turns and steep angles.
- Check tightness of coupler before towing.
- Replace hitch ball or coupler if damaged.

⚠ ADVERTENCIA

EVITE LESIONES GRAVES O LA MUERTE

- Lea el Manual de instrucciones para saber cómo acoplar el enganche a la bola de enganche y remolcar con seguridad.
- NO remolque la partidora de troncos por la noche ni en condiciones de baja visibilidad.
- Asegúrese de utilizar el tamaño de bola correcto.
- No exceda los límites de carga de la bola de enganche o del acoplador.
- Sujete y asegure las cadenas de seguridad antes de remolcar.
- No exceda la velocidad máxima de remolque de 45 mph.
- Evite curvas cerradas y ángulos pronunciados.
- Verifique el apriete del enganche antes de remolcar.
- Sustituya la bola de enganche o el enganche si presentan daños.

⚠ AVERTISSEMENT

POUR ÉVITER DES BLESSURES GRAVES VOIRE LA MORT

- Lisez le manuel d'utilisation pour savoir comment attacher le coupleur à la boule d'attelage et comment remorquer en toute sécurité.
- NE PAS remorquer la fendeuse de bûches la nuit ou dans des conditions de faible visibilité.
- Assurez-vous que la bonne taille de boule est utilisée.
- Ne dépassez pas les limites de charge de la boule d'attelage ou de l'attelage.
- Attachez et fixez les chaînes de sécurité avant le remorquage.
- Ne dépassez pas la vitesse maximale de remorquage de 45 mph.
- Évitez les virages serrés et les angles prononcés.
- Vérifiez le serrage de l'attelage avant le remorquage.
- Remplacez la boule d'attelage ou le coupleur s'ils sont endommagés.

11

FIRMAN®

MODEL: GS3301 REV00

NET WEIGHT: 675 LBS (306 KG)

MODELO: PESO NETO: 3301

MODÈLE: POIDS NET: 3301

DOM: SERIAL #: 3301

DOM: SERIAL #: 3301

DATE FAB.: NO SÉRIE: 3301

FIRMAN POWER EQUIPMENT INC. 8644 W. Ludlow Dr. Peoria, AZ 85381 1-844-347-6261

MADE IN CHINA HECHO EN CHINA FABRIQUÉ EN CHINE

English

10

Customer Service: 1-844-FIRMAN1

M

ASSEMBLY

Your log splitter requires some assembly. If you have any questions regarding the assembly of your log splitter, call our help line at 1-844-347-6261. Please have your serial number and model number available.


Tools

- Large Philips Screw Driver
- Hammer or Crowbar
- Band Cutter
- 10mm, 13mm, 14mm, 17mm, 18mm, 19mm, 32mm and 41mm Wrenches
- Torque Wrench

STEP 1: Unpack Unit

- 1.1 Set the shipping crate on a solid, flat surface.
- 1.2 Carefully cut the shipping bands and remove the bolted side of the shipping crate.
- 1.3 Locate all hardware and components on GS3301 Parts Diagram and Parts List before beginning assembly.

Tool	
Ref. #	Description
1	Band Cutter
2	10mm wrenches and/or socket ratchet
3	13mm wrenches and/or socket ratchet
4	17mm wrenches and/or socket ratchet

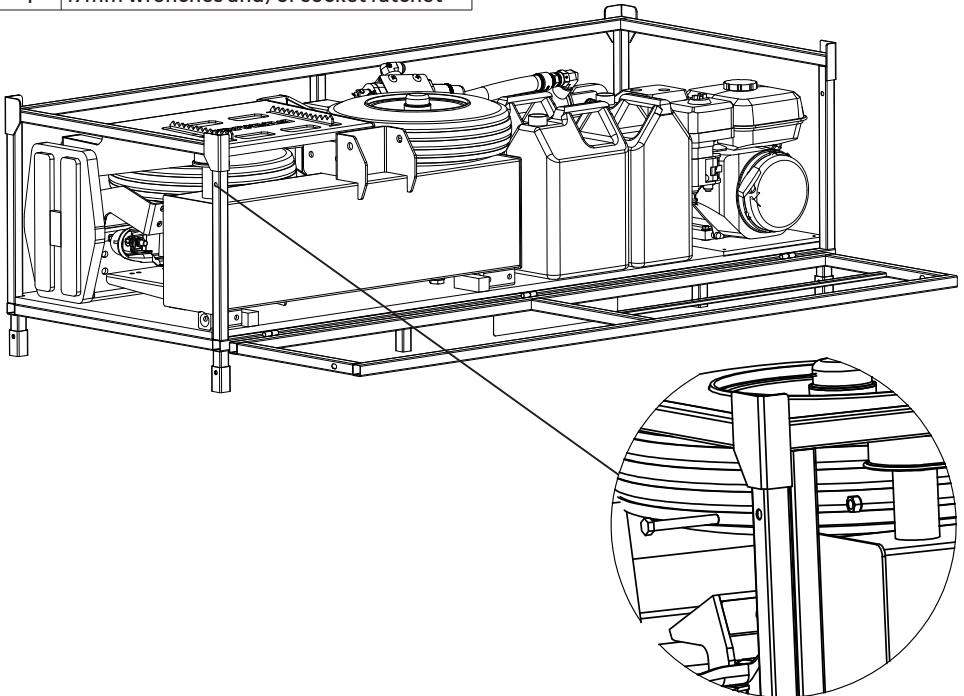


Step 2: Install the Wheels

- 2.1 Remove the oil tank (48) and wheel assembly (103) from the steel pallet and place them on a horizontal surface.
- 2.2 Install the wheel axle of the wheel into the bushing at the bottom of the oil tank, aligning it with the mounting holes.
- 2.3 Secure the wheel with the M10*55 bolts(45) (Torque to 35.4 lbf-ft (48 N·m)), flat washers Ø10 (46), and M10 nylock nuts (47).
- 2.4 Complete the installation of the wheel on the other side by following the above operations.

Parts List			
Ref. #	Description	Part #	QTY.
45	Bolt M10*55	710718008	4
46	Washer Ø10	710717003	8
47	Lock Nut M10	710717075	4

Tool	
Ref. #	Description
1	2*17mm wrenches and/or socket ratchet

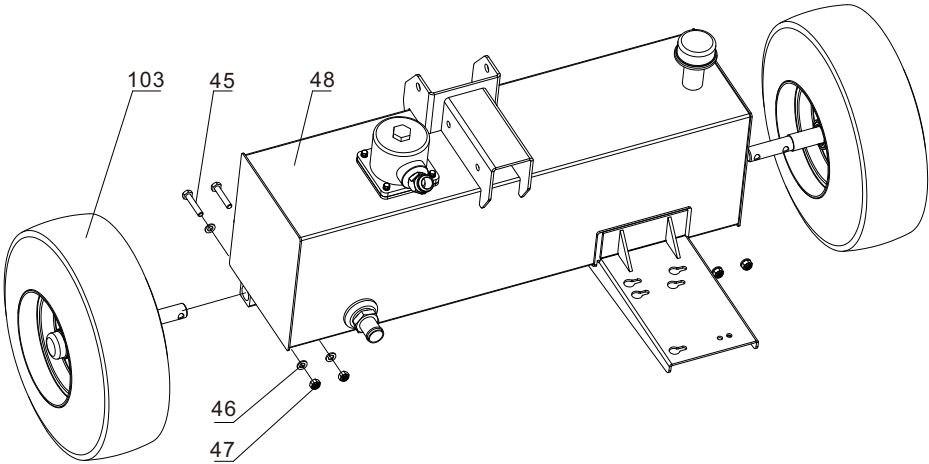


Step 3: Install The Tongue

- 3.1 Rotate the tongue stand (104) down and lock into the extended position following the steps listed below. Secure the tongue assembly(105) to the hydraulic tank (48) using M12*110 screws (50)(Torque to 61.2 lbf-ft (83 N·m)), M12 flat washers (2) and M12 nylock nuts (7).

Parts List			
Ref. #	Description	Part #	QTY.
50	Bolt M12 * 110	710717133	2
2	Washer Ø12	710717007	4
7	Lock Nut M12	710717008	2

Tools	
Ref. #	Description
1	18mm wrenches and/or socket ratchet
2	19mm wrenches and/or socket ratchet

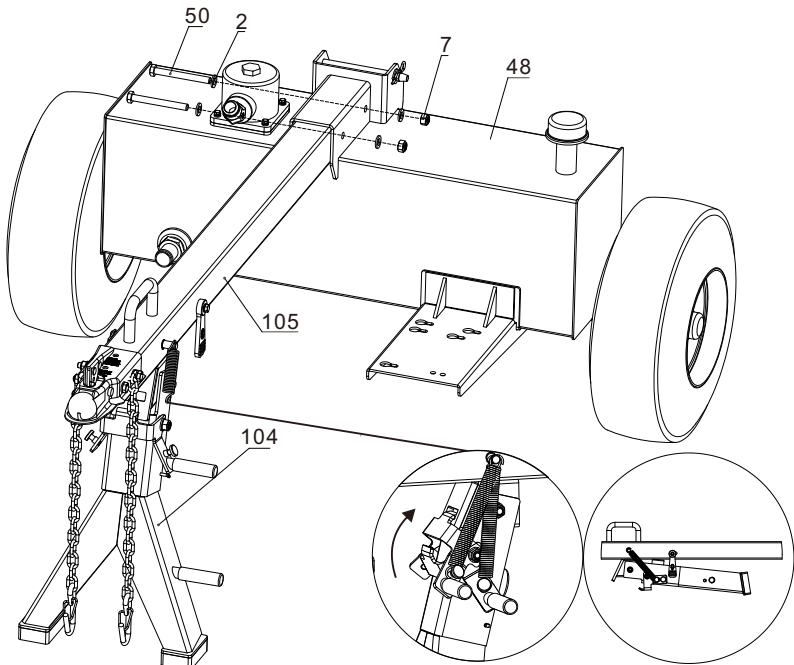

To lock the tongue stand

- 3.2 Rotate the tongue stand clockwise as far as it will go using the fixed handle on the stand.
 3.3 Rotate the stand lock attached to the tongue stand clockwise. Verify that the tongue stand is locked and will not inadvertently rotate.

To unlock the tongue stand

- 3.4 Use your foot or hand to rotate the tongue stand lock counter clockwise.
 Lift the tongue from the handle to unweight the tongue stand.
 Gentle push the tongue stand allowing the springs to pull the stand under the tongue stopping with the rubber bumper.
 3.5 Attach the rubber strap from the tongue main tube to the hook on the stand to prevent unwanted movement and bouncing during towing.


ASSEMBLY

Step 4: Install The Engine

- 4.1 Remove the Engine (71) from the wooden board by removing the red color bracket and red colored bolt.
- 4.2 Set the engine on the platform, dropping the bolt heads through the tear drop hole.
- 4.3 Slide the engine to align the 4th hole.
- 4.4 At this point the user can place a single washer under the engine to ensure equal pressure on the base of the engine.
- 4.5 Tighten all the hardware.

Parts List			
Ref. #	Description	Part #	QTY.
74	Bolt M8 * 40	710718006	4
23	Washer Ø8	710717045	1
24	Lock Nut M8	710717044	1
46	Washer Ø10	710717003	1

Tools	
Ref. #	Description
1	13mm wrenches and/or socket ratchet


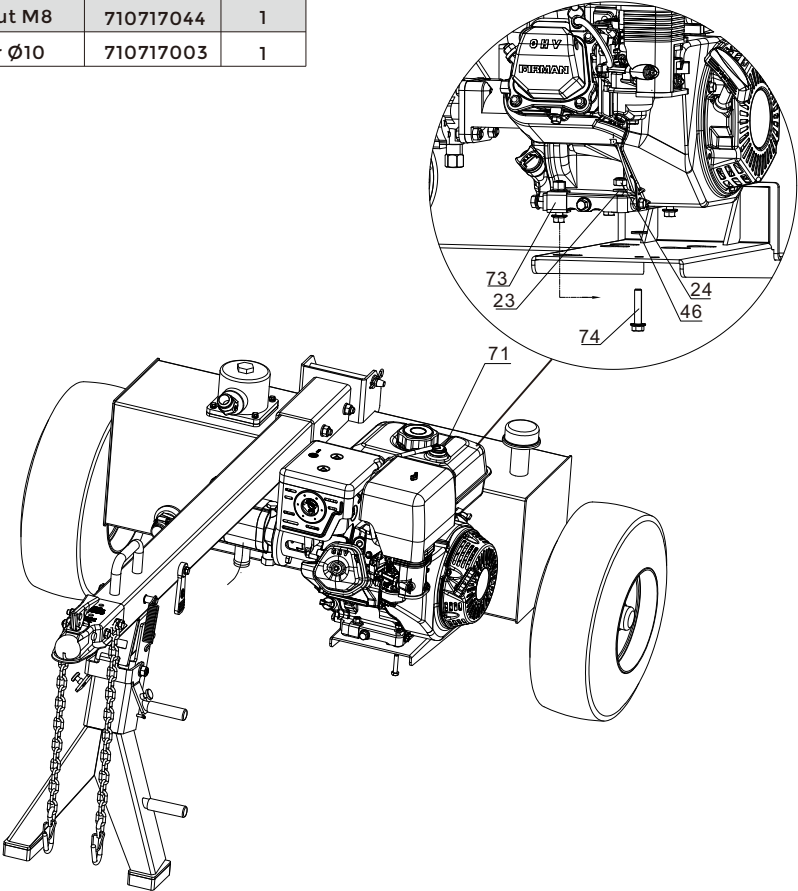


Step 5: Install Beam Pivot/Beam Lock

- 5.1 Remove the beam from the pallet by removing two red colored bolts. This step requires multiple people to ensure safety and avoid injury. Use a hammer or crowbar to remove the wooden block attached to the base of the pallet so that the beam can be slid out.
- 5.2 Stand the beam upright.
- NOTICE** Stand the beam up vertically using 2 or more people.

Parts List			
Ref. #	Description	Part #	QTY.
2	Washer Ø12	710717007	2
7	Lock Nut M12	710717008	4
19	Bolt M12*30	710718002	2
20	Beam Pivot	710718252	1
27	Assy, Beam Lock	710418026	1

Tools	
Ref. #	Description
1	18mm wrench and/or socket ratchet
2	19mm wrench and/or socket ratchet
3	Hammer or crowbar

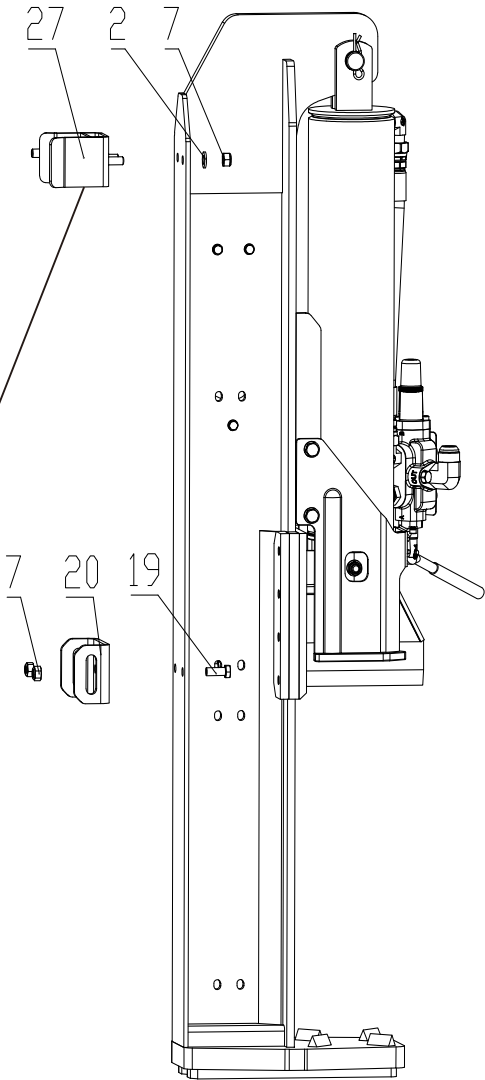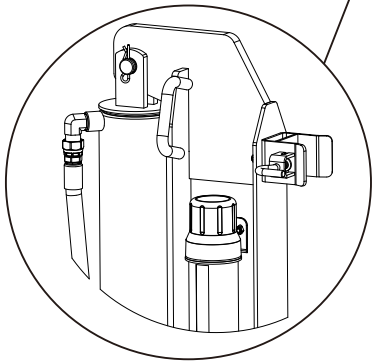

NOTICE When fully assembled, the pull pin of the beam lock must be positioned on the same side as the slot in the tongue.




ASSEMBLY

Step 6: Install the Beam

- 6.1 Roll the tank into position so the pivot holes of the tank and beam are aligned.
- 6.2 Insert the beam pin (49) and secure with Ø16 washer (51) and R-pin (26).

Parts List			
Ref. #	Description	Part #	QTY.
49	Beam Pin	710718317	1
51	Washer Ø16	710718032	1
26	R-Pin	710717113	1

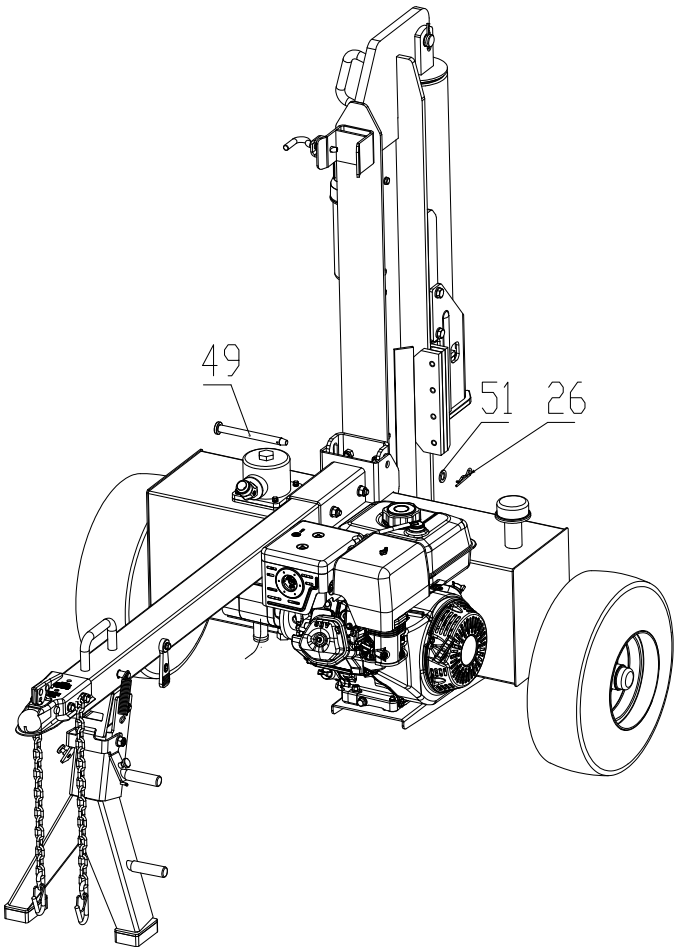

WARNING! The beam is extremely heavy and shall only be handled with 2 or more people.
To avoid muscle strain or back injury DO NOT try and lift or handle the beam without assistance.



Step 7: Install the Hoses

NOTICE Red shipping plugs must be removed from hydraulic pump prior to installing hoses. The operating handle of the hydraulic valve may be tied during transportation, and the straps need to be removed before installing the handle with the clevis pin.

NOTICE The Pump-Valve Hydraulic Hose(High Pressure) and Valve-Tank Hydraulic Hose(Low Pressure) may be preassembled by the factory, check your hoses per below instructions to ensure proper assembly.


Oil Inlet Hose

- 7.1 Using the provided hose clamps, connect one end of the clear suction hose (56) to the suction fitting port (A) and the other end to the pump inlet (B).Securely tighten the clamps on both ends of the suction hose with 14mm wrench/socket . Torque to 2.9 lbf-ft - 4.4 lbf-ft (4-6 N.m).

NOTICE After running the log splitter and the fluid has heated up the user should verify that the hose clamps are secure and remain tight.

Parts List			
Ref. #	Description	Part #	QTY.
55	Worm Gear Hose Clamp	710728035	2

Tool	
Ref. #	Description
1	14mm wrench/socket

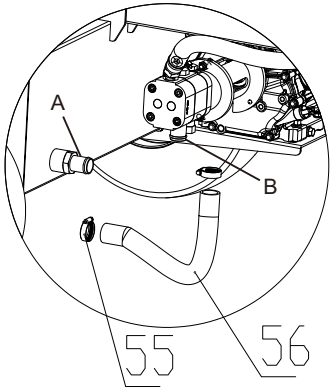

ASSEMBLY

Hydraulic Hose (Pump-Valve)

- 7.2 Connect the loose end of the pump-valve hydraulic hose (C) to the pump outlet (D). Securely tighten the high pressure hydraulic hose with a 32mm wrench. Tighten to 44 lbf-ft - 52 lbf-ft (60-71 N.m).

Hydraulic Hose (Valve-Tank)


- 7.3 Connect the loose end of the valve-tank hydraulic hose (E) to the tapered hydraulic fitting (F). The valve-tank hydraulic hose will only fit on this fitting to ensure correct connection. Securely tighten the hydraulic hose with a 41 mm wrench. Tighten to 52 lbf-ft - 66 lbf-ft (71-90 N.m).

Tool	
Ref. #	Description
1	32mm wrench
2	41mm wrench

NOTICE

Assemble the hoses with the log splitter beam in the vertical position as shown in the diagram below.

After tightening, ensure the hoses are not twisted or kinked.

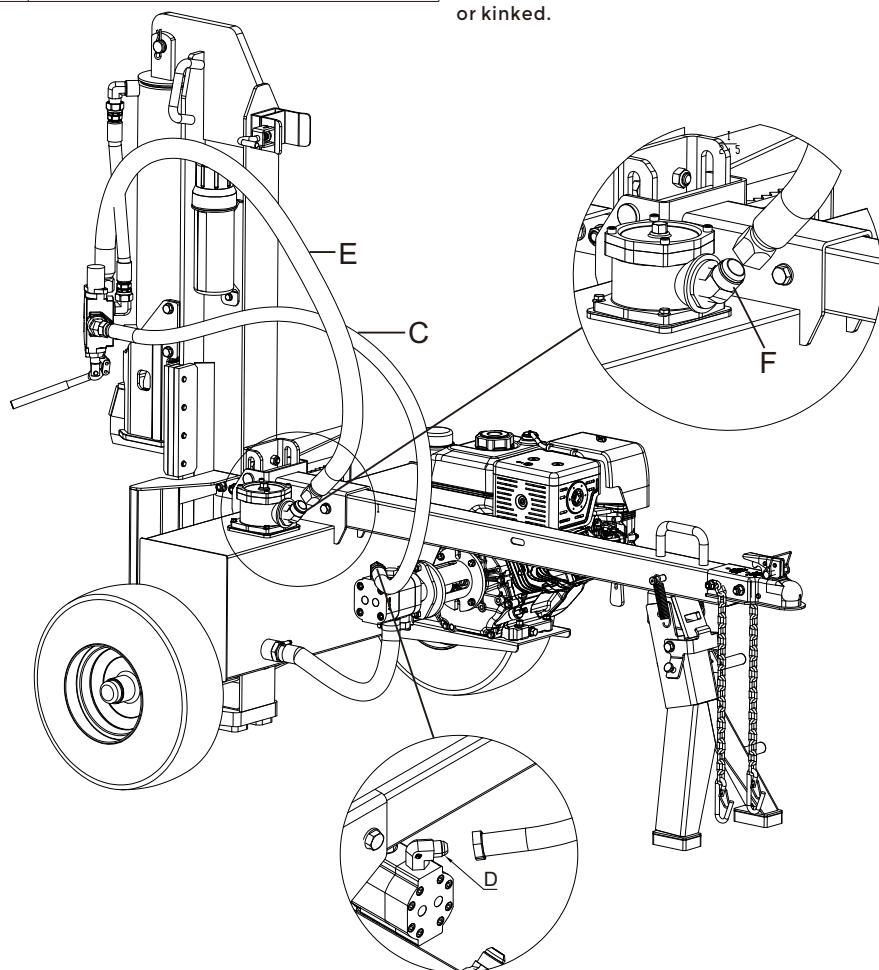

ASSEMBLY


Step 8: Install the Log Cradle and Log Table

Attach the Log Cradle (6) and Log Table(4) to the beam, secure using M12 lock nuts (7)and 12mm flat washers (2) (torque to 51.6lbf-ft (70 N.m)).

NOTICE The bolts used in this assembly step are welded to the log table.

Parts List			
Ref. #	Description	Part #	QTY.
2	Washer Ø12	710717007	4
7	Lock Nut M12	710717008	4
6	Log Cradle	710718286	1
4	Log Table	710718464	1

Tools	
Ref. #	Description
1	19mm wrench and/or socket ratchet

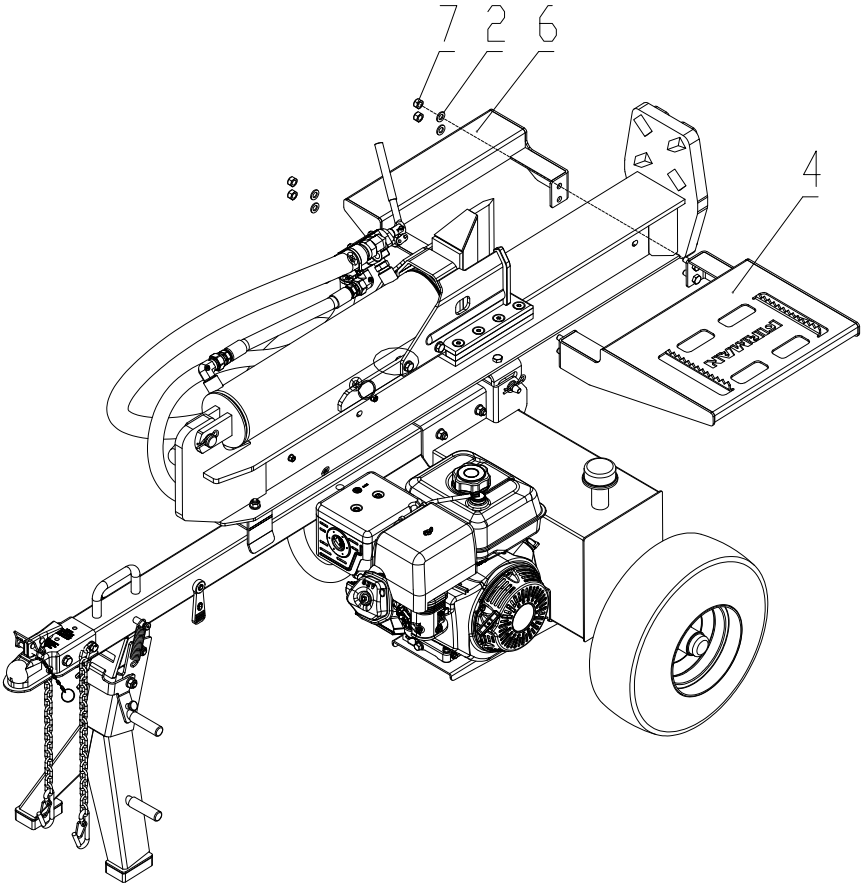

OPERATION

1. Location




DANGER! Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You **CANNOT** smell it, see it, or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas.

- Operate log splitter only outdoors and downwind at least 20 ft. (6 m) from occupied spaces with exhaust pointed away to reduce the risk of carbon monoxide accumulating.
- Install battery-operated carbon monoxide alarms or plug-in carbon monoxide alarms with battery back-up according to the manufacturer's instructions. Smoke alarms cannot detect carbon monoxide gas.
- Do not run this log splitter inside homes, garages, basements, crawlspaces, sheds, or other partially enclosed spaces even if using fans or opening doors and windows for ventilation. Carbon monoxide can quickly build up in these spaces and can linger for hours, even after this product has shut off.
- If you start to feel sick, dizzy, weak or your home's carbon monoxide alarm sounds, get to fresh air right away. Call emergency services. You may have carbon monoxide poisoning.

Carbon Monoxide Alarm(s)

Install carbon monoxide alarms inside your home. Without working carbon monoxide alarms, you will not realize you are getting sick and dying from carbon monoxide poisoning.

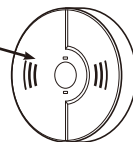

Prevent Carbon Monoxide (CO) Poisoning

Use outdoors and downwind at least 20 ft. (6 m) from any home. Point exhaust away from all homes and occupied spaces. Install CO alarms inside your home.




Reduce Risk of Fire



WARNING! Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death or serious injury.

- Keep log splitter at least 5 ft. (1.5 m) from any structure, trees or vegetation over 12 in. (30 cm) in height.
- Select an outdoor site that is dry and protected from the weather. Do not move log splitter indoors to protect it from the weather.
- Do not locate the log splitter under a deck or other similar structure that may confine heat and airflow.

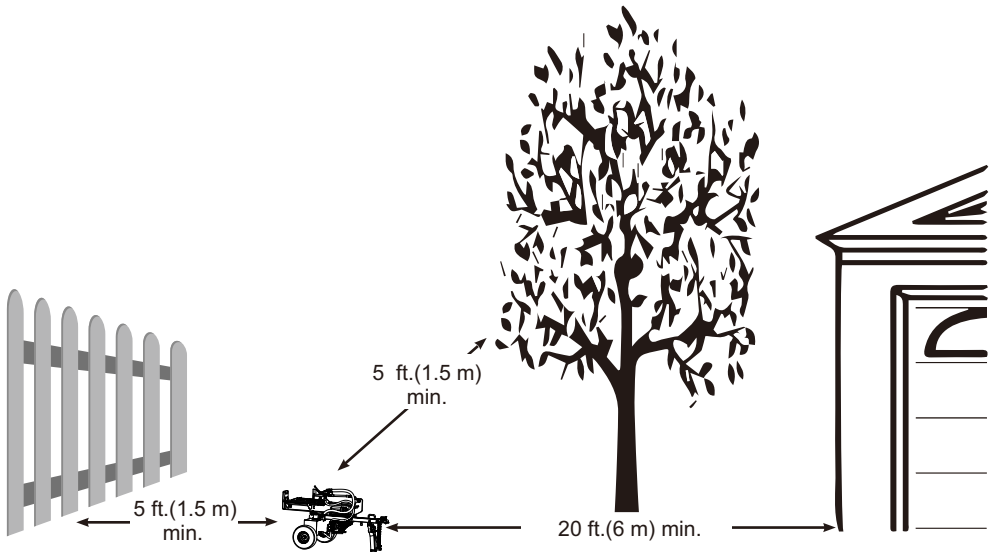


OPERATION

2. Oil and Gasoline


Add Engine Oil

We recommend using SAE 10W-30 API SJ or higher oil for best performance. Do not use special additives. Ambient temperature determines the proper oil viscosity for the engine. Use the chart to select the proper oil for the outdoor temperature range expected.

NOTICE Do not attempt to crank or start the engine before it has been properly filled with the recommended type and amount of oil. Damage due to operation with no oil will void your warranty.

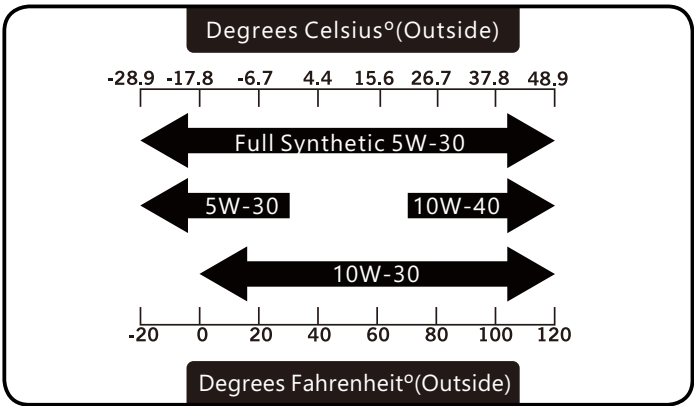

- 1.Place log splitter on a flat, level surface.
- 2.Clean area around oil fill and remove yellow oil fill cap/dipstick.
- 3.Wipe dipstick clean.

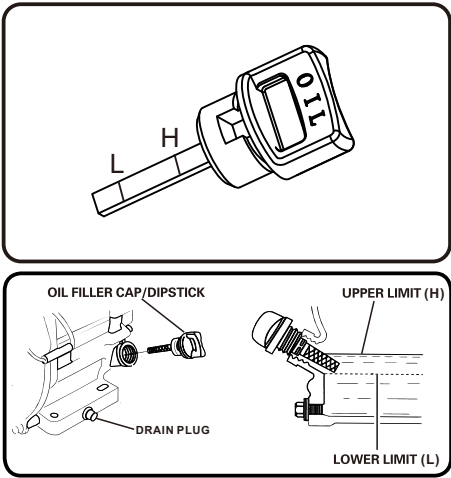

4. Using oil funnel, slowly pour contents of provided oil bottle into oil fill opening until oil reaches upper limit "H" mark on the dipstick. Be careful not to overfill. Overfilling could cause engine starting problems or engine damage.
5. Replace oil fill cap/dipstick and fully tighten.
6. Oil level should be checked prior to each use or at least every 8 hours of operation. Keep oil level maintained.

Low Oil Shutdown

The log splitter is equipped with a low oil shutdown. If the oil level drops below the minimum required level, a sensor will activate an internal switch stopping the engine. If the engine shuts off and the oil level is within specifications, check to see if log splitter is sitting at an angle. Place log splitter on an even surface to correct this. If engine fails to start, the oil level may not be high enough to deactivate the internal low oil level switch. Make sure the sump is completely full of oil to the upper limit (H). Do not operate engine until oil level issue is corrected. Contact FIRMAN customer service.

Add Gasoline



WARNING! Fuel and its vapors are extremely flammable which could cause burns or fire resulting in death or serious injury.

- Turn engine OFF and let it cool at least 2 minutes before removing fuel cap.
- Do Not refuel or move log splitter when engine is running.
- Move log splitter outdoors prior to adding or draining fuel.
- Keep fuel away from any ignition sources.
- Do not overfill tank, allow space for fuel expansion.
- If any fuel spills, wait until it evaporates before starting engine.
- Check and replace fuel lines, tank, cap, and fittings prior to each use if any damage or leaks are found.

Fuel must meet these requirements:



- Clean, fresh, unleaded gasoline with a minimum of 87 octane.
- For high altitude use, see Operation at High Altitude.
- Gasoline with no more than 10% ethanol is acceptable.



OPERATION

NOTICE Do not mix oil in gasoline or modify engine to run on alternate fuels not described in this manual. Use of unapproved fuels could damage engine and will not be covered under warranty.

- 1. Clean area around fuel fill cap, remove cap.
- 2. Slowly add unleaded fuel to fuel tank. Be careful not to fill above the RED fuel level indicator. This allows adequate space for fuel expansion.

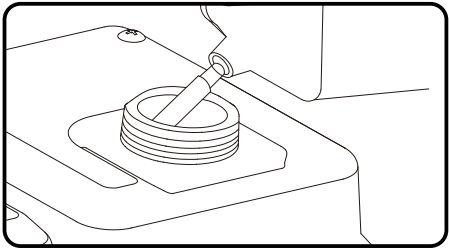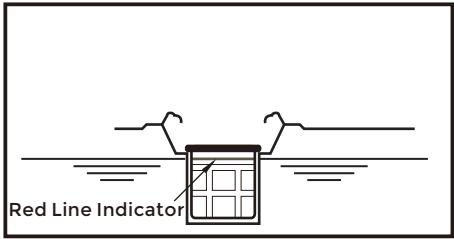

- 3. Install fuel cap and let any spilled fuel evaporate before starting engine.

Operation at High Altitude

At altitudes over 5,000 feet (1524 meters), a minimum 85 octane gasoline is acceptable. Engine power will be reduced approximately 3.5% for every 1000 feet (305 m) of elevation above sea level. High altitude may cause hard starting, increased fuel consumption and spark plug fouling. To operate at high altitudes FIRMAN can provide a high altitude carburetor main jet. The alternative main jet and installation instructions can be obtained by contacting Customer Support.

	389cc	Altitude
Altitude main jet 1	346713004	3000-6000Feet (914-1828 m)
Altitude main jet 2	346713005	6000-8000Feet (1828 - 2438 m)

NOTICE Operation using an alternative main jet at elevations lower than the recommended minimum altitude can damage the engine. For operation at lower elevations, the standard main jet supplied must be used. Operating the engine with the wrong main jet may increase exhaust emissions, fuel consumption and reduce performance.



Operation at High Ambient conditions

Your FIRMAN Power Equipment product is designed and rated for continuous operation at ambient temperatures up to 104°F (40°C). The log splitter may be operated at temperatures ranging from 5°F(-15°C) to 122°F(50°C) for short periods. If the log splitter is exposed to temperatures outside this range during storage, the log splitter should be brought back within this range before operation. When operated above 77°F(25°C) there may be a decrease in power. Log splitter cycle time and ram force are subject to and limited by such factors as ambient temperature, altitude, engine conditions etc.



Add Hydraulic Oil

1. Make sure the log splitter is on a flat, level surface.
2. Remove vent cap (52) from the hydraulic oil tank.
3. Add 15 gal. (56 L) of hydraulic oil. AW32, AW46 & universal hydraulic oil are all acceptable types of fluid. Automatic transmission fluid can be used when operating in temperatures below 32°F (0°C).
4. Reinstall vent cap (52) after confirming oil level is at the upper-middle position on the dipstick. Do Not overfill.
5. Start engine and use the control valve handle to extend and retract wedge several times to remove air from the lines.
6. Reconfirm oil level is at the upper-middle position on the dipstick. Do Not overfill.
7. Check oil level daily and add as needed.

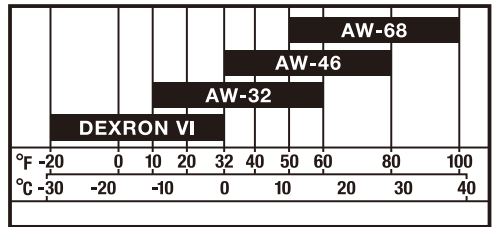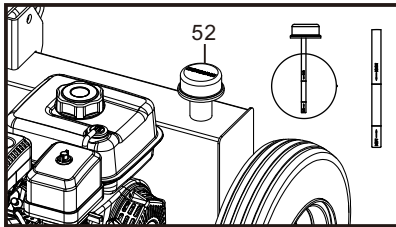

WARNING! Failure to follow these instructions could result in death or serious injury.

- DO NOT remove the hydraulic oil vent cap (52) when the engine is running or oil is hot. Hot oil can escape causing severe burns. Always allow the log splitter to cool completely before removing the hydraulic oil vent cap.
- High fluid pressure and temperatures are created in the hydraulic log splitter. Hydraulic fluid will escape through a pin-size hole opening and can puncture skin and cause severe blood poisoning.
- Inspect hydraulic system regularly for possible leaks. Never check for leaks with your hand while the system is pressurized. Seek medical attention immediately if injured by escaping fluid.
- Make sure all fittings are tight and secure before applying pressure. Relieve system pressure before servicing.
- Make sure the hydraulic hoses do not touch any hot surfaces or cutting areas.
- Hoses need to be positioned where they are clear from the engine and cutting wedge. To avoid death or serious injury always inspect the hoses before operating the log splitter.

OPERATION

Before Each Use Inspect the Log Splitter



WARNING! Before operating or using the log splitter, read and follow the instructions below and all safety information. Failure to follow these instructions could result in death or serious injury.

- ALWAYS use the log splitter for its intended use.
 - ONLY use the log splitter to split wood logs, length wise with the grain.
 - NEVER modify, alter or change the log splitter in any way, modifications will void the warranty.
 - NEVER attach a rope, cable or other device to the control lever on the log splitter.
 - Only operate the log splitter in daylight or good artificial light.
 - NEVER leave the log splitter unattended while the engine is running.
 - DO NOT change the splitting position with the engine running. Contact with the muffler can cause serious burns.
 - ALWAYS make sure the beam is in the locked position when splitting in the horizontal or vertical orientation.
 - DO NOT let the beam drop as it could crush fingers or cause damage to the log splitter.
 - NEVER operate or let anyone else operate, the log splitter while under the influence of alcohol, drugs, or medication.
1. Check the hydraulic oil level and visually inspect all hoses, attachments and cylinder for loose fittings, leaks, cracks, fraying or other damage.
 2. DO NOT operate the log splitter if there is any indication of damage.
 3. Inspect the engine and make sure the oil level is correct before operating. Clean and Inspect the spark arrestor regularly (follow spark arrestor maintenance schedule).
 4. The tires need to be fully inflated and in good condition. Reference the tire sidewall for recommended tire pressure.

WARNING! Before towing the log splitter, read and follow the instructions below and all safety information. Failure to follow these instructions could result in death or serious injury.

- Making sure the Log Splitter is securely attached to the vehicle is the responsibility of the owner/operator.
- Failure to securely attach the Log Splitter can cause loss of control of the vehicle or the log splitter being separated from the towing vehicle.
- Move the fuel shutoff to "OFF" before towing the log splitter.
- DO NOT over inflate tires. Serious injury can result if tires fail.
- DO NOT tow the log splitter if the tires are worn or will not hold air.
- DO NOT exceed the maximum 45 MPH (72 KM/H) towing speed and check local, state, and federal requirements before towing on any public road.
- Always use safety chains. Secure and lock the log splitter to the vehicle hitch before moving.
- Drive safely. Be aware of the added length of the log splitter. When backing up, using a spotter outside the vehicle is recommended.
- Never ride or transport cargo on the log splitter.
- Turn off the vehicle before leaving the log splitter unattended.
- Block the log splitter wheels to prevent unintended movement.
- ALWAYS disconnect your log splitter from the towing vehicle before operating it.
- Do not tow the log splitter at night or in low visibility.

Transporting the Log Splitter

1. Lower the beam to its horizontal position. Make certain the beam is locked securely with the horizontal beam pin.
2. Rotate the tongue stand to the horizontal position for transportation.
 - a) Use your hand or foot and rotate the tongue lock counterclockwise. The stand is free to rotate under the tongue.
 - b) With the help of another person, support the tongue and pivot the tongue stand up to the transporting position.
 - c) Use the the rubber strap to prevent the stand from inadvertently dropping during towing.
3. Pull the Latch Assembly on the Receiver up and into the open position. Position the Receiver of the Log Splitter over and onto the tow vehicle's 2" (51 mm) tow ball.

4. Close the Latch Assembly on the Receiver to lock it onto the Tow Ball. Attach the towing Safety Chains (81) to the tow vehicle ensuring there is enough slack for turning.

NOTICE When attaching the Safety Chains, Attach the left chain to the right anchor of the tow vehicle and the right chain to the left anchor of the tow vehicle so that that the Safety Chains cross each other under the Ball Hitch.

When you place the receiver onto the ball and lock into place, the receiver should not have vertical movement. There should be resistance to the latch assembly when locking.

5. Insert a receiver Locking Pin, not provided, into the hole in the Latch Assembly.

Changing Beam from Horizontal to Vertical Orientation

When logs are too heavy to lift, the log splitter beam can be changed to the vertical orientation. Always allow the log splitter to cool completely before changing from horizontal to vertical orientation.

To change from horizontal to vertical orientation:

1. Disengage horizontal beam pin that locks the beam to the tongue (figure A).
2. Standing alongside the hydraulic cylinder, (opposite side from the engine) firmly grasp the handle on the beam and lift upward while pushing the beam back until upright. Once the beam is upright, lock the beam (figure B).

NOTICE The beam should only be in the vertical position on flat ground. Uneven ground can cause the beam to be unstable.

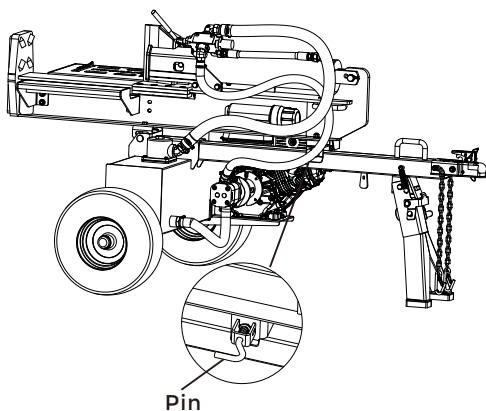


Figure A

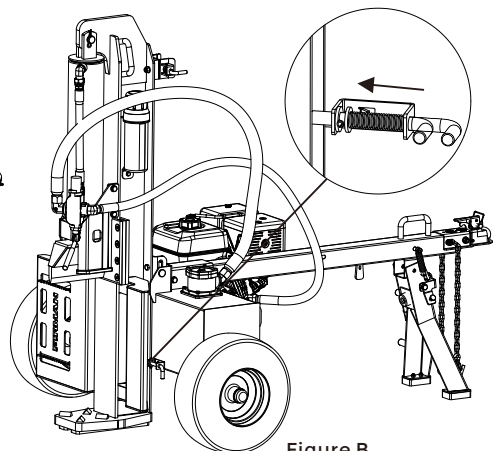


Figure B


To change from vertical to horizontal orientation, reverse steps.

OPERATION


Starting the Engine

The log splitter must have at least 5 feet of clearance from combustible material. The log splitter needs to be on a dry and level surface with good footing. Do not work in mud, ice, brush or snow. When using the log splitter the operator zone must be maintained at all times.

Only operate log splitter from operator zone shown below.

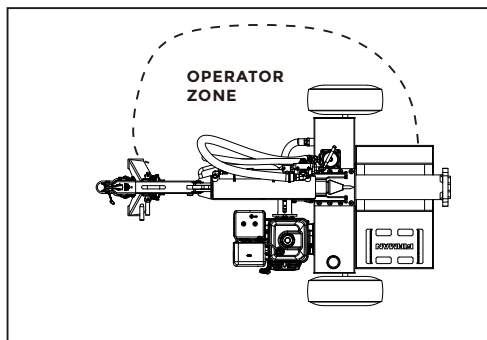


Horizontal

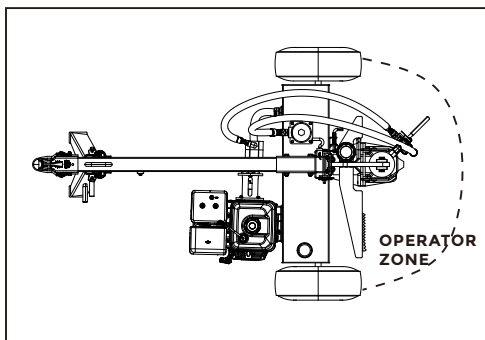


Vertical

1. Before using the log splitter, check for loose or missing parts and for any damage which may have occurred during shipment. Ensure spark plug, muffler, fuel cap, and air cleaner are all in place.
2. Move log splitter outdoors to safe operating location downwind and at least 20 feet from any occupied spaces.

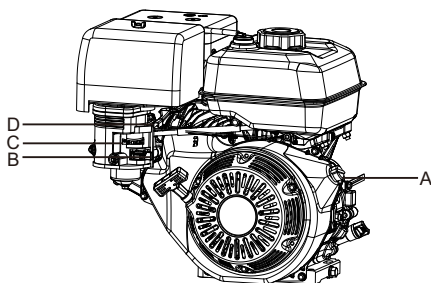

3. Rotate engine switch (A) to "ON"(I) position.
4. Move the fuel valve (B) to the "ON" position.
5. Move the choke lever (C) to the "Choke" position.
6. Move the throttle lever (D) to the "Fast" position.
7. Pull the starter cord slowly until resistance is felt and then pull rapidly.
8. As engine warms up, move the choke lever (C) to "Run" position.

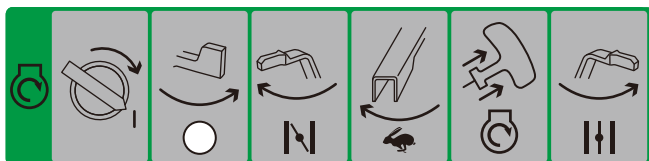


Stopping the Engine

1. Rotate the engine switch(A) to the "OFF" position.
2. Move the fuel valve(B) to the "OFF" position.

Always ensure that the Fuel Valve and the Engine Switch are in the "OFF" position when the engine is not in use.

Log Splitter Operation

1. ALWAYS wear eye and ear protection, safety shoes or heavy boots, gloves, and protective clothing.

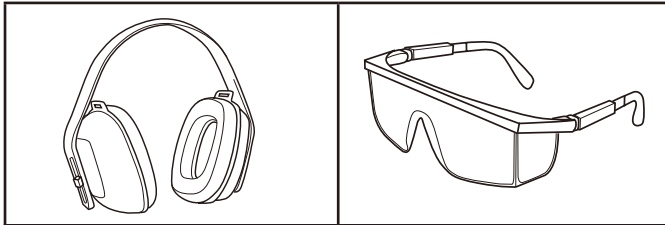

2. Block tires and ensure support leg is secure to prevent unintended movement of the log splitter during operation.
3. Set log splitter in either the horizontal or vertical position.

NOTICE HORIZONTAL position is used for lighter logs that can easily be loaded onto the beam. VERTICAL position is used for light logs as well as heavy logs that are difficult to load onto the beam. Back injury can result from lifting logs onto the log splitter if proper lifting techniques are not used.

4. Before use, verify that the beam is locked in the horizontal or vertical position. The pin on the beam lock must be engaged with the tongue to prevent the beam from inadvertently rotating.
5. Load a log onto the beam against the foot plate (MAX LOG LENGTH - 20.5 in.[52 cm]).
6. Make sure all limbs are clear of crush zones.
7. Push the control valve handle forward (towards the foot plate) to split the log.
8. Push the auto control valve handle backward to return the wedge to its original position.
9. Clear the split wood from the operator zone.

- If the oil is foamy that means there is air mixed in with the oil. Not enough fluid in the tank and the splitting will not be consistent, loss of splitting power can result.
- If a log gets stuck, embedded or will not split completely, push the control handle in the reverse direction and allow the log splitter to strip the log from the wedge.
- ALWAYS keep hands clear of the log and wedge while it is retracting.
- The hydraulic cylinder stroke is designed so the wedge stops approximately 1.2 in.(3.0 cm) from the foot plate.

Maintenance - Storage

MAINTENANCE SCHEDULE

Follow the service intervals indicated in the following maintenance schedule.

Service your log splitter more frequently when operating in adverse conditions.

Contact our Technical Support Team at 1-844-347-6261 to locate the nearest FIRMAN service dealer for your log splitter or engine maintenance needs.

EVERY 8 HOURS OR DAILY

- Check engine and hydraulic oil levels
- Clean around air intake and muffler
- Remove debris from the beam surface. Apply a thin layer of grease or oil to the beam surface to improve wedge movement and reduce surface rusting.

FIRST 25 HOURS

- Change engine oil

FIRST 50 HOURS

- Change the hydraulic oil and oil filter

EVERY 50 HOURS OR EVERY YEAR

- Clean air filter foam element
- Change engine oil if operating under heavy load or in hot environments

EVERY 100 HOURS OR EVERY YEAR

- Replace air filter
- Change engine oil
- Clean/adjust spark plug
- Check/adjust valve clearance*
- Clean spark arrestor
- Clean fuel tank and filter*
- Change hydraulic oil
- Change hydraulic oil filter

EVERY 250 HOURS

- Clean combustion chamber*
- Inspect wheel bearings and repack bearing grease as needed.

EVERY 3 YEARS

- Replace fuel line*

* To be performed by knowledgeable/experienced owner or by authorized service center.

General Recommendations

Regular maintenance will improve the performance and extend the life of the log splitter. See any authorized dealer for service.

The log splitter's warranty does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain the log splitter as instructed in this manual.

Some adjustments will need to be made periodically to properly maintain your log splitter.

All service and adjustments should be made at least once every year. Follow the requirements in the maintenance schedule above.

NOTICE Once a year you should clean or replace the spark plug and replace the air filter. New spark plug and clean air filter assure proper fuel-air mixture and help your engine run at peak performance and last longer.

ENGINE MAINTENANCE

To prevent accidental starting, remove and ground spark plug wire before performing any service.

Change Engine Oil

Change engine oil every 100 hours. (for a new engine, change oil after 25 hours.)


If you are using your log splitter under extremely dirty or dusty conditions, or in extremely hot weather change the oil more often.

CAUTION! Avoid prolonged or repeated skin contact with used motor oil. Used motor oil has been shown to cause skin cancer in certain laboratory animals. Thoroughly wash exposed areas with soap and water.




KEEP OUT OF REACH OF CHILDREN. DON'T POLLUTE. CONSERVE RESOURCES. RETURN USED OIL TO COLLECTION CENTERS.

(a) On a level surface drain oil into a suitable container by removing the drain plug and the oil filler cap while the engine is warm.

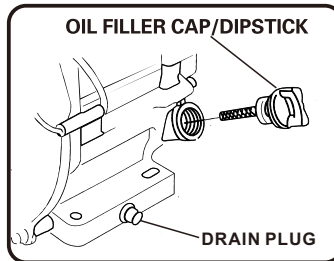

(b) Reinstall the drain plug and fill the engine with oil until it reaches the HIGH(H) level on the oil filler dipstick.

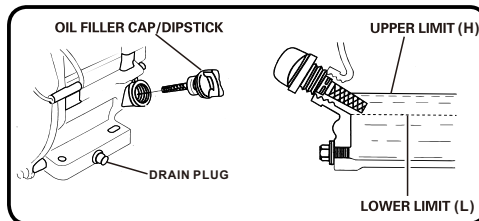


NOTICE We recommend using SAE 10W-30 API SJ oil for best performance. Other high-quality detergent oils (API SJ or higher) are acceptable. See *Oil and Gasoline*


Maintenance - Storage

Air Filter Maintenance

- (a) Unscrew wing nut to remove the air filter cover.
- (b) Remove the foam element from the air filter and wash in liquid detergent and water. Squeeze dry in a clean cloth.

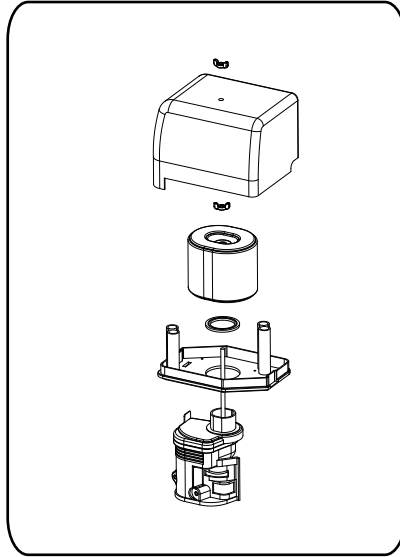

- (c) Saturate foam element with clean engine oil and squeeze in a clean cloth to remove excess oil.

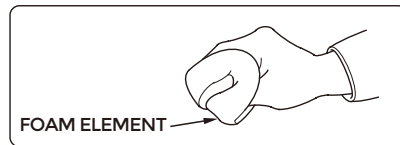


- (d) Reassemble the element. Reattach the air filter cover and tighten wing nut.

Spark Plug Maintenance


Changing the spark plug will help your engine start easier and run at peak performance.

- (a) Remove the spark plug boot.
- (b) Remove spark plug using provided wrench.

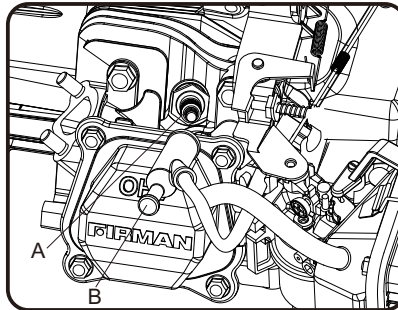

A- Spark plug
B- Spark plug boot

- (c) Inspect spark plug for damage and clean with a wire brush before reinstalling. Replace if damaged.
- (d) Adjust the electrode gap to 0.028 - 0.031 in. (0.7 - 0.8 mm).
- (e) Seat spark plug in position and thread by hand to prevent cross threading.
- (f) Tighten plug with provided wrench and put the spark plug boot back on spark plug.

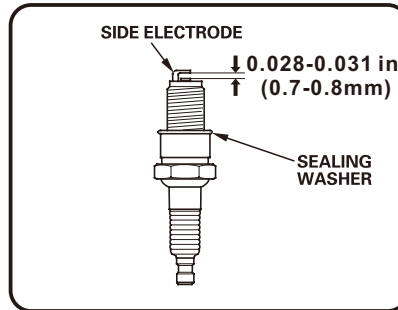

SPARK PLUG: TORCH F6RTC or equivalent

Maintenance Valve Clearance

Intake: 0.004 - 0.006 in. (0.10 - 0.15 mm)

Exhaust: 0.004 - 0.006 in. (0.10 - 0.15 mm)

Muffler and Spark Arrester




WARNING! Contact with muffler area could cause burns resulting in serious injury.

- Do not touch hot parts.
- It is a violation of California Public Resource Code, Section 4442, to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the exhaust system is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order. Other states or federal jurisdictions may have similar laws, reference Federal Regulation 36 CFR Part 261.52.


Maintenance - Storage

Inspect Muffler and Spark Arrester

1. Inspect the muffler for cracks, corrosion, or other damage.
2. Remove the screws securing the spark arrester in place and remove it from the muffler.

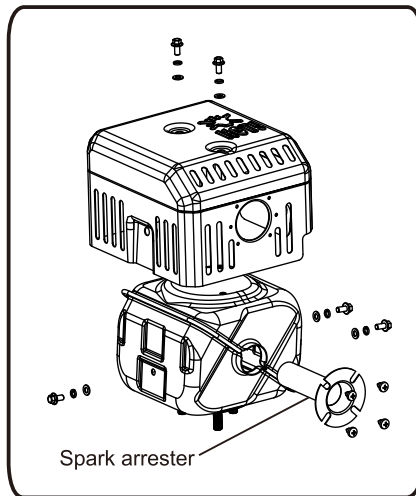

3. Carefully remove the carbon deposits from the spark arrester screen with a wire brush.

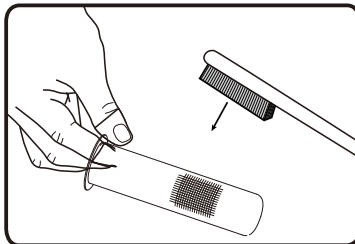

4. Replace the spark arrester if it is damaged. If replacement parts are required, make sure to use only FIRMAN original equipment replacement parts.
5. Position the spark arrester in the muffler and attach with the screws.


NOTICE Failure to clean or replace spark arrester may result in decreased engine performance.

Changing the Hydraulic Oil and Oil Filter

WARNING! Always shut off the engine, disconnect the spark plug, and relieve system pressure before cleaning, adjusting, or servicing the log splitter. Relieve system pressure by moving the control valve handle back and forth several times.

Change the oil and filter after the first 50 hours of use. Then every 100 hours or annually.

1. Confirm that the piston rod of the hydraulic cylinder is fully retracted into the cylinder and the engine is in the "off" state; close the fuel valve to prevent fuel leakage or accidental startup; move the control valve handle back and forth several times to release the accumulated pressure in the system; place a container with a capacity of not less than 15 gallons (57 L) under the hydraulic oil tank.
2. Locate the oil drain plug at the bottom of the hydraulic oil tank, unscrew and remove it slowly, and wait for the oil to drain completely into the container. During the drainage process, observe the oil flow to avoid any spillage.
3. After the fluid has completely drained from the tank, wrap 2-3 turns of new Teflon tape around oil tank drain plug and reinstall.
4. Locate the return filter at the top of the tank. Clean and wipe all debris near the filter to ensure that debris will not enter the system. It's best to perform the filter change and maintenance inside a sheltered area to prevent unintentional introduction of debris from entering the system.
5. Unscrew the 4xM8 screws (92) that fixes the filter top cap (93) to the filter housing. Remove the filter top cap and inspect it for any damage. Clean the top cap of the filter with isopropyl alcohol and a lint free rag and set it aside.
6. Using the handle, pull the filter element (94) out of the housing of the return filter. Discard the filter element in accordance with regulations to avoid pollution.
7. Carefully remove the filter o-ring (95) ensuring not to damage the o-ring in the process. Inspect the o-ring for tears or damage. Wipe the o-ring clean with a lint free rag.
8. If the fluid from the tank is drained and the filter housing is empty of fluid, it would be a good time to wipe the inside of the housing, cleaning it from any debris. Be sure to use a lint free rag and be cautious not to introduce contaminants.
9. Apply clean hydraulic fluid to the rubber areas of the new filter element (94) and firmly insert it into the filter housing. Make sure the filter element is fully seated.
10. Apply clean hydraulic fluid to the o-ring (95) and replace it within the housing.
11. Place the filter top cap (93) back onto the filter housing and retighten the M8 fixing screws. Do not over tighten the screws as it can crack the filter housing.
12. See OPERATION add hydraulic oil for hydraulic oil specifications and filling instructions.

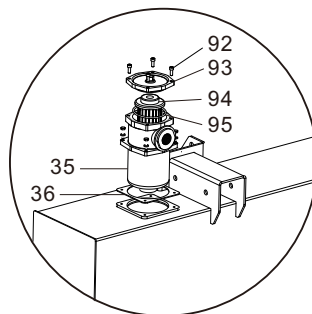

Long Term Storage

If the log splitter will not be used for more than 30 days, prepare it for long term storage as follows:

1. Retract the wedge to protect the rod from corrosion. The rod should be retracted after every use.
 2. Never store the machine with fuel in the fuel tank inside a building where ignition sources are present.
 3. Drain all fuel completely from the tank, fuel line and carburetor to prevent gum from forming. If log splitter is stored with fuel in the fuel tank, we recommend using a gas stabilizer to prevent sediment from gumming up the carburetor. If there is dirt or moisture in the fuel, drain the fuel tank. Completely fill the tank with fresh, unleaded gas and add the appropriate amount of fuel stabilizer. Run the engine for a short time to allow the stabilizer to circulate.
 4. Before storing the log splitter, stop the engine, wait at least five minutes to allow all parts to cool.
 5. Change the engine oil.
 6. Remove the spark plug and pour about ½ ounce (14.8 ml) of oil into the cylinder. Pull the engine recoil slowly to distribute the oil and lubricate the cylinder. Reinstall the spark plug.
- NOTICE** The use of a pressure washer or a garden hose to clean the log splitter is not recommended. The use of water will result in corrosion, shortening life and reducing serviceability.
7. Check the wedge slide for nicks and wear. Sharpen if needed.
 8. Apply a rust preventative (oil film or equivalent) to any bare metal areas on the wedge slide and on top of the beam.
 9. Using a soft bristle brush, clean the exterior of the unit removing all dirt, grease, or other foreign material. Remove dirt and debris from the cylinder head cooling fins and muffler area.
 10. To prevent rust, touch up painted surfaces if scratched or chipped.
 11. Be sure all hoses, nuts, bolts, and screws are securely fastened.
 12. Store the log splitter in a dry, protected place. If it is necessary to store outside, cover it with a tarp of similar protective material (especially the Engine). Avoid storage near corrosive materials.

Troubleshooting - Specifications

Problem	Possible cause	Solution
Engine does not start	Engine switch in "OFF" position; Engine fuel shut-off valve closed	Set switch in "ON" position. Open fuel valve.
	Engine is out of fuel	Add fuel (High octane, low ethanol)
	Unit under load during start-up	Cycle valve handle (move back and forth) to remove load; set valve to neutral position.
	Faulty spark plug; spark plug disconnected	Check the spark plug.
Engine starts but runs roughly	Oil level is low	Add oil
	Choke in wrong position	Adjust choke
	Spark plug wire loose	Attach spark-plug wire securely
Engine stops suddenly during operation	Engine is out of fuel	Add fuel
	Oil level is low - oil sensor may shutoff engine	Fill crank case to level indicated; Set up log splitter in flat, level surface.
	Valve bypass pressure set too high	Adjust valve bypass setting
Engine power level low; Engine overheats	Insufficient air intake	Check air filter; if needed clean or replace air filter. Check for blockage in air intake system.
Engine runs as if under load	Faulty pump or valve	Hydraulic fluid is not flowing smoothly through the system; check components
Ram/wedge moves slowly or unevenly	Air in the hydraulic system	Purge air by extending and retracting the wedge several times until the motion is smooth.
	Debris lodged in beam guides	Clear debris from beam.
	Low hydraulic fluid	Check oil level; add oil as needed.
	Pump stuck in 2nd stage	Contact customer service.
Oil leaking from fittings or hoses	Loose hydraulic fitting	Inspect fitting and install correctly.
	Faulty O-ring	Check O-ring fittings, Replace faulty or missing O-rings
Oil leaking from front of cylinder	Faulty cylinder seals	Recondition cylinder
	Scored or bent cylinder rod	Contact customer service
Wedge will not extend or retract	Control valve is faulty	Contact customer service.
	Hydraulic pump is faulty	Contact customer service.
	Low hydraulic oil	Check oil level; add oil as needed.
	Hydraulic cylinder is faulty	Replace cylinder seals
Wedge extends and retracts but will not build pressure to split wood	Faulty cylinder seal; Key has fallen out of pump or engine	Check drive keys in pump and engine; recondition cylinder
Wedge does not auto-return	Low hydraulic fluid	Check oil level; add oil as needed.
	Faulty control valve	Contact customer service.
Wedge extends but will not return	Faulty cylinder	Contact customer service.
Excessive bouncing while towing	Tires under-inflated	Inflate tires to pressure indicated on sidewalls.

For all other issues, contact authorized dealer or Firman customer service.


SPECIFICATIONS

Model	GS3301
Ram Force	33 Ton
Cycle Time	6 seconds
Hydraulic Tank Capacity	15 gal (56 L)
Max Log Length	20.5 in. (52 cm)
Coupler Ball Size	2 in. (5.1 cm)
Tire Size	18 in. (45.7 cm)
Max towing speed	45 MPH (72 KM/H)
Cylinder size	4.75 in. (12 cm)
Gear Pump	2-stage
Control Valve	Detent (auto-return)
Net Weight	675 lb. (306 kg)
Height	43.3 in. (110.0 cm)
Width	51.9 in. (131.8 cm)
Length	87.0 in. (221.0 cm)
Engine	
Model	SPE390
Displacement	389 cc
Type	4-Stroke OHV
Start Type	Recoil
Oil Capacity	38.3 fl. oz (1.1 L)
Gasoline Capacity	1.1 gal (4.2L)




PARTS DIAGRAM AND PART LIST

GS3301 PARTS DIAGRAM

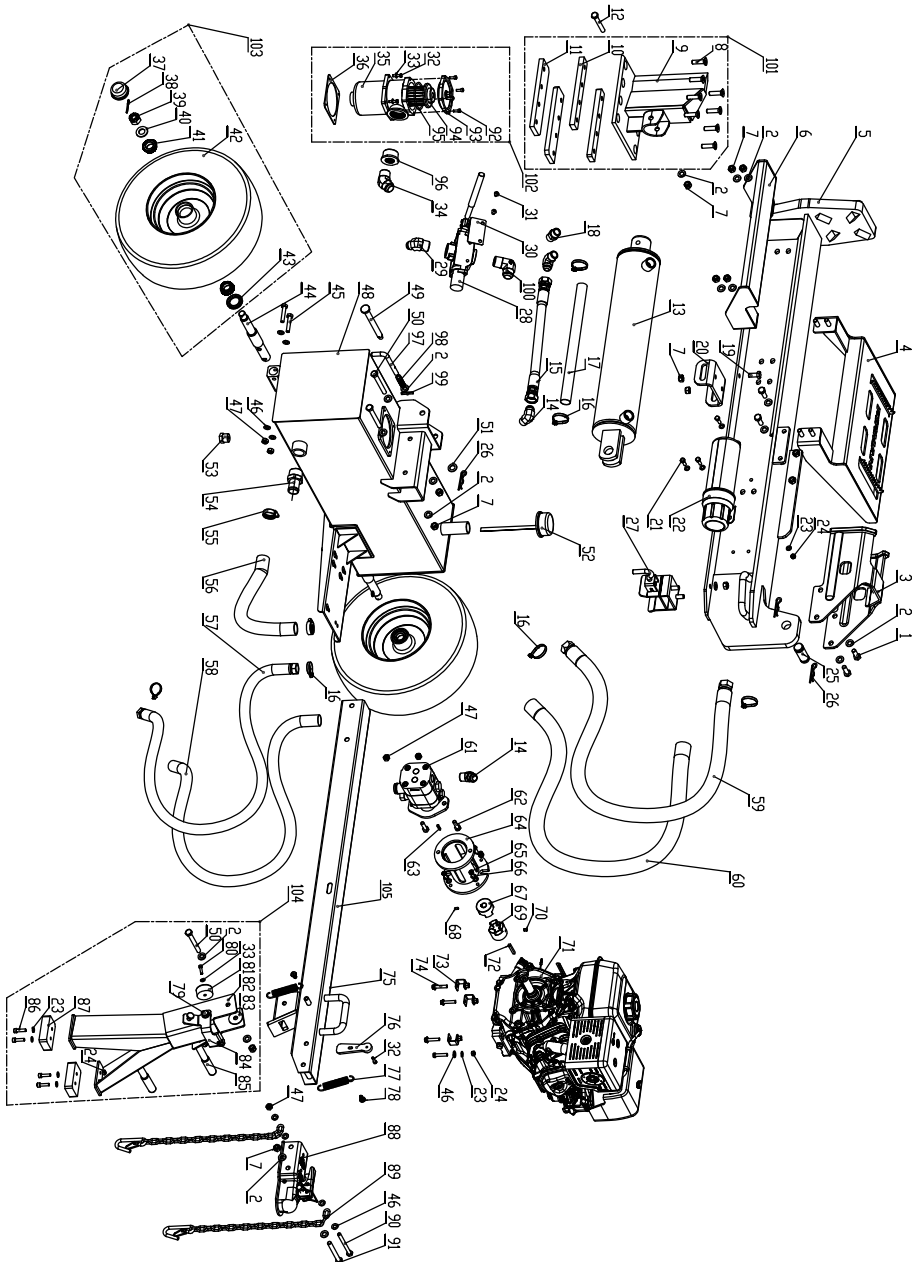

Parts Diagrams - Parts Lists

389cc ENGINE PARTS DIAGRAM

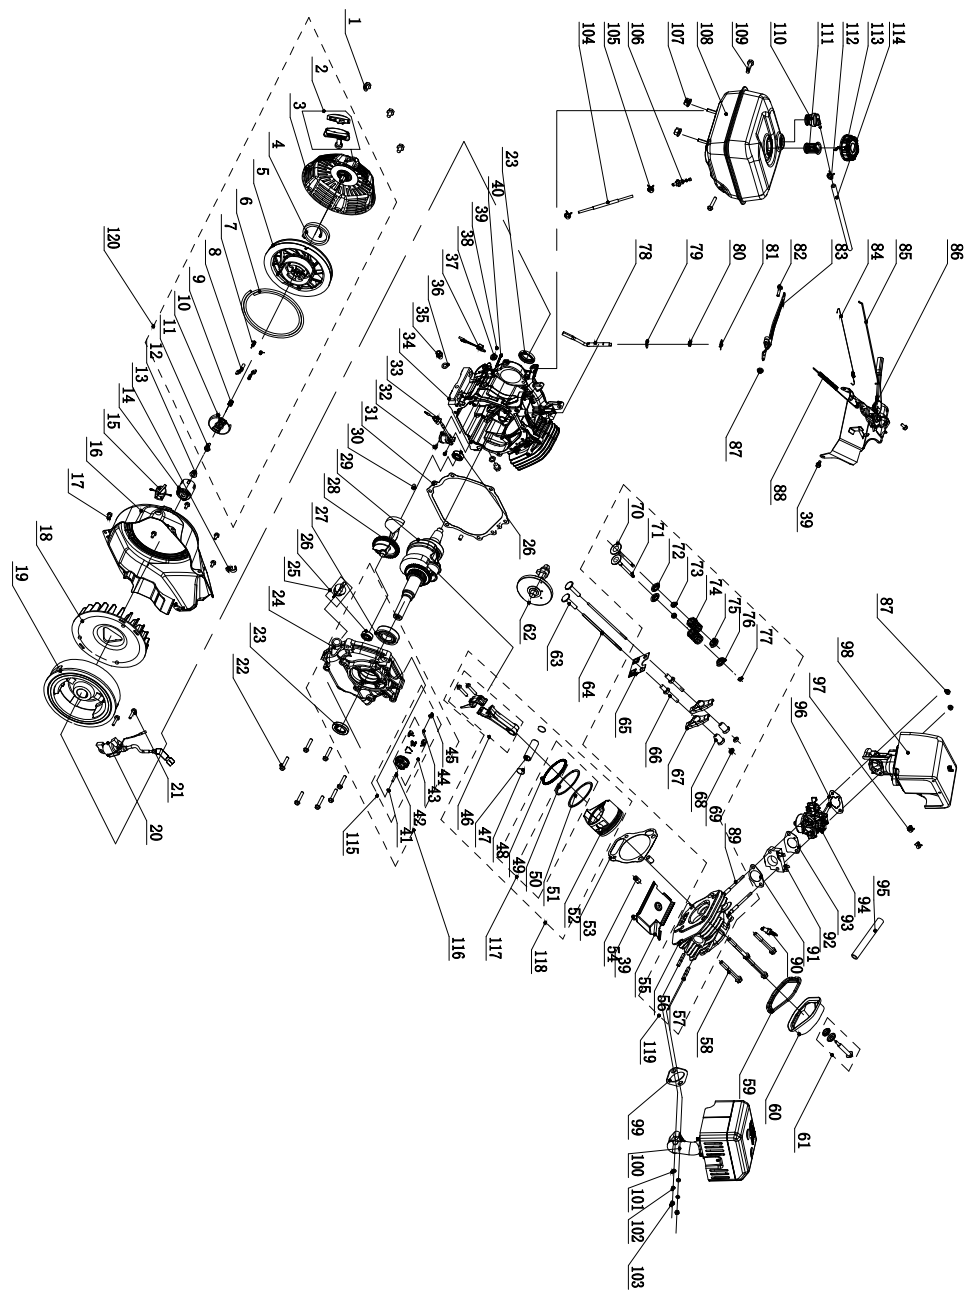

GS3301 LOG SPLITTER

NO.	Part Number	Description	Qty.	NO.	Part Number	Description	Qty.
1	710717103	Bolt M12x35	4	55	710718093	Clamp	2
2	710717007	Washer Ø12	23	56	710728035	Suction Hose, 1.25" x 450mm	1
3	710718290	Weldment, Stripper Cradle	1	57	710728021	Hydraulic Pressure Hose	1
4	710718464	Log Table	1	58	710728019	Hydraulic Hose Sheath	1
5	710718422	Beam	1	59	710728022	Hydraulic Return Hose	1
6	710718286	Log Cradle	1	60	710728041	Hydraulic Hose Sheath	1
7	710717008	Lock Nut M12	12	61	710418052	Pump	1
8	710718118	Bolt M12x45	4	62	710718012	Bolt M10x35	2
9	710718337	Weldment, Wedge, Medium	1	63	710718106	Flat Key 4.76 x 4.76 x 25	1
10	710718392	Plate, Wedge Spacer	2	64	710718098	Pump Mount	1
11	710718111	Plate, Wedge Lower Mount	2	65	710717041	Bolt 5/16".-24x1".	4
12	710718009	Bolt M12x90	1	66	710717048	Lock Washer Ø8	4
13	710418006	Hydraulic Cylinder	1	67	710718414	Pump Coupler	1
14	710718201	Hydraulic Fitting (3/4"NPT-3/4"JIC)	3	68	710717053	Set Screw M6 x 10	1
15	710728001	Hydraulic Pressure Hose	1	69	710718413	Engine Coupler	1
16	710728016	Cable Tie	6	70	710718107	Set Screw M8 x 10	1
17	710728020	Hydraulic Hose Sheath	1	71	710467012	Engine	1
18	710717059	Hydraulic Fitting (3/4NPT-3/4NPT)	1	72	710718105	Flat Key 6.3 x 6.3 x 49	1
19	710718002	Bolt M12x30	2	73	710718475	Engine Mounting Bracket	3
20	710718252	Beam Pivot	1	74	710718017	Bolt M8x40	4
21	710718003	Bolt M8x25	3	75	710718449	Weldment, Sd Tongue	1
22	710728043	Manual Canister	1	76	710728029	Rubber Strap, Tongue Stand	9
23	710717045	Washer Ø8	15	77	710718312	Spring	4
24	710717044	Lock Nut M8	8	78	710718038	Spring Retaining Screw	4
25	710718284	Hydraulic Cylinder Pin	1	79	710718076	Washer ø8	1
26	710717113	R-clip Pin	3	80	710718053	Bolt M6x25	1
27	710418026	Beam Locking Assy	1	81	710728033	Rubber Bumper, Tongue Stand	1
28	710418007	Control Valve	1	82	710718318	Weldment, Y-Ground Stand	1
29	710718213	Hydraulic Fitting (1NPT-3/4JIC)	1	83	710728032	Washer, Plastic Spacer	2
30	710717094	Valve Instruction Plate	1	84	710718373	Weldment, Stand Lock	1
31	710718041	Bolt M8x12	2	85	710728030	Rubber Grip	2
32	710718040	Bolt M6x25	5	86	710718054	Bolt M8x30	4
33	710717068	Washer Ø6	5	87	710728015	Rubber Foot, Tongue Stand	2
34	710718211	Hydraulic Fitting (1NPT-1JIC)	1	88	710418001	2-in. Ball Coupler	1
35	710718115	Return Oil Filter, Housing	1	89	710717137	Safety Chain with Hook	2
36	710728036	Gasket, Oil Filter	1	90	710718077	Bolt M10x115	1
37	710717024	Axle Pin	2	91	710718078	Bolt M12x105	1
38	710717023	Cotter Pin 4 x 36	2	92	710718112	Bolt M8x20	4
39	710718097	Castle Nut M20 x 2.5	2	93	710718113	Filter Cap	1
40	710717032	Washer Ø20	2	94	710718114	Filter Element	1
41	710717025	Wheel Bearing	4	95	710728042	O-ring, Filter	1
42	710728018	Wheel	2	96	710718116	Hydraulic Fitting, (M48 - 1"NPT)	1
43	710717026	Grease Seal	2	97	710718471	Pull Pin, Vertical Beam Lock	1
44	710718452	Axle	2	98	710718472	Compression Spring, Vertical Pull Pin	1
45	710718008	Bolt M10x55	4	99	710717064	Spring Pin, 6x35	1
46	710717003	Washer Ø10	13	100	710718212	Hydraulic Fitting (1NPT-1JIC)	2
47	710717075	Lock Nut M10	7	101	710418046	Wedge Assy.	1
48	710718434	Hydraulic Oil Tank	1	102	710418051	Return Oil Filter, Assy	1
49	710718317	Beam Pin	1	103	710418043	Wheel Assy.	2
50	710717133	Bolt M12x110,G8.8	3	104	710418050	Tongue Stand Assy.	1
51	710718032	Washer Ø16	1	105	710418047	Assy, Tongue, Complete	1
52	710418032	Vent Cap	1				
53	710718013	Tank Drain Plug	1				
54	710718094	Hydraulic Fitting,(1" NPT - 1-1/4")	1				

Parts Diagrams - Parts Lists

FIRMAN 389cc Engine

NO.	Part Number	Description	Qty.	NO.	Part Number	Description	Qty.
1	336723522	Flange Bolt M6 x 8	3	51	357723524	Ring, First	1
2	302423001	Recoil Handle	1	52	357723520	Piston	1
3	710467022	Recoil Case	1	53	710767006	Gasket, Cylinder Head	1
4	357723580	Spring, Starter Return	1	54	357723544	Dowel Pins Ø12 x 20	2
5	357723582	Pulley, Recoil Starter	1	55	710767014	Air Guide, Lower	1
6	393723006	Rope, Recoil Starter	1	56	357723539	Head Subassembly, Cylinder	1
7	336723589	Ratchet Spring	2	57	336723539	Exhaust Valve Stud Bolt M8 x 35	2
8	336723590	Recoil Spring	2	58	357723530	Flange Bolt M10 x 80	4
9	336723592	Spring, Pawl Guide	1	59	357723525	Gasket, OHV Cover	1
10	336723591	Pawl Guide	1	60	357723526	Cover, OHV	1
11	336723593	Screw, Pawl Guide	1	61	357723527	Bolt	1
12	357723571	Nut M16	1	62	357723508	Camshaft Assy.	1
13	710767004	Wire Clip	1	63	355718342	Valve, Lifter	2
14	357723572	Pulley, Starter	1	64	360713037	Push Rod	2
15	302767004	Switch, Engine	2	65	357723538	Guide Plate, Push Rod	1
16	710467013	Engine Cover Assy.	1	66	336723537	Bolt, Valve Adjusting	2
17	336718301	Flange Bolt M6 x 12	5	67	355718411	Arm, Valve Rocker	2
18	357723573	Cooling Fan	1	68	336723529	Nut, Valve Adjusting	2
19	357723589	Flywheel	1	69	336723528	Nut, Valve Lock	2
20	710467014	Ignition Coil	1	70	357723540	Valve, Intake	1
21	336723609	Flange Bolt M6 x 29	2	71	357723541	Valve, Exhaust	1
22	357723516	Flange Bolt M8 x 40	7	72	357723537	Retainer, Valve	2
23	357723515	Seal, Oil	2	73	357723536	Oil Seal, Valve	2
24	710767005	Crankcase Cover	1	74	357723535	Spring, Valve	2
25	710467015	Oil Dipstick	1	75	357723533	Retainer, Intake Valve	1
26	393713037	Radial Ball Bearing 6202/P6	2	76	357723534	Retainer, Exhaust Valve	1
27	357723506	Radial Ball Bearing 6207/C3	1	77	357723531	Rotator, Exhaust Valve	1
28	357723507	Balance Shaft	1	78	357723567	Shaft, Governor Arm	1
29	710467016	Crankshaft	1	79	336713591	Flat Washer Ø8.2 x Ø17 x 0.8	1
30	317723516	Dowel Pin 8 x 14	2	80	336718312	Seal, Oil	1
31	357723512	Gasket, Crankcase	1	81	357723565	Shaft Pin	1
32	336723526	Flange Bolt M6 x 15	2	82	336723567	Bolt, Governor Arm	1
33	355728351	Sensor, Engine Oil	1	83	357723564	Governor Arm	1
34	357723587	Crankcase Subassembly	1	84	357723562	Spring, Throttle Valve Returning	1
35	380717007	Drain Plug M12 x 1.25 x 15	2	85	357723563	Rod, Governor	1
36	357723502	Oil Drain Bolt Washer 12 x 20 x 2	2	86	710467017	Muffler Protector, Upper	1
37	312715031	Diode	1	87	336723555	Nut M6	3
38	336728303	Sheath, Wire	1	88	357723561	Spring, Governor	1
39	336718301	Flange Bolt M6 x 12	4	89	357723548	Intake Stud Bolt	2
40	330723528	Wire Clip	1	90	336723556	Spark Plug (F6RTC)	1
41	336723595	Inner Washer, Gear	1	91	357723549	Gasket, Insulator	1
42	357723586	Governor Gear Shaft	1	92	357723550	Carburetor Insulator	1
43	357723585	Gear, Governor	1	93	357723551	Gasket, Carburetor	1
44	336723597	Clip, Governor Gear	1	94	710467018	Carburetor	1
45	357723584	Bushing, Governor Gear	1	95	710767007	Breather Hose	1
46	357723517	Rod, Connecting	1	96	710767008	Gasket, Air Cleaner	1
47	357723519	Pin, Piston	1	97	710767009	Wire Clip	2
48	357723518	Piston Pin Clip	2	98	710467019	Air Cleaner Set	1
49	357723522	Ring Set, Oil	1	99	710767010	Gasket, Muffler	1
50	357723523	Ring, Second	1	100	710467020	Muffler Assy.	1

Service – Warranty

SERVICE INFORMATION CONTACT FIRMAN PRODUCT SERVICE DEPARTMENT AT 1-844-347-6261 or at www.firmanpowerequipment.com to obtain warranty service information or to order replacement parts or accessories.

HOW TO ORDER REPLACEMENT PARTS

Even quality-built equipment such as this log splitter may need occasional replacement parts to maintain it in good condition over the years. To order replacement parts, please give the following information:

- Model No. Rev. Level and Serial No. found on the Data Decal.
- Parts number or numbers as shown in the Parts List section.
- A brief description of the trouble with the log splitter.

FIRMAN 3 Years Limited Warranty

Warranty Qualifications

Register your product using the QR code provided or at www.firmanpowerequipment.com. FIRMAN will also register the warranty upon receipt of your Warranty Registration Card and a copy of your sales receipt from one of FIRMAN's retail locations as proof of purchase. Please submit your warranty registration and your proof of purchase within ten(10) days of the date of purchase.



Repair/Replacement Warranty

FIRMAN warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of one (1) year(parts and labor) and 3 years (parts and technical support) from the original date of purchase 90 days [parts and labor] and 180 days [parts] for commercial & industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser . This warranty only applies to the original purchaser and is not transferable.

Do Not Return the Unit to the Place of Purchase

Contact the FIRMAN Service Center and FIRMAN will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, FIRMAN will, at its option, authorize evaluation, repair or replacement of the defective part or component at a FIRMAN Service Center. FIRMAN will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

Warranty Exclusions

This warranty does not cover the following repairs and equipment.

Normal Wear

Your product needs periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

Installation, Use and Maintenance

This warranty will not apply to parts and/or labor if your product is deemed to have been misused, neglected, involved in an accident, abused, modified, installed improperly or connected incorrectly. Normal maintenance is not covered by this warranty.

Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Wear items such as filter elements, seals, etc.
- Accessory parts such as hoses, hose fittings, etc.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems caused by parts that are not original FIRMAN parts.

Limits of Implied Warranty and Consequential Damage

FIRMAN disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit.

This warranty gives you certain legal rights which may change from state to state. Your state may also have other rights you may be entitled to that are not listed within this warranty.

Contact Information

You may contact FIRMAN at:

Address

Firman Power Equipment Inc.
Attn: Customer Service
8644 W. Ludlow Dr.
Peoria, AZ 85381
www.firmanpowerequipment.com

We are FIRMAN POWER – And we are here for you.

FIRMAN POWER EQUIPMENT INC. EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The United States Environmental Protection Agency (EPA) and FIRMAN POWER EQUIPMENT INC. (FIRMAN) are pleased to explain the emission control system warranty on your [2026-2027] model year small off-road engine/equipment. In the United States, new small off-road engine/equipment must be designed, built and equipped to meet the State's stringent anti smog standards. FIRMAN must warrant the emission control system on your small off-road engine/equipment for the period listed below provided there has been no abuse, neglect or improper maintenance of your small off-road engine/equipment leading to the failure of the emission control system. Your emissions control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter, fuel tanks, fuel lines (for liquid fuel and fuel vapors), fuel caps, valves, canisters, filters, clamps and other associated components. Also included may be hoses, belts, connectors, and other emission-related assemblies. Where a warrantable condition exists, FIRMAN will repair your small off-road engine/equipment at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This emission Control System is warranted for two years. If any emission-related part on your engine/equipment is defective, the part will be repaired or replaced by FIRMAN.

OWNER'S WARRANTY RESPONSIBILITIES:

As the small off-road engine/equipment owner, you are responsible for the performance of the required maintenance listed in your owner's manual. FIRMAN recommends that you retain all receipts covering maintenance on your small off-road engine/equipment, but FIRMAN cannot deny warranty coverage solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance. As the small off-road engine/equipment owner, you should however be aware that FIRMAN may deny you warranty coverage if your small off-road engine/equipment or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications. You are responsible for presenting your small off-road engine/equipment to FIRMAN distribution center as soon as a problem exists. The warranty repairs shall be completed in a reasonable amount of time, not to exceed 30 days. If you have any questions regarding your warranty rights and responsibilities, you should contact FIRMAN at 1-844-347-6261 or www.firmanpowerequipment.com.

DEFECTS WARRANTY REQUIREMENTS:

- (a) The warranty period begins on the date the engine/equipment is delivered to an ultimate purchaser.
- (b) General Emissions Warranty Coverage. FIRMAN warrants to the ultimate purchaser and each subsequent owner that the engine/equipment is:
 - (1) Designed, built, and equipped so as to conform with all applicable regulations adopted by the Environmental Protection Agency; and
 - (2) Free from defects in materials and workmanship that causes the failure of a warranted part for a period of two years.
- (c) The warranty on emissions-related parts will be interpreted as follows:
 - (1) Any warranted part that is not scheduled for replacement as required maintenance in the written instructions required by subsection (d) must be warranted for the warranty period defined in Subsection (b)(2). If any such part fails during the period of warranty coverage, it must be repaired or replaced by FIRMAN according to Subsection (4) below. Any such part repaired or replaced under the warranty must be warranted for the remaining warranty period.
 - (2) Any warranted part that is scheduled only for regular inspection in the written instructions required by subsection (d) must be warranted for the warranty period defined in Subsection (b)(2). A statement in such written instructions to the effect of "repair or replace as necessary" will not reduce the period of warranty coverage. Any such part repaired or replaced under warranty must be warranted for the remaining warranty period.

(3) Any warranted part that is scheduled for replacement as required maintenance in the written instructions required by subsection (d) must be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part must be repaired or replaced by FIRMAN according to Subsection (4) below. Any such part repaired or replaced under warranty must be warranted for the remainder of the period prior to the first scheduled replacement point for the part.

(4) Repair or replacement of any warranted part under the warranty must be performed at no charge to the owner at a warranty station.

(5) Notwithstanding the provisions of Subsection (4) above, warranty services or repairs must be provided at all FIRMAN distribution centers that are franchised to service the subject engine/equipment.

(6) The owner must not be charged for diagnostic labor that leads to the determination that a warranted part is in fact defective, provided that such diagnostic work is performed at a warranty station.

(7) FIRMAN is liable for damages to other engine/equipment components proximately caused by a failure under warranty of any warranted part.

(8) Throughout the emissions warranty period defined in Subsection (b)(2), FIRMAN must maintain a supply of warranted parts sufficient to meet the expected demand for such parts.

(9) Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of FIRMAN.

(10) Add-on or modified parts that are not exempted by the Environmental Protection Agency may not be used. The use of any non-exempted add-on or modified parts will be grounds for disallowing a warranty claim. FIRMAN will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

(11) FIRMAN issuing the warranty shall provide any documents that describe that manufacturer's warranty procedures or policies within five working days of request by the Environmental Protection Agency.

(d) Emission Warranty Parts List for exhaust (for all displacements).

1. Ignition system including:

- Spark plug
- Ignition coil

2. Fuel metering system:

- Fuel tank
- Fuel cap
- Fuel lines (for liquid fuel and fuel vapors) and related fittings/clamps
- Fuel regulator, carburetor and internal parts.

3. Catalytic muffler assembly including:

- Exhaust manifold
- Catalytic converter
- Muffler gasket
- pulse valve

4. Air induction system including:

- Intake pipe/manifold
- Air cleaner

5. Crankcase breather assembly including:

- Breather connection tube

6. Fuel tank evaporative emission control system including:

- Purge valves
- Carbon canister
- Vapor hoses and fitting/clamps

FIRMAN will furnish with each new engine/equipment written instructions for the maintenance and use of the engine/equipment by the owner.

Limitations

This Emission Control System Warranty shall not cover any of the following:

(a) Consequential damages such as loss of time, inconvenience, loss of use of the engine or equipment, etc.

(b) Diagnosis and inspection fees that do not result in eligible warranty service being performed.

FOLLOW US ON SOCIAL MEDIA

USE

#EVERYGENERATORTELLSASTORY

FOR YOUR CHANCE TO WIN FIRMAN SWAG



FIRMAN POWER EQUIPMENT
8644 W. LUDLOW DR.
PEORIA, AZ 85381
1-844-347-6261
WWW.FIRMANPOWEREQUIPMENT.COM