

物料编码：

物料名称：

U24M说明书（英文）

设计师：

Daisy

材质及工艺要求：

128g铜版纸 骑马订

颜色要求：

单黑印刷

尺寸要求：

115x165mm

语言需求（按顺序）：

 
其他备注信息：

版本信息：

2025-11-26

Leaderhub

Portable Smart Screen U24M

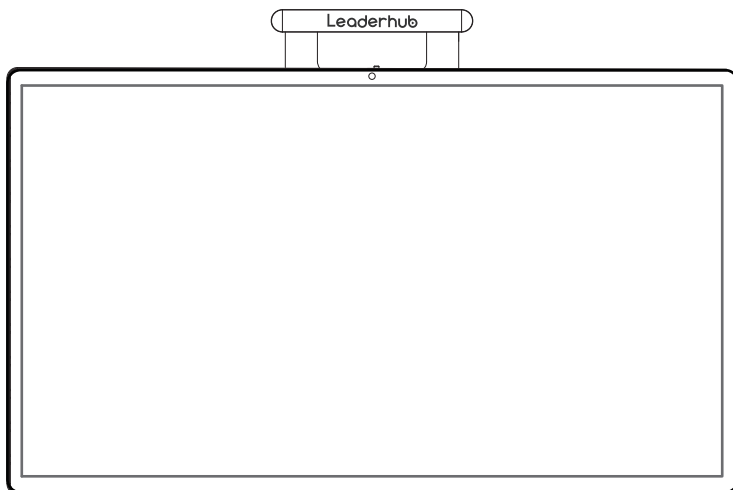

User Manual





Please read this manual carefully for proper usage before installation and use.
(It is recommended to keep this manual properly for future check.)
The pictures in this manual are only for reference.

Contents

Safety Warning and Notice.....	1
Packing List.....	6
Buttons and Interfaces.....	6
Adjusting the screen angle.....	7
Basic Operations.....	7
Turning on/off.....	7
Touch Operation.....	7
Wireless Network Connection.....	8
Important Statement on Network Service.....	8
Troubleshooting.....	8
Specifications.....	9
Use of Wall Mount.....	10

Safety Warning and Notice

The design of this product has given consideration to factors affecting personal safety, and the product has been strictly tested prior to delivery. However, improper operation may result in electric shock and fire disaster. To ensure safety, prolong the service life of this product, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.




	Warning	May result in casualties
	Attention	May result in personal injury or property losses
		Indicate the behaviors that must be prohibited
		Indicate the operations that must be performed

- If coal gas or other flammable gases leak, do not unplug the power cord of the product or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.

- Power Under following conditions, please pull out the power plug and promptly contact the authorized professional personnel to repair.
 - Power failure or unstable voltage
 - Abnormal sound or smell from the device.
 - Power cord is damaged.
 - The product is damaged due to falling off, knock or impact.
 - Any liquid or foreign matters enter into the product.

Warning

- This product only supports the power supply shown on its nameplate. If you are in doubt about the type of power supply, please consult the dealer of the product or your local power supply bureau.
- Do not dismantle the adapter or power cord, which may result in fire or electric shock.
- Please place the power adapter carefully to prevent from dropping or being hit.
- Completely insert the power plug into power outlet, if it is loose, it may cause spark or even fire.
- Do not fix the product in an unstable position, or else it may fall down, cause casualty or even fire. Many injuries, especially to children, can be avoided by taking simple precautions, such as:
 - Always use the furniture or brackets or installation methods recommended by the manufacturer of the product.
 - Only use the furniture that can safely support the television set.
 - Ensuring the product is not overhanging the edge of the supporting furniture.
 - Do not place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support.
 - Do not place the product on cloth or other materials that may be located between the product and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the product or its controls.
 - Do not place objects which may tempt children into climbing, such as toys and remote control, on top of the product or on top of the furniture where the product is placed.
 - If the existing product needs to be relocated, the same factors as above should be considered.

- Do not place the product at any place susceptible to mechanical vibration.
 - Do not put the product in the environment:
 - With direct sunshine, moisture, overheating, undercooling or heavy dust;
 - With flammable or explosive substance;
 - With flammable or corrosive gas;
 - In bathroom, kitchen, etc.
 - Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
 - Keep the power plug and socket free of dust and metal pieces.
 - Do not damage the power cord:
 - It is prohibited to refit the power cord;
 - Do not put heavy object on the power cord;
 - Keep the power cord away from heat source;
 - Do not drag the power cord when unplugging.
 - Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
 - Do not let open flame (e.g. lit candle) approach the product, or else it may cause electric shock or fire.
 - Do not put the container filled with water on the product, to avoid electric shock or fire caused by water drop or splashing.
 - Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
-  Do not touch the plug with wet hands, or else it may cause electric shock.
-  Do not turn on the product in thunderstorm weather; instead, unplug the power plug to avoid lightning strike.
-  Do not disassemble the product privately, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.

- The product contains an internal lithium battery. Please take care during use!
 - If the battery leaks, please stop using it immediately to avoid contact with your skin and eyes. Carelessness in this respect could result in loss of eyesight or burn injury. If any part of your body in contact with the leaking liquid shows any abnormality, please wash it with sufficient clean water, and also seek medical advices.
 - Please dispose of the battery correctly. Improper battery disposal could pose the risk of explosion or fire. The guideline for battery disposal varies with the country and region.
 - Do not expose the product (especially the lithium battery) to electricity.
 - Do not expose the product to flame, electric heater or direct sunlight. Otherwise, electric shock, injury or fire could be caused.
 - To charge the battery, do not use any power supply or circuit beyond the specified range. Otherwise, the risk of battery damage or fire will be caused.
 - Be careful when using the lithium battery since the risk of fire or explosion exists.
 - Clean the charging port using a soft cloth. If dirt or other foreign object exists on the charging port, the battery cannot be charged normally, or fire can be caused.
 - If the battery is fully discharged and left unused for a long period of time, it is possible that the battery cannot be charged or that the battery life is shortened.
 - Do not remove, disconnect, disassemble or short-circuit the battery. Otherwise, electric shock, injury or fire could be caused.
- Do not throw the battery into the fire or heating furnace, or mechanically extrude or cut the battery; otherwise, explosion could be caused.
- Do not place the battery in an environment with extremely high temperature that could result in battery explosion or leakage of flammable liquid or gas.
- Do not place the battery under extremely low atmospheric pressure that could result in battery explosion or leakage of flammable liquid and gas.

 **Attention**

 
- Keep the small accessories away from children's reach to avoid swallowing.
- Do not mount the product against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the product at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.
- If the product won't be used for a long time, please turn off it and unplug the power cord.
- Before cleaning the product, unplug the power cord and wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the product. The incorrect cleaning (such as cleaning fluid, water, etc) may lead to damage of product's appearance, erasing products printing information, even flow into the machine and damage components, cause no display of machine.
- To adjust the position or angle of the product, please disconnect all wires and move slowly to avoid falling down.
- Do not rub with hard object, knock at, bend or squeeze the LCD screen.
- Do not use the product immediately after transferring it to the places with high temperature from the place with low temperature, which will cause fogging inside and failures.
- If the LCD screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor.
- Do not put stress on the panel when carrying the product with hands.
- Displaying the same image for a long time or the active image with fixed words, icons will leave "image sticking" on screen which will not disappear after powering off for a long time. This defect is not covered by warranty.
- Watch in appropriate light; poor light or long time watching may hurt your eyes.
- Adjust the volume appropriately to avoid hurting your hearing.
- If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation.
- Operating temperature: 0°C ~ +40°C; Operating humidity: 0% ~ 65%, non-condensing.
- Storage temperature: -10°C ~ +50°C; Storage humidity: 0% ~ 80%, non-condensing.
- Operating altitude: ≤ 3000 m.
- All the technical specifications in the user manual and on the package are subject to changes without prior notice. If there is slight deviation between the user manual and actual operation, the latter shall prevail.





Packing List

1. Mobile tablet.
2. User manual.
3. Power adapter.

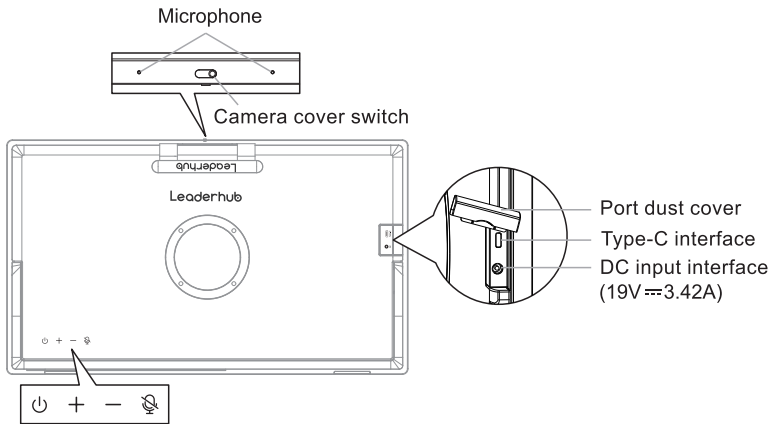Buttons and Interfaces

Open the port dust cover, and connect to the corresponding port as per need.



1. Type-C interface: support external PD 5W power supply, USB2.0.
2. DC input interface: connect to the power adapter for supplying power.
3.  Mute button: switch the microphone on/off.
4. Vol +/− : increase/decrease volume.
5.  Power button: when machine is turned off, long press  button to switch on. When the machine is powered on, press  button, the auxiliary menu will appear on the screen, operate as needed.

Attention:

 
- After the product has been powered off for a long time, please connect the power adapter first so that the product can be turned on normally.
- Please connect the product to the power adapter, then insert the power plug of the product to the power outlet.

Adjusting the screen angle

Adjust the angle of the base and screen of this product for a comfortable viewing experience.




Attention:

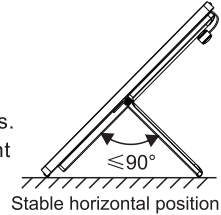- Do not rotate the product at an angle beyond its limits.
- Please be careful when adjusting the angle to prevent your fingers from being pinched.



Basic Operations

Turning on/off

After connecting the power cord and powering on, long press  button to switch on. In the power-on state, press  button, the auxiliary menu would appear on the screen, click "", the product enters the power-off state.

Touch Operation


- Click: Tap on the screen.
- Click and hold: Tap on the screen for 2s or longer.
- Swipe: Swipe on the screen up, down, left and right.
- Drag: Tap and hold the target (e.g., an application) to be moved, then swipe to the desired position.
- Open/close: Place two fingers on the screen, then open or close these fingers to zoom in or out the content displayed on the screen.

Click "**Settings > Universal > Gesture Navigation Tutorial**" to show the gesture guide in the interface.

Attention:

- Whether the displayed content supports the zoom in/out function is related to the application. Please operate according to the actual condition.
- Avoid pressing the screen with force; where necessary, simply use your fingertip to tap on the desired item. If you wear gloves or use your fingernail to touch the screen, it is possible that the product cannot respond and be operated normally.
- If the screen is a little wet or too damp, the sensor cannot work normally when touching it.

Wireless Network Connection

Click “**Settings > Wi-Fi**”, and turn on Wi-Fi; the system will start searching and list the wireless network signals available. Click the network to be connected. The  icon beside a network indicates the network is encrypted; the product can be connected to the network only after you enter the correct password.

Remark: More system settings can be done under “**Settings**” as per need.

Important Statement on Network Service

All contents and services obtained from the product are owned by third parties and protected by copyright, patent, trademark and/or other intellectual property laws. These contents and services are only for your personal non-commercial purposes, which shall not be used in a way not authorized by the content owner or service provider.

Under no circumstance shall our Company be liable for any direct, indirect or unexpected losses or damages arising from your or any third party's access to any contents or services or any information or third-party software through this product.

Third-party services may be subject to change, removal or discontinuation without prior notice. Our Company does not represent or warrant that some services or contents will remain accessible at any time.

Our Company will not be responsible for any service related to these contents and services, or assume any liability for customer service. For any question or service request about these contents and services, please directly contact your content or service provider.

Troubleshooting

The screen does not display anything; there is no sound.

1. Check whether the product has been turned on.
2. Check whether the power cord has been connected.

The product shuts down suddenly.

1. It is possible that the internal battery runs out; please connect the power cord.
2. Check whether the auto shutdown function is activated at the set time point.
3. If the battery overheats, the product will shut down automatically for self-protection.

There is no sound.

Adjust the volume to a proper level.

The screen image is too bright or too dark.

Adjust the brightness in the drop-down menu on the screen.

Network cannot be connected.

1. Ask the network administrator for the available network IP addresses and other parameters.
2. Check whether the network cable is connected normally.
3. Consult the network service provider.

The network is very slow when playing videos online.

1. Please upgrade your network bandwidth to a higher one.
2. Please try other VOD addresses to get better resources.

The product gets stuck, crashes or cannot be operated.

Turn off the device, wait for 1 to 2 minutes, and then turn it on again.

Specifications

 
24.5"

Resolution	1920 × 1080 (pixels)
System version (OS)	Android 14 OS
Camera	8 megapixels
Speaker output power	2×7W + 2×3W
Power supply	19V \approx 3.42A, 65W
Rechargeable lithium battery	15.4V / 5050mAh (77.7Wh)
Power adapter	Input: 100-240V~ 50/60Hz 1.5A Max Output: 19.0V \approx 3.42A 65.0W Max
Product Dimensions	569x377x25mm
Net weight	13.9kg

Use of Wall Mount

Warning

- Please purchase a suitable wall mount when mounting your product on the wall.
- Ensure that the bearing capacity of the wall for mount installation is no less than 4 times the weight of the product and the wall mount so as to avoid falling.
- Please refer to the instructions provided with the product and wall mount for installation.
- Make sure there is no cable or conduit in the wall section where a wall mount will be installed.
- Please entrust a professional technician to complete installation. The company shall not be liable for accidents, personal injury or damage caused by improper installation of the product.

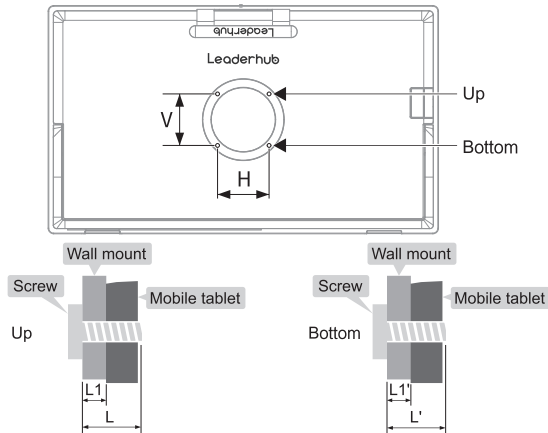

L1/L1': Thickness of wall mount

Distance between holes on the wall($H \times V$)(mm)	Required screws (recommended bolt length)(mm)
75×75	Up: 2×M4 ($9+L1 \leq L \leq 11+L1$), Machine screws Bottom: 2×M4 ($9+L1' \leq L' \leq 11+L1'$), Machine screws

Note: Please buy the wall screws according to the actual situation.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.