

WATER FILTER CARTRIDGE

The water filter cartridge holder is located in the back upper-left corner.



WHEN TO REPLACE THE WATER FILTER

The water filter should be replaced every 6 months at the rated capacity or if a noticeable reduction in flow occurs. When replacement is recommended, the Filter Replacement icon will be lit.*

REMOVING THE WATER FILTER

- 1 Press the marks on both sides of the filter cover by hand and open it downward.



- 2 Once the water filter is revealed, gently grasp the water filter and carefully turn it counterclockwise, about a 1/4 turn.



- 3 The filter should automatically release itself once you've rotated the water filter far enough.

NOTE: Some water may drip down while removing.



INSTALLING THE WATER FILTER

- 1 Remove the outer package and cap of the water filter and line up the ports on the filter with the ones in the filter cartridge holder and insert.



- 2 Turn the water filter clockwise until it cannot be rotated anymore. **DO NOT OVER TIGHTEN.**



- 3 Close the filter cartridge holder by pushing the cover upwards until the tabs lock back into place. After the water filter is replaced, hold down "FREEZE BOOST" for 3 seconds to reset filter aging data.



- 4 Dispense 2.5 gallons of water (flush for approximately 5 minutes) to remove trapped air and contaminants from the system. Additional flushing may be required in some households. See Page 10 of the SJF2752MS Operation Manual for further details.

NOTE: Do not dispense the entire 2.5 gallon amount continuously. Depress and release the dispenser pad for cycles of 30 seconds ON and 60 seconds OFF.



*Recommended replacement varies based on water consumption and time.

Please contact your local dealer or 1-800-BE-SHARP for further assistance.