

KINGSLIM

D6

DASH CAM



USER MANUAL

V1.0

Contents

Important Messages	04	>>
Getting Started	06	>>
1. Memory card	06	
2. First-time charging	06	
3. Recording	06	
4. Settings	07	
5. Setting date & time	07	
6. How to hide power cable inside your car's dash board?	07	
7. How to transfer videos to PC/MAC?	07	
8. Wifi	07	
9. Camera specifications	08	
10. What's in the box	09	
11. Camera overview	10	
12. Installation	11	
12.1 Insert the memory card	11	
12.2 Insert the bracket into the bracket slot	11	
12.3 Install the suction cup mount	12	
12.4 Install the D6 dash cam to the windshield	13	
13. Charging	14	
14. Button Operation Instructions	15	
14.1 Preview interface	15	
14.2 Main Interface	16	
Start Recording	17	>>
1. Resolution Setting	17	

2. Time Zone Setting	17
3. Memory card use	18
3.1 Installation	18
3.2 Format Memory Card	18
3.3 Removal	19
Playback	20
1. Dash cam playback	20
2. Kingslim APP playback	20
2.1 APP Download	20
2.2 Connect to Kingslim APP	20
2.3 App playback	22
3. PC/MAC playback	24
3.1 Data transmission	24
3.2 Correct video player to play 4K videos	25
System Settings	26
1. Resolution	26
2. Loop recording	26
3. Dual cam display	26
4. WDR	26
5. Record Audio	27
6. Beep Sound	27
7. Date Stamp	27
8. G-Sensor	27
9. IR Cut	27
10. Screen Saver	28
11. Time Display	28

12. Wifi-----	28
13. Date/Time -----	28
14. Time system -----	28
15. Language -----	29
16. Parking Mode -----	29
17. Frequency -----	29
18. Fatigue driving reminder-----	29
19. Time Zone -----	29
20. GPS speed-----	30
21. Format -----	30
22. Default setting -----	30
23. Version info -----	30
General FAQ-----	30 >>
Contact Us -----	32 >>

Important Messages

User agreement

By purchasing KINGSLIM Dash cam, it is assumed that by default you agree with precautions, user warnings and all the terms & conditions of warranty. If for any reason you do not agree with any of the terms mentioned in this manual, then you may return the product in its original packaging unused within its return window for a full refund.

Heads up:

- Do not expose this product to rain, moisture or water under any circumstances or it will result in external or internal damage.
- Do not put the unit in a damp environment. This device is not designed to be damp proof.
- Do not try to open the cover or try to repair it yourself. If the accessories for this device have any problem, please contact the seller for assistance. This camera is intended to use inside motor vehicle.
- Don't install it where it will block the driver's view of the road including mirrors or the deployment of airbags.
- Please read this manual very carefully before using the camera or installation and keep it safe for future reference. It will be helpful if you have any questions or encounter any operational problems.

Pre-cautions

Please read and understand all instructions before using this product. If any damage is caused by failure to follow the instructions, the warranty will be voided.

Warnings

Failure to comply with safety warnings and regulations can result in serious injury or death.

- Do not place the camera loose on top of the dashboard or in-front of the air bags.
- Do not mount the camera where it can be a distraction if it became loose and fall off the windshield while driving.



- Do not expose this device to an excessive heat, dust or use any chemical substance or cleaning solvent to clean this device. Instead use soft moist cloth for cleaning. Pay careful attention when cleaning the lens surface. Use a soft, moist cloth to clean the lens to avoid scratches which may compromise video quality.
- Removing the camera from the vehicle when not in use is recommended. This prevents likelihood of theft or exposure to excessive heat to prevent damage to unit. Do not operate or install the camera while driving, or attempt to change any setting etc.
- Pull off the road first and only do so when it is safe. Do not drop, puncture or disassemble this product.
- Do not use the charger if the cord is broken or damaged. Keep out of reach of children.
- Do not leave the camera in the direct sunlight for a long period of time or where temperature could go above 158°F (70°C).

Some countries or USA states prohibit drivers from mounting anything on windshield or prohibit mounting on certain area of the windshield. It is owner/operator's responsibility to mount or use of this device in compliance with local laws.

- The company is NOT responsible for the loss of any data or your content during operation or in any circumstance.

Getting Started

Please read and understand warnings & safety instructions before operating.

1. Memory card

Before turning ON the camera, please insert the memory card in Class10 U3 or above of the known brand at maximum of 256GB. Please format the memory card before use.

Note:

1. The memory card is a consumable item and has a certain service life (please refer to the description of the memory card of relevant brand for the specific product life).
2. If the machine prompts that it cannot be formatted, the card is wrong, or frequently prompts to format, please replace the card with a new one. To ensure better protection of your memory card and machine, please format it regularly within 2 months.

2. First-time charging

Now plug in to the power. The camera will turn on automatically as soon as it receives the power and then it will prompt you with the initial setup on the screen for the first-time use. Make sure to keep your camera plugging into the power all the time because the internal battery is ONLY for emergency recording during parking mode.

Note:

1. You can use your iPhone or Android phone's USB charger and USB cable to plug your dash cam into your 110V power outlet.
2. If you don't get the initial setup prompts for any reason, you can set the camera to factory default settings, then re-start the camera to start the initial setup again.

3. Recording

KINGSLIM 4K D6 dash cam is programmed to turn ON and start recording automatically when it receives power, and when the power gets disconnected, it will stop



recording, save the last video safely and then shut down within 5 seconds automatically.

4. Settings

Now, by default all the settings are pre-set in a way that you can just start using the camera. However, you can customize it further by learning more about the camera by either watching How to Video or reading the User Manual so you can get the maximum benefit out of it and the best use experience.

5. Setting date & time

Please set the correct date and time based on your location under the Time Zone Setting by going to camera's system settings menu.

Note: The GPS module is not included in the package.

6. How to hide power cable inside your car's dash board?

Many people on YouTube already demonstrated how and where to hide power cable inside your car. You can view one of the possible ways on the link (this video is NOT recorded by us).

Video link: <https://www.youtube.com/watch?v=CZYaV5Dh4ok>



7. How to transfer videos to PC/Mac?

Insert memory card directly to your PC/Mac to view or download them. You can also connect your camera to your PC/Mac with the USB data cable. Then Select Connect as a Flash Drive. We recommend VLC Media Player to view your videos. You can get it free at www.videolan.org.

8. Wifi

You can also connect KINGSLIM D6 Car Dash Cam to your smart phone directly by using built-in Wifi feature. After your mobile phone is connected to the hotspot of our device, the 4G signal of the mobile phone will be blocked, and it will automatically recover after disconnection. It is recommended that you exit the APP or manually disconnect the device hotspot when you do not need to connect the device to your phone.

9. Camera Specifications

LCD touch screen	2-inch IPS
Video resolution	4K+2K (Front+Rear), 4K+1080P (Front+Interior)
Photo resolution	12M
Lens aperture	F/1.8
GPS	Included
Wifi	Built-in
Video format	MP4
Memory card	Above Class10 U3 speed, max up to 256GB
G-sensor	Built-in 3-Axis
Anti flicker	50 Hz / 60 Hz
Loop recording	Support-seamless recording
Parking Mode	Support
Y/M/D D/M/Y M/D/Y	Support
24 hours / 12 hours	Support
Mic/Speaker	Built-in Micro Phone & Speaker
Mini USB Function	1. Storage 2. Charging
Auto Power ON/OFF	Support
Power Interface	5V/1.5A
Battery	Built-in li-ion 250 mAH battery
Operation Temperature	-4°F (-20°C) ~ 140°F (60°C)

 
10. What is in the Box




Dual Dash Cam D6
× 1



Dash Cam Bracket
× 1




Suction Cup Mount
× 1

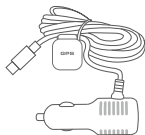

Car Charger with 3.5M
Power Cable × 1



 Double-sided Adhesive
Tape for Dash Cam × 2



Electrostatic Sticker
× 2



Cable Clip
× 5




 


Car Crowbar
× 1



QuikStart Guide
× 1


11. Camera Overview

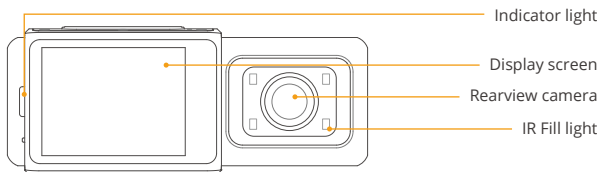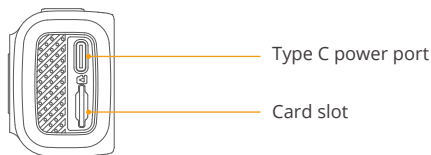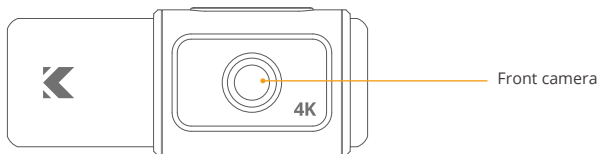


12. Installation

12.1 Insert the memory card.

Tips: The dash cam supports up to 256GB memory card of Class 10 or above.

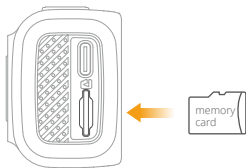


12.2 Insert the bracket into the bracket slot.

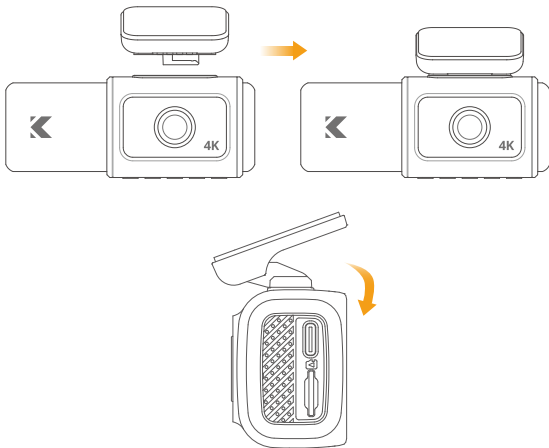


Warm Tip: You can also insert the suction cup mount into the bracket slot.

12.3 Install the suction cup mount.

- ① Remove the film of the suction cup.

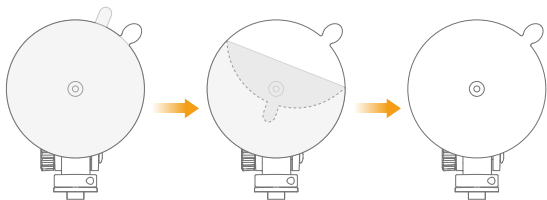

- ② Insert the suction cup into the bracket slot and make sure there is no air inside the suction cup. Rotate to secure the bracket.

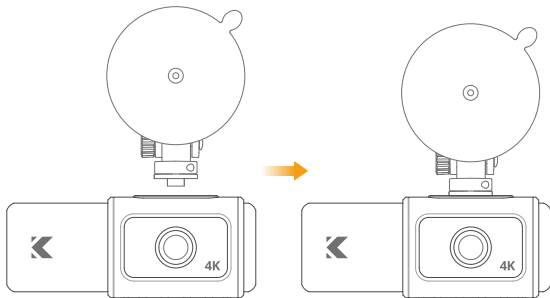


12.4 Install the D6 Dash Cam to the windshield.

- ① Clean the windshield with a dry cloth.
- ② Remove the electrostatic sticker film and apply the sticker to the windshield while making sure there are no air bubbles.
- ③ Peel off the film on one side of the double-sided adhesive tape and apply the tape to the D6 Dash Cam.
- ④ Peel off the film on the other side of the adhesive tape and press the D6 Dash Cam firmly to secure it on the electrostatic sticker (if you wish to remove the dash cam, please take off the electrostatic sticker).

Note: You can stick the dash cam to the windshield without using the electrostatic sticker.


- ⑤ Connect the USB power cable into the USB power port of the dash cam, then plug the car charger into the cigarette lighter socket.

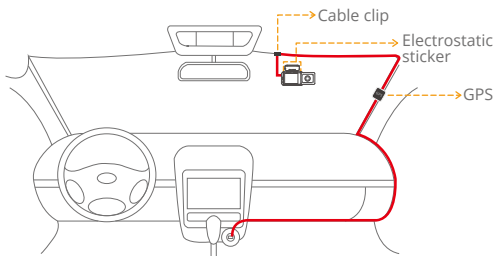

- ⑥ Use the pry tool to hide the cables.

13. Charging

Connect the USB power cable into the USB power port of D6 Dash Cam, then plug the car charger into the cigarette lighter of your car.

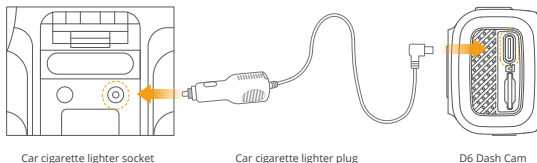

Note:

Do NOT connect the camera to PC for charging. Instead use the 110V wall outlet. The device will start up automatically and record as soon as power supplied, and the device will save the last video file and power off automatically after cutting the power supply.

Turning your camera ON/OFF

Auto Power ON: KINGSLIM D6 is designed to turn ON automatically when it receives power, i.e. when the car engine is started.

Auto Power OFF: The camera is also pre-configured to turn itself OFF automatically within few seconds when the power gets disconnected, i.e. when the car key is turned to LOCK position.

14. Button Operation Instructions

14.1 Preview Interface



Parking monitor

Short-press this button to turn the parking monitor mode on or off.

Setup / Wifi

Short-press this button to enter Menu, long press to enter the Wifi mode.

Short-press the Back button  to return to the preview mode.

Playback

Short-press this button to enter the playback interface. Short-press the Back button  to return to the preview mode.


Start recording

Short-press this button to start recording.

Mode switching / Power

Short-press this button to switch display modes. Long press to switch off.

14.2 Main Interface

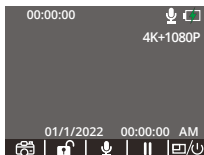

Photo

Short-press this button to take photos.

Emergency recording

Short-press this button to turn the emergency recording mode on or off.

Audio recording

Short-press this button to turn the audio on or off.

Stop recording

Short-press this button to stop recording.

Mode switching/Power

Short-press this button to switch display modes. Long press to switch off.

Start recording

1. Resolution Setting

Three options are available.

1. Triple-channel mode, 2K+1080P+2K (Front+Interior+Rear).
2. Two-channel mode, 4K+2K (Front+Rear), or 4K+1080P (Front+Interior).
(Default setting is 4K+1080P)


Enter the menu to choose the resolution.



Note: The rear camera for the D6 dash cam is not included, please purchase it separately to make the three-way mode possible.

2. Time Zone Setting

Choose the time zone manually before starting recording. The dash cam will then display the time of the selected time zone.

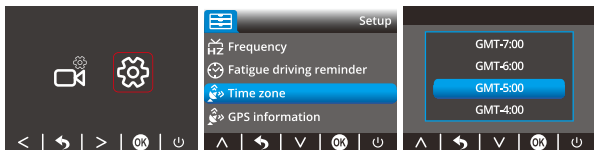

Greenwich Mean Time (GMT)

Time zone	When Daylight Savings Ends Nov-March	When Daylight Savings Begins March-Nov
Hawaii	GMT (-10:00)	
Alaska	GMT (-9:00)	GMT (-8:00)
Pacific Time Zone	GMT (-8:00)	GMT (-7:00)
Mountain Time Zone	GMT (-7:00)	GMT (-6:00)
Central Time Zone	GMT (-6:00)	GMT (-5:00)
Eastern Time Zone	GMT (-5:00)	GMT (-4:00)

Go to <http://www.greenwichmeantime/time-zone/usa> to find out your correct GMT (Greenwich Mean Time) value based on your location in USA.



3. Memory card use

A Class 10 or above memory card is highly recommended for the D6 dash cam (memory card is not included). D6 dash cam supports an up to 256GB memory card. Please format your card in the camera before using this dash cam. Do not remove or insert the memory card when the dash cam is turned on. This may damage the memory card. We recommend SAMSUNG Classic10 U3 or higher speed memory SD card. You can purchase it from Amazon:

https://www.amazon.com/dp/B09B1JJE24/ref=twister_B09Q7Q2WZ1?encoding=UTF8&th=1

3.1 Installation



Make sure the camera is turned Off first. Insert the memory card half way in. Then use the finger nail to push the card all the way inward until it clicks and locks in place.

3.2 Format Memory Card


Please format your memory card in the camera before using this dash cam. Do not remove or insert the memory card when the dash cam turns on. This may damage the memory card.



- ① Press the button  to stop recording.
- ② Short-press Setup/Wifi button  to enter Menu.
- ③ Choose options on the menu, click the OK button to confirm.
- ④ Click the Format option to format, then choose OK.

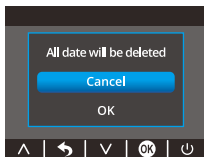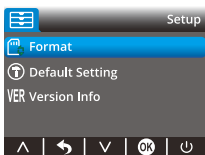


5. Return to the main interface, press the button  to start recording.

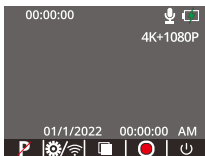

Tip: We recommend formatting your memory card every 2 months to keep it running smoothly. The memory card has a certain life span. After repeated reading, writing, and wiping, the life of the memory card will be shortened. When the card frequently reports errors, please replace it with a new one.

3.3 Removal


To remove the memory card, gently push its edge inward until it clicks, and then pops out, then simply pull it out of the slot.

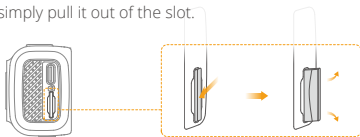

Playback

1. Dash Cam Playback

Short-press the playback button  to enter the album to be played back.

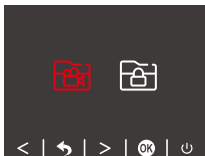

2. Kingslim APP Playback

2.1 APP Download

Download the Kingslim APP on the APP Store or Google Play.




2.2 Connect to Kingslim APP


- ① Stop video recording on the dash cam.
- ② After pausing video recording, long press the Setup/Wifi button  to enter the Wifi mode (once you quit, the Wifi will be disconnected.)




- ③ Go to your smartphone's Wifi settings, search for the same Wifi SSID name displayed on the screen, and enter the password 12345678 for connection.

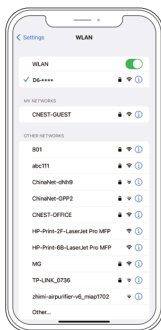

- ④ Open the Kingslim APP, tap the “New Account” icon, enter your email and get the verification code for login.



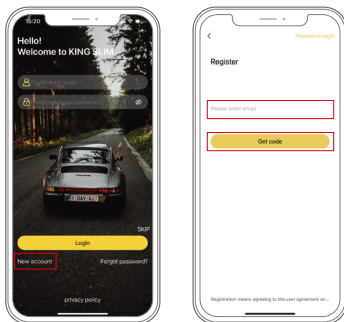


- ⑤ Tap "Add Recorder", wait a few seconds to enter the preview interface.

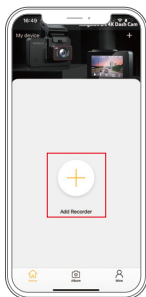


2.3 App playback

To play back videos on your smartphone, simply long press the Wifi button to turn on the camera Wifi first, then connect the KINGSLIM hot spot by entering the default password "12345678". Once connected, simply open the correct Kingslim App to add your model. Please note that for KINGSLIM models, only Kingslim App can be used for operation. Enter the preview interface, tap the "Video set" icon, then you can watch those videos.

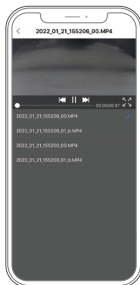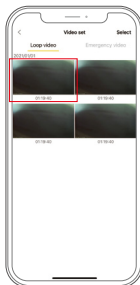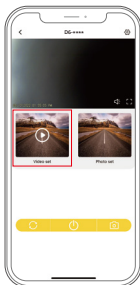


Using Kingslim App to download videos to your smartphone for local playback.


① Tap the “Video set” icon to enter the menu.

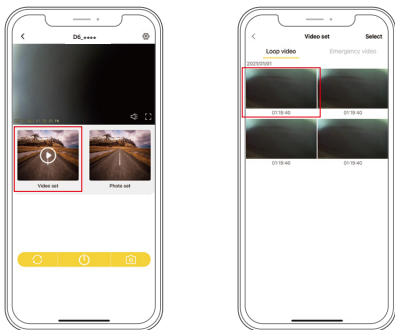

② Tap the “Select” icon at the upper right corner and tap the video you want to download, tap the icon at the bottom left corner to download the video.

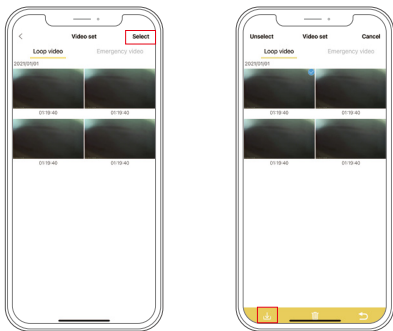


- ③ Waiting for the completion of download progress, the video will be downloaded to phone photo album. Tap the video and it will play.

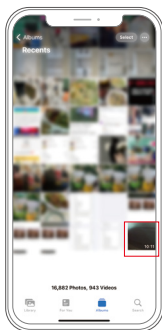

3. PC/MAC playback

3.1 Data transmission

- ① Connect the camera with the short USB cable and choose to connect as Mass Storage on the camera when this message pops up. (USB cable sold separately)

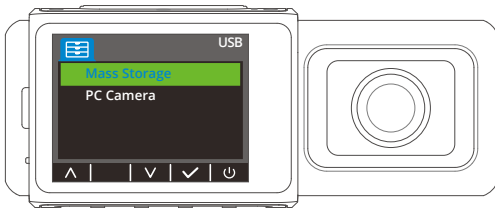


- ② You can simply remove the memory card from camera and insert it directly in your PC if you have a memory slot. Then find the added memory card drive on your computer and then use the player to play the video in the memory card.

3.2 Correct video player to play 4K videos

- ① We recommend VLC Media player. You can get the player for free at www.videolan.org.
- ② GPS player (GPS player software installation (PC/MAC only). You can also use our GPS Player from our website for free to view the google maps from <https://kingslim.net/pages/gps-player>.

What are the features ?

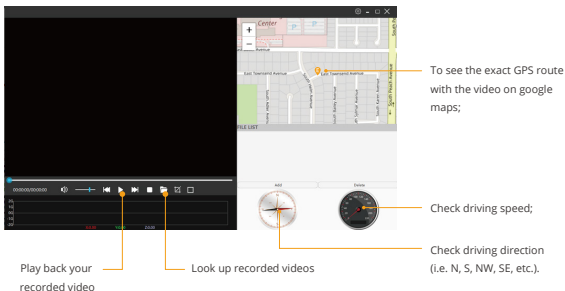

Note: For IOS system computers, please carefully read download guidance on Apple's official website (<https://support.apple.com/en-au/HT202491>), otherwise the GPS player will not be installed successfully.

System Settings

1. Resolution

Select to switch resolution.

Options:

- 4K+2K
- 4K+1080P
- 2K+1080P+2K

Default setting: 4K+1080P

2. Loop Recording

If you choose the 3 Minutes option, the files will be saved every 3 minutes. When the memory card is full, new files will overwrite the old ones if Loop Recording is on. If it is off, the camera will stop recording when the card is full. You will then need to format the memory card or insert a new one.

Options:

- 1 Minute
- 2 Minutes
- 3 Minutes

Default setting: 1 Minute

3. Dual cam display

- Front
- Inside
- Rear
- Front/Middle/Rear

4. WDR

Select to turn WDR mode on/off.

Default setting: OFF



5.Record Audio

Select to turn on/off.

Default setting: on

6. Beep Sound

Turn the beep sound on/off.

Default setting: On

7. Date Stamp

Select to add a date stamp to photos/videos.

Turn the on/off.

Default setting: Off

8. G-Sensor

When G-Sensor Mode is turned on, it will automatically start recording and save content if an impact or sudden braking is detected. The videos will be locked and never overwritten by new files. The higher the sensitivity level, the easier it is to trigger the G-Sensor.

Options:

- Off
- Low
- Middle
- High

Default Setting: Low

9. IR Cut

Select to turn IR Cut mode on/off.

Default setting: On

10. Screen Saver

The display screen will turn off automatically after a set time. When the screen is turned off, power consumption will be reduced. The camera will still work while the screen is turned off. Just click the screen to turn it back on.

Options:

- Off
- 30 Seconds
- 1 Minute
- 2 Minutes
- 3 Minutes

Default setting: 1 Minute

11. Time Display

Time display on the screen when the device enter the screen save mode while you select time display "ON"

Default setting: On

12. Wifi

Select to turn Wifi mode on / off.

Default setting: Off

13. Date / Time

Set the date and time manually.

14. Time system

Options:

- 12-hour mode
- 24-hour mode

Default setting: 12-hour mode

15. Language

9-country languages.

Default setting: English

16. Parking Mode

If there is an impact on the car during parking, the camera will turn on automatically and create a locked 20-second recording. The higher the selected level, the easier it is to trigger the recording.

Default setting: Off

17. Frequency

Choose the right frequency to avoid flickering. This should be based on your local AC parameters.

Options:

- 60 Hz
- 50 Hz

18. Fatigue driving reminder

Options:

Off

1 hour

2 hour

4 hour

19. Time Zone

Choose the time zone manually. The device will then display the time of the selected time zone.

Default setting: GMT – 5 (U.S. Eastern Time Zone)

20. GPS speed

Track your driving speed and show your preferred speed unit.

Options:

- KM/H
- MPH

Default setting: KM/H

21. Format

Format your memory card.

22. Default setting

Restore the default settings.

23. Version info

Check the software version of the camera. This information may be required when technical support is needed.

General FAQ

1. What to do if your dash cam turns on and off automatically?

- ① Check if the dash cam turns on normally when you remove the memory card and plug it in with a USB cable.
- ② If so, turn off your dash cam and plug it in with the original 5V car charger for about one hour, then turn it on manually to see if it works normally.
- ③ If the issue remains, restore your dash cam to the factory settings.

2. Why to do if your dash cam does not turn on?

- ① Check if the indicator light on the car charger turns on when your dash cam is plugged in.



- ② If not, plug the dash cam into another cigarette lighter or USB port for about one hour to see if it finally turns on.
- ③ If so, contact customer support for further help.

3. What to do if your dash cam does not turn off?

- ① Turn off the dash cam manually and restart it, or reset it to the factory settings.
- ② If your issue remains, contact contact customer support for further help.

4. What to do if your dash cam does not hold a charge?

- ① Plug in your dash cam with the USB cable to see if it holds a charge normally.
- ② If not, contact customer support for further help.

5. What to do if your dash cam does not save the time settings?

- ① Plug in the dash cam with the USB cable to see if it holds a charge normally.
- ② Make sure the Time Zone is set according to your local time.

6. What to do if your dash cam heats up?

- ① The dash cam may heat up while recording or even won't turn on in hot weather.
- ② We recommend you to turn on the air conditioning in your car before plugging in your camera.
- ③ When the dash cam cools down, plug it in to see if it turns on again.

7. What to do if your dash cam shows "Slow Card" or prompts to format the memory card?

- ① Select the memory card according to the user manual, such as a U3 memory card or above.
- ② Format the memory card in the dash cam's settings.

8. What to do if the camera Wifi is not connected?

- ① Check if your dash cam enters the Wifi mode and displays the Wifi information after you long press the Setup/Wifi button.
- ② If so, check if the camera Wifi appears in your phone's Wifi list.

③ If your issue remains, contact customer support for further help.

9. What to do if you can't connect your dash cam with the app Kingslim?

- ① Make sure the camera Wifi is connected normally before connecting with the app.
- ② Open the APP Kingslim, tap the New Account icon, enter your email and get a verification code for login.
- ③ Tap Add Recorder, and wait for a few seconds to enter the preview interface.
- ④ If your issue remains, contact customer support for further help.

Contact Us

☎ (888) 811-1140 (US)

✉ cs@kingslim.net

🌐 www.kingslim.net

For any inquiries about KINGSLIM products, please feel free to contact us. We will respond within 24 hours.



KINGSLIM


EXPERIENCING PROBLEMS?

Item NOT as described?
Damaged or defective?
Missing items?
Any issues what so ever?

CUSTOMER SERVICE

🕒 Mon-Fri 9am-5pm EST
✉ cs@kingslim.net
🌐 www.kingslim.net


Scan to email us

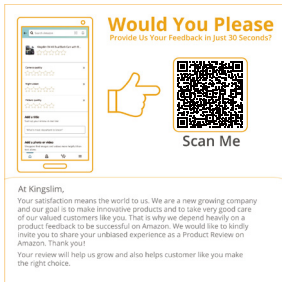

Would You Please
Provide Us Your Feedback in just 30 Seconds?




Scan Me

At Kingslim,
Your satisfaction means the world to us. We are a new growing company and our goal is to make innovative products and to take very good care of our valued customers like you. That is why we depend heavily on a product feedback to be successful on Amazon. We would like to kindly invite you to share your unbiased experience as a Product Review on Amazon. Thank you!
Your review will help us grow and also helps customer like you make the right choice.

