

# BOLOXA



## A17\_User Manual

True Wireless Sports Earbuds

---

## Customer Service



After-sale Email: [support@boloxa.ltd](mailto:support@boloxa.ltd)



Web: [www.boloxa.ltd](http://www.boloxa.ltd)



Phone Call: +1 (857) 666-8575 (Mon. - Fri., 11AM - 8PM EDT)

---

## Packing List

User Manual \* 1 piece

Wireless Charging Case\* 1 piece

Wireless Earbud \* 1 pair

Soft Ear Tips \* 3 pairs(M size on Earbud)

Type-C Charging Cable \* 1 piece

---

## Product Specification

Model NO.: A17

Charging Time: about 2Hrs

Input: 5V $\overline{\text{---}}$  1A

Support: AAC/A2DP/HFP/HSP/AVRCP

Capacity: 3.7V 600mAh, 2.22Wh

Wireless Charging Supported: Yes

Charging Port: Type-C

(charging pad not included)

FCC ID: 2AZJ2-A17

Transmission Rang: 33 feet(without obstacle)

## Product Overview

Charging Dots  
on Earbud

Ear tips



Secure Ear-hook

Multi-function Button (MFB)

LED Indicator

Microphone



 
Battery LED Display  
of Charging Case

Type-C  
Charging Port

Charging Pins  
on Charging Case

(Left & Right)  
Earbud Charging Status

Charging Case Power Status

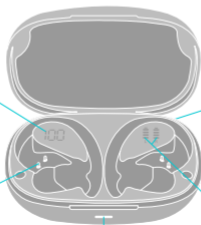

## Caution

 
1. Please remove the protective film before use, otherwise the headphone will not be able to charge.




2. Choose suitable ear tips & Wear correctly to enhance sound quality.



3. Please clean the protective grille of both earbuds if the sound becomes low.

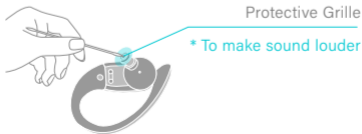

 4. Please clean the magnet charging dot on earbud and charging pin on the charging case with alcohol wipes if the headphones can't be charged.

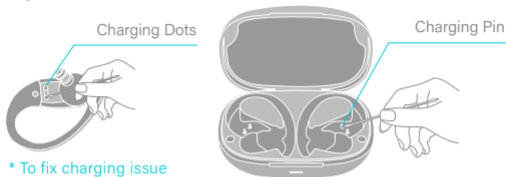

## Multi-Function Button Operation



### Power On/Off



2s

Power On

long press L and R 2s



5s

Power Off

long press L and R 5s

\* Or Pick up A17 from charging case

\* Or Put them back into charging case

## Music Playback

 Play or Pause  
press L or R once

 Next Track  
press R twice

 Previous Track  
press L twice

 Volume +  
long press R

 Volume -  
long press L

## Incoming Call

 Answer Call  
press L or R once

 End Call  
press L or R once

 <sup>2s</sup> Reject Call  
long press L or R 2s

## Voice Assistant

 Activate/End Siri  
press L or R thrice

 
(\* Must in non-music mode or standby mode)

## Bluetooth Connection

\* Make sure A17 earbuds and charging case have power.

1. Both earbuds will automatically power on and enter pairing status when you take them out of the charging case.

2. For first time pairing: activate the Bluetooth of your device and search for "A17" to connect. (For non-first connection: when taken out from the charging case, the earbud will connect with your device automatically within 10s.)

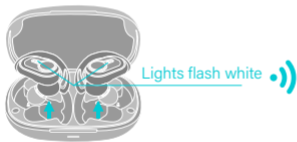

## Mono Mode

You can use one earbud alone, leave another earbud in the charging case.

When in Dual mode, put one earbud into the charging case;

Or only take one earbud out of the charging case, then search & connect "A17" on your device.

## Pair with Other Device

A17 sports earbuds have memory connect function, they usually auto-connect with the last paired device. Thus, if you want to connect them with other devices, you should disconnect "A17" from the last paired device, then search and connect it on your another device.

 
## Earbuds Charging

Insert A17 Earbuds into the charging case properly, they will power off and get charged automatically.



When being charged, the display icons will flash up and down, and the earbud's LED light will flash red;

When fully charged, the display icons and the earbuds' LED red light will turn off.

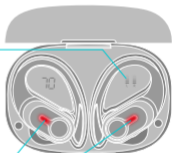

Earbuds' LED light


When the battery is less than 10%, a prompt voice "Low battery please charge" will be advised, announce once every 5 minutes and 5 times in total.

## Charging Case Charging
 
### Type-C Charging

Use the provided Type-C cable (placed in the black accessory box) to charge the charging case.


During charging, the charging case power display will show the battery in real time. The number will be displayed as "100" when fully charged.

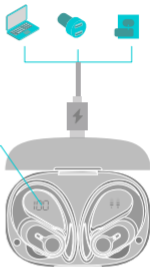

### Wireless Charging

To charge the A17 charging case, place it on a wireless charging pad (NOT Included).

 \* If the charging case doesn't start to charge, please try to reposition it.

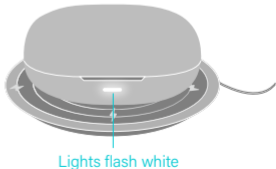

## Factory Restore Settings

This action will delete the pairing data between earphones and your devices. When the earbuds had been connected with multiple devices, you don't know which one is the last device, you can do this operation.

### How to reset?

1. Delete the "A17" pairing name on your phone and turn off the Bluetooth setting.
2. When A17 turn on, press and hold both earbuds simultaneously for 5s to turn off the earbuds. (Don't put them back into the charging case)
3. Press and hold both earbuds at the same time for 8s to reset.
4. Press and hold both earbuds again for 2s to turn on them.
5. Then turn on the Bluetooth of the device and click "A17" to connect.



---

## How to sync volume on Android?

To protect users from potential hearing damage, Android's limit on max volume is quite low for Bluetooth audio devices.

If you feel the volume is too low, please access developer options and enable absolute volume, so you'll be able to max the volume at your own volition and to the full capabilities of your Bluetooth earbuds.



(Please scan this QR code to watch a video to learn more details.)

---

## Safety Attention

1. Using earbuds at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at times for your safety.
2. Please keep the earbuds out of extreme heat or humidity, do not use any corrosive cleaner/oil to clean the earbuds.
3. Please avoid disassemble/reassemble the product in case of failure or fire accident.
4. Please keep beyond the reach of kids or pets.
5. Please stop using the device if it causes any discomfort or pain.

## FCC Caution

Any Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



[www.boloxa.ltd](http://www.boloxa.ltd)



[support@boloxa.ltd](mailto:support@boloxa.ltd)

Thank you for purchasing the authentic product. For more newer products, parts and accessories, please visit: [www.boloxa.ltd](http://www.boloxa.ltd)  
For any assistance, please contact  
Email: [support@boloxa.ltd](mailto:support@boloxa.ltd)

