

# FIREMAGIC®

## STAND-ALONE POST ELECTRIC GRILL EL500s

P6 Series: Patio Mount Standard Height (37")

AP Series: Patio Mount Accessible Height (32")

G6 Series: In-ground Mount Standard Height (37")

AG Series: In-ground Mount Accessible Height (32")

### INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL



P6 Series w/ dual digital controls and window shown

**INSTALLER:** Leave these instructions with consumer.  
**CONSUMER:** Retain for future reference.

**IMPORTANT:** READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION OR USE.

### SAFETY AND WARNING CODES

#### PLEASE READ AND FOLLOW

- Removing permanently affixed rating warning labels **WILL** void the warranty.
- Observe all local codes and ordinances when installing this appliance. If no local codes are applicable, wire unit in accordance with the latest National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1, whichever is applicable.

#### ⚠ **WARNING**

When connecting this appliance to a power supply make sure that it is the same voltage as the unit rating. Improper connection may cause severe damage to the components or decrease the performance of your Fire Magic electric grill. A rating plate specifying voltage, hertz, wattage, and amps is attached to the rear of the unit and can be found in the MODEL SPECIFICATIONS section. Also see the IMPORTANT SAFEGUARDS section. To avoid the risk of property damage and/or personal injury, installation work and electrical wiring must be performed by a qualified professional service technician. This appliance must be installed in accordance with this instruction.

**NOT FOLLOWING THESE INSTRUCTIONS EXACTLY  
WILL VOID THE MANUFACTURER'S WARRANTY.**

#### ONLY TO BE USED OUTDOORS

#### ⚠ **WARNING**

Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. For proper installation, refer to the installation instructions. For assistance or additional information, consult a qualified professional service technician or service agency.

#### ⚠ **WARNING**

To minimize the risk of property damage and/or personal injury, do not use a flexible extension power-supply cord unless it conforms with the specifications as listed in this manual (see IMPORTANT SAFEGUARDS section).



Certified to:  
ANSI/UL 1026

CSA C22.2 No. 60335-1  
CSA C22.2 No. 60335-2-6  
CSA C22.2 No. 60335-2-78

Cooking Grid U.S. Patent Nos.  
D857,453 D862,984



# FIREMAGIC®

## PIED AUTONOME ELECTRIC GRILL EL500s

Série P6: Hauteur Standard De Montage Sur Patio (37")

Série AP: Hauteur Accessible De Montage Sur Patio (32")

Série G6: Hauteur Standard De Montage En Terre (37")

Série AG: Hauteur Accessible De Montage En Terre (32")

### INSTRUCTIONS D'INSTALLATION ET MANUEL DU PROPRIÉTAIRE



Série P6 avec doubles commandes  
numériques et fenêtre affichée

**INSTALLATEUR :** Laissez ces instructions avec le consommateur. **CONSOMMATEUR :** Maintenez pour la future référence.

**IMPORTANT:** LISEZ CES INSTRUCTIONS SOIGNEUSEMENT AVANT DE COMMENCER L'INSTALLATION OU L'UTILISATION.

### SÛRETÉ ET CODES D'AVERTISSEMENT

#### SVP LISEZ ET SUIVEZ

- L'enlèvement de manière permanente a apposé des avertissements d'étiquette d'estimation videra la garantie.
- Observez tous les codes et ordonnances locaux en installant cet appareil. Si aucun code local n'est applicable, unité de fil selon le plus défunt code électrique national, ANSI/NFPA 70, ou le code électrique canadien, CSA C22.1, celui qui est applicable.

#### ⚠ **AVERTISSEMENT**

En reliant cet appareil à une alimentation d'énergie assurez-vous que c'est la même tension que l'estimation d'unité. Le raccordement inexact peut endommager considérablement les composants ou diminuer l'exécution de votre gril électrique de Magic du feu. Une plaque signalétique spécifiant la tension, le hertz, la puissance et les ampères est fixée à l'arrière de l'appareil et se trouve dans la section MODEL SPECIFICATIONS. Voir aussi la section IMPORTANT SAFEGUARDS. Pour éviter le risque de dommages aux biens et / ou des blessures, les travaux d'installation et le câblage électrique doit être effectuée par un technicien de service professionnel qualifié. Cet appareil doit être installé selon cette instruction.

NON SUIVANT CES INSTRUCTIONS EXACTEMENT  
VIDERONT LA GARANTIE DU FABRICANT.

#### À UTILISER UNIQUEMENT À L'EXTÉRIEUR

#### ⚠ **AVERTISSEMENT**

L'installation inexacte, l'ajustement, le changement, le service, ou l'entretien peuvent causer des dommages ou des dégâts matériels. Pour l'installation appropriée, référez-vous aux instructions d'installation. Pour de l'aide ou des renseignements supplémentaires, consulter une agence de technicien de maintenance ou de service professionnel qualifié.

#### ⚠ **AVERTISSEMENT**

Pour réduire au minimum le risque de dégâts matériels et/ou de blessures, n'employez pas une prolongation flexible puissance-fournissent la corde à moins qu'elle se conforme aux caractéristiques comme énuméré en ce manuel (voir la section MISES EN GARDE IMPORTANT).

Grille de cuisson Numéros de brevets américains:  
D857,453 D862,984

Certifié à :

ANSI/UL 1026

CSA C22.2 No. 60335-1

CSA C22.2 No. 60335-2-6

CSA C22.2 No. 60335-2-78



## GETTING STARTED

|                                                                    |    |
|--------------------------------------------------------------------|----|
| IMPORTANT SAFEGUARDS .....                                         | 4  |
| INSTALLATION REQUIREMENTS .....                                    | 10 |
| <i>OVERHEAD CONSTRUCTION REQUIREMENTS</i> .....                    | 10 |
| <i>EXHAUST HOOD</i> .....                                          | 10 |
| <i>CLEARANCES</i> .....                                            | 11 |
| NOTES PAGE .....                                                   | 12 |
| <i>COOLING AIRFLOW</i> .....                                       | 13 |
| DIAGRAMMATICAL REPRESENTATIONS OF OUTDOOR AREAS .....              | 14 |
| ELECTRICAL SAFETY .....                                            | 15 |
| MODEL SPECIFICATIONS .....                                         | 16 |
| <i>EL500s (single digital control models) WIRING DIAGRAM</i> ..... | 19 |
| <i>EL500s (dual digital control models) WIRING DIAGRAM</i> .....   | 20 |
| ELECTRIC GRILL REPLACEMENT PARTS LIST .....                        | 21 |

## INSTALLATION

|                                                         |    |
|---------------------------------------------------------|----|
| INSTALLATION PREPARATION .....                          | 23 |
| IMPORTANT SAFETY INFORMATION.....                       | 23 |
| <i>LOCATION</i> .....                                   | 23 |
| <i>ELECTRICAL SETUP</i> .....                           | 25 |
| PATIO MOUNT INSTALLATION .....                          | 26 |
| ABOVE-GROUND ELECTRICAL INSTALL METHOD .....            | 26 |
| UNDERGROUND ELECTRICAL INSTALL METHOD .....             | 27 |
| IN-GROUND POST INSTALLATION.....                        | 29 |
| ABOVE GROUND ELECTRICAL INSTALL METHOD.....             | 29 |
| UNDERGROUND ELECTRICAL INSTALL METHOD .....             | 31 |
| COMMON INSTALLATION .....                               | 34 |
| <i>INSTALL VAPORIZER PANELS</i> .....                   | 34 |
| <i>INSTALL ZONE DIVIDER (dual control models)</i> ..... | 34 |
| <i>INSTALL COOKING GRIDS</i> .....                      | 35 |
| <i>INSTALL WARMING RACK</i> .....                       | 35 |
| OPERATION TEST.....                                     | 36 |
| <i>INSTALL DRIP TRAY</i> .....                          | 36 |
| <i>INSTALL RIGID SHELVES</i> .....                      | 36 |
| <i>INSTALL SIDE HANDLE KIT (AP Series Only)</i> .....   | 36 |

## USE, CARE & SERVICE

|                                           |    |
|-------------------------------------------|----|
| USING THE GRILL.....                      | 37 |
| USING THE ELECTRIC GRILL .....            | 37 |
| DIGITAL THERMOMETER / THERMOSTAT .....    | 38 |
| SERVICING AND CLEANING .....              | 45 |
| <i>CLEANING YOUR ELECTRIC GRILL</i> ..... | 45 |
| <i>CONTROL PANEL REMOVAL</i> .....        | 47 |
| NOTES PAGE .....                          | 48 |
| TROUBLESHOOTING.....                      | 49 |
| WARRANTY .....                            | 50 |

# IMPORTANT SAFEGUARDS



## WARNING!

When using electrical appliances, basic safety precautions must always be followed including the following:

1. **Read all instructions.**
2. This product is for household use.
3. Do not touch hot surfaces. Always use the handle.
4. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
5. To protect against electrical shock, do not immerse cord, plugs, meat probe or grill in water or other liquids.
6. Close supervision is necessary when any appliance is used by or near children.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Accessible parts may become hot during use. Young children should be kept away.
10. Allow the unit to cool before fully shutting off the main power source for cleaning, servicing, taking off parts, or when unit will not be in use.

**Note:** After operating and turning off this unit, refrain from immediately disconnecting or shutting off the main electrical supply. The electric fans continue operating to cool the electronics rapidly. Always allow sufficient cooling time prior to shutting off the electric supply.

11. Do not operate any appliance with a damaged cord, plug, wiring or after the appliance malfunctions or has been damaged in any manner. Regularly examine all electrical connections and contact the nearest authorized service facility for repair or adjustment.
12. Approved electrical supply MUST be permanently anchored by an authorized installer.
13. The electrical supply must NOT be in contact with sharp points or edges.
14. Only use the temperature meat probe included with this appliance.
15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Before disconnecting from electrical supply, turn off unit via power switch, allow time for the unit to cool completely, then shut-off electrical supply or remove plug from outlet as applicable.
17. Do not use appliance for other than intended use.
18. Charcoal or similar combustible fuels must not be used with this appliance.
19. **This unit requires a dedicated Ground Fault Circuit Interrupter (GFCI) circuit breaker with the addition of an electrical disconnect, or removable plug with receptacle (not included). Use only a properly wired and inspected 230/240VAC (30 AMP minimum, single-phase) GFCI GROUNDED 3-wire circuit breaker, electrical disconnect, or removable plug with receptacle with this outdoor cooking appliance.** The electrical disconnect, and plug with receptacle MUST be outdoor-rated WEATHER-PROOF and IN-USE COVERED. Only use a properly grounded outlet. Never remove the grounding plug or use with an adapter of 2 prongs. **Installation and equipment must be in compliance with the National Electric Code and all local codes.**

## IMPORTANT SAFEGUARDS (cont.)

20. NEVER grill in the open rain or in standing water as this grill is an electric appliance.
21. Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors. **ALL MINIMUM CLEARANCES STATED IN THE INSTALLATION REQUIREMENTS SECTION MUST BE MAINTAINED.**
22. The power to the unit must be made readily accessible to the operator through means of a dedicated 30 AMP single-phase GFCI circuit breaker.
23. **The provisions of the National Electric Code as well as any local codes must be observed when installing the product.**
24. **NEVER cover more than 75% of the cooking or grill surface with griddles, pots or pans. Overheating of the electronic components will occur.**
25. This appliance MUST NOT be left in operation when unattended. This appliance is designed as an attended appliance.
26. Use extreme caution when removing drip tray. Only handle the drip tray after the unit has fully cooled down.
27. In order to prevent tipping of the appliance, the base must be properly anchored to the ground (if applicable). Refer to the INSTALLATION section for details.
28. Do not clean this product with a water spray (or similar). Reference the SERVICING AND CLEANING section for cleaning information.
29. Before obtaining access to terminals, all supply circuits must be disconnected.
30. Danger of fire: Do not store items on the cooking surfaces.
31. The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
32. Unattended cooking with greasy food or oil can be dangerous and may result in a fire.

## SAVE THESE INSTRUCTIONS

### IMPORTANT

**IN THE EVENT OF A GREASE FIRE, IMMEDIATELY CUT OFF THE POWER SOURCE. KEEP THE LID OPEN AND ALLOW THE FIRE TO EXTINGUISH ITSELF. KEEP AT A SAFE DISTANCE. A THOROUGH INSPECTION BY A QUALIFIED PROFESSIONAL SERVICE TECHNICIAN SHOULD BE CONDUCTED BEFORE FUTURE USE OF YOUR UNIT. THE SERVICE TECHNICIAN WILL CHECK ALL ELECTRICAL WIRING FOR DAMAGE. ALL WIRING MUST BE REPAIRED PRIOR TO FUTURE USE.**

# WARNING:

- DO NOT TOUCH HOT SURFACES.
- TO PREVENT ELECTRIC SHOCK, UNPLUG OR DISCONNECT BEFORE MAINTENANCE OR SERVICE.
- DO NOT IMMERSE IN WATER, DO NOT USE WHEN WET.
- OUTDOOR HOUSEHOLD USE ONLY.
- DO NOT INSTALL CLOSER THAN 8" TO A VERTICAL SURFACE.
- DO NOT INSTALL UNDER UNPROTECTED OVERHEAD COMBUSTIBLE CONSTRUCTION.
- DO NOT INSTALL IN COMBUSTIBLE ENCLOSURE WITHOUT INSULATION LINER.



**CAUTION, HOT SURFACE**

**REMOVE PROTECTIVE COVERING FROM ALL EXTERIOR SURFACES PRIOR TO USING. ALL EXTERIOR SURFACES (EXCEPT GLASS) MAY BE CLEANED WITH STAINLESS STEEL CLEANER.**

**FOR SUPPLY CONNECTIONS, USE 10AWG OR LARGER WIRES SUITABLE FOR AT LEAST 105° C (221° F)**

**WARNING: CHARCOAL OR SIMILAR COMBUSTIBLE FUELS MUST NOT BE USED WITH THIS APPLIANCE.**

**WARNING: ACCESSIBLE PARTS MAY BECOME HOT DURING USE. YOUNG CHILDREN SHOULD BE KEPT AWAY.**



## AVERTISSEMENTS!

Lors de l'utilisation d'appareils électriques, des précautions de sécurité de base doivent toujours être suivies, y compris les suivantes :

1. **Lisez toutes les instructions.**
2. Ce produit est destiné à un usage domestique.
3. Ne touchez pas les surfaces chaudes. Utilisez toujours la poignée.
4. Lors de son utilisation, l'appareil devient chaud. Il convient de prendre des précautions pour éviter de toucher les éléments chauffants à l'intérieur du four.
5. Pour protéger contre les chocs électriques, ne plongez pas le cordon, les fiches, la sonde à viande ou le gril dans l'eau ou d'autres liquides.
6. Une surveillance étroite est nécessaire lorsque l'appareil est utilisé par ou à proximité d'enfants.
7. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins qu'elles n'aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil par une personne responsable.
8. Les enfants doivent être supervisés afin de s'assurer qu'ils ne jouent pas avec l'appareil.
9. Les parties accessibles peuvent devenir chaudes pendant l'utilisation. Les jeunes enfants doivent être tenus à l'écart.
10. Laissez l'appareil refroidir avant de couper complètement la source d'alimentation principale pour le nettoyage, l'entretien, le retrait des pièces ou lorsque l'appareil ne sera pas utilisé.  
**Note: Après avoir utilisé et éteint cet appareil, évitez de déconnecter ou de couper immédiatement l'alimentation électrique principale. Les ventilateurs électriques continuent de fonctionner pour refroidir rapidement les composants électroniques.** Laissez toujours suffisamment de temps pour le refroidissement avant de couper l'alimentation électrique.
11. N'utilisez aucun appareil avec un cordon, une fiche, un câblage endommagés ou après un dysfonctionnement ou tout autre dommage. Examinez régulièrement toutes les connexions électriques et contactez le centre de service agréé le plus proche pour toute réparation ou tout réglage.
12. L'alimentation électrique approuvée DOIT être fixée de façon permanente par un installateur agréé.
13. L'alimentation électrique ne doit PAS être en contact avec des pointes ou des arêtes vives.
14. Utilisez uniquement la sonde à viande pour température fournie avec cet appareil.
15. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut entraîner des blessures.
16. Avant de déconnecter l'appareil de l'alimentation électrique, éteignez l'appareil à l'aide de l'interrupteur, laissez-le refroidir complètement, puis coupez l'alimentation électrique ou retirez la fiche de la prise, selon le cas.
17. N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il est destiné.
18. Le charbon de bois ou des combustibles similaires ne doivent pas être utilisés avec cet appareil.

## IMPORTANTES MESURES DE SÉCURITÉ (suite)

19. Cet appareil nécessite un disjoncteur dédié avec protection contre les défauts de mise à la terre (GFCI), accompagné d'un dispositif de déconnexion électrique, ou d'une fiche amovible avec prise (non incluse). Utilisez uniquement un disjoncteur GFCI de 230/240VAC (minimum 30 AMP, monophasé), correctement inspecté, **MIS À LA TERRE, À 3 FILS**, dispositif de déconnexion électrique ou fiche amovible avec prise pour cet appareil de cuisson extérieur. Le dispositif de déconnexion électrique et la fiche avec prise DOIVENT être conçus pour une utilisation en extérieur, résistants aux intempéries et avec un COUVERCLE POUR UTILISATION. Utilisez uniquement une prise correctement mise à la terre. Ne retirez jamais la fiche de mise à la terre ni n'utilisez un adaptateur à 2 fiches. **L'installation et l'équipement doivent être conformes au Code national de l'électricité et à tous les codes locaux.**
20. N'utilisez JAMAIS le gril sous la pluie ou dans de l'eau stagnante, car cet appareil est un appareil électrique.
21. Gardez la zone de l'appareil dégagée et exempte de matériaux combustibles, d'essence et d'autres vapeurs inflammables. **TOUTES LES MINIMUM CLEARANCES INDIQUÉES DANS LA SECTION INSTALLATION REQUIREMENTS DOIVENT ÊTRE RESPECTÉES.**
22. L'alimentation de l'appareil doit être facilement accessible à l'opérateur par l'intermédiaire d'un disjoncteur GFCI monophasé de 30 AMP dédié.
23. **Les dispositions du Code national de l'électricité ainsi que de tout code local doivent être respectées lors de l'installation du produit.**
24. **N'IL FAUT JAMAIS couvrir plus de 75 % de la surface de cuisson ou du gril avec des plaques, des casseroles ou des poêles. Cela entraînera une surchauffe des composants électroniques.**
25. Cet appareil NE DOIT PAS être laissé en fonctionnement sans surveillance. Cet appareil est conçu pour être utilisé sous surveillance
26. Faites preuve d'une extrême prudence lors du retrait du bac de récupération. Manipulez le bac de récupération uniquement après que l'appareil soit complètement refroidi.
27. Afin d'éviter le basculement de l'appareil, la base doit être correctement ancrée au sol (le cas échéant). Reportez-vous à la section INSTALLATION pour plus de détails.
28. N'ayez pas recours à un jet d'eau (ou similaire) pour nettoyer ce produit. Reportez-vous à la section SERVICING AND CLEANING pour les informations sur le nettoyage.
29. Avant d'accéder aux bornes, tous les circuits d'alimentation doivent être déconnectés.
30. Danger d'incendie : Ne rangez pas d'objets sur les surfaces de cuisson.
31. Le processus de cuisson doit être surveillé. Un processus de cuisson à court terme doit être surveillé en continu.
32. La cuisson sans surveillance d'aliments gras ou d'huile peut être dangereuse et entraîner un incendie.

## CONSERVEZ CES INSTRUCTIONS

### IMPORTANT

**EN CAS D'INCENDIE DE GRAISSE, COUPEZ IMMÉDIATEMENT L'ALIMENTATION ÉLECTRIQUE. LAISSEZ LE COUVERCLE OUVERT ET LAISSEZ LE FEU S'ÉTEINDRE DE LUI-MÊME. GARDEZ UNE DISTANCE SÛRE. UNE INSPECTION APPROFONDIE PAR UN TECHNICIEN DE SERVICE QUALIFIÉ DOIT ÊTRE EFFECTUÉE AVANT UNE UTILISATION FUTURE DE VOTRE APPAREIL. LE TECHNICIEN DE SERVICE VÉRIFIERA TOUT LE CÂBLAGE ÉLECTRIQUE POUR DÉTECTER D'ÉVENTUELS DOMMAGES. TOUS LES CÂBLAGES DOIVENT ÊTRE RÉPARÉS AVANT UNE UTILISATION FUTURE.**



## **AVERTISSEMENTS!**

- NE TOUCHEZ PAS LES SURFACES CHAUDES.
- POUR PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHEZ OU DÉCONNECTEZ AVANT TOUT ENTRETIEN OU SERVICE.
- NE PAS IMMERSIONNER DANS L'EAU, NE PAS UTILISER LORSQU'IL EST MOUILLÉ.
- UTILISATION DOMESTIQUE EN EXTÉRIEUR UNIQUEMENT.
- NE PAS INSTALLER À MOINS DE 8" D'UNE SURFACE VERTICALE.
- NE PAS INSTALLER SOUS UNE CONSTRUCTION COMBUSTIBLE NON PROTÉGÉE AU-DEDANS.
- NE PAS INSTALLER DANS UNE ENVELOPPE COMBUSTIBLE SANS REVÊTEMENT ISOLANT.
- ATTENTION, SURFACES CHAUDES
- RETIREZ LE REVÊTEMENT DE PROTECTION DE TOUTES LES SURFACES EXTÉRIEURES AVANT UTILISATION. TOUTES LES SURFACES EXTÉRIEURES (SAUF LE VERRE) PEUVENT ÊTRE NETTOYÉES AVEC UN NETTOYANT POUR INOX.
- POUR LES CONNEXIONS D'ALIMENTATION, UTILISEZ DES FILS DE 10AWG OU PLUS GRANDS, ADAPTÉS POUR UNE TEMPÉRATURE D'AU MOINS 105 °C (221 °F).
- AVERTISSEMENT: LE CHARBON DE BOIS OU DES COMBUSTIBLES SIMILAIRES NE DOIVENT PAS ÊTRE UTILISÉS AVEC CET APPAREIL.
- AVERTISSEMENT: LES PARTIES ACCESSIBLES PEUVENT DEVENIR CHAUDES PENDANT L'UTILISATION. LES JEUNES ENFANTS DOIVENT ÊTRE TENUS À L'ÉCART.

## INSTALLATION REQUIREMENTS

Installation must be performed by a qualified professional service technician.

Any constructed outdoor area in which the appliance is used shall comply with one of the following:

- An outdoor area with walls on three sides, and no overhead cover
- Within a partial outdoor area that includes an overhead cover and no more than two walls. The sidewalls may be parallel, as in a breezeway, or at right angles to each other
- Within a partial outdoor area that includes an overhead cover with walls on three sides, and at least 30% or more of the horizontal periphery of the enclosure that is open and unrestricted

**Note:** All openings must be permanently open.

**Note:** Sliding doors, garage doors, windows, or screened openings are not considered as permanent openings.

Refer to DIAGRAMMATICAL REPRESENTATIONS OF OUTDOOR AREAS section.

### OVERHEAD CONSTRUCTION REQUIREMENTS

#### Combustible overhead construction (roof):

- **An exhaust hood is required.** A minimum 5 foot clearance is required between the cooking surface and the overhead construction. (No combustible materials are allowed within this area.) See Fig. 10-1.
- See EXHAUST HOOD section below for more details and consult the instructions provided with the exhaust hood for additional requirements.

#### Non-combustible overhead construction (roof):

- An exhaust hood is highly recommended. A minimum 5 foot clearance is required between the cooking surface and the overhead construction. (No combustible materials are allowed within this area.) See Fig. 10-1.

#### Combustible overhead cabinetry:

- **An exhaust hood is required.** A minimum clearance of 30" (Fig.10-2) is required between the cooking surface and the exhaust hood. Any overhead cabinetry must be directly above the exhaust hood. Cabinetry extending to the left or right of the exhaust hood is not permitted.
- See EXHAUST HOOD section below for more details and consult the instructions provided with the exhaust hood for additional requirements.

### EXHAUST HOOD

The exhaust hood helps extract smoke while cooking and provides protection for the overhead construction.

When using an exhaust hood, the area above the cooking surface of the grill must be covered with a hood larger than the cooking area of the grill, and with a minimum of 1200 CFM (cubic feet per minute) rated exhaust fan for proper outdoor application.

Fire Magic vent hoods, spacers, and duct covers are available. They meet all requirements. See Table 3 in the MODEL SPECIFICATIONS section. Contact your local dealer.

For custom spacers, they must be constructed entirely of non-combustible material only. For custom soffits, they may be constructed of wood, metal framing, etc.

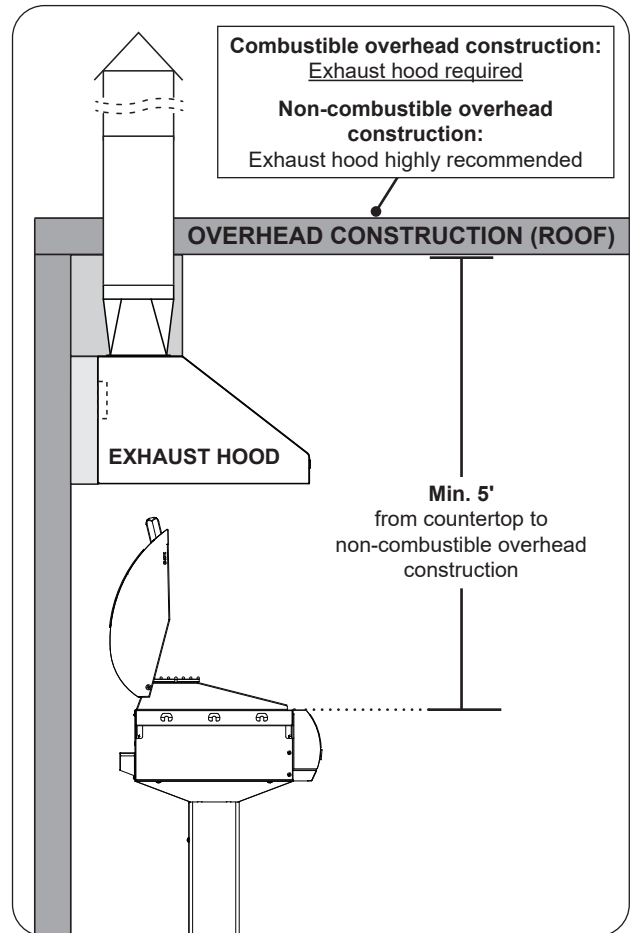


Fig. 10-1 Overhead (roof) requirements

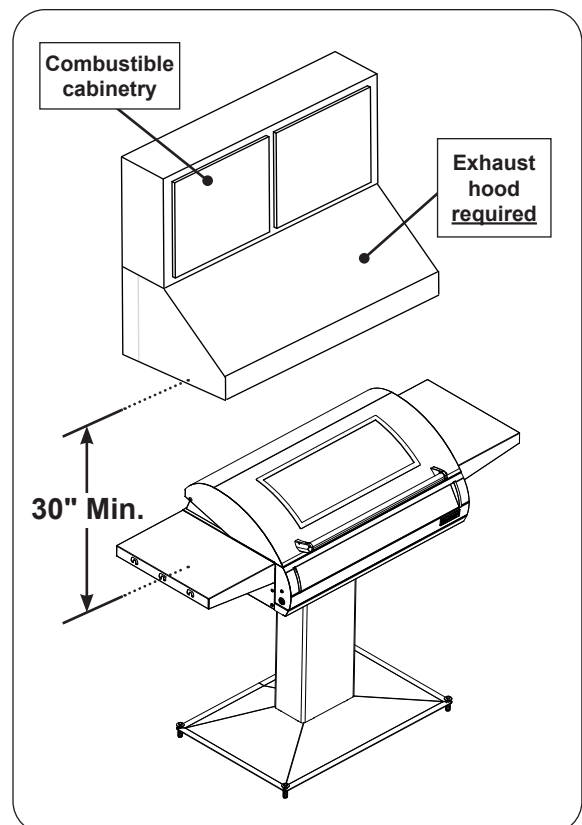


Fig. 10-2 Overhead cabinetry requirements

## CLEARANCES

### Rear wall

The unit must have a minimum clearance of 8" from the rear wall (see Fig. 11-1).

(To allow for proper ventilation and prevent dangerous overheating.)

### Side wall (if applicable)

The unit must have a minimum clearance of 24" from any side walls (to account for variables in airflow that could affect performance). See Fig. 11-2.

### Corner wall (if applicable)

The unit must have a minimum clearance of 24" from any side walls (to account for variables in airflow that could affect performance). See Fig. 11-3.

Clearances continued on following page

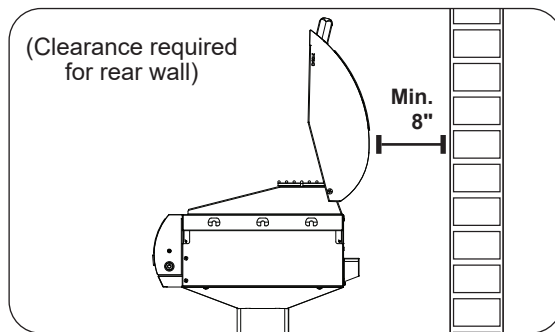


Fig. 11-1 Clearance 'A' Diagram

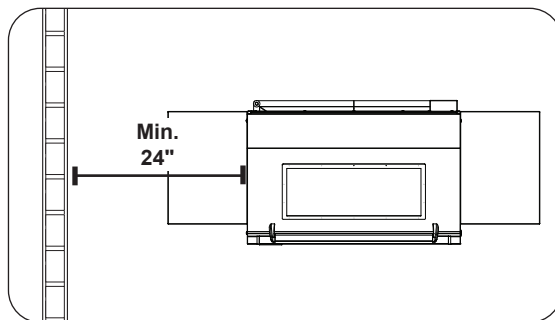


Fig. 11-2 Side wall clearance

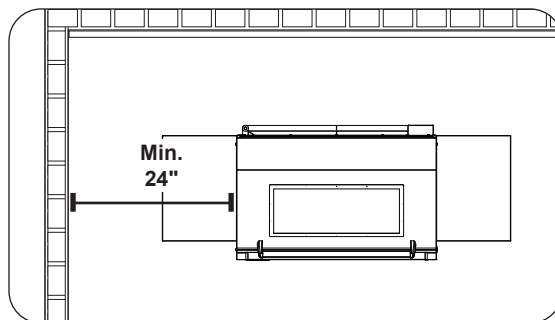


Fig. 11-3 Corner wall clearance



## COOLING AIRFLOW

Proper airflow (front-to-back, Fig. 13-1) **MUST** be maintained for the unit to perform as it was designed. If airflow is blocked, overheating will result. Do not block the front air inlet along the bottom of the control panel.

**CAUTION:** Install the grill so that the prevailing wind blows toward the front of the grill (Fig. 13-2). Wind blowing into or across the rear oven lid vent (Fig. 13-3) can cause poor performance and/or dangerous overheating. A wind deflector is available for purchase to assist in proper airflow during windy conditions, See Table 2 for model numbers. Follow the instructions included with the wind deflector for installation.

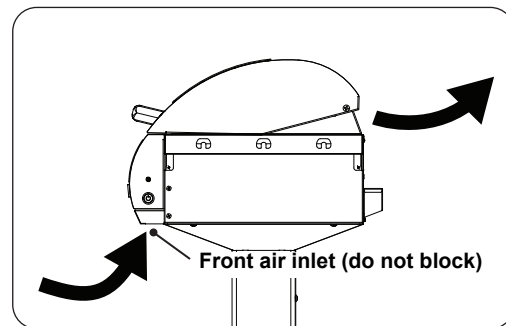


Fig. 13-1 Airflow diagram



Fig. 13-2 Airflow direction - CORRECT


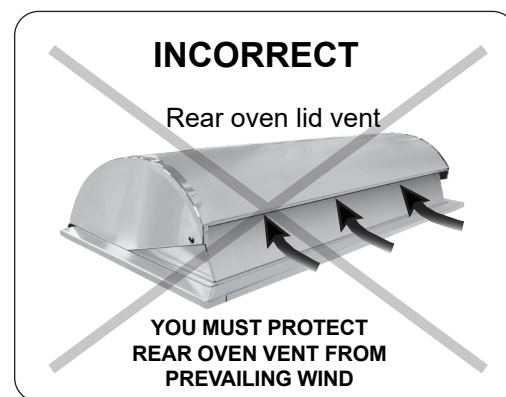




Fig. 13-3 Airflow direction - INCORRECT
 
## DIAGRAMMATICAL REPRESENTATIONS OF OUTDOOR AREAS



The following figures are diagrammatical representations of outdoor areas. See INSTALLATION REQUIREMENTS section.

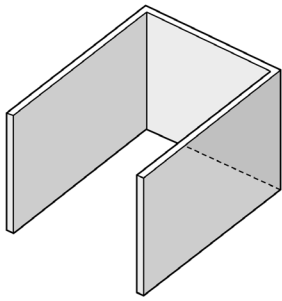



**Fig. 14-1** Outdoor area - Example 1

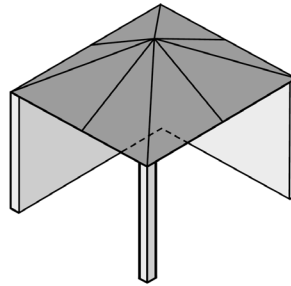


**Fig. 14-2** Outdoor area - Example 2

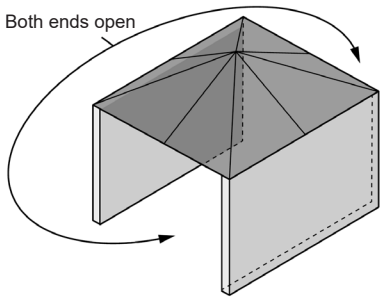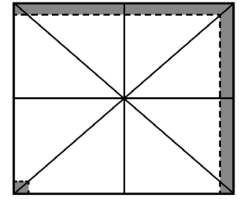


**Fig. 14-3** Outdoor area - Example 3

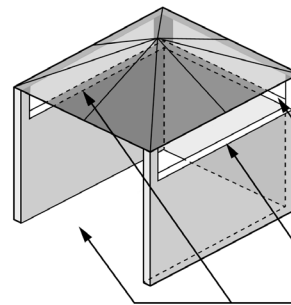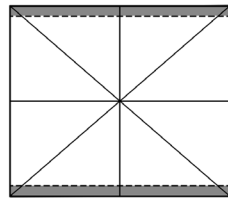


**Fig. 14-4** Outdoor area - Example 4

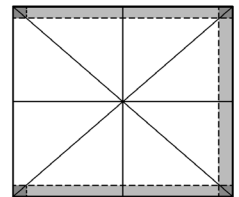

30% or more of the horizontal periphery of the enclosure is open and unrestricted

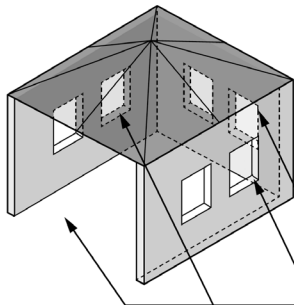

**Fig. 14-5** Outdoor area - Example 5

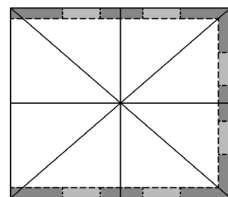

30% or more of the horizontal periphery of the enclosure is open and unrestricted

## ELECTRICAL SAFETY

- To protect against electric shock, do not immerse electrical wires, cord or plugs (as applicable) in water or other liquid.
- Allow the unit to cool before fully shutting off the main power source for cleaning, servicing, taking off parts or when unit will not be in use.
- Do not operate any outdoor cooking appliance with damaged wiring, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer for repair.
- Do not use an outdoor cooking appliance for purposes other than intended.
- **Use only a properly wired and inspected 240VAC (30 AMP minimum, single-phase) GROUNDED three-wire dedicated Ground Fault Circuit Interrupter (GFCI) circuit breaker *with the addition of* an in-line electrical disconnect OR removable plug with outlet with this outdoor cooking appliance. The electrical disconnect, and plug with receptacle MUST be outdoor-rated WEATHER-PROOF and IN-USE COVERED.**
- **Use only a GFCI circuit breaker rated for 30 AMPS with this outdoor cooking appliance.**
- **Use only 10AWG (or larger) wires suitable for at least 221° F (105° C).**
- **The provisions of the National Electric Code as well as any local codes must be observed when installing the product.**

**The unit rating label is located behind the unit. The unit serial number is located:**

- on the underside of the drip tray handle (on a thermal label). It is recommended that the drip tray first be removed and cleaned / emptied of its contents, then turned over to view.
- affixed to the grill body behind the control panel (on an aluminum tag)
- on the unit rating label located behind the unit

|               |                               |                                                                              |
|---------------|-------------------------------|------------------------------------------------------------------------------|
| <b>EL500s</b> | Input electrical requirements | 230/240VAC / 30 AMP minimum / single-phase / 50/60 Hz / GFCI circuit breaker |
|               | Appliance rating              | 230/240VAC / 6,000 watts / 25 AMP / 50/60 Hz                                 |
|               | Ingress protection            | IPX4                                                                         |


**Table 1 - Product Specifications**

|                                                                                                                       | <b>EL500s</b> |
|-----------------------------------------------------------------------------------------------------------------------|---------------|
| Wind deflector model # *                                                                                              | 23116-19      |
| Protective cover                                                                                                      | 3665F         |
| Cooking grid scraper                                                                                                  | 3502-E        |
| Griddle accessory                                                                                                     | 3522          |
| Fire Magic vent hood model # *                                                                                        | 36-VH-7 †     |
| Fire Magic vent hood spacer model # *                                                                                 | 36-VH-7-02 †  |
| Fire Magic vent hood duct cover model # *                                                                             | 36-VH-7-DC †  |
| * If applicable, not included<br>† This model meets the minimum size requirements; larger models are also acceptable. |               |

**Table 2 - Grill Supporting Products**

|                  | Height                       |                                |                              | Width            |                | Depth            |                         |
|------------------|------------------------------|--------------------------------|------------------------------|------------------|----------------|------------------|-------------------------|
|                  | Floor to top                 |                                | Floor to top<br>of shelf (C) | (Left to right)  |                | (Front to back)  |                         |
|                  | With oven lid<br>OPEN<br>(A) | With oven lid<br>CLOSED<br>(B) |                              | Post base<br>(D) | Shelves<br>(E) | Post base<br>(F) | Maximum<br>outer<br>(G) |
| <b>P6 Series</b> | 57 4/5"                      | 43 1/2"                        | 37"                          | 30 1/4"          | 56 1/8"        | 20 1/4"          | 23 3/4"                 |
| <b>AP Series</b> | 52 4/5"                      | 38 1/2"                        | 32"                          | 30 1/4"          | 56 1/8"        | 20 1/4"          | 23 3/4"                 |

**Table 3** - Stand Alone Post Dimensions

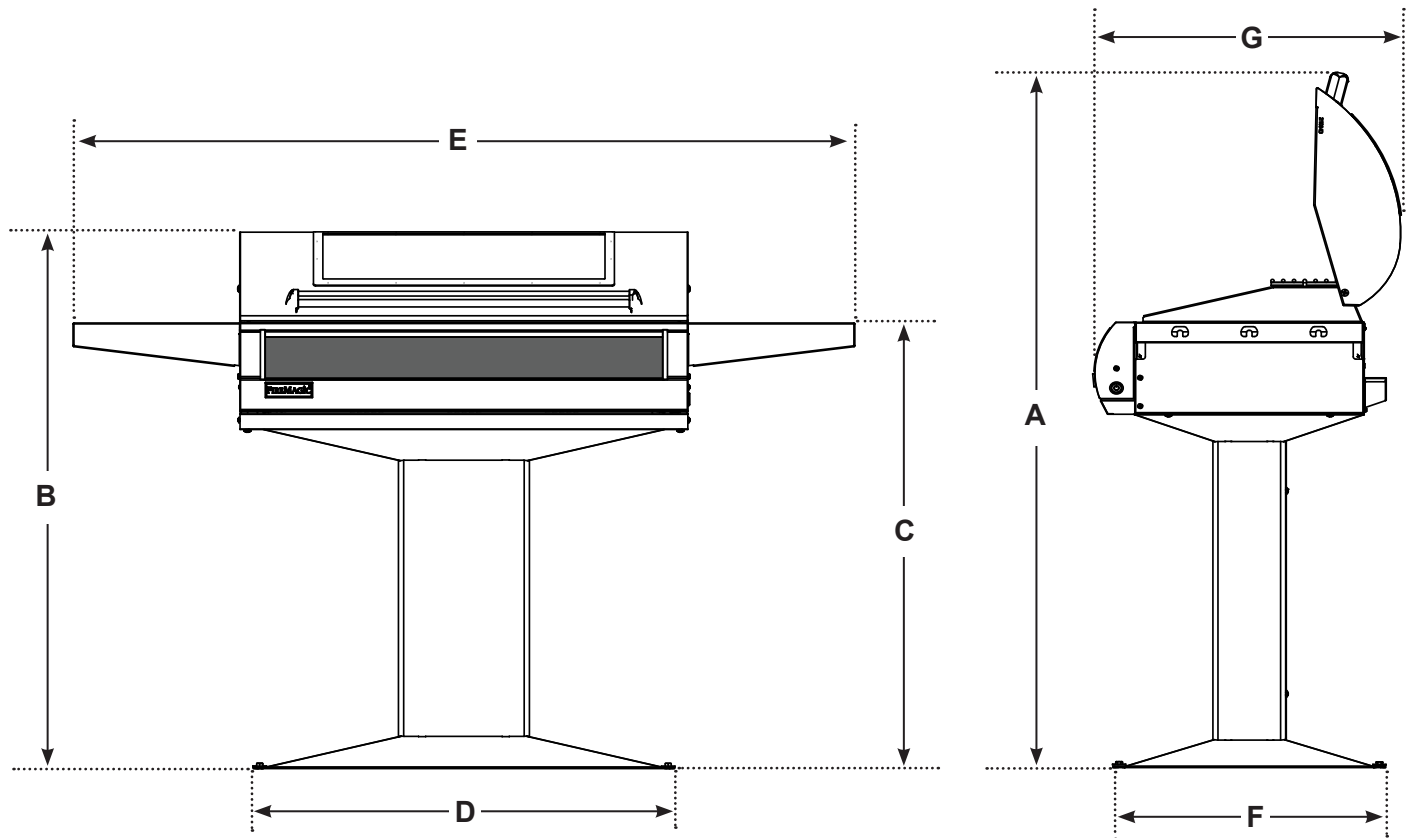


**Fig. 17-1**

## MODEL SPECIFICATIONS (CONT.)

| Model            | Height*                |                          |                           |                                               | Width         |             | Depth         |                   |
|------------------|------------------------|--------------------------|---------------------------|-----------------------------------------------|---------------|-------------|---------------|-------------------|
|                  | Floor to top           |                          | Floor to top of shelf (C) | Floor to bottom of extension below ground (D) | Left to right |             | Front to back |                   |
|                  | With oven lid OPEN (A) | With oven lid CLOSED (B) |                           |                                               | Post (E)      | Shelves (F) | Post (G)      | Maximum outer (H) |
| <b>G6 Series</b> | 57 4/5"                | 43 1/2"                  | 37"                       | 18"                                           | 9 3/8"        | 56 1/8"     | 5 1/2"        | 23 3/4"           |
| <b>AG Series</b> | 52 4/5"                | 38 1/2"                  | 32"                       | 18"                                           | 9 3/8"        | 56 1/8"     | 5 1/2"        | 23 3/4"           |


\*Note: Height dimensions are approximate from ground level once installed.

**Table 4 - In-Ground Post Grill Dimensions**

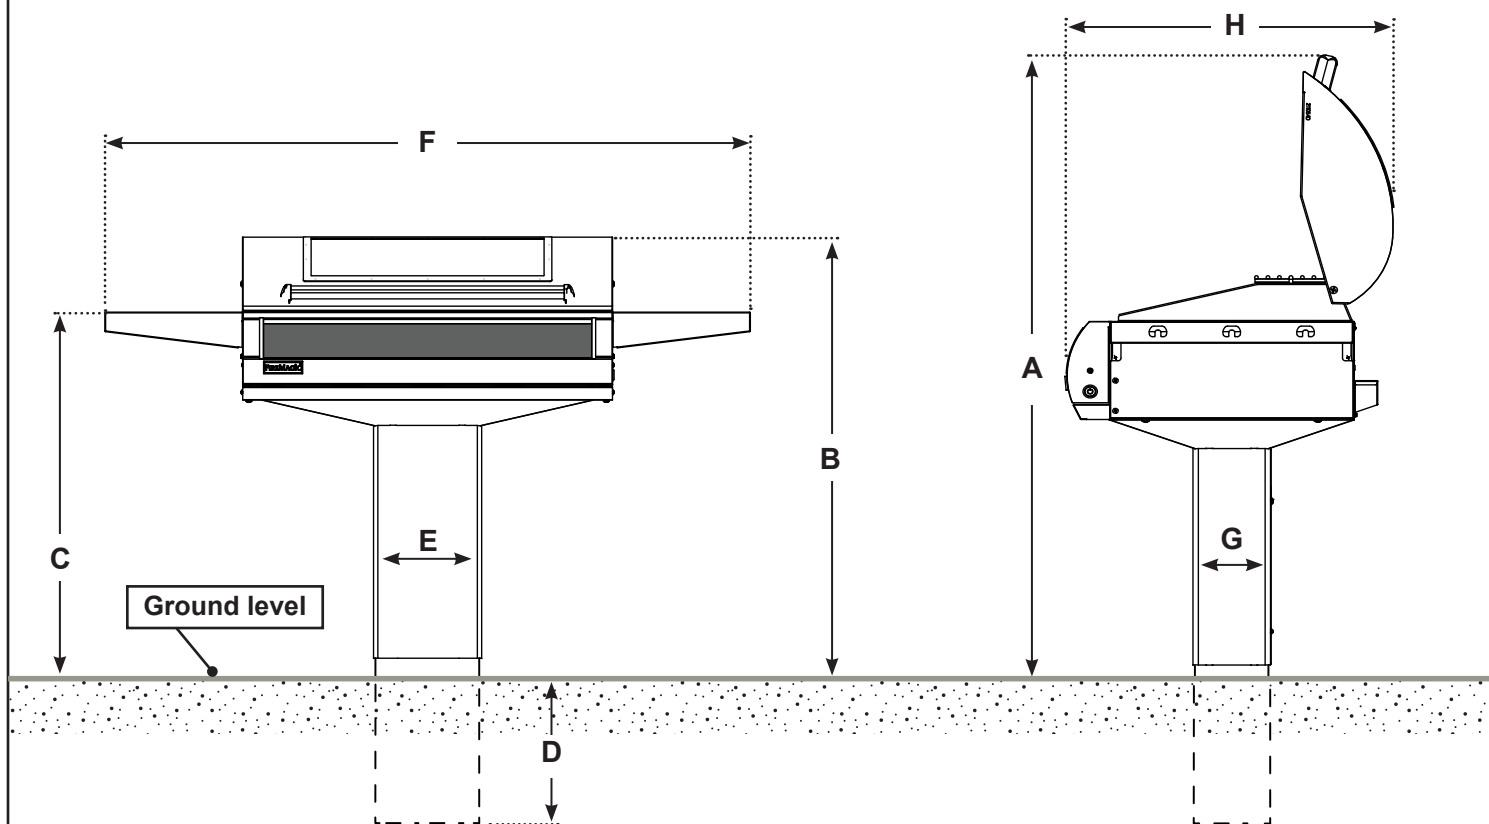

(AG Series shown)

**EL500s (single digital control models)  
WIRING DIAGRAM**

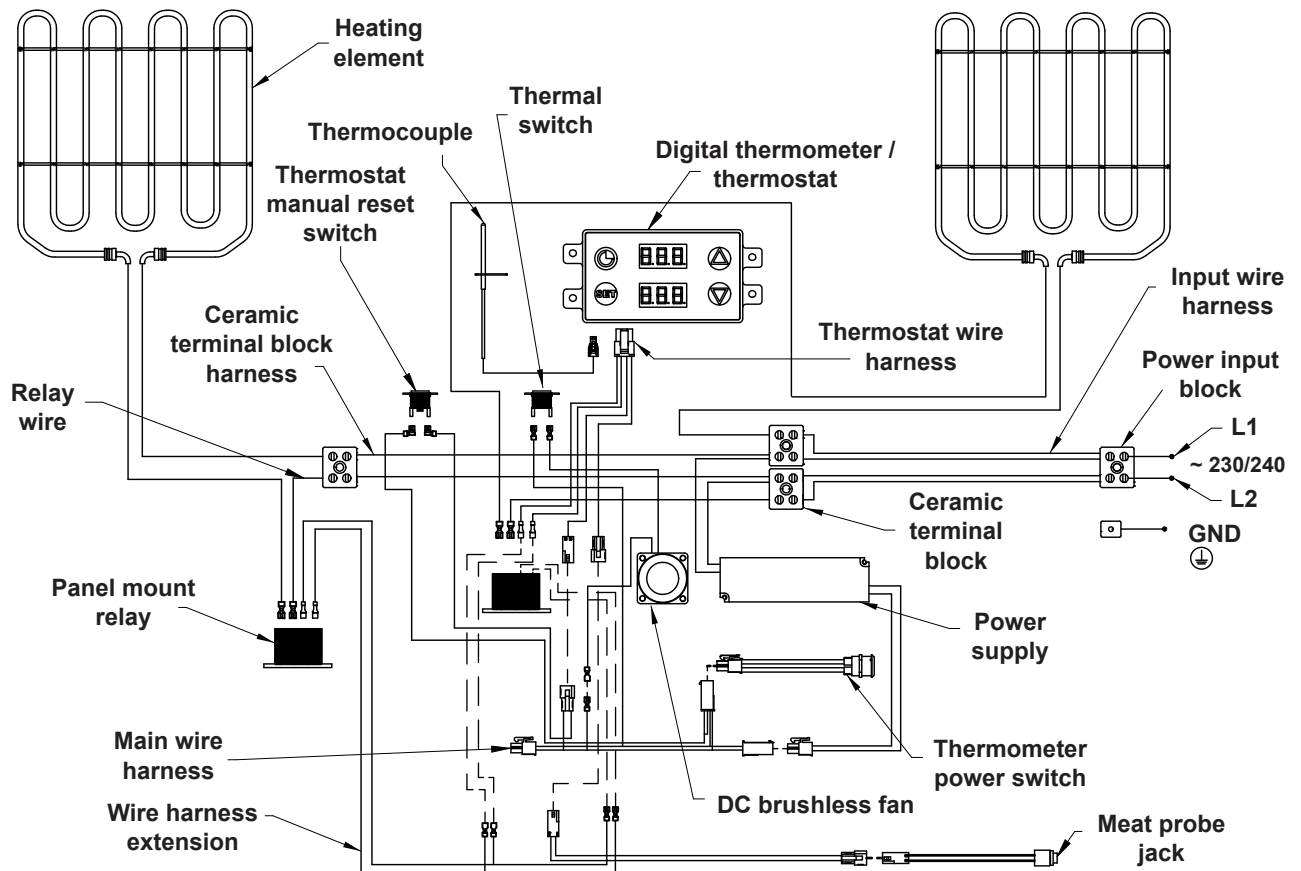

**Fig. 19-1**

**Note:** In addition, a wire diagram can be found affixed to the rear of the unit.

**EL500s (dual digital control models)  
WIRING DIAGRAM**

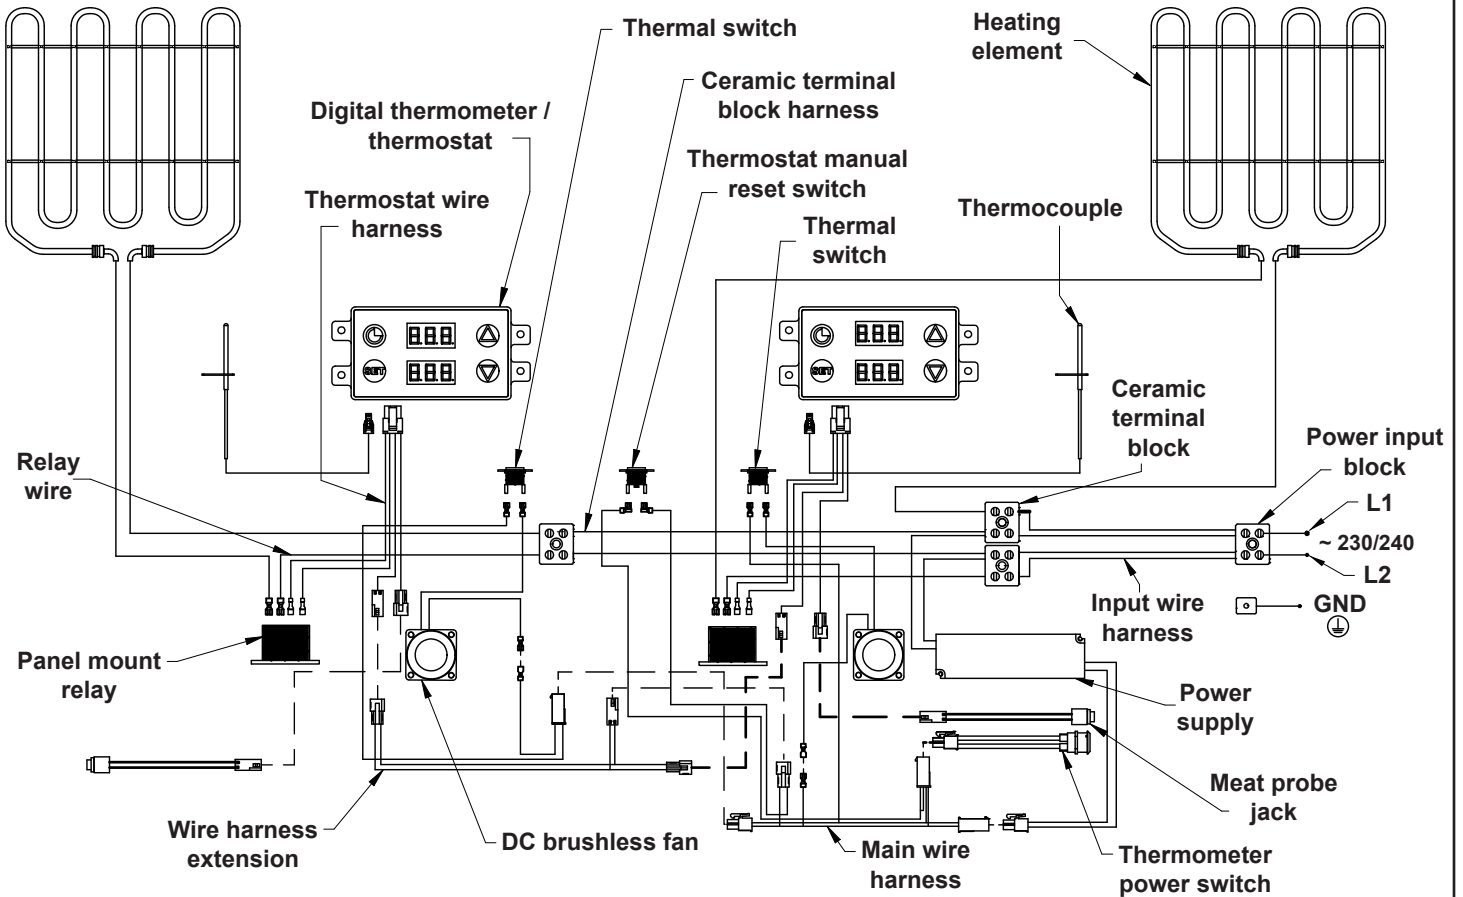


Fig. 20-1

**Note:** In addition, a wire diagram can be found affixed to the rear of the unit.


# ELECTRIC GRILL REPLACEMENT PARTS LIST

Your unit is packaged in (2) boxes.

## IMPORTANT

Remove all packing material (including any protective coatings) and discard prior to use.

Replacement parts can be ordered from your local Fire Magic dealer.

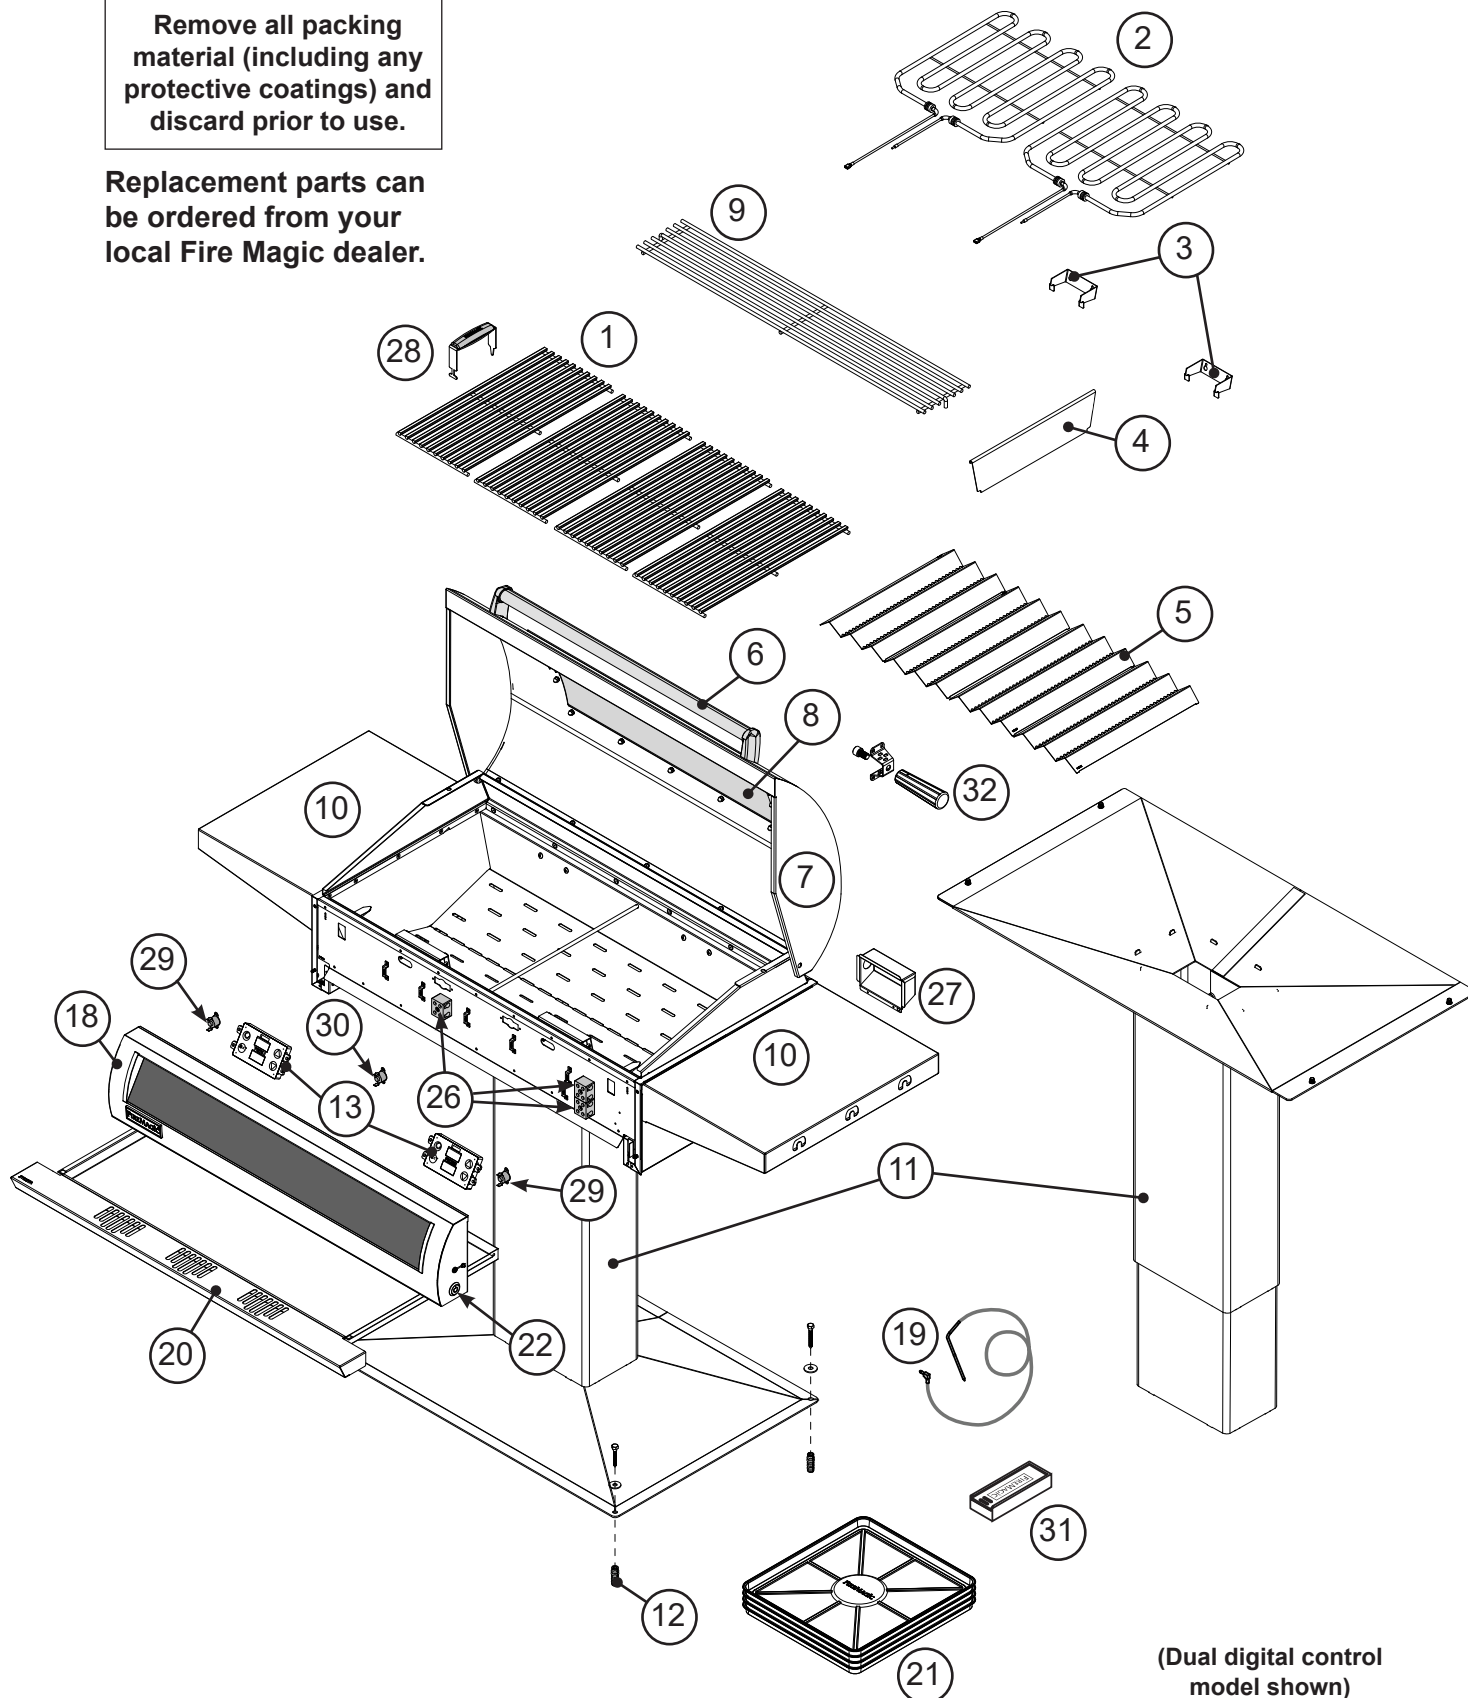

(Dual digital control model shown)

## ELECTRIC GRILL REPLACEMENT PARTS LIST (CONT.)

| Item | Description                                                    | EL500s      |         |
|------|----------------------------------------------------------------|-------------|---------|
|      |                                                                | Part No.    | Qty.    |
| 1.   | Stainless cooking grid (set of 2)                              | 3555-DS-2   | 2       |
| 2.   | Heating element                                                | 23116-16    | 2       |
| 3.   | Heating element rear support bracket                           | 23115-52    | 2       |
| 4.   | Zone divider *                                                 | 23116-02    | 1       |
| 5.   | Vaporizer panel (set of 4)                                     | 3066-S-4    | 1       |
| 6.   | Handle assy.                                                   | 23116-03    | 1       |
| 7.   | Oven lid w/ window (only available on dual control models)     | 23116-04    | 1       |
| or   | Oven lid w/o window †                                          | 23116-12    | 1       |
| 8.   | Magic view window glass w/ kit *                               | 23116-10    | 1       |
| 9.   | Warming rack                                                   | 3681        | 1       |
| 10.  | Rigid shelves                                                  | 25116-02    | 2       |
| 11.  | Patio post mount base w/ hardware (P6 models)                  | 25116-01    | 1       |
| or   | Patio post mount base w/ hardware (AP models) †                | 25116-03    | 1       |
| or   | In-ground post mount base w/ hardware (G6 models)              | 25116-04    | 1       |
| or   | In-ground post mount base w/ hardware (AG models) †            | 25116-05    | 1       |
| 12.  | Patio mount hardware kit w/ lag shields and lag screws         | 24330-25    | 1       |
| 13.  | Digital thermometer / thermostat                               | 23115-55    | 1 or 2▲ |
| 14.  | Wire harness adapter for digital thermometer / thermostat †    | 24187-47    | 1 or 2▲ |
| 15.  | Complete raceway w/ electronics (single control model) †       | 23116-13    | 1       |
| or   | Complete raceway w/ electronics (dual control model) †         | 23116-05    | 1       |
| 16.  | Main harness †                                                 | 23116-06    | 1       |
| 17.  | Harness extension †                                            | 23116-07    | 1       |
| 18.  | Control panel w/ raceway & electronics (single control model)  | 23116-14    | 1       |
| or   | Control panel w/ raceway & electronics (dual control model)    | 23116-08    | 1       |
| or   | Control panel w/ glass & no electronics (single control model) | 23116-21    | 1       |
| or   | Control panel w/ glass & no electronics (dual control model)   | 23116-22    | 1       |
| 19.  | Meat probe                                                     | 24187-21    | 1       |
| 20.  | Drip tray                                                      | 3097        | 1       |
| 21.  | Drip tray liners (set of 4)                                    | 3558        | 1       |
| 22.  | Thermometer power switch                                       | 24195-16    | 1       |
| 23.  | Fan †                                                          | 23115-15    | 1 or 2▲ |
| 24.  | Relay †                                                        | 23115-16    | 2       |
| 25.  | Power supply †                                                 | 24187-66    | 1       |
| 26.  | Ceramic terminal block                                         | 24187-71    | 4       |
| 27.  | Junction box                                                   | 24187-70    | 1       |
| 28.  | Grid lifter                                                    | 3519H       | 1       |
| 29.  | Thermal switch                                                 | 23116-11    | 1 or 2▲ |
| 30.  | Thermostat manual reset switch                                 | 23116-20    | 1       |
| 31.  | Meat probe bamboo storage box                                  | 24187-21-SB | 1       |
| 32.  | Oven lid side handle kit (included w/ AP Series only)          | 3600-51     | 1       |

\* If equipped

† Not shown

▲ Single control model: qty 1, dual control model: qty 2

## IMPORTANT SAFETY INFORMATION

### **BE CAREFUL**

**If not installed and used correctly per these instructions, this product can cause serious injury.**

**CAUTION:** Installation and maintenance must be done by a qualified professional service technician. Read these instructions before installing this unit. Be sure you understand all safety precautions and warnings contained in this manual.

**A. FOR OUTDOOR USE ONLY.**

**B.** When shutting the unit down—be sure to allow time for the unit to cool down completely (via the fans) before **TURNING OFF THE MAIN ELECTRICAL SUPPLY.**

**C. WARNING: DO NOT MODIFY THIS UNIT OR ITS CONTROLS.** Any changes will be dangerous. Improper installation or use of the unit can cause serious injury or death.

**D.** Check state and local codes to determine if the unit is permitted in your locality before installation.

## INSTALLATION PREPARATION

### **BEFORE YOU BEGIN**

**Important:** Prior to installation ensure that all specifications, dimensions, electrical requirements, and minimum clearances stated in this manual are observed. You must read all warnings and safety information, and understand all of the information in this manual. All installation requirements must be observed and met.

- Confirm the installation site accommodates the unit installation method per the requirements in this manual.
- Be sure the power supply (circuit breaker) is turned off at its source.
- **Wear gloves and use extreme caution** whenever installing and handling this product and its accessories as certain components have sharp edges that can cause personal injury.
- Remove all packing material (including any protective coatings) and discard prior to installation.

### **LOCATION**

While following all requirements and safety information in this manual; determine and prepare the location of the unit:

- Patio mount: a hard and level surface
- In-ground: a hole in the ground (18" left to right by 12" front to back, 18 1/2" deep)

**Important:** The electrical setup must be considered when determining the location of the unit. See **ELECTRICAL SETUP** section for details.



**ASSEMBLY REQUIRES TWO OR MORE PEOPLE.**

**EXERCISE EXTREME CARE DURING ASSEMBLY AND INSTALLATION.**

## INSTALLATION OVERVIEW

Electrical wiring can be routed either underground, up the post base, and into the junction box, or above ground, routed directly to the junction box. Refer to the methods outlined below for proper electrical setup.

**Important:** Ensure your installation method complies with local codes. Review the **ELECTRICAL SETUP** section on the following page for additional details.

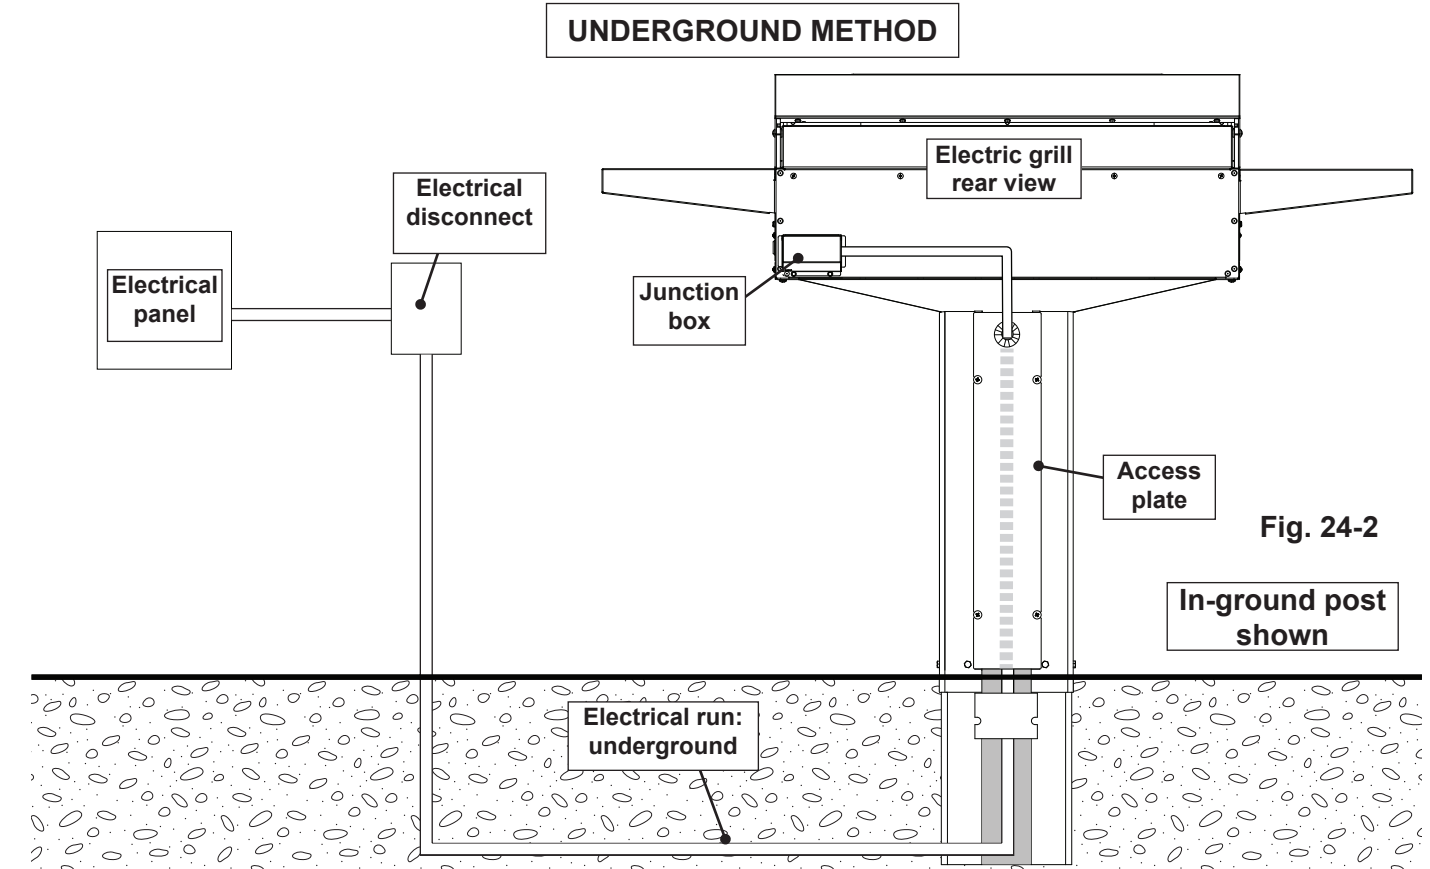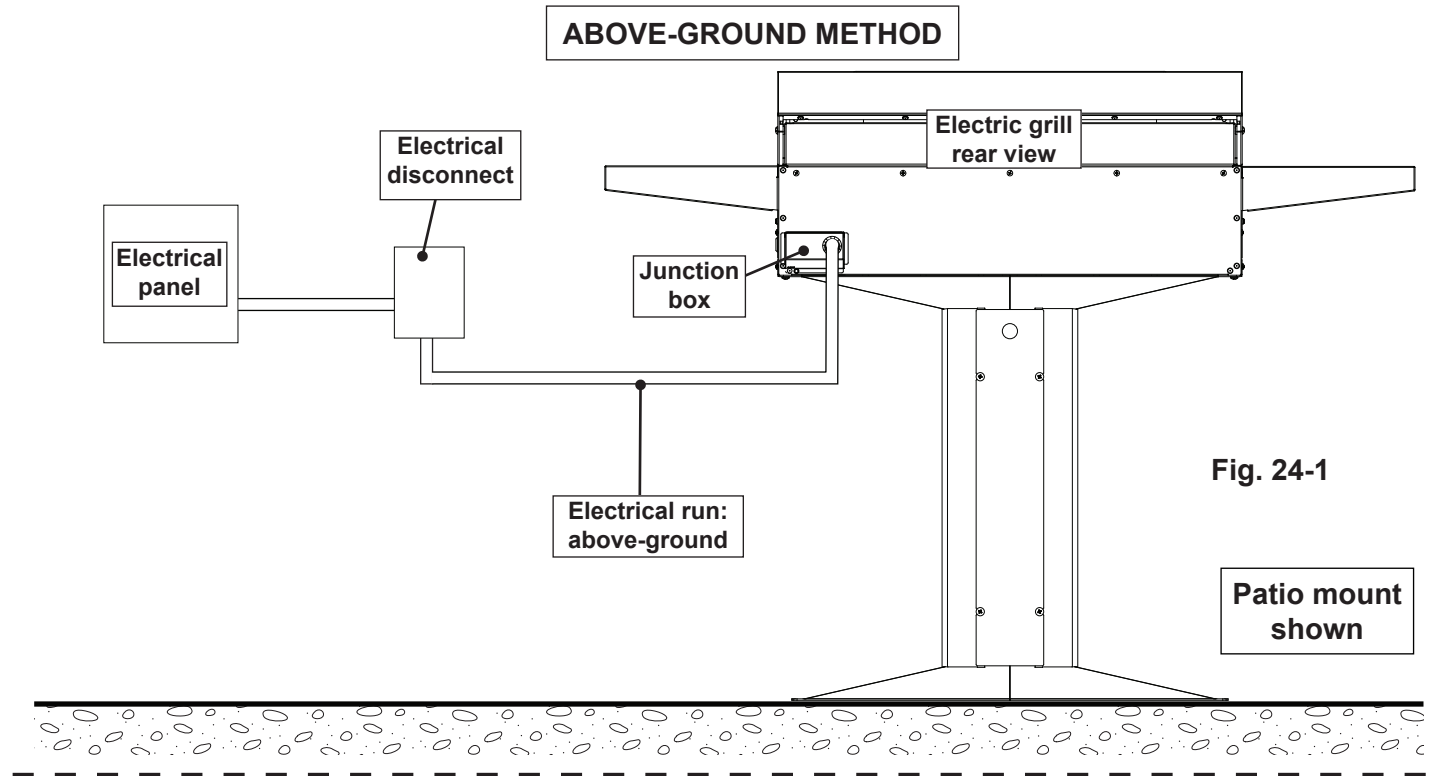

### ELECTRICAL SETUP

All electrical setup of this unit MUST be performed by a licensed electrician.

**THIS UNIT IS DESIGNED FOR DIRECT HARD WIRING AND MUST BE POWERED BY A DEDICATED GFCI CIRCUIT BREAKER. THE CIRCUIT BREAKER MUST BE RATED FOR 230/240VAC / 30 AMP MINIMUM / 50/60HZ.**

- The external wiring source can be routed up the post base from underground, or externally straight into the junction box.
- The external wiring source should be a flexible conduit or an approved flexible cable (follow local codes) suitable for this installation, and is of proper size to carry the load (10AWG or larger, suitable for 221° F [105° C]).
- The appliance must be installed *with the addition of* an independent electrical disconnect OR removable plug with outlet that is easily accessible. The electrical disconnect or plug configuration must be installed in-line between the unit and circuit breaker. The disconnect or plug configuration must be rated to properly carry the load. See Table 1 in the MODEL SPECIFICATIONS section, IMPORTANT SAFEGUARDS section and the ELECTRICAL SAFETY section for all requirements.
- The unit must be easily disconnected from power for future maintenance and servicing.

**CAUTION:** Installation MUST be performed by a qualified professional service technician. **OBSERVE THE NATIONAL ELECTRIC CODE AND ALL LOCAL CODES.**

- To gain access to the inside of the post, unscrew and carefully open the access plate on the rear of the post using a medium Phillips-head screwdriver. Retain the screws.

**REFER TO THE FOLLOWING PAGES TO LOCATE THE APPROPRIATE SECTION FOR YOUR INSTALLATION METHOD:**

#### **PATIO MOUNT INSTALLATION**

- Above-Ground Electrical Install Method
- Underground Electrical Install Method

OR

#### **IN-GROUND POST INSTALLATION**

- Above-Ground Electrical Install Method
- Underground Electrical Install Method

## ABOVE-GROUND ELECTRICAL INSTALL METHOD

**CAUTION:** THE GRILL AND POST BASE ARE HEAVY AND REQUIRES TWO OR MORE PEOPLE FOR SAFE HANDLING.

### INSTALLATION (ABOVE-GROUND METHOD)

#### Mount Electric Grill To Post Base Assembly

It is not required to remove the control panel to install this unit.

**DO NOT lift the unit from the control panel when installing.**

1. Carefully position the post base assembly at its designated location.
2. Carefully place and align the electric grill onto the top of the post assembly. Fasten the electric grill to the post base assembly using the 4 included Phillips-head screws. See Fig. 26-1.

#### Route Electrical To Rear Of Electric Grill

Refer to the INSTALLATION OVERVIEW section for an example of the above-ground electrical installation method.

1. Route your electrical supply to the rear vicinity of the unit.  
**Observe the National Electric Code and all local codes.**
2. Remove the junction box located on the rear of the unit. Select and remove a knockout from the junction box that will best suit your electrical setup. Route the wiring through the selected knockout opening. See Fig. 26-2.

**Note:** Adding a strain relief bushing to the opening is recommended (not included).

3. Connect the wires to the ceramic terminal block. Reference the wiring information below and Fig. 26-3.

**Line 1:** Connect to L1 - top portion of ceramic terminal block

**Line 2:** Connect to L2 - bottom portion of ceramic terminal block

**Ground:** Connect to GND (ground) - aluminum grounding lug

4. Ensure all wire connections are fully secure, switch ON the electrical system and test the power to the unit.
5. Secure the junction box back onto the grill.


#### Secure Post Base Plate

**Important:** The patio mount base must be securely fastened to a stable, level surface to ensure the grill remains fixed and upright at all times.

Ensure proper placement of the planned grill location and mark the 4 holes. Drill the marked holes to a 1/2" diameter x 1 1/2" depth. Insert the lag shields (see PARTS LIST) into the holes, being sure that they are flush with the ground.


Align the holes on the post base over the lag shields in the ground. Secure the base with the lag screws (see PARTS LIST) using a 7/16" nut driver.

**Proceed to the COMMON INSTALLATION section**

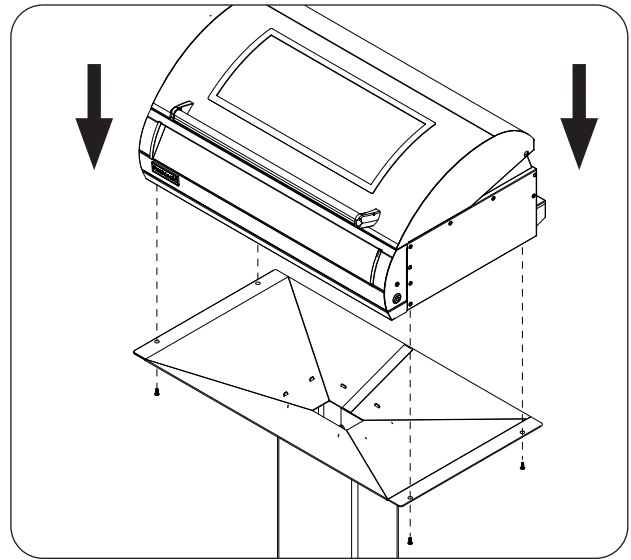


**Fig. 26-1** Fasten grill to post base assembly

1. Select and remove a knockout
2. Feed electrical through opening
3. Make connections to unit

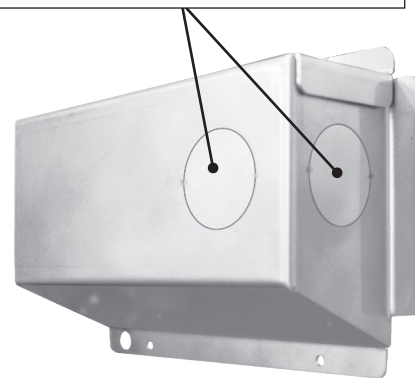

**Fig. 26-2** Junction box knockouts

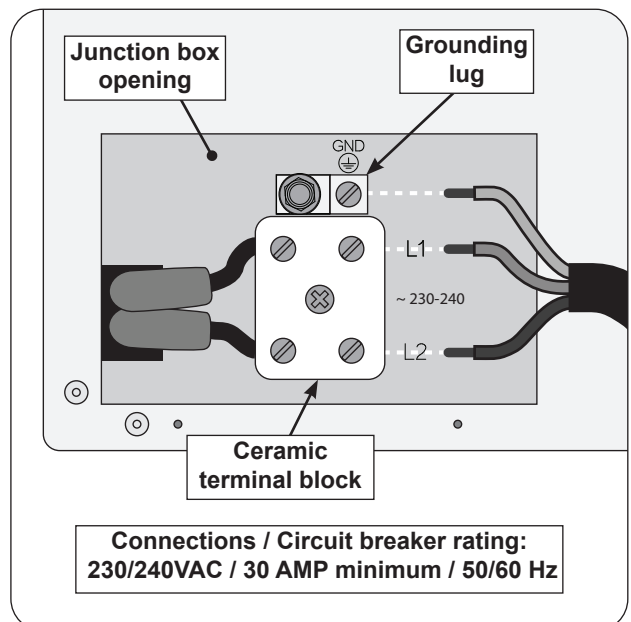

**Fig. 26-3** Wire connection diagram

## UNDERGROUND ELECTRICAL INSTALL METHOD

**CAUTION:** THE GRILL AND POST BASE ARE HEAVY AND REQUIRES TWO OR MORE PEOPLE FOR SAFE HANDLING.

### INSTALLATION (UNDERGROUND METHOD)

Refer to the INSTALLATION OVERVIEW section for an example of the underground electrical installation method.

#### Route Electrical Through Post Base Assembly

1. Route the electrical wiring up from underground to the planned grill location. **Observe the National Electric Code and all local codes.**

**Note:** Ensure that the electrical wiring is of sufficient length to accommodate the length of the post, exit through the top portion of the access plate and connect to the junction box. An alternative option is to provide only enough wiring to install a junction box (not included) inside the post and extend the wiring from that point once the post is secured.

2. Locate the rear access plate on the post base assembly and remove it by unscrewing the four Phillips-head screws. See Fig. 27-1, A.
3. Remove the knockout from the upper portion of the access plate. See Fig. 27-1, B.

**Note:** Use one of the two knockouts as applicable for your installation. The plastic grommet provided is intended to be used with the inner knockout.

4. While placing the post base assembly in position:
  - Tilt the post base slightly and carefully feed the electrical wires (coming from underground) up from under the post base (See Fig. 27-2, A)
  - Guide wiring up the post assembly (See Fig. 27-2, B)
  - Carefully rest the post base at its designated location (See Fig. 27-2, C)
  - Feed the electrical through the knockout hole of the access plate and re-fasten the access plate (See Fig. 27-2, D)
  - Install the grommet (included) onto the electrical and slide the grommet up against the knockout hole and snap into place (See Fig. 27-2, E)

Procedure continued on following page

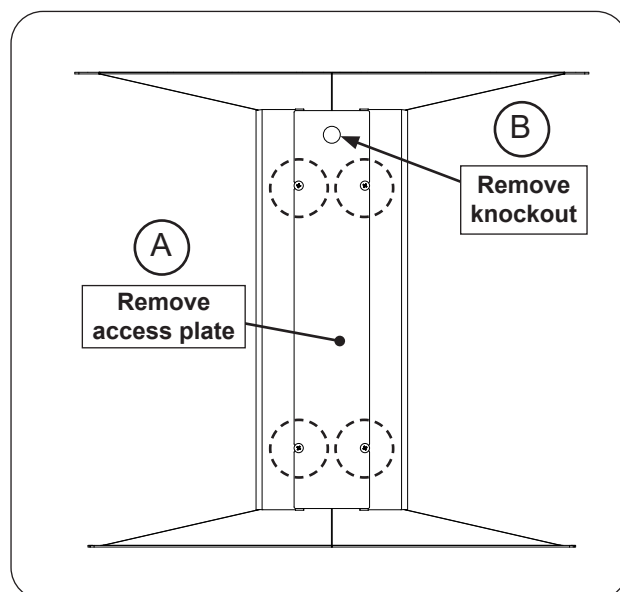


Fig. 27-1 Remove access plate and knock-out

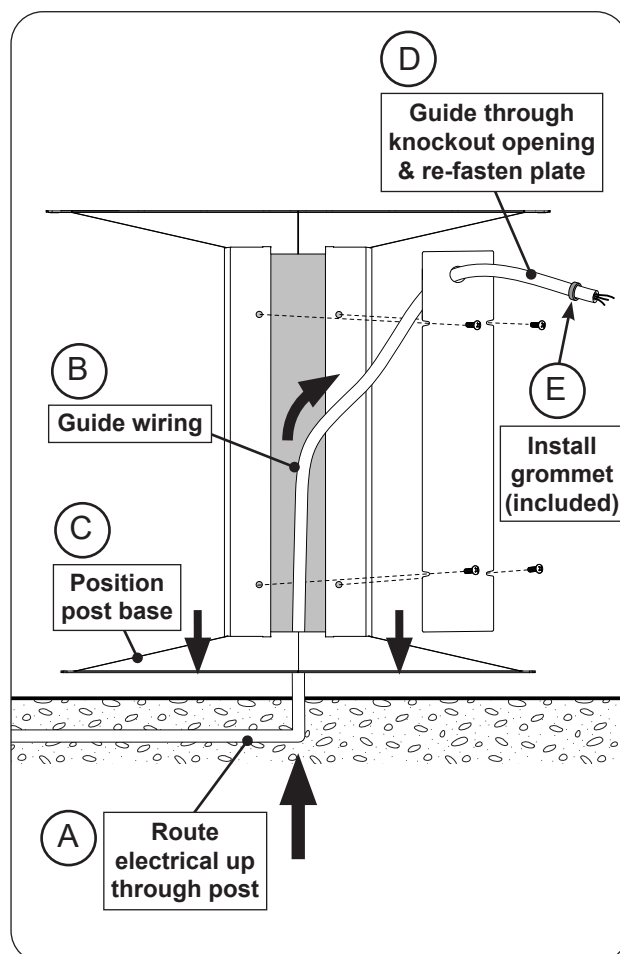


Fig. 27-2 Remove access plate and knock-out

## UNDERGROUND ELECTRICAL INSTALL METHOD (CONT.)

### Mount Electric Grill To Post Base Assembly

It is not required to remove the control panel to install this unit.

**DO NOT** lift the unit from the control panel when installing.

Carefully place and align the electric grill onto the top of the post assembly. Fasten the electric grill to the post base assembly using the 4 included Phillips-head screws. See Fig. 28-1.

### Connect Electrical To Rear Of Electric Grill

1. Remove the junction box located on the rear of the unit. Select and remove a knockout from the junction box that will best suit your electrical setup. See Fig. 28-2.
2. Take the wiring that is exiting the top portion of the post access plate and route it through the selected knockout opening on the junction box. Reference the INSTALLATION OVERVIEW section for a summarized view of this installation.

**Note:** Adding a non-metallic strain relief bushing to the opening is recommended (not included).

3. Connect the wires to the ceramic terminal block. Reference the wiring information below and Fig. 28-3.

**Line 1:** Connect to L1 - top portion of ceramic terminal block

**Line 2:** Connect to L2 - bottom portion of ceramic terminal block

**Ground:** Connect to GND (ground) - aluminum grounding lug

4. Ensure all wire connections are fully secure, switch ON the electrical system and test the power to the unit.
5. Secure the junction box back onto the grill.


### Secure Post Base Plate

**Important:** The patio mount base must be securely fastened to a stable, level surface to ensure the grill remains fixed and upright at all times.

Ensure proper placement of the planned grill location and mark the 4 holes. Drill the marked holes to a 1/2" diameter x 1 1/2" depth. Insert the lag shields (see PARTS LIST) into the holes, being sure that they are flush with the ground.


Align the holes on the post base over the lag shields in the ground. Secure the base with the lag screws (see PARTS LIST) using a 7/16" nut driver.

**Proceed to the COMMON INSTALLATION section**

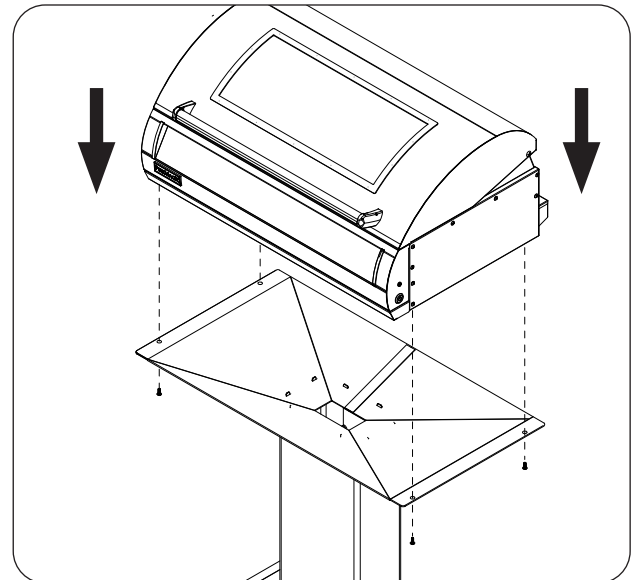


**Fig. 28-1** Fasten grill to post base assembly

1. Select and remove a knockout
2. Feed wires through opening
3. Make connections to unit

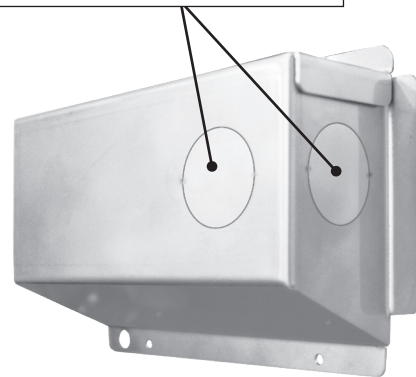

**Fig. 28-2** Junction box knockouts

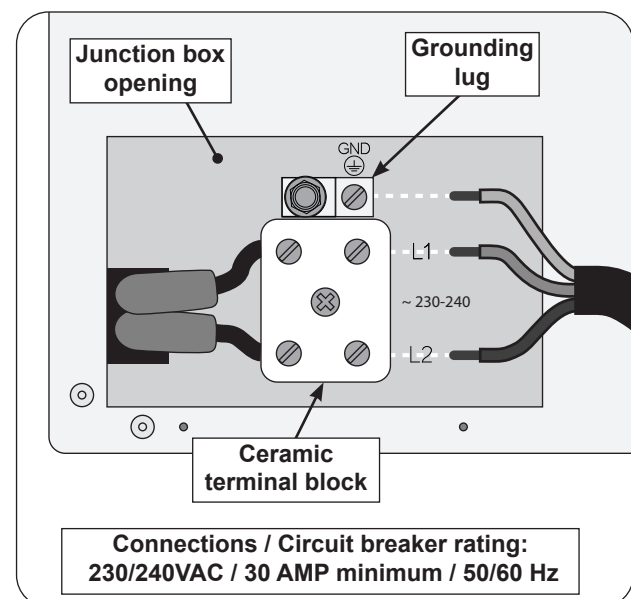

**Fig. 28-3** Wire connection diagram

## ABOVE GROUND ELECTRICAL INSTALL METHOD

**DO NOT MOUNT THE ELECTRIC GRILL TO THE POST ASSEMBLY AT THIS POINT.**

### PREPARE FOR INSTALLATION

Consult a qualified professional installer / licensed contractor.

The method of electrical installation in this section is for routing the electrical supply directly to the junction box. Refer to the INSTALLATION OVERVIEW section for an example of the above-ground electrical installation method.

### ATTACH POST EXTENSION

1. Attach the extension to the bottom of the grill post so that the open portion is facing the same direction as the access plate and the six holes in the extension line up with the six (6) weld-nuts in the post (see Fig. 29-1 and Fig. 29-2).
2. From outside the joined post and extension, insert one of the  $\frac{1}{4}$ " - 20 X  $\frac{1}{2}$ " bolts (supplied) into each of the six (6) bolt holes and tighten each bolt using a  $\frac{7}{16}$ " socket driver or wrench (see Fig. 29-2 and Fig. 29-3).

**Note:** There is one hole on the left and right sides of the post, and two holes on the front and back.

### POUR CONCRETE & PLACE POST IN GROUND

1. Dig a hole for the post and extension approximately 18" wide, 12" front-to-back, and 18  $\frac{1}{2}$ " deep. See Fig. 29-1.

**Note:** The actual depth of the hole should be such that the top of the post mount assembly is approximately 29  $\frac{1}{2}$ " (G6 models) and 24  $\frac{1}{2}$ " (AG models) above ground level.

2. Prepare the concrete to be used for the install.
3. Carefully orient the post into the installation hole and verify proper positioning. See Fig. 29-1.
4. Remove the post.
5. Pour the concrete mixture into the hole to approximately 3-5" below the ground level. See Fig. 29-4.
6. While the concrete is still wet, carefully lower the extended grill post.
7. Orient the post assembly per plan, and support it so that it remains in an up right, level and aligned position while the concrete dries.

Procedure continued on following page

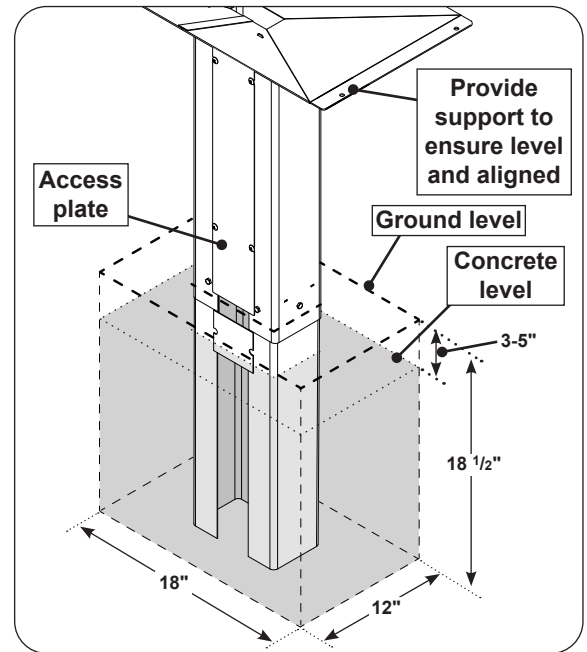


Fig. 29-1 Installation overview

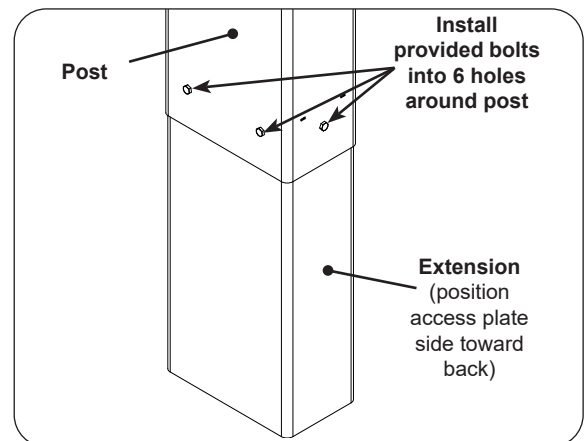


Fig. 29-2 Install extension to post

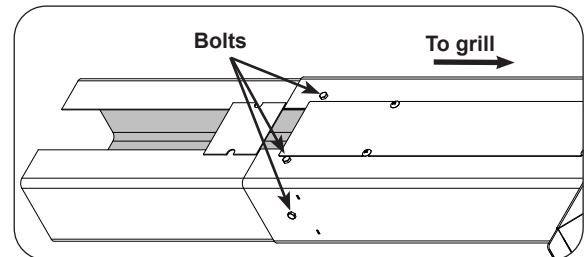


Fig. 29-3 Fasten extension to post

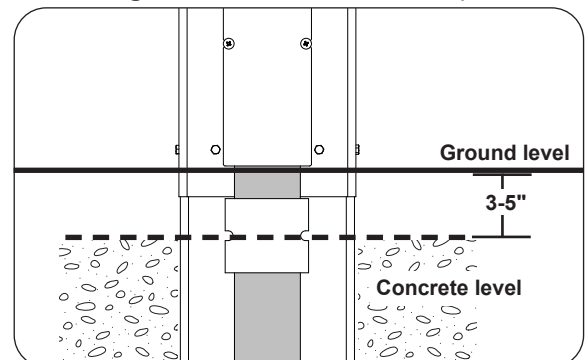


Fig. 29-4 In-ground post orientation

## ABOVE GROUND ELECTRICAL INSTALL METHOD (CONT.)

### Mount Electric Grill To Post Base Assembly

It is not required to remove the control panel to mount the electric grill.

**DO NOT** lift the unit from the control panel when installing.

1. Verify the concrete is completely dry.
2. Carefully place and align the electric grill onto the top of the post assembly. Fasten the electric grill to the post base assembly using the 4 included Phillips-head screws. See Fig. 30-1.

### Route Electrical To Rear Of Electric Grill

Refer to the INSTALLATION OVERVIEW section for an example of the above-ground electrical installation method.

1. Route your electrical supply to the rear vicinity of the unit.  
**Observe the National Electric Code and all local codes.**
2. Remove the junction box located on the rear of the unit. Select and remove a knockout from the junction box that will best suit your electrical setup. Route the wiring through the selected knockout opening. See Fig. 30-2.

**Note:** Adding a strain relief bushing to the opening is recommended (not included).

3. Connect the wires to the ceramic terminal block. Reference the wiring information below and Fig. 30-3.


**Line 1:** Connect to L1 - top portion of ceramic terminal block

**Line 2:** Connect to L2 - bottom portion of ceramic terminal block

**Ground:** Connect to GND (ground) - aluminum grounding lug


4. Ensure all wire connections are fully secure, switch ON the electrical system and test the power to the unit.
5. Secure the junction box back onto the grill.

Proceed to the **COMMON INSTALLATION** section

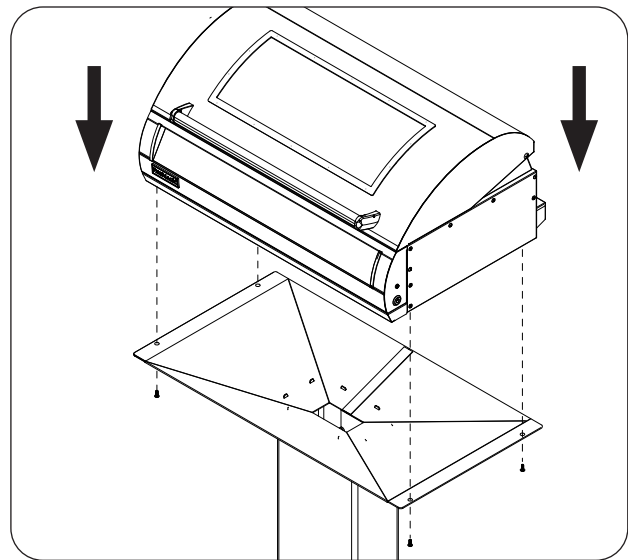


**Fig. 30-1** Fasten grill to post base assembly

1. Select and remove a knockout
2. Feed electrical through opening
3. Make connections to unit

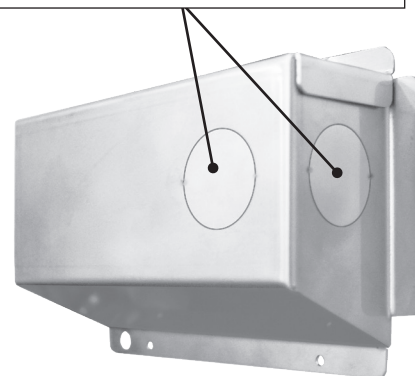

**Fig. 30-2** Junction box knockouts

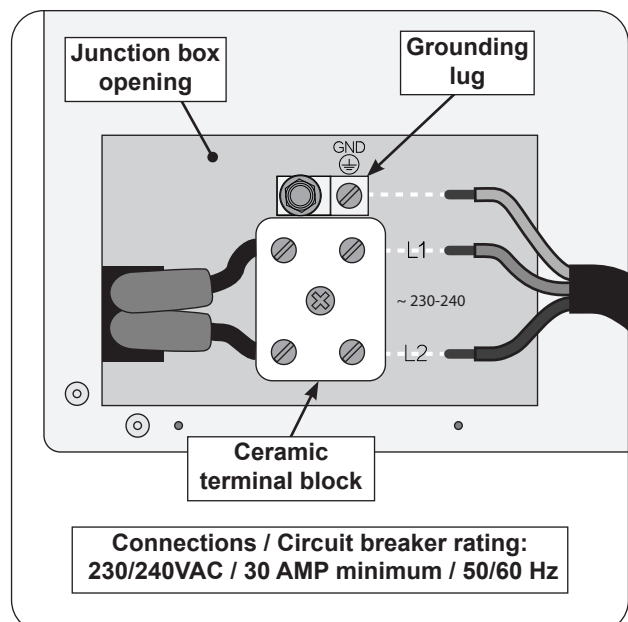

**Fig. 30-3** Wire connection diagram

## UNDERGROUND ELECTRICAL INSTALL METHOD

**DO NOT MOUNT THE ELECTRIC GRILL TO THE POST ASSEMBLY AT THIS POINT.**

### PREPARE FOR INSTALLATION

Consult a qualified professional installer / licensed contractor.

The method of electrical installation in this section is for routing the electrical supply underground, up the post assembly, and out to the junction box. Refer to the INSTALLATION OVERVIEW section and Fig. 31-1 for an example of the underground electrical installation method.

### ROUTE ELECTRICAL WIRING TO INSTALLATION SITE

1. Route the electrical wiring up from underground to the planned grill location. **Observe the National Electric Code and all local codes.**

**Note:** Ensure that the electrical wiring is of sufficient length to accommodate the length of the post, exit through the top portion of the access plate and connect to the electric grill's junction box. An alternative option is to provide only enough wiring to install an additional junction box (not included) inside the post and extend the wiring from that point once the post is secured.

2. Locate the rear access plate on the post base assembly and remove it by unscrewing the four Phillips-head screws. See Fig. 31-2, A.
3. Remove the knockout from the upper portion of the access plate. See Fig. 31-2, B.

**Note:** Use one of the two knockouts as applicable for your installation. The plastic grommet provided is intended to be used with the inner knockout.

### ATTACH POST EXTENSION

1. Attach the extension to the bottom of the grill post so that the open portion is facing the same direction as the access plate and the five holes in the extension line up with the six (6) weld-nuts in the post (see Fig. 31-3).

Procedure continued on following page

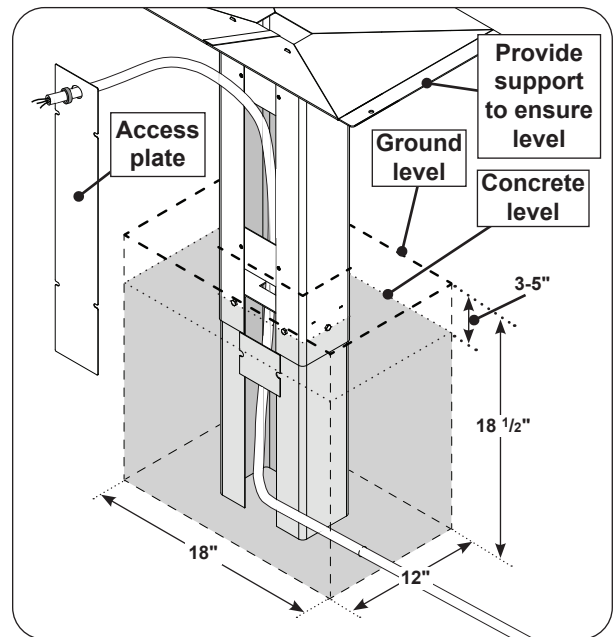


Fig. 31-1 Installation overview

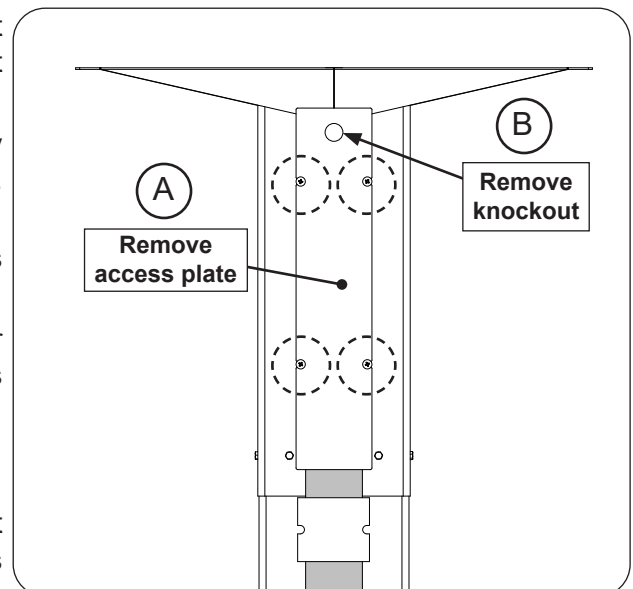


Fig. 31-2 Remove access plate and knock-out

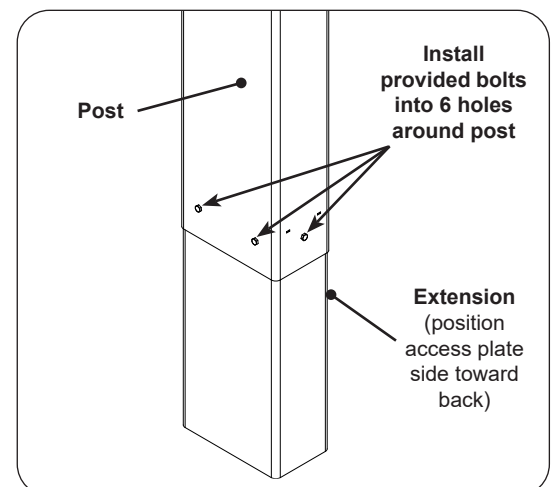


Fig. 31-3 Install extension to post

## UNDERGROUND ELECTRICAL INSTALL METHOD (CONT.)

2. From outside the joined post and extension, insert one of the  $\frac{1}{4}$ " - 20 X  $\frac{1}{2}$ " bolts (supplied) into each of the six (6) bolt holes and tighten each bolt using a  $\frac{7}{16}$ " socket driver or wrench (see Fig. 32-1).

**Note:** There is one hole on the left and right sides of the post, and two holes on the front and back.

### POUR CONCRETE & PLACE POST IN GROUND

1. Where the electrical wiring is exiting the ground, dig a hole for the post and extension approximately 18" wide, 12" front-to-back, and 18  $\frac{1}{2}$ " deep. See Fig. 32-2.

**Note:** The actual depth of the hole should be such that the top of the post mount assembly is approximately 29  $\frac{1}{2}$ " (G6 models) and 24  $\frac{1}{2}$ " (AG models) above ground level.

2. Prepare the concrete to be used for the install.
3. Carefully orient the post over the electrical supply line and into the installation hole. Verify proper positioning. See Fig. 32-2.

**Important:** Verify that the electrical supply line is running up through the post hole. It must extend high enough to reach the grill electrical connection point (or enough to install a junction box inside the post, not supplied) and remain safely above the level of the concrete when poured.

4. Remove the post, then protect the end of the electrical supply line with a plastic bag and/or tape to avoid getting concrete or other debris on the supply wires.
5. Pour the concrete mixture into the hole to approximately 3-5" below the ground level taking care to protect the electrical wiring. See Fig. 32-2.
6. While the concrete is still wet, carefully lower the extended grill post into the hole while routing the electrical wiring through the clearance hole in the bottom of the post.
7. Orient the post assembly per plan, and support it so that it remains in an upright, level and aligned position while the concrete dries.


**Note:** The post assembly should be positioned just above ground level to ensure that the access plate remains accessible and can be easily removed.

### Mount Electric Grill To Post Base Assembly


It is not required to remove the control panel to install this unit.

**DO NOT** lift the unit from the control panel when installing.


1. Verify the concrete is completely dry.
2. Carefully place and align the electric grill onto the top of the post assembly. Fasten the electric grill to the post base assembly using the 4 included Phillips-head screws. See Fig. 32-3.

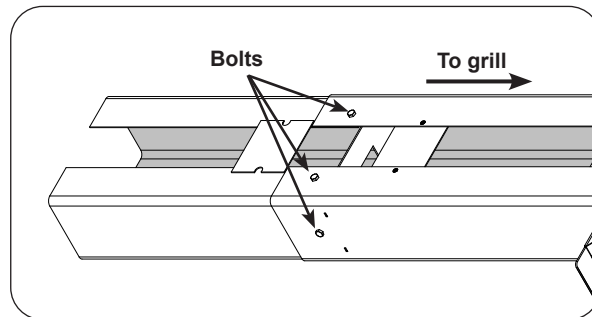

**Fig. 32-1** Fasten extension to post

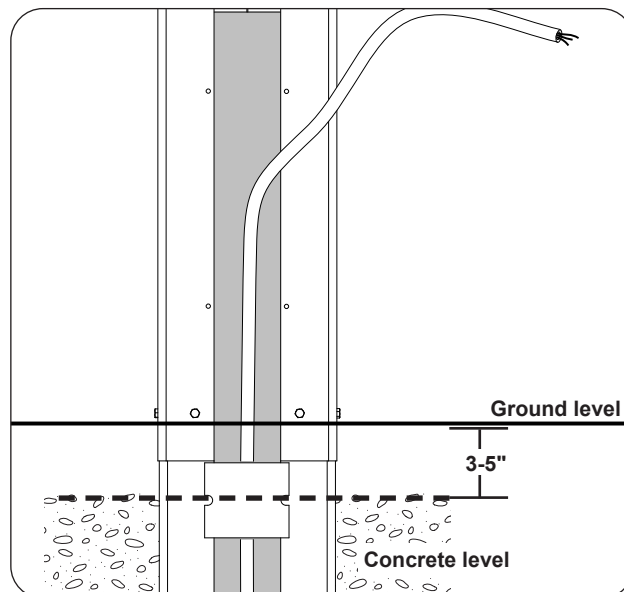

**Fig. 32-2** Remove access plate and knock-out

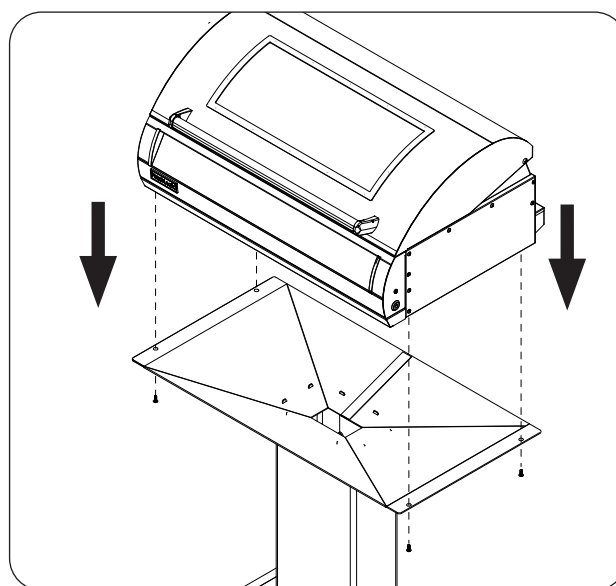

**Fig. 32-3** Fasten grill to post base assembly

## UNDERGROUND ELECTRICAL INSTALL METHOD (CONT.)

### Connect Electrical To Rear Of Electric Grill

Observe the National Electric Code and all local codes.

1. Prepare electrical for connection:
  - Guide wiring up the post assembly (See Fig. 33-1, A).
  - Feed the electrical through the knockout hole of the access plate (see Fig. 33-1, B) and re-fasten the access plate (see Fig. 33-1, C).

**Note:** Use one of the two knockouts as applicable for your installation. The plastic grommet provided is intended to be used with the inner knockout.

- Install the grommet (included) onto the electrical and slide the grommet up against the knockout hole and snap into place (See Fig. 33-1, D).
2. Remove the junction box located on the rear of the unit. Select and remove a knockout from the junction box that will best suit your electrical setup. See Fig. 33-2.
  3. Take the wiring that is exiting the top portion of the post access plate and route it through the selected knockout opening on the junction box. Reference the INSTALLATION OVERVIEW section for a summarized view of this installation.

**Note:** Adding a non-metallic strain relief bushing to the opening is recommended (not included).

4. Connect the wires to the ceramic terminal block. Reference the wiring information below and Fig. 33-3.

**Line 1:** Connect to L1 - top portion of ceramic terminal block

**Line 2:** Connect to L2 - bottom portion of ceramic terminal block

**Ground:** Connect to GND (ground) - aluminum grounding lug

5. Ensure all wire connections are fully secure, switch ON the electrical system and test the power to the unit.
6. Secure the junction box back onto the grill.

Proceed to the COMMON INSTALLATION section

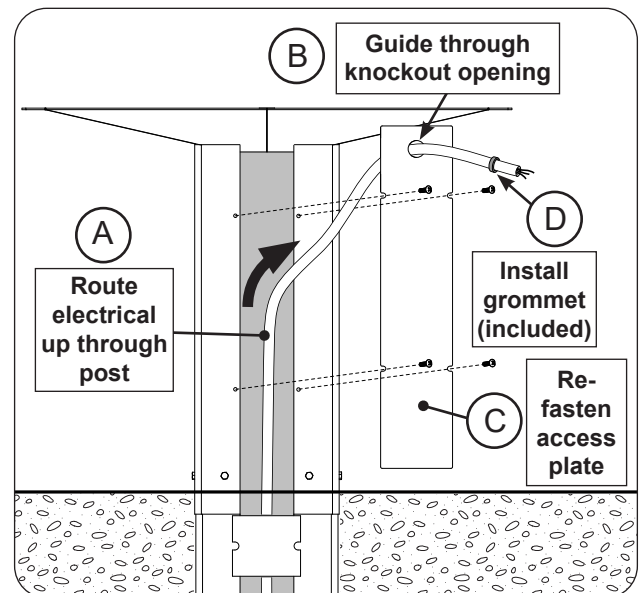


Fig. 33-1 Remove access plate and knock-out

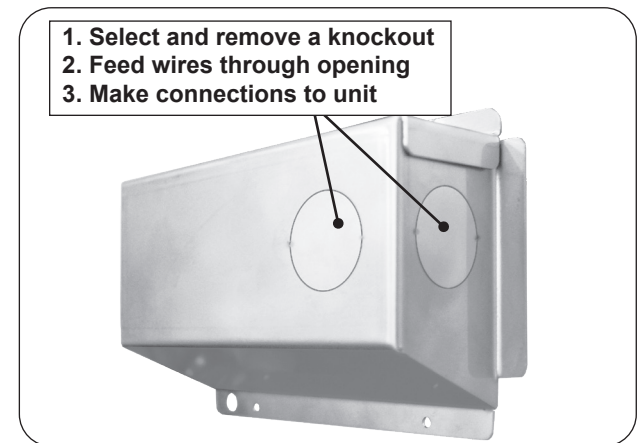


Fig. 33-2 Junction box knockouts

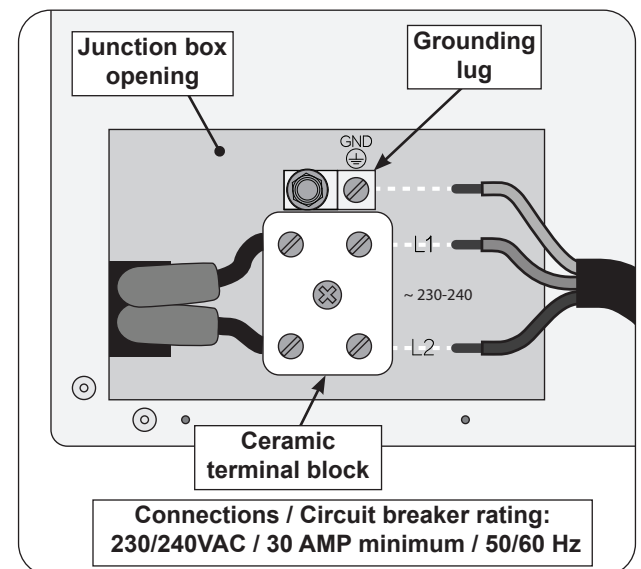


Fig. 33-3 Wire connection diagram

## INSTALL VAPORIZER PANELS


1. Pull and swing the heating element(s) to the "up position" by lifting the rear-end of the element up and away from the rear support bracket.
2. Locate the rear heating element support bracket and slightly loosen the two screws. Detach and remove the bracket by sliding it upward. See Fig. 34-1.

**Note:** It is only necessary to remove one support bracket to give clearance for vaporizer installation.

3. With the support bracket removed, carefully place the vaporizer panels down into the electric grill as shown in Fig. 34-2.
4. Reinstall the rear support bracket.

## INSTALL ZONE DIVIDER (dual control models)

Locate the zone divider and carefully hook it over the center wire rod as shown in Fig. 34-3.

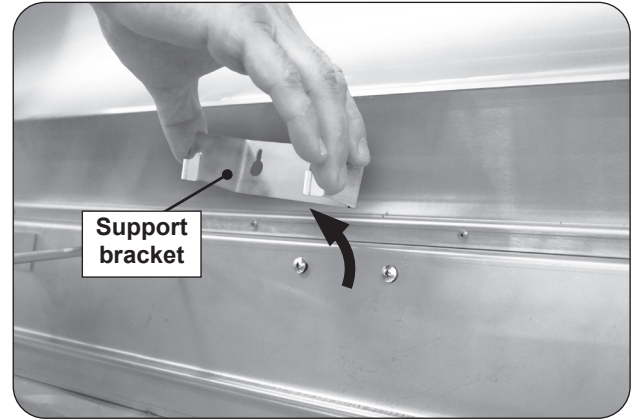

**Fig. 34-1** Remove element support bracket



**Fig. 34-2** Install vaporizer panels



**Fig. 34-3** Install zone divider

## INSTALL COOKING GRIDS


**Note:** Wear heat-resistant gloves if necessary.

**Note:** Do not leave the lifter on any hot surfaces.


1. With the prongs facing downward, insert the notched-end of the lifter between two grid rods, then rotate, as shown in Fig. 35-1, A & B.

**Note:** To balance, insert the notched-end of the lifter in the middle front half of the cooking grid.


2. Insert the rear pointed-end of the lifter between the same two rods (Fig. 35-1, B) and carefully lift the cooking grid and place onto the front and rear grid rests of the grill (see Fig. 35-2). Repeat for all other cooking grids.

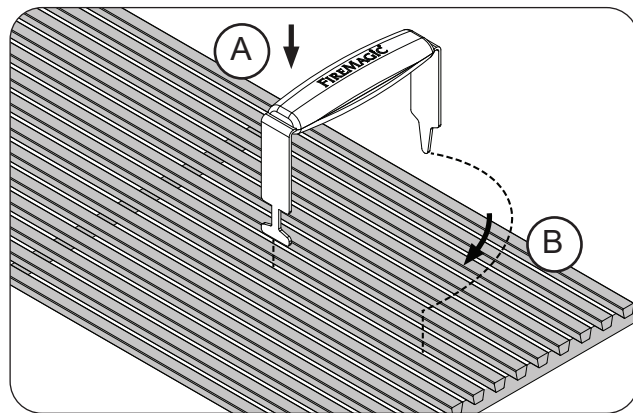

**Fig. 35-1** Install cooking grids

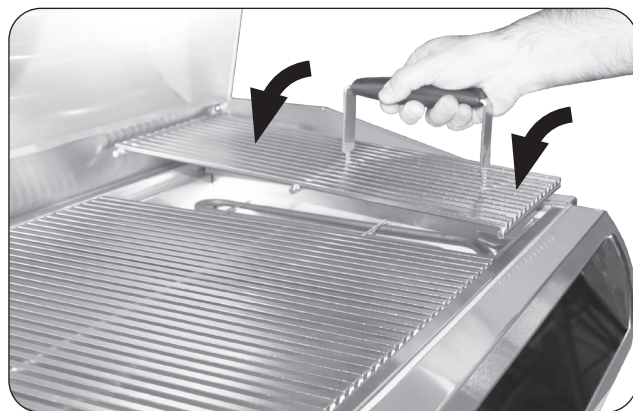

**Fig. 35-2** Install cooking grids

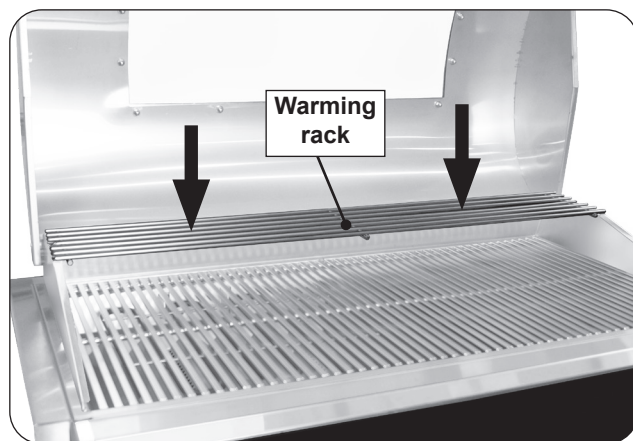


**Fig. 35-3** Install warming rack

### INSTALL DRIP TRAY

Your grill includes drip tray liners (4 pcs).

1. Take two liners and place into the drip tray . For easiest drip tray liner installation:
  - Ensure the drip tray is fully removed from the grill
  - Place the liners (Fig. 36-1, A) underneath the tab at the front portion of the drip tray (Fig. 36-1, B)
  - Position the rear portion of the liner to fit under the rear lip
2. Fully insert the drip tray with liners into the bottom front opening of the electric grill (Fig. 36-1, C).


**Note:** For easiest drip tray assembly installation, insert the tray in an upward angle to clear the bearings.

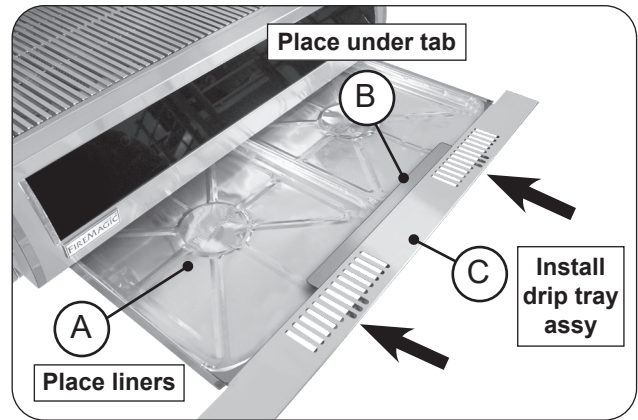

**Fig. 36-1** Install drip tray

### INSTALL RIGID SHELVES


1. Locate and remove the Phillips-head screws shown in Fig. 36-2, A.
2. Position a shelf against the side of the electric grill body, aligning the holes.
3. Insert the six screws and hand-tighten slightly (see Fig. 36-2, B).
4. Once all screws are inserted and started, fully tighten with a screwdriver.
5. Repeat the process for the other shelf.

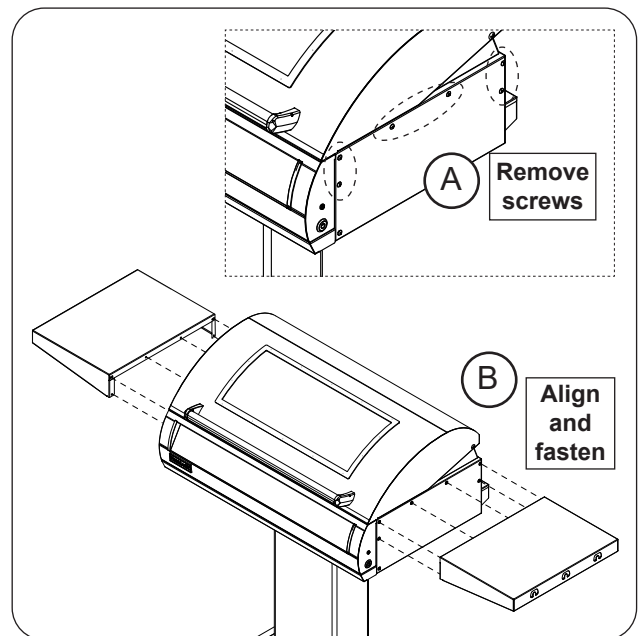

**Fig. 36-2** Install rigid shelves

### INSTALL SIDE HANDLE KIT (AP Series Only)

AP Series Electric Grills include an oven lid side handle kit. To install, follow the instructions included with the kit. Reference Fig. 36-3.

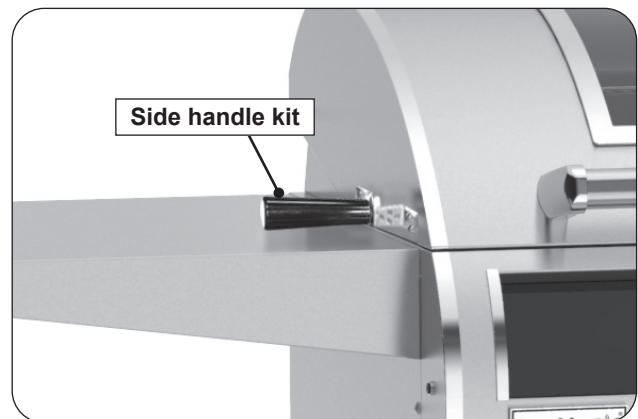

**Fig. 36-3** Install side handle kit (if equipped)

## OPERATION TEST

After installation, perform an operation test of the grill and its features/components. Refer to the following sections for details.

## BEFORE INITIAL USE

Ensure that:

- the unit has been properly installed and tested by a qualified professional service technician and as instructed in this manual.
- you have read and understand all of the information in this manual.

## BEFORE EACH USE

Ensure that:

- the recommended vent openings and surrounding area of the enclosure are clear at all times.
- the cooking area and drip tray are clean, and the drip tray is properly installed.
- you inspect all electrical connections for damage, cuts, wear, and tear. Replace any damaged components prior to use.

## OPERATION

- The unit (including the window glass, if equipped) becomes **HOT** during use. **NEVER** touch any part of the cooking area or surrounding hot surfaces with bare hands. Use long-handled insulated BBQ tools and wear an insulated glove / oven mitt.
- Always keep your face and body as far from the unit as possible during use. Avoid wearing loose-fitting clothing as they could ignite.
- This appliance is designed as an attended appliance. **DO NOT** leave this appliance in operation when unattended.
- **NEVER** cover more than 75% of the cooking surface with griddles, pots or pans to prevent overheating.
- After each use, press the thermometer power button to shut off the unit.
- The unit's fans will stay in operation, even after the unit has been turned off to quickly cool down the electronics.

**Important: DO NOT CUT OFF THE UNIT FROM POWER UNTIL THE FANS SHUT OFF AUTOMATICALLY AND THE ELECTRONICS HAVE COOLED DOWN TO A SAFE TEMPERATURE.**

After reading and understanding all bullets above, follow these steps to start the heating elements and use your grill:

1. Begin heating the grill per the DIGITAL THERMOMETER / THERMOSTAT section. See the THERMOMETER/THERMOSTAT & COOKING AREAS section below for additional details.
2. Set the element to the desired temperature (repeat for the second thermostat if applicable), close the hood, and allow the grill to preheat for at least 15 minutes or until desired cooking temperature is reached.
3. Place the food on the grill and cook as desired. Monitor the temperature, and adjust the heat setting if necessary.
4. See the sections below and the following pages for all other information regarding use.

## THERMOMETER/THERMOSTAT & COOKING AREAS

**Models with single control:** The heating element and meat probe are controlled by the glass-touch digital thermometer/thermostat - see DIGITAL THERMOMETER/THERMOSTAT section for operation.

**Models with dual controls:** Your grill is divided into two cooking areas and are controlled independently by the two glass-touch digital thermometer/thermostats (Fig. 37-1). The left digital thermometer controls and monitors the left heating element and left meat probe jack, and the right digital thermometer controls and monitors the right heating element and right meat probe jack - see DIGITAL THERMOMETER/THERMOSTAT section for operation.



**Fig. 37-1** Cooking areas (dual control models)

## WIND CONSIDERATIONS

Proper airflow (front-to-back, Fig. 37-2) **MUST** be maintained for the unit to perform as it was designed. See the INSTALLATION REQUIREMENTS section for details.

When using the unit in windy conditions, the wind can disrupt the airflow and cause overheating. To prevent overheating during windy conditions, do not leave the hood closed with the element(s) on max setting for more than 15 minutes.


## AFTER EACH USE

1. Operate at 700° F with hood closed for 10-15 minutes to burn off all grease.
2. Turn off the grill and brush/scrape the cooking grids to remove all residue.

**CAUTION:** Use long-handled insulated BBQ tools and wear an insulated glove / oven mitt.

3. When the grill is cool, check and clean the drip tray. Then cover the grill.

**Note:** For additional cleaning information, refer to the SERVICING AND CLEANING section.

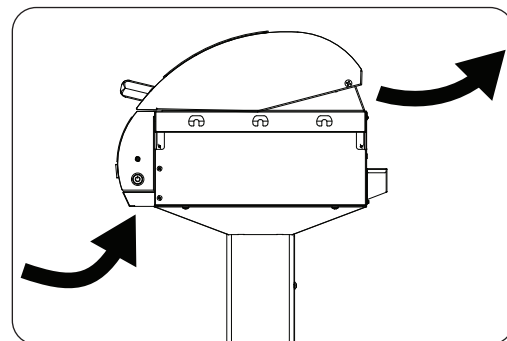

**Fig. 37-2** Airflow diagram

## DIGITAL THERMOMETER / THERMOSTAT

To operate the unit via the RHP Connect app, visit the link below or scan the QR code on the cover page of this manual to download the app onto your mobile device and for app operating instructions.

<https://firemagicgrills.com/digital-touch-control/>

**Important:** Ensure the thermometer firmware is up to date using the RHP Connect app.

**Models with a single control** are equipped with a touch-panel controlled digital thermometer/thermostat for temperature adjustment, meat probe temperature monitoring, and timed cooking.

**Models with dual controls** are equipped with two touch-panel controlled digital thermometer/thermostats. Each side of the grill has a dedicated temperature control, meat probe jack for temperature monitoring, and timed cooking.

**Note:** The following information provides guidance on operating a single thermometer/thermostat. For models with dual controls, **each thermometer/thermostat is individually controlled for each cooking area.** See USING THE ELECTRIC GRILL section.

### FOR OPTIMAL PERFORMANCE:

**Keep the oven lid closed during cooking. This will maintain the cooking temp. (Frequently opening or leaving the lid open during cooking will result in greater temperature loss.)**

Read the following sections completely regarding thermometer/thermostat operation. Refer to Fig. 38-1 for thermometer orientation and button locations.

### Power ON / OFF

The **thermometer power switch** is located on the right side of the control panel (Fig. 38-2). It controls the power to the digital thermometer/thermostat.

**Press thermometer power switch to turn ON:** The digital controls will illuminate and the thermometer/thermostat will wait in “**standby mode**” until turned on for use. If the meat probe is plugged in, PROBE will also illuminate. See Fig. 38-3.

- The thermometer/thermostat must to be turned on manually via the touch controls before any functions on the grill can be used. To turn ON, see the Turn ON Thermostat/Thermometer Functions section.
- If the unit remains in standby mode without any button presses for 10 minutes, the illuminated buttons will turn off. To turn back on, swipe your hand across the general buttons area to illuminate the buttons.

**Press thermometer power switch to turn OFF:** The appliance will shut off. **The power switch MUST be in the OFF position when the grill is not in use.**

- The fans will remain on to continue cooling the electronics, see OPERATION section under USING THE GRILL section of this manual.
- To cut the grill *completely* from electrical power, it will need to be disconnected from the main power source (via power cord, GFCI disconnect, or circuit breaker as applicable).
- **Dual control models:** To turn off ONE side of the grill (controls and heat) and keep controlling the other, press and hold the TIMER and SET buttons (on the side you wish to turn off) until the temp. displays turn off.

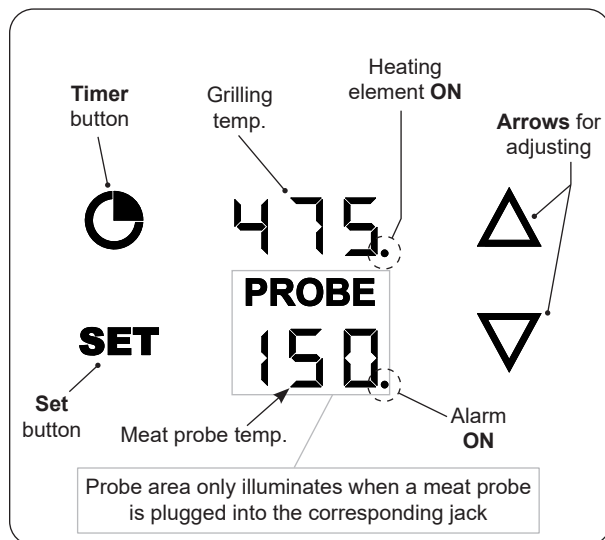


Fig. 38-1 Orientation (default screen)

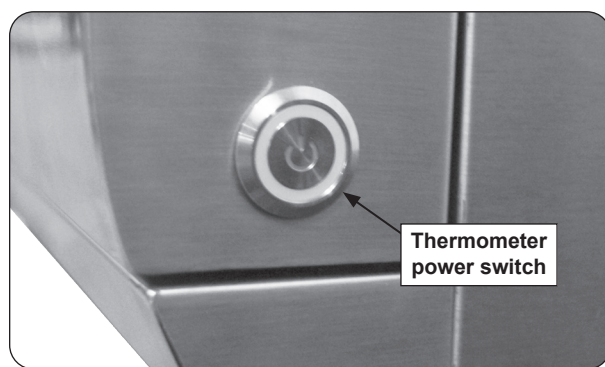


Fig. 38-2 Press thermometer power switch

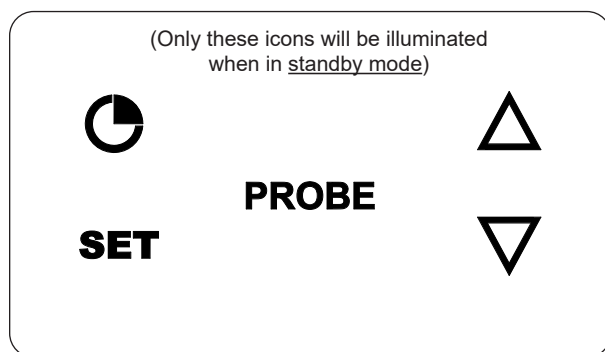


Fig. 38-3 Standby mode


## Turn ON Thermometer/Thermostat functions

1. Turn on the power source to the appliance.
2. Press the **thermometer power switch**.
3. Press and hold the **TIMER** button (Fig. 39-1, A) until the remainder of the displays illuminate (Fig. 39-1, B). This is the “**default screen**”. The default screen displays your temperatures. The top display is the grilling temperature, and the bottom display is the meat probe temperature (if plugged in).


**CAUTION: ONCE THE THERMOMETER/THERMOSTAT FUNCTIONS ARE TURNED ON, THE ELEMENT WILL AUTOMATICALLY BEGIN TO PREHEAT!**

- The **dot** next to the grilling temp. indicates that the heating element is **on**. The **dot** turns on and off intermittently as the element maintains the set temp. See Fig. 39-2.
- The unit automatically preheats to the default temperature of 450° F. To set your desired temperature, see the Set Grilling Temperature section on the following page.
- The thermometer/thermostat will automatically shut off 4 hours from the time the thermometer/thermostat functions are turned **on**. The thermometer/thermostat sits in “**idle mode**” until it is turned back on for use. See Idle Mode section for details.
- To turn off one of the thermometer/thermostats and continue operating the other, choose the thermometer you wish to turn off, press and hold the **SET** and **TIMER** buttons until the temperature display turns off. The thermometer and heating element are turned off. Press and hold the **TIMER** button to turn back on if desired.

**Note: Operating in cold weather conditions:** If the unit is powered on during cold weather (32° F or below) and the TOP display reads “- - -”, Allow the unit sufficient time to preheat. The thermometer is not calibrated to read temperatures at or below 32° F. Allow the heating elements to warm up and the display will resume normal functioning once the unit temp rises above 32° F.

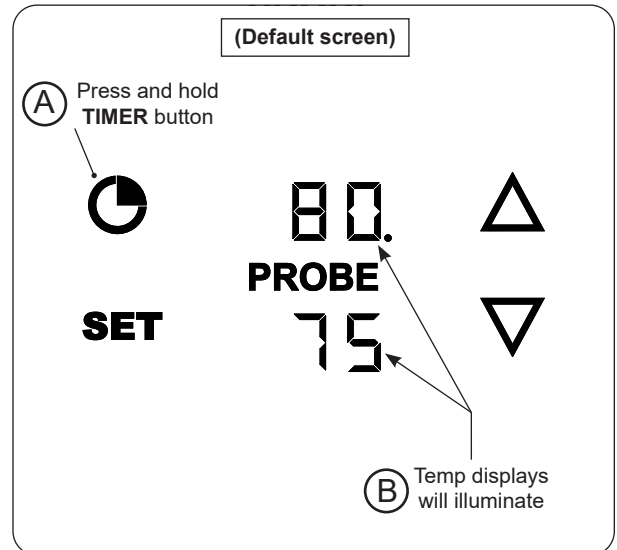

**Fig. 39-1** Turn on thermometer/thermostat

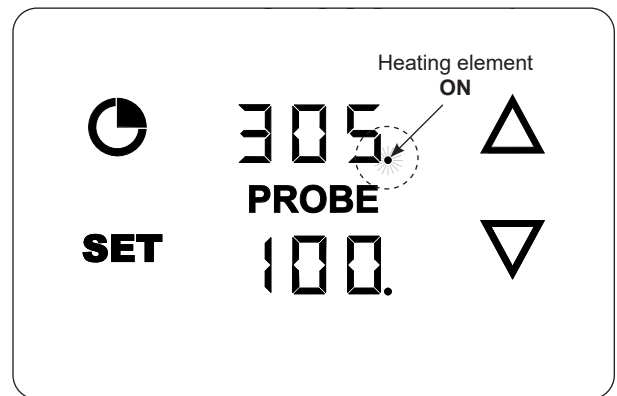

**Fig. 39-2** Heating element ON

## Set Grilling Temperature

1. With the thermometer/thermostat **on**, press the **SET** button once. The grilling and probe displays will blink. (While blinking, either area can be selected to enter their settings.) See Fig. 40-1, A and B.

2. Press the **UP ARROW** to select the grilling temp settings, then use the up or down arrows to set the desired temp. (Fig. 40-1, C).


**Note:** Short pressing the arrows will adjust in increments of 5°. Holding down an **UP** or **DOWN** arrow (for several seconds) will adjust the temp. rapidly.

- The default setting is 450° F. The minimum temp setting is 200° F. The maximum temp. setting is 700° F.

**Note:** The grilling temp controls the temperature inside of the grill. (This is the thermostat function.)

3. Press the **SET** button to confirm (or wait 5 seconds to confirm automatically). Once confirmed it will resume to the “**default screen**”.

- The temp. display will climb until it reaches the set temperature. Once reached, the set temp will remain displayed regardless of the actual temperature although frequent lid opening/closing, environmental conditions, and cold food insertion causes the temp. to fluctuate, the set temp will display the target temp. until a new temp. is set. The element dot will remain illuminated until the targeted temp. is reached.

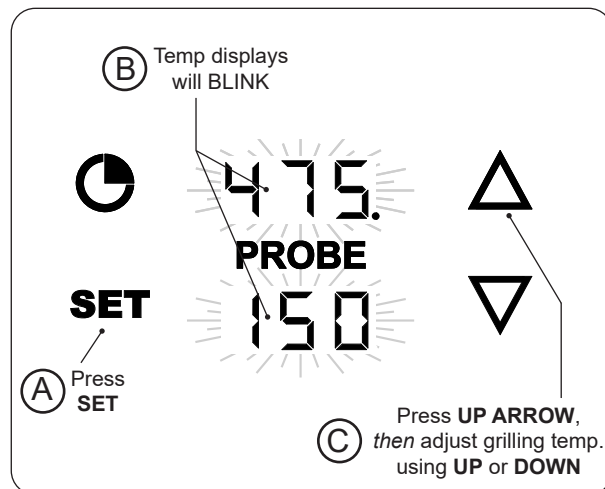

**Fig. 40-1** Set grilling temp.

## Setting Meat Probe Temp. & Meat Probe Alarm

Plug the meat probe into the meat probe jack found on the right side of the control panel as shown in Fig. 41-1. Dual control models are equipped with two meat probe jacks (one on each side of the control panel).

**Note:** The digital display does not illuminate any probe information unless the meat probe is plugged in.

### Meat probe temp:

1. With the thermometer/thermostat **on** and the meat probe plugged in, press the **SET** button once. The grilling and probe displays will blink. (While blinking, either area can be selected to enter their settings.) See Fig. 41-2, A and B.
2. Press the **DOWN ARROW** to select the probe settings, then you may use the up or down arrows to set the desired temp (Fig. 41-2, C).

**Note:** Short pressing the arrows will adjust in increments of 1°. Holding down an **UP** or **DOWN ARROW** (for several seconds) will adjust the temp. rapidly.

- The default probe setting is 160° F.

3. Press the **SET** button to confirm immediately or wait 5 seconds and it will confirm automatically. Once confirmed it will resume to the “**default screen**”.

### Meat probe alarm:

Once the desired probe temp. has been set, press and hold the **SET** and **DOWN ARROW** until a **dot** appears next to the PROBE temperature. The **dot** indicates the probe alarm is **on**. See Fig. 41-3, A and B.

To disable the meat probe alarm, press and hold the **SET** and **DOWN ARROW** until the **dot** disappears. The alarm is **off**.

- Inserting the meat probe into the cooking meat will give an actual temp. reading. The display will flash and the alarm will sound when the set temp. is reached.
- Press any of the four buttons to silence.
- **The meat probe may be left attached to the meat for long-term use with the oven hood closed.**
- Probe tip must remain in the center of the thickest part of the meat when in use. Leaving the meat probe protruding through the meat while the oven hood is closed will damage the meat probe. The probe is calibrated specifically for use at temperatures between 125°F and 180°F. Tip exposure of 200°F or more for extended time will damage probe and it will need to be replaced.
- If wire shows visible damage, meat probe needs to be replaced.
- Heat-resistant gloves **MUST** be worn when handling the hot meat probe.
- Cleaning the meat probe under running water is permissible, **DO NOT** fully submerge in water. It is **NOT** dishwasher-safe.
- Meat probe must be dried completely before use.
- Meat probe must be stored in the bamboo storage box when not in use.

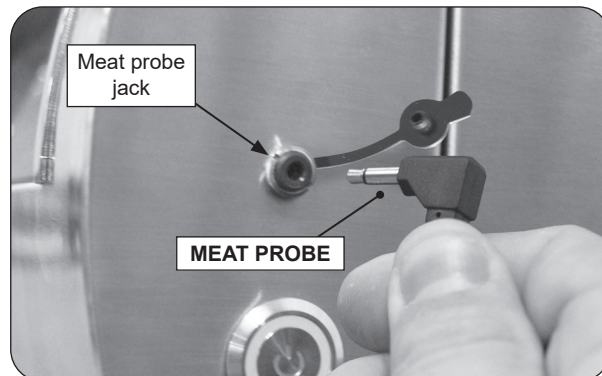


Fig. 41-1 Plug in meat probe

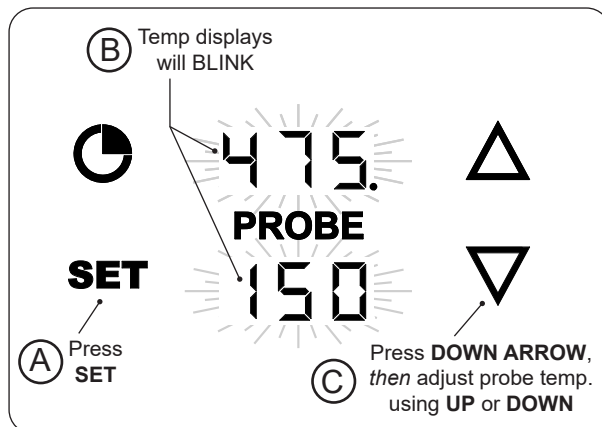


Fig. 41-2 Set probe temperature

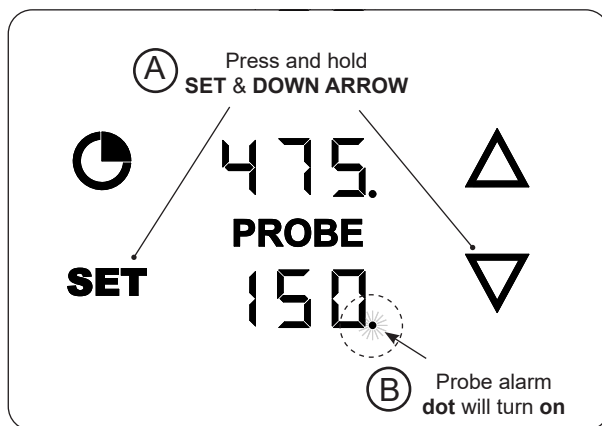


Fig. 41-3 Set probe alarm

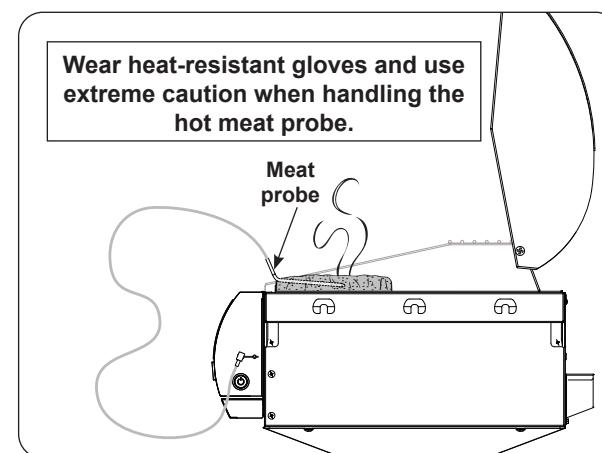



Fig. 41-4 Meat probe

## Setting the Timer


1. With the thermometer/thermostat **on**, press the **TIMER** button once (Fig. 42-1, A). A zero will display indicating that no timer is set.
2. Press the **UP** or **DOWN** arrows to enter the desired amount of time (Fig. 42-1, B).

**Note:** Short pressing the arrows will adjust in increments of one minute. Holding down the **UP** or **DOWN** arrow (for several seconds) will adjust the time rapidly.

3. Press the **TIMER** or **SET** button (or wait 5 seconds) to confirm. The timer will start counting down and the display will resume to the “**default screen**”.
- To check the timer status, press the **TIMER** button and the display will show the live countdown (for 5 seconds then, return to the default screen). See Fig. 42-2.
  - The upper display indicates minutes and the lower display indicates seconds (see Fig. 42-2).
  - When the timer has 10 seconds left, the countdown will display. Once the timer reaches zero the display will start flashing and the alarm will sound.
  - Press any of the four buttons to silence and return to the “**default screen**”.
  - **To cancel an active timer:** follow steps 1 and 2 above and adjust the time down to zero.

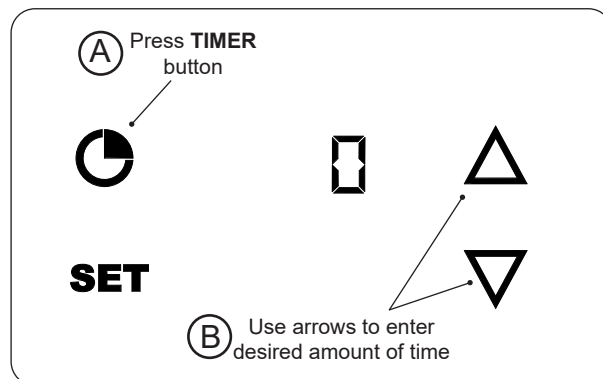

**Fig. 42-1 Set timer**

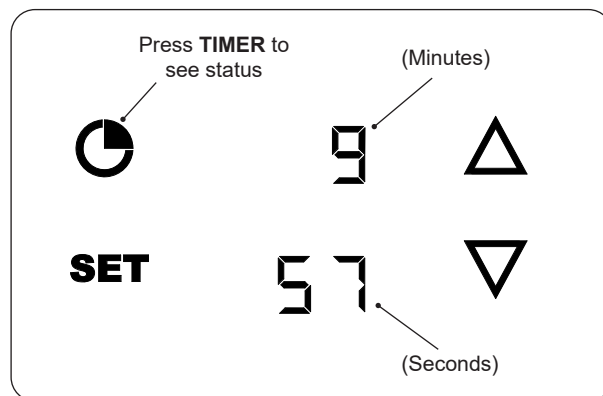

**Fig. 42-2 Check timer status**


## Idle Mode

The thermometer/thermostat will automatically turn off and enter “**idle mode**” after 4 hours from the time the thermometer/thermostat functions are turned on. The heating elements and all functions will turn off as a safety measure.

Similar to “**standby mode**”, idle mode screen appears the same with the controls illuminated (Fig. 42-3), but this mode also memorizes your last settings used (as long as the thermometer power switch remains **on**). This will allow you to resume right where you left off.

**To exit idle mode and resume grilling:** press and hold the **SET TIMER** button until the remainder of the displays illuminate. See Fig. 42-3. The displays will fully illuminate and the heating element will turn back on.


**Note:** If the unit remains in idle mode without any button presses for 10 minutes, the illuminated buttons will turn off. To turn back on, swipe your hand across the general button area to illuminate the buttons.

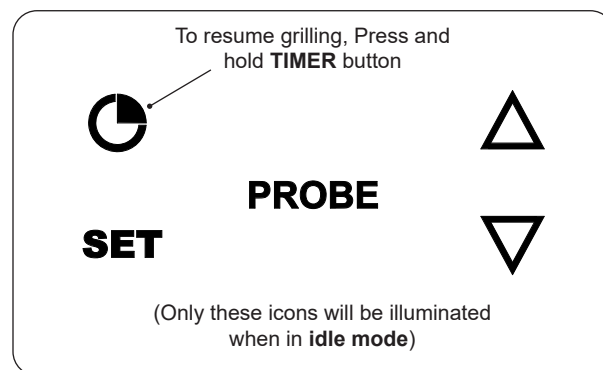

**Fig. 42-3 Idle mode**

## Changing Temperature Unit

1. Press and hold the **UP** and **DOWN** arrows until °F or °C is displayed (Fig. 42-4, A).
2. Press the **UP** or **DOWN** arrow to select the desired temp unit (Fig. 42-4, B).
3. Press **SET** (or wait 5 seconds) to confirm. The display will return to the default screen with the newly set temperature unit.

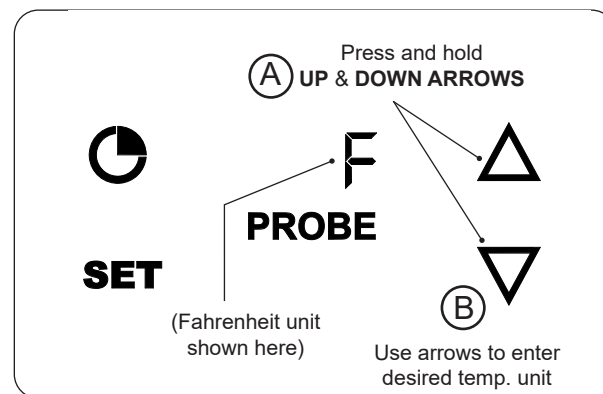

**Fig. 42-4 Change temp. unit**

## THERMOMÈTRE NUMÉRIQUE / THERMOSTAT

Lisez intégralement les sections suivantes concernant le fonctionnement du thermomètre/thermostat. Référez-vous à la Fig. 43-1 pour l'orientation du thermomètre et l'emplacement des boutons.

### COMMENT METTRE EN MARCHÉ ET ÉTEINDRE

L'interrupteur d'alimentation du thermomètre se trouve sur le côté droit du panneau de commande (Fig. 43-2). Il contrôle l'alimentation du thermomètre/thermostat numérique.

**Appuyez sur l'interrupteur d'alimentation du thermomètre pour allumer:** Les commandes numériques s'allumeront, et le thermomètre/thermostat restera en mode veille jusqu'à son activation pour une utilisation. Si la sonde à viande est branchée, PROBE s'allumera également. Voir Fig. 43-3.

- Le thermomètre/thermostat doit être activé manuellement via les commandes tactiles avant de pouvoir utiliser les fonctions du gril. Pour l'allumer, consultez la section 'Activer les fonctions du thermostat/thermomètre'.
- Si l'appareil reste en mode veille sans aucune pression de bouton pendant 10 minutes, les boutons éclairés s'éteindront. Pour les rallumer, passez votre main sur la zone générale des boutons pour les illuminer.

**Appuyez sur l'interrupteur d'alimentation du thermomètre pour éteindre.:** L'appareil s'éteindra. **L'interrupteur d'alimentation DOIT être en position OFF lorsque le gril n'est pas en cours d'utilisation.**

- Les ventilateurs resteront en marche pour continuer à refroidir l'électronique, voir la section 'OPERATION' sous la section 'USING THE GRILL' de ce manuel.
- Pour couper complètement l'alimentation électrique du gril, il devra être déconnecté de la source d'alimentation principale (via le cordon d'alimentation, la déconnexion GFCI, ou le disjoncteur, selon le cas).
- **Modèles de contrôle double:** Pour éteindre UN côté du gril (commandes et chaleur) tout en continuant à contrôler l'autre, appuyez et maintenez enfoncés les boutons TIMER et SET (du côté que vous souhaitez éteindre) jusqu'à ce que les affichages de température s'éteignent.

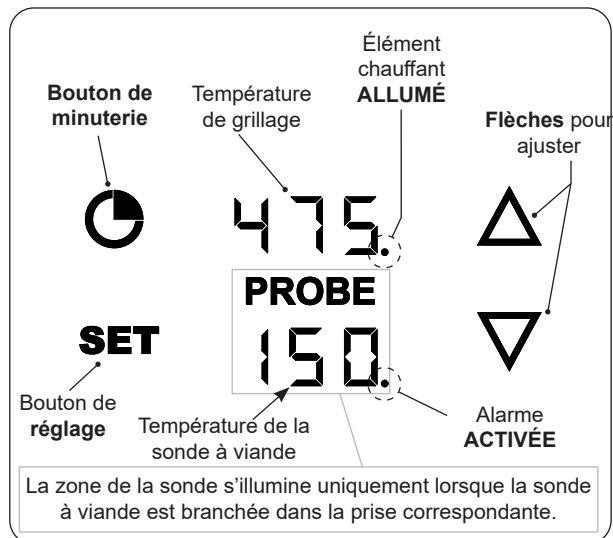


Fig. 43-1 Orientation (écran par défaut)

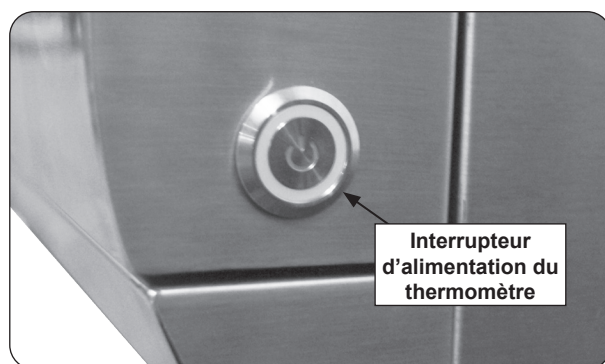


Fig. 43-2 Appuyez sur l'interrupteur du thermomètre

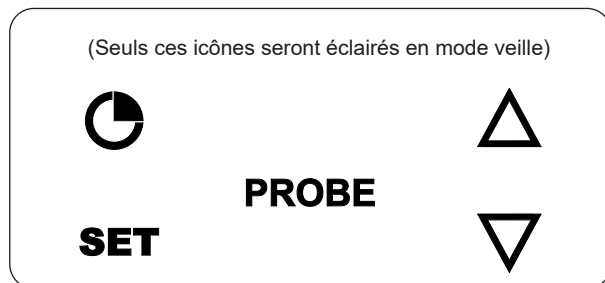


Fig. 43-3 Mode veille

## Activer Les Fonctions Du Thermomètre/Thermostat

1. Allumez la source d'alimentation de l'appareil.
2. Appuyez sur l'**interrupteur d'alimentation du thermomètre**.
3. Appuyez et maintenez enfoncé le bouton **TIMER** (Fig. 44-1, A) jusqu'à ce que le reste des affichages s'allume (Fig. 44-1, B). Il s'agit de l'**écran par défaut**. L'écran par défaut affiche vos températures. L'affichage supérieur est la température de cuisson, et l'affichage inférieur est la température de la sonde à viande (si elle est branchée).

**CAUTION: UNE FOIS QUE LES FONCTIONS DU THERMOMÈTRE/THERMOSTAT SONT ACTIVÉES, L'ÉLÉMENT COMMENCERA AUTOMATIQUEMENT À PRÉCHAUFFER !**

- Le **point** à côté de la température de cuisson indique que l'élément chauffant est **activé**. Le **point** s'allume et s'éteint de manière intermittente lorsque l'élément maintient la température réglée. Voir Fig. 44-2.
- L'unité préchauffe automatiquement à la température par défaut de 450 °F. Pour régler la température souhaitée, consultez la section 'Réglage de la température de cuisson' ci-dessous.
- Le thermomètre/thermostat s'éteindra automatiquement 2 heures après que les fonctions du thermomètre/thermostat sont **activées**. Le thermomètre/thermostat reste en '**mode veille**' jusqu'à ce qu'il soit à nouveau activé pour une utilisation. Consultez la section Mode veille pour plus de détails.
- Pour éteindre l'un des thermomètres/thermostats et continuer à utiliser l'autre, sélectionnez le thermomètre que vous souhaitez éteindre, appuyez et maintenez les boutons **SET** et **TIMER** jusqu'à ce que l'affichage de la température s'éteigne. Le thermomètre et l'élément chauffant sont éteints. Appuyez et maintenez le bouton **TIMER** pour le réactiver si nécessaire.

**Note: Fonctionnement par temps froid:** Si l'unité est allumée par temps froid (32 °F ou moins) et que l'affichage SUPÉRIEUR indique '--', laissez à l'unité suffisamment de temps pour préchauffer. Le thermomètre n'est pas calibré pour lire les températures à 32 °F ou en dessous. Laissez les éléments chauffants se réchauffer, et l'affichage reprendra un fonctionnement normal une fois que la température de l'unité dépassera 32 °F.

## Réglage De La Température De Cuisson


1. Avec le thermomètre/thermostat **allumé**, appuyez une fois sur le bouton **SET**. Les affichages de la température de cuisson et de la sonde clignoteront. (Pendant le clignotement, n'importe quelle zone peut être sélectionnée pour entrer dans ses réglages.) Voir Fig. 44-3, A et B.
2. Appuyez sur la **FLÈCHE VERS LE HAUT** pour sélectionner les paramètres de la température de cuisson, puis utilisez les flèches vers le haut ou vers le bas pour régler la température souhaitée. (Fig. 44-3, C).

**Note:** Appuyer brièvement sur les flèches ajustera par incréments de 5°. Maintenir enfoncé une **FLÈCHE VERS LE HAUT** ou **VERS LE BAS** (pendant plusieurs secondes) ajustera rapidement la température.


- Le réglage par défaut est de 450 °F. Le réglage minimal est de 200 °F. Le réglage maximal est de 700 °F.

**Note:** La température de cuisson contrôle la température à l'intérieur du gril. (Il s'agit de la fonction du thermostat)


3. Appuyez sur le bouton **SET** pour confirmer (ou attendez 5 secondes pour une confirmation automatique). Une fois confirmé, l'écran reviendra à l'**écran par défaut**.
  - L'affichage de la température augmentera jusqu'à atteindre la température réglée. Une fois atteinte, la température réglée restera affichée, indépendamment de la température réelle (bien que l'ouverture/fermeture fréquente du couvercle, les conditions environnementales et l'insertion d'aliments froids puissent faire fluctuer la température, la température réglée affichera la température cible jusqu'à ce qu'une nouvelle température soit réglée). Le point de l'élément restera allumé jusqu'à ce que la température cible soit atteinte.

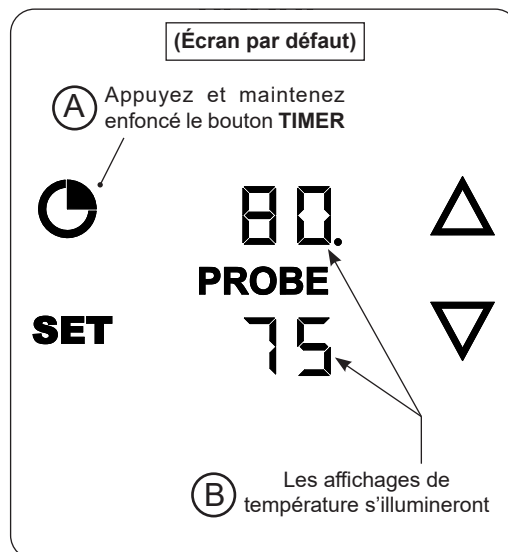

**Fig. 44-1** Turn on thermometer/Thermostat

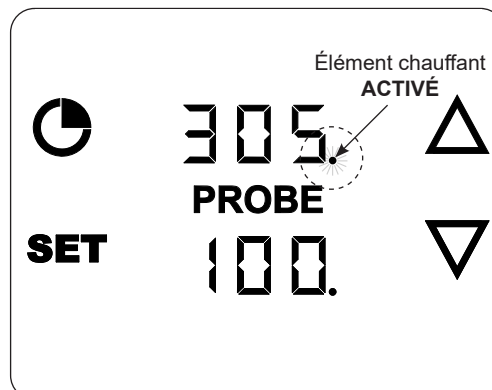

**Fig. 44-2** Élément chauffant ACTIVÉ

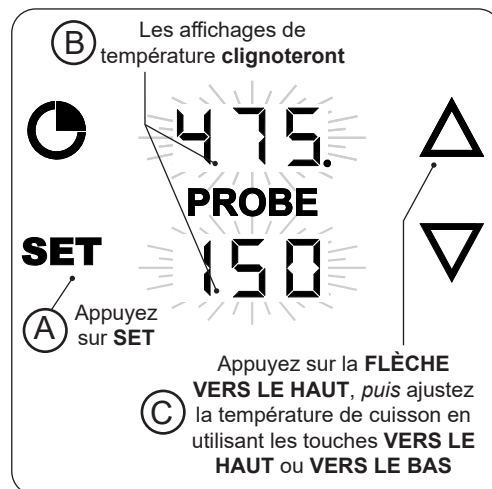

**Fig. 44-3** Réglez température cuisson

## SERVICING AND CLEANING

**Your electric grill requires regular cleaning and maintenance.** Refer to these instructions for details. Performing these procedures will ensure proper operation, appearance, and safety.

### WARNINGS

- Prior to servicing or cleaning make sure the unit is completely cool, the unit is off, and the power supply is disconnected (as applicable and unless otherwise stated).
- Wear appropriate gloves and safety glasses during any servicing or cleaning.
- DO NOT spray any cleaner or liquids on the unit when hot.
- The unit MUST be cleaned regularly to prevent grease build-up and other food deposits. A clean and well maintained unit prevents the risk of grease build-up and grease fires.
- Verify proper operation after servicing or deep cleaning.
- See IMPORTANT SAFEGUARDS section for additional related information.

### CLEANING YOUR ELECTRIC GRILL

#### Before Each Use

1. **Inspect and clean the exterior surfaces of the unit:** With a cool grill, clean any dust, grease, splatter, or spills as needed with a damp clean cloth.
2. **Clean the glass:**
  - Clean the glass control panel with a **non-abrasive** quality brand glass cleaner and a clean gentle cloth. DO NOT use other cleaners or chemicals to prevent scratching the glass.
  - Clean the Magic View Window (interior and exterior) with a quality brand glass cleaner and clean cloth.

#### After Each Use

1. **Clean the cooking grids:** Operate at 700° F with hood closed for 10-15 minutes to burn off all grease. Turn off the grill and brush/scrape the cooking grids to remove all residue. Use long-handled insulated BBQ tools and wear an insulated glove / oven mitt.

**Important:** The cooking element is self-cleaning (it does not require manual cleaning).

2. **Check and clean your drip tray:** When the unit is cool, carefully remove the drip tray and dispose of contents appropriately. If tray is equipped with a liner, dispose of the liner. Clean tray in a soapy water solution if needed. For tough deposits, a copper pad can be used. Rinse and dry completely. Replace a new liner and insert the tray back into the electric grill. Order more drip tray liners through your dealer.
3. **Cover your grill:** Once the unit is dry and cool, cover your grill with a Fire Magic protective cover (not included).

#### Twice A Year (or as needed) - Deep Clean

1. **Interior of grill:** In addition to cleaning the cooking grids and drip tray, a deep clean of the interior and all components MUST be performed twice a year (or as needed depending on use). Follow the steps below.
  - a. With a cool unit, open the oven lid and remove the cooking grids and inner liners. Clean all components in a soapy water solution, rinse, dry, and set aside. For tough deposits, a copper pad can be used. The components can also be cleaned in a dishwasher.

**Note:** Refer to the parts list and INNER LINER REMOVAL section as needed.

- b. Grill inner walls: use a grill cleaner and a copper pad to scrub the inner walls. Fire Magic grill cleaner is recommended. Follow instructions provided with the grill cleaner.

Wipe down the entire surface of the inner walls with a wet, clean, heavy-duty rag. Remove all cleaner.

- c. Re-install all components removed during this process.

2. **Exterior of grill:** With a cool grill, use a grill cleaner (or a soapy water solution) and a clean cloth to remove grease and dirt from the grill exterior. For tough deposits, a copper pad can be used. Always wipe with the grain. Rinse and dry completely. Then follow up with a stainless steel cleaner and a clean cloth. To clean the magic view window (if equipped), use a quality brand glass cleaner. DO NOT use other cleaners or chemicals.

If this routine cleaning is not performed, the stainless steel may become dull and develop surface rust (due to use and atmospheric conditions).  
If left uncleaned, significant damage and pitting may occur.



**Fig. 45-1** Wipe with grain

**Important:** DO NOT use steel wool, any other metal tools, or any other cleaners/chemicals to clean the exterior other than recommended above. Such items promote rust.

**Note:** Due to the nature of stainless steel, temperatures produced by the cooking process will cause discoloration. This can be reduced by routine cleaning.

3. **Glass surfaces:** For hard water stains on glass, it is recommended to clean the glass using a white vinegar / water solution and wiping clean with a soft cloth.

### For Environments High In Salt, Chloride, Or Other Corrosive Chemicals

When this grill is installed in a corrosive environment such as near the ocean (salt air), poolside (chlorine and/or pool chemicals) or any other location with exposure to high salt/chloride content or corrosive chemicals/solutions, it will be more susceptible to corrosion and **MUST** be maintained/cleaned **more frequently**.

- **DO NOT** store any corrosive chemicals (chlorine, hydrochloric acid, fertilizer, etc.) near your stainless steel unit.
- **DO NOT** allow any corrosive materials (masonry dust, debris, etc.) to settle on your stainless steel unit.
- These environments, chemicals, and materials may cause the 304 stainless steel to develop surface rust and consequently pitting. Under these conditions the unit exterior **MUST** be cleaned at least monthly. Inspect your grill often and clean accordingly.

### Protecting Your Electric Grill

An optional Fire Magic protective cover will protect your grill when not in use. Install the cover on a cool and dry unit. **DO NOT** cover a damp grill. During high humidity or after rainy conditions, remove the cover to dry trapped moisture if present. (If the cover is installed over a damp unit it can cause surface rust.)

Ensure that the **INSIDE** of the cover is **DRY** before putting it back on the grill.

## CONTROL PANEL REMOVAL


The interior of the control panel must only be accessed by a qualified professional service technician.

1. Ensure the grill is completely cool and the power to the unit is disconnected.
2. Slide the drip tray outward partially to allow enough room to access the control panel securing nuts.
3. Loosen the nuts underneath the left and right sides of the control panel with a 11/32" wrench (see Fig. 47-1), then lift the panel until it is freed from the screws. Carefully rest the bottom of the control panel on the drip tray. The top of the control panel is supported by the internal chains.

**Important:** When opening, take caution to not damage any wiring.

4. If wire disconnections are required, reference the wire diagram in the MODEL SPECIFICATIONS section in this instruction manual or the wire diagram label affixed to the inside of the control panel.

**Note:** Whenever reconnecting any wires, apply a small amount of dielectric grease to the male connector, then make the connection. This will ensure conductivity and prevent moisture from affecting the contact.

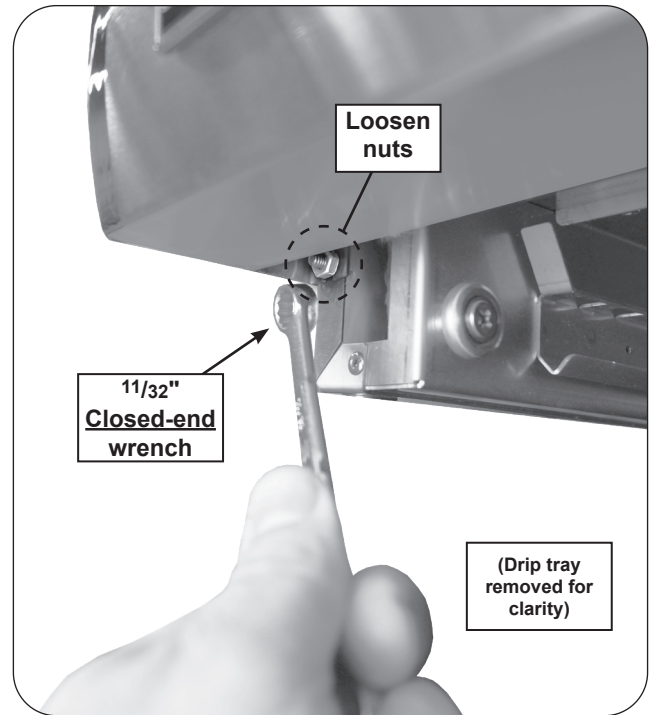

**Fig. 47-1** Remove control panel

Please use this page to record any information about your unit that you may want to have at hand.

## TROUBLESHOOTING

If you have trouble with the unit, please use this list to identify the problem. By trying one or more of the solutions to the possible cause, you should be able to solve the problem. If this list does not cover your present problem, or if you have other technical difficulties with the unit, please contact your local dealer.

| PROBLEM                                              | POSSIBLE CAUSE                                                                                                                                                                                                                                                                       | CORRECTION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Grill does not work</b>                           | <ol style="list-style-type: none"> <li>1. Power failure</li> <li>2. Power not connected properly</li> <li>3. Thermostat switch protection engaged</li> <li>4. GFCI or circuit breaker may be tripped</li> </ol>                                                                      | <ol style="list-style-type: none"> <li>1. Check if power is available.</li> <li>2. Make sure the power source and powering equipment is properly connected and tested.</li> <li>3. Electronics overheated and activated thermostat switch. A qualified professional service technician must reset the thermal switch and inspect the unit thoroughly.</li> <li>4. Reset GFCI or circuit breaker.</li> </ol>                                                                                                                                                                                                                                       |
| <b>Thermometer/<br/>thermostat does not<br/>work</b> | <ol style="list-style-type: none"> <li>1. No power to unit</li> <li>2. Unit timed-out after 2 hrs (idle mode)</li> <li>3. Faulty thermometer/thermostat</li> <li>4. Display reads: <b>OH</b></li> <li>5. Display reads: <b>Err</b></li> <li>6. Probe display reads: - - -</li> </ol> | <ol style="list-style-type: none"> <li>1. Ensure power is available.</li> <li>2. Swipe hand over controls to illuminate buttons and power on thermometer/thermostat.</li> <li>3. Contact your dealer.</li> <li>4. The PCB board overheated. Cause may be due to wind entering rear of lid, or grease fire. Allow to cool and turn back on. Check fans are working properly. If still no function, contact your local dealer.</li> <li>5. Thermocouple disconnected or faulty. Check connection or replace if faulty.</li> <li>6. Meat probe temp. exceeded limit. Let cool and retry, if still not functioning call dealer to replace.</li> </ol> |
| <b>Cooking element<br/>does not work</b>             | <ol style="list-style-type: none"> <li>1. No power to unit</li> <li>2. Bad element</li> </ol>                                                                                                                                                                                        | <ol style="list-style-type: none"> <li>1. Ensure power is available.</li> <li>2. Contact your dealer.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

# WARRANTY

## PETERSON FIRE MAGIC GRILLS AND ACCESSORIES LIMITED WARRANTY

R.H. Peterson Co. ("RHP") warrants your Fire Magic® grill to be free from defects in material and workmanship.

Fire Magic cast stainless-steel gas burners, Choice stainless steel U shaped burners, cooking grids, and Barbecue and vent hood housings are warranted **as long as the original purchaser owns them -- LIFETIME**. (Except as described below.)

Fire Magic brass valves, manifold assemblies, inner liners, porcelain housings (including ovens and barbecue faces), and **backburner assemblies** (except ignition systems) are warranted for **FIFTEEN (15) YEARS**.

Fire Magic built-in pizza ovens and griddles (except ignition system and thermostat) are warranted for **TEN (10) YEARS**.

Fire Magic heating elements, Infra-red burners, flavor grids, and charcoal stainless steel grills are warranted for **FIVE (5) YEARS**; except for the charcoal pan, charcoal grid, analog thermometer, and ash catch tray, which are warranted for **ONE (1) YEAR**.

Fire Magic side burners, induction cooktops, exterior Glass Fiber Reinforced Concrete (GFRC) grill island systems, and all other grill, vent hood, pizza oven and griddle components (except ignition systems and electronic parts) are warranted for **THREE (3) YEARS**.

Fire Magic Echelon gas grill, pizza oven and EL500 electric grill under glass touch screen electronic controls are warranted for **TWO (2) YEARS**.

Fire Magic grill, pizza oven and griddle ignition systems (excluding batteries), electronic components (including lights, digital thermometers and thermostats) and accessories are warranted for **ONE (1) YEAR**.

### A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE IS REQUIRED

This warranty applies to the original purchaser for products which are installed in the United States or Canada and which are operated and maintained as intended for single family residential usage (if the unit is installed in a commercial / multi-user setting, a separate Commercial / Multi-User Limited Warranty applies and is available from RHP). This warranty is valid only with proof of purchase, commences on the date of purchase, and terminates (both as to original and any replacement products) on the anniversary date of the original purchase of the product per the above schedules.

This warranty **does not** cover parts which become defective as a result of negligence, misuse, or use not in compliance with the Installation and Owner's Manual, accidental damage, improper handling, improper storage, improper installation, **lack of required routine maintenance** (as specified in the Installation and Owner's Manual), or electrical damage. Product must be installed as specified in the Installation and Owner's Manual by a **qualified professional installer**. This warranty **does not** apply to normal occurrences that may be expected with any outdoor product such as rust, corrosion, oxidation, or discoloration unless the affected part becomes inoperable. RHP products including heating elements and controls are designed and certified to be used as a system. Modifications to products which are not specifically authorized will void this warranty and could render the product to be unsafe. Heating elements, controls, Burners, valves, parts, remotes, accessories, etc. used with this product must be RHP products or this warranty is void.

Warranted items will be repaired or replaced at RHP's sole discretion. This warranty **does not** cover labor or labor related charges, except as provided by separate specific written programs from RHP. All repair work must be performed by a qualified professional service person and requires prior approval of RHP.

RHP may require the defective product or part to be returned to the factory to determine the cause of failure. RHP will pay freight charges if the product or part is determined to be defective. This warranty does not cover breakage in shipment from our independent distributor to its customer if the damage is determined to have occurred during that shipment.

This warranty specifically excludes liability for **indirect, incidental**, or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights, and you may have other rights that vary from state to state or province.

For additional information regarding this warranty, or to place a warranty claim, contact the RHP dealer where the product was purchased.

When contacting your RHP dealer or the R.H. Peterson Co., please provide the following information:

- Your name, address, telephone number, e-mail
- Sales receipt showing where purchased and date purchased
- Model number, serial number of product, date code
- Relevant information: installer, additions, repairs, when defect was first noted

**TO REGISTER YOUR PRODUCT ONLINE GO TO: [WWW.RHPETERSON.COM](http://WWW.RHPETERSON.COM),  
AND CLICK ON PRODUCT REGISTRATION. THANK YOU FOR YOUR PURCHASE.**

|                                    |                    |                                                         |
|------------------------------------|--------------------|---------------------------------------------------------|
| <b>Quality Check</b>               | <b>Date:</b> _____ | <b>Model #:</b> _____<br><br><br><b>Serial #:</b> _____ |
| <b>Electrical Leak Test:</b> _____ |                    |                                                         |
| <b>Operation Test:</b> _____       |                    |                                                         |
| <b>Inspector:</b> _____            |                    |                                                         |