 
 



# T08 User Manual

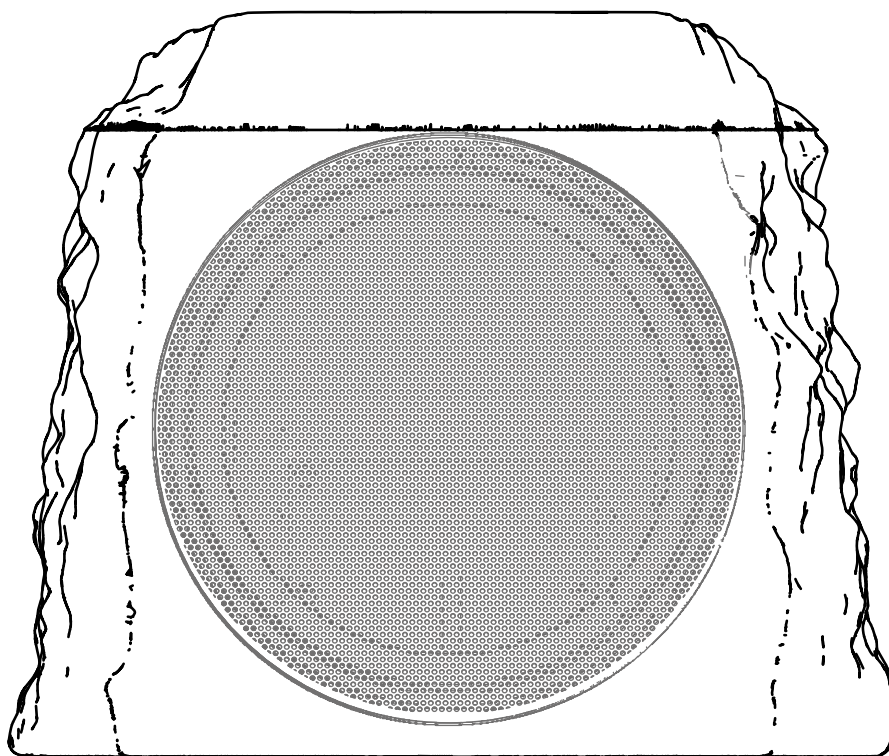


# Package List

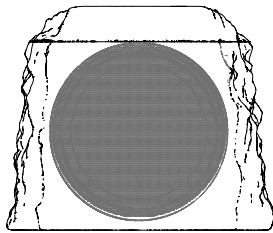

 Speaker

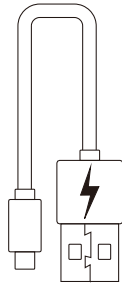

Type-C charging Cable

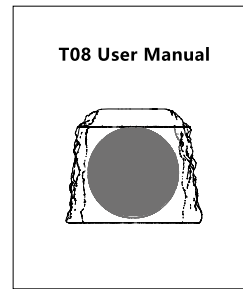 



User Manual




Remote Controller

# Product Introduction

  - 1 LED
- 2 LED indicator light
- 3 Power Button
- 4 Pairing Button
- 5 LED button
- 6 VOL+ Button
- 7 Play Button
- 8 VOL- Button
- 9 Charging indicator light
- 10 Typec charging port

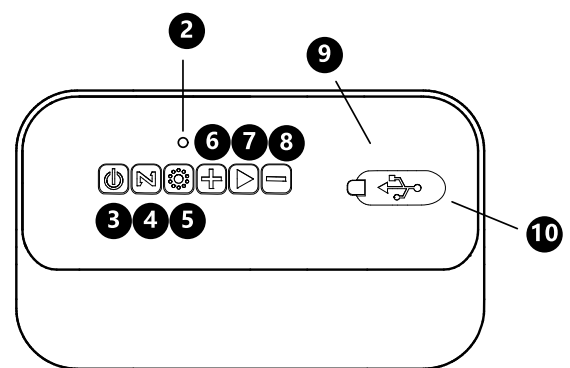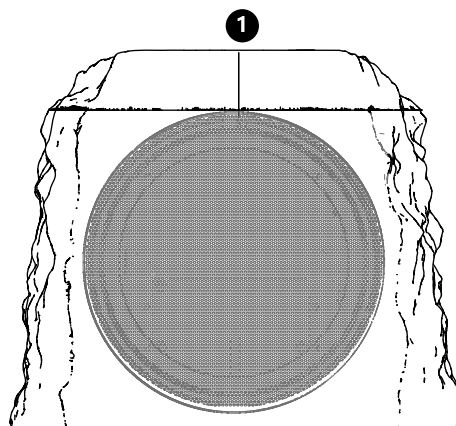


# Paring

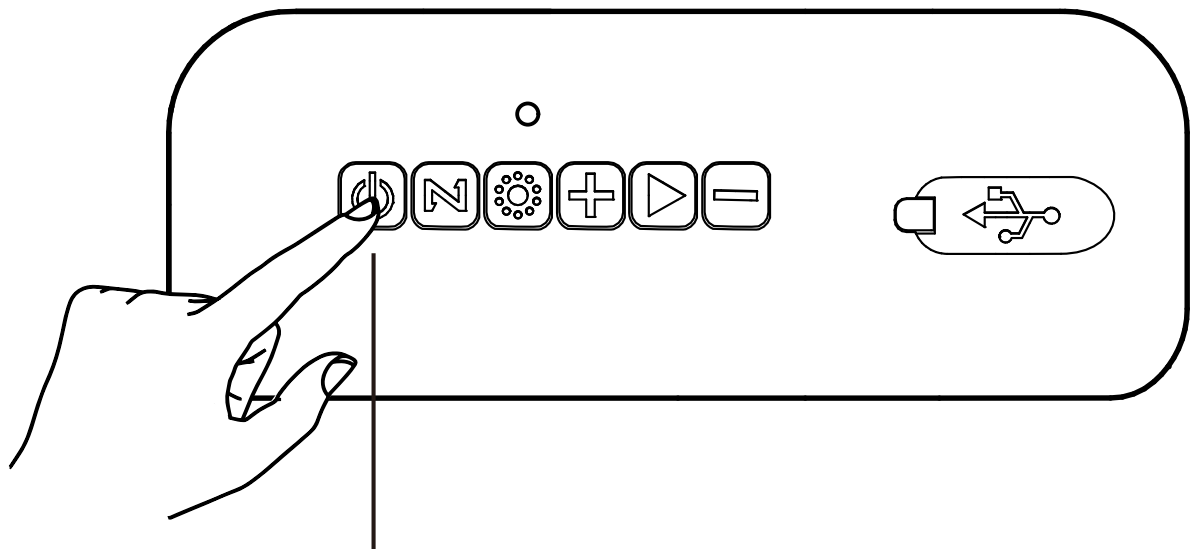 

1.  =  =   ...   ...
-  : 04"

 
Press and hold the power button for 4 seconds. The speaker indicator will flash to enter wireless pairing mode.

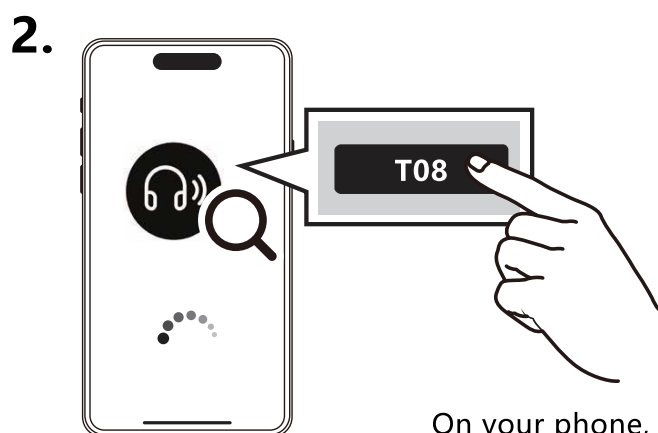

On your phone, select the wireless name "T08" and tap to connect.

# Party Mode


 
Multiple Speakers (up to 100 speakers)

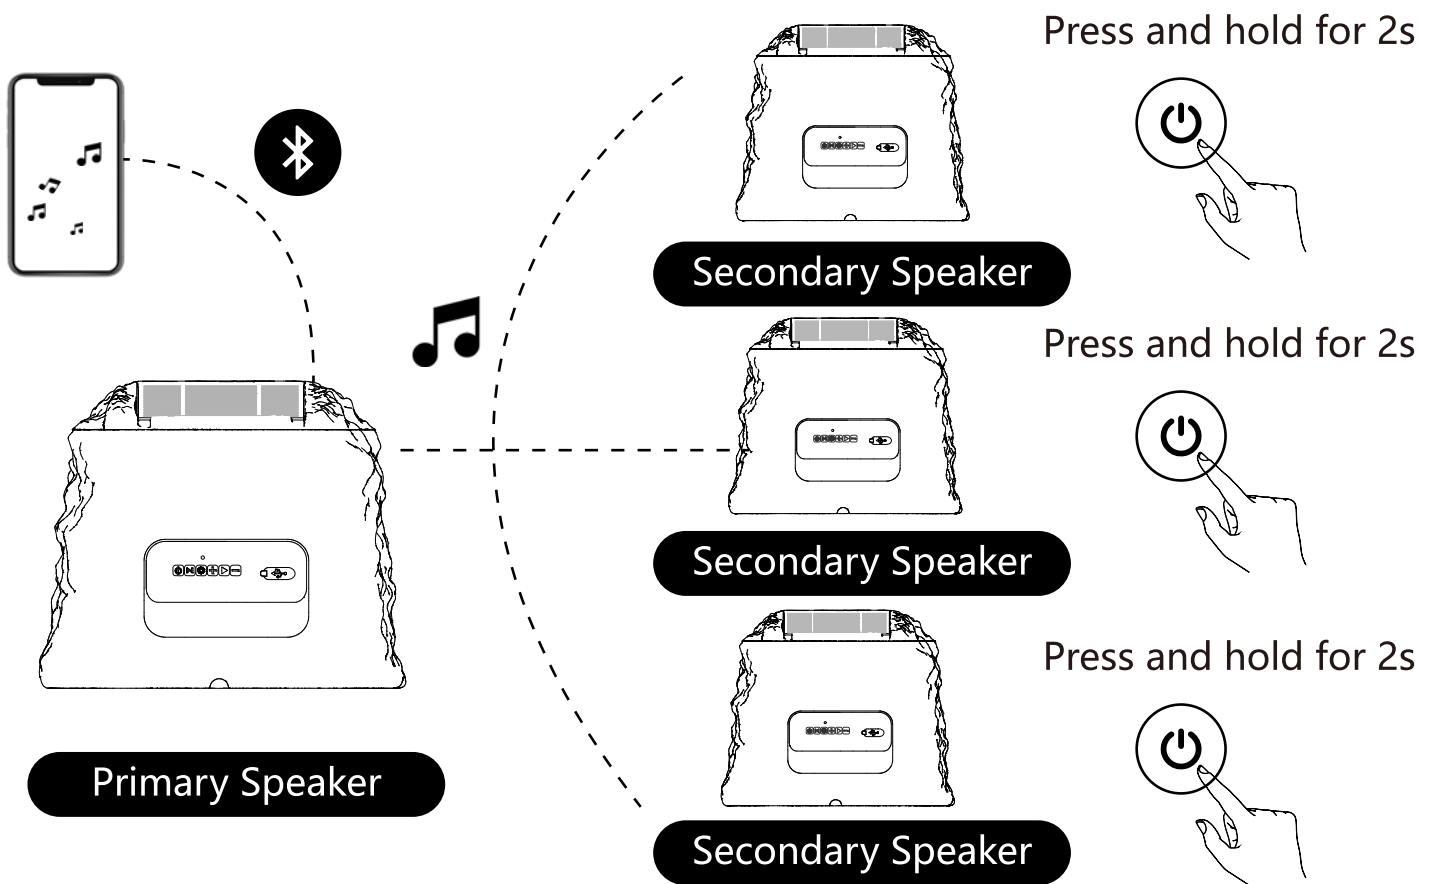


Make sure one speaker is connected to your device. On additional speakers, press and hold the power button for 2 seconds to turn them on. Multi-sync mode is enabled, and you are now able to play audio in perfect sync using your mobile device.

Notes: You only need to connect one T08 speaker.

# Charging

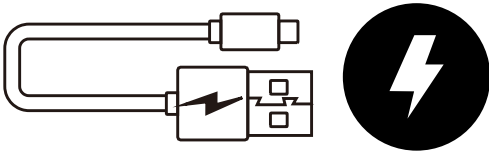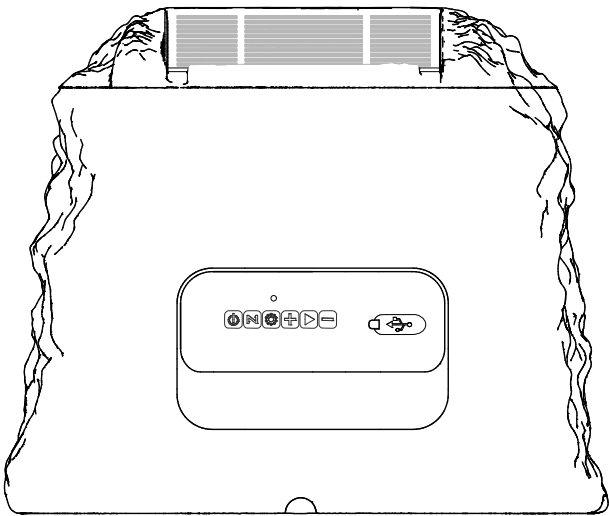  

A to C Charging Cable

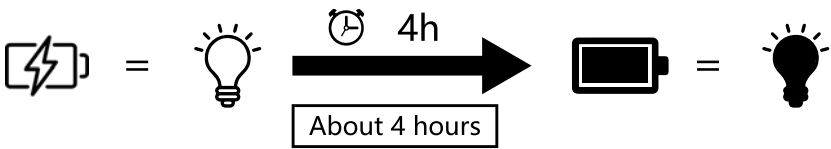 


Charging time: about 4 hours.

# Key features of the button

 ---

| Function             | Operation                                                                              |
|----------------------|----------------------------------------------------------------------------------------|
| Power On / Power Off | Press and hold the power button for about 3S                                           |
| Play/Pause Music     | Click the play button                                                                  |
| Next Music           | Long press the VOL+ button                                                             |
| Previous Music       | Long press the VOL- button                                                             |
| BT Pairing           | Auto enter pairing mode after power on, or long press the Pairing Button for 2 seconds |
| Volume Up            | Short press the VOL+ button                                                            |
| Volume Down          | Short press the VOL- button                                                            |
| Effect Lights        | click the LED Button                                                                   |

# Key features of Remote Controller

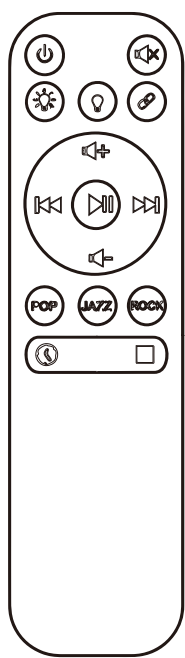

| Function             | Operation                          |
|----------------------|------------------------------------|
| Power On / Power Off | Short press power button           |
| Mute On/Off          | Short press Mute button            |
| Effect Lights        | Short press the LED Button         |
| Effect Lights on/off | Short press the LED On/ Off Button |

# Key features of Remote Controller

---

| Function               | Operation                                                                              |
|------------------------|----------------------------------------------------------------------------------------|
| Play/Pause Music       | Short press the Play/Pause button                                                      |
| Next Music             | Short press the Next Track button                                                      |
| Previous Music         | Long press the Previous Track button                                                   |
| BT Pairing             | Auto enter pairing mode after power on, or long press the Pairing Button for 2 seconds |
| Volume Down            | Short press the VOL- button                                                            |
| POP sound effect mode  | Short press the POP Mode Button                                                        |
| JAZZ sound effect mode | Short press the JAZZ Mode Button                                                       |
| ROCK sound effect mode | Short press the ROCK Mode Button                                                       |



# Key features of Remote Controller

---

| Function        | Operation                                                                                                                                                                                                |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto Power off  | Short press Clock Button<br>Default setting: no auto power-off.<br>Short Press the Clock Button to switch auto power-off modes, cycling through:<br>0.5-hour, 1-hour, 3-hour, and 5-hour auto power-off. |
| Stop music play | Short press the stop Button                                                                                                                                                                              |

# Basic Specifications of the Speaker

---

|                       |                                                                                         |
|-----------------------|-----------------------------------------------------------------------------------------|
| Battery Capacity      | 3000mAh                                                                                 |
| Battery Type          | Lithium Polymer Battery                                                                 |
| Input Parameters      | 5V—2A                                                                                   |
| Charging Time         | About 4 hours                                                                           |
| Playback Time         | Up to 8 hours (tested at medium volume, playback time will be shorter at higher volume) |
| BT Version            | 6.0                                                                                     |
| Effective Range       | 15m (50 feet)                                                                           |
| Operating Temperature | 0~45°C                                                                                  |
| Waterproof            | IP66                                                                                    |

# Product warranty

|                    |     |                 |  |
|--------------------|-----|-----------------|--|
| Model              | T08 | User name       |  |
| Purchasing date    |     | Contact number  |  |
| Purchasing channe1 |     | Contact address |  |

## Warranty

When the user purchases the machine, it is attached with an introduction book and a warranty card. The user shall properly keep it after filling it out, as the warranty certificate.

Since the date of purchase, if the speaker goes wrong under normal use within one year, cardholders can enjoy free warranty services.

The following is not covered by the warranty:

- (1) Warranty card without signature or seal by sales unit;
- (2) Damaged by human or force majeure;
- (3) Normal wear and tear of machine;

If the fault is caused by human reasons, expiration of warranty period or by force majeure, we will charge the maintenance cost.

When there' s a product failure and it needs to return to the factory for warranty, please contact our company and fill in the specific name, address, telephone number and fault phenomenon.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.