

BACHJOHANN

开放式耳机



耳机使用指南

BACH01



产品清单



 
金属充电仓
Metal Charging Case




开放式耳机
Open Wearable Stereo



产品包装
Product Packaging



Type C 充电线*1
Type-C Charging Cable*1

 

说明书&保修卡
Manual & Warranty Card

产品参数

品牌名称	BACHJOHANN
------	------------

产品名称	开放式耳机
------	-------

产品型号	BACH01
------	--------

蓝牙配对名称	BACH01
--------	--------

蓝牙版本	V5.4
------	------

频率	20Hz-20KHz
----	------------

支持协议	HSP,HFP,A2DP,AVRCP
------	--------------------

蓝牙传输距离	360°无障碍物 ≤10m
--------	---------------

喇叭输出功率	5-10mw
--------	--------

耳机电池	5V/70mAh
------	----------

充电仓电池	5V/600mAh
-------	-----------

充电时间	≈2.5h
------	-------

传输功率	+4dBm
------	-------

充电电压	5V
------	----

输入电流	1A
------	----

耳机尺寸	48mm*36.8mm*8.9mm
------	-------------------

充电仓尺寸	86mm*68mm*26mm
-------	----------------

充电接口	Type-C
------	--------

连接说明

开机说明

 
首次使用时先将耳机放入充电仓，插上充电线，将耳机和充电仓充满。

连接设备

打开充电仓取出耳机，自动开机并配对手机打开蓝牙设备，搜索配对名:(BACH01)



确保手机蓝牙打开
搜索设备BACH01，点击配对

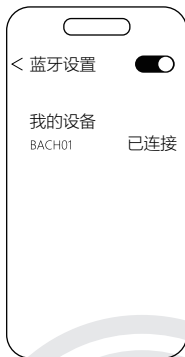

配对蓝牙成功

操作说明

功能操作



1. 长按2秒音量加減 左加右減单耳使用都是音量加
2. 双击左耳打开SIRI双击右耳播放/暂停
单耳使用双击播放/暂停/接听/挂断
3. 三击上下曲 左上右下 单耳使用都是下一曲
4. 五击切换游戏模式/音乐模式(只在与手机连接后才有效)
5. 来电双击接听/挂断, 长按两秒拒接来电
6. 开盖后未取出耳机, 长按充电仓按键8秒,
左右耳会恢复出厂设置后重新配对.

更改配对，关机，充电

- 1、打开充电仓盖取出耳机自动开机,会自动连接最近一次配对过的手机。
- 2、如需配对其它手机,请关闭原手机的蓝牙，在蓝牙耳机开机状态下，其他手机打开蓝牙即可搜索设备名BACH01。
- 3、不使用耳机时,将耳机放入充电盒，耳机会自动关机并补充电量，如果未带充电盒，手机断开蓝牙大约30分钟后耳机会自动关机。

产品特点

- 分离式机身设计，享受真无线立体声效
- 可充电式收纳盒收纳即可为耳机充电
- 无感佩戴，久戴不痛。



功能定义

-开机

充电仓开盖，耳机自动开机并配对;换电完成后，耳机自动开机并配对。

-关机

放入充电仓合盖，耳机自动关机;开机30分钟后未连接设备，耳机自动关机。

-单耳使用

打开充电仓开机自动配对，连接蓝牙成功，即可使用。

-自动回连

手机未删除过耳机历史配对名，开盖即可自动连接。



指示灯说明

耳机配对

打开充电仓，左右耳自动配对，配对成功后白灯慢闪。

耳机放入充电仓

充电充电时，耳机橙灯长亮，电仓充电白灯亮5秒

耳机装上电池

白灯会亮2秒，同时语音会提示设备已开机。

耳机低电量

橙灯每隔1分钟会闪1次，同时语音会提示低电量

用充电器给充电仓充电

充电中时橙色灯常亮，充满电白灯常8秒熄灭。

用充电器给充电仓、耳机充电

耳机充满电橙灯熄灭，仓充满电白色亮8秒熄灭。

注意事项

1.本产品为电子产品，需存放在干燥、阴凉、通风的环境下，避免与油、水汽、蒸汽、湿气和灰尘等接触，或长期置于潮湿环境下，以免影响产品性能。

2.建议在温度5°C~35°C范围内使用与存放本设备及配件，尽量避免长期暴晒或在其他恶劣环境使用。当环境温度过高或过低时，可能会引起设备故障。当温度低于5°C时，电池的性能会受到限制。

3.避免使用任何刺激性有机溶剂，或含有此类成分的物品清洁耳机。

4.请按要求正确规范使用耳机，为保证连接顺畅，建议手机和耳机之间的距离在10米范围内。

 
5.如耳机有连接不上或通讯不畅等其他问题，请勿私自拆卸耳机本体及其配件，否则本司不予保修。

6.给耳机充电时，请尽可能选用附赠的耳机充电线及本公司指定的符合要求的充电器。

7.长期不使用耳机或者很少使用时，请保持每个月给耳机完整的充放电至自动关机，再充电一次，以免缩短电池使用寿命。

8.使用时请调节适度的音量，以防对听力造成不良影响。

9.儿童应在成人监护下使用本设备。本设备及其配件内含小零件，为避免儿童无意吞食小零件导致窒息或其他风险，请将其放置于儿童无法接触的地方。

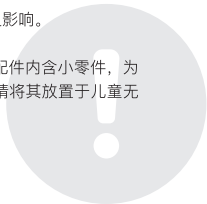

售后服务

保修政策

- 1.自购买次日起15日内，本产品出现性能故障的情况，经由BACHJOHANN售后服务中心检测确定，可免费享受换货服务。
- 2.自购买次日起12个月内，本产品出现性能故障的情况，经由BACHJOHANN售后服务中心检测确定，可免费享受维修服务。

*特别说明：保修内容包含耳机、充电盒/仓。其中，标配数据线为产品随机耗材，无保修期。

非保修条例

- 1.用户因使用、维护、保管不当等人为原因造成损坏。
- 2.产品遭受误用、碰撞、滥用、进液、事故、改动。
- 3.产品经过未获得官方书面授权的维修或拆解动作。
- 4.不正确使用非产品配件。
- 5.订单所示产品型号与实际维修产品型号不符，或撕毁、涂改产品防伪标记。
- 6.超过三包有效期。
- 7.因不可抗力造成损坏的，如地震、火灾、洪水、台风等。
- 8.无保修卡者。

注：申请售后的客户必须填报末页所有必要资料
(客户姓名、地址、电话、购买日期、购买渠道、订单信息等)。

Product Specifications

Brand Name	BACHJOHANN
Product Name	open-ear headphones
Product Model	BACH01
Bluetooth Pairing Name	BACH01
Bluetooth Version	V5.4
Frequency Range	20Hz-20KHz
Supported Protocols	HSP,HFP,A2DP,AVRCP
Bluetooth Transmission Distance	360 degrees with no obstacles ≤10m
Speaker Output Power	5-10mw
Earphone Battery	5V/70mAh
Charging Case Battery	5V/600mAh
Charging Time	≈2.5h
Transmission Power	+4dBm
Charging Voltage	5V
Input Current	1A
Earphone Dimensions	48mm*36.8mm*8.9mm
Charging Case Dimensions	86mm*68mm*26mm
Charging Interface	Type-C

Connection instructions

 
Power-on Instructions

When using for the first time, put the earphones into the charging compartment,

Plug in the charging cable and fully charge the earphones and charging case.

connected device

Open the charging case, take out the earphones, automatically turn on the phone and pair it with a Bluetooth device, Search for pairing name: (BACH01)

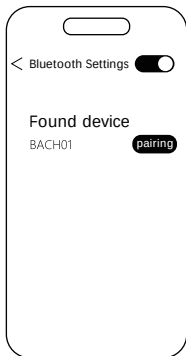

Ensure that the phone's Bluetooth is turned on for search
Search for device BACH01, click on pairing



Bluetooth pairing successful

Operation Manual

Functional Operations



1. Long press for 2 seconds to increase or decrease the volume.
Left+right+decrease. For single ear use, the volume will increase or decrease
2. Double click on the left ear to open SIRI.
Double click on the right ear to play/pause
Double click to play/pause/answer/hang up on one ear
3. Three clicks on the up and down tracks, left, top, right, and single ear use all indicate the next track
4. Five click switch between game mode/music mode (only effective when connected to the phone)
5. Double click to answer/hang up a call, long press for two seconds to reject the call
6. If the earphones are not removed after opening the lid, press and hold the charging compartment button for 8 seconds, The left and right ears will be reset to factory settings and re paired

Change pairing, turn off, charge

1. Open the charging compartment cover and take out the earphones, which will automatically turn on and connect to the phone that has been paired last time.
2. If you need to pair with other phones, please turn off the Bluetooth of the original phone. When the Bluetooth earphones are turned on, turn on the Bluetooth of the other phones to search for the device name BACH01.
3. When not in use, put the earphones into the charging case, and the earphones will automatically shut down and recharge. If the charging case is not included, the earphones will automatically shut down after disconnecting Bluetooth from the phone for about 30 minutes.

Product Features

Separated body design, enjoy true wireless stereo sound effect

Rechargeable storage box for charging headphones

Wearing it without feeling uncomfortable for a long time without pain

Functional Definition

-Power on

Open the charging compartment cover, and the earphones will automatically turn on and pair; After the battery replacement is completed, the earphones automatically turn on and pair.

-Shut down

Put it into the charging compartment and close the lid, the earphones will automatically turn off; Not connected after 30 minutes of startup The device and headphones automatically shut down.

-Single ear use

Turn on the charging case and start automatic pairing. Once the Bluetooth connection is successful, it can be used.

-Automatic reconnection

The phone has not deleted the historical pairing name of the earphones, and can automatically connect by opening the cover.



Indicator Light Instructions

Earphone pairing

Open the charging compartment, and the left and right ears will automatically pair. After successful pairing, the white light will flash slowly.

Put the earphones into the charging compartment

When charging, the orange light on the earphones stays on, and the white light on the charging compartment stays on for 5 seconds

Installing batteries on headphones

The white light will light up for 2 seconds, and the voice will prompt that the device has been turned on.

Headphones low battery

The orange light flashes once every minute, and the voice prompts low battery

Charge the charging compartment with a charger

The orange light stays on while charging, and the fully charged white light goes off for 8 seconds.

Charge the charging case and earphones with a charger

The orange light turns off when the earphones are fully charged, and the white light turns on for 8 seconds when the case is fully charged and turns off.

Precautions

1.This product is an electronic device and should be stored in a dry, cool, and well-ventilated environment. Avoid contact with oil, water vapor, steam, humidity, and dust, or prolonged exposure to damp conditions, to prevent affecting the product's performance.

2.It is recommended to use and store this device and its accessories within a temperature range of 5°C to 35°C. Try to avoid prolonged exposure to direct sunlight or other harsh environments. Excessive heat or cold may cause the device to malfunction. When the temperature falls below 5°C, the performance of the battery may be limited.

3.Avoid using any irritating organic solvents or items containing such substances to clean the earphones.

4.Use the earphones correctly and in accordance with requirements. To ensure a smooth connection, it is suggested that the distance between the phone and earphones be within 10 meters.

5.If there are issues such as connection failures or communication difficulties, do not disassemble the earphones or their accessories on your own, otherwise, the company will not provide a warranty.

6.When charging the earphones, please use the included earphone charging cable and a charger specified by our company that meets the requirements.

7.If the earphones are not used for a long time or used infrequently, please ensure to completely charge and discharge them to automatic shutdown once a month, then recharge, to avoid shortening the battery life.

8.Please adjust the volume to a moderate level when using to prevent adverse effects on hearing.

9.Children should use this device under adult supervision. The device and its accessories contain small parts. To avoid the risk of children accidentally swallowing these small parts, which could lead to choking or other hazards, please keep them out of reach of children.



After-Sales Service

Warranty Policy

1. Within 15 days from the day after purchase, if the product has a performance failure and is determined by the BACHJOHANN after-sales service center, you can enjoy a free replacement service.

2. Within 12 months from the day after purchase, if the product has a performance failure and is determined by the BACHJOHANN after-sales service center, you can enjoy a free repair service.

*Special Note: The warranty covers the earphones and the charging case. The standard data cable is a consumable of the product and does not have a warranty period.

Non-Warranty Clauses

1. Damage caused by improper use, maintenance, or storage by the user.

2. The product has been subjected to misuse, collision, abuse, liquid ingress, accidents, or modifications.

3. The product has undergone repairs or disassembly without official written authorization.

4. Incorrect use of accessories not belonging to the product.

5. The product model number shown on the order does not match the actual product being repaired, or the product's anti-counterfeiting mark has been torn, altered, or defaced.

6. Warranty will not be provided beyond the validity period for repair, replacement, and refund services.

7. Damage caused by force majeure, such as earthquakes, fires, floods, typhoons, etc.

8. No warranty will be given without a warranty card.

Note: Customers applying for after-sales service must fill in all the necessary information on the last page (customer's name, address, phone number, purchase date, purchase channel, order information, etc.).

产品保修卡

产品型号/Model:

SN号码/SN:

用户信息 User Information	姓名/Name	
	电话/Tel.	
	地址/Addr.	
	购机日期/Pur. Date	
	发票号码/Inv. No.	
销售单位信息 Sales Unit Information	名称/Name	
	地址/Addr.	
	电话/Tel.	
	经销商签名/Sign	

德国巴赫音响有限公司监制
巴赫音频 (深圳) 有限公司
深圳市龙华区龙华街道富康社区东环一路天汇大厦9层928
官网: www.bachjohann.com
执行标准: GB4943.1-2022

Supervised by Bach Audio Co., Ltd
Bach Audio (Shenzhen) Co., Ltd
928 Room, 9th Floor, Building B, Tianhui Building
Donghuan 1st Road, Longhua Street, Longhua
Dist., Shenzhen, Guangdong, China
Official website: www.bachjohann.com
Executive Standard: GB4943.1-2022



*该卡为产品保修凭证, 请妥善保管

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BACHJOHANN

巴赫音频(深圳)有限公司

深圳市龙华区龙华街道富康社区东环一路天汇大厦9层928

Bach Audio (Shenzhen) Co., Ltd., Room 928, 9th Floor, Tianhui Building,

Donghuan First Road, Fukang Community,

Longhua Sub-district, Longhua District, Shenzhen, China.

www.bachjohann.com

