

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Operating Frequency

Band:2402-2480MHz

Maximum

Radio-Frequency

Power:≤10dBm I.Button

Functions

1.Power On:Remove the earbuds from the charging case,and they will utomatically power on and pair.Alternatively,long-press the touch button for 3-5 seconds to turn on.2.Power Off:Place the earbuds back in the charging case to turn them off automatically,orl ong-press the touch button for3-5 seconds to turn off.3.Play/Pause:While playing,tap one of the earbuds'touch buttons to pause playback.In pause mode,tap again to resume playback.4.Answer/End Cal:When there is an incoming call,tap one of the earbuds'touch buttons to answer.During the call,tap the same touch button to end the call.5.Reject Call:When there is an incoming call,long- press the touch button for2-3 seconds to reject the call.

II.How to Power On and Pair the Earbuds

1.Remove both earbuds from the charging case simultaneously(Note:both must be taken out at the same time).The earbuds will automatically power on and begin pairing.Wait for 5to 30 seconds.When one earbud keeps flashing and the other goes off,it

indicates successful pairing.Then,turn on your phone's wireless,search for the corresponding earbud device name,and connect.

2.If one earbud is not producing sound(mono mode),place both earbuds back in the charging case.Wait a few seconds,then take them out again.Wait for 5 to 30 seconds.Turn on the wireless on your phone,find the paired device,unpair it,and then turn

off and on the wireless to reconnect.3.If your phone cannot find the earbuds,place both earbuds back in the charging case,wait a few seconds,take them out again,and wait for 5 to 30 seconds.Turn on wireless on your phone,search for the earbuds,and connect.

II Usage Notes

1.Do not treat the product with force or crush it with heavy objects.Keep it away from high-temperature,high-humidity environments.2.Keep the product away from Wi-Fi routers and other high-frequency transmitting devices,as this may affect signal reception,leading to sound lag or disconnection.3.Use the product within an effective range(10-15meters).Ensure there are no physical obstructions(such as walls)between the wireless device and the earbuds.4.This product does not support USB PD fast charging.The charger must provide power within the range of 1 watt to 5 watts to ensure maximum charging speed