



www.portronics.com
For Support
Visit : www.portronics.com
E-mail : help@portronics.com
Contact No.: +91 9555245245, 011-42413131
(Working Hrs: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E:info@3rrecycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste

SPECIFICATION

| | | |
|------------------------------|---|---|
| Bluetooth Version | - | 5.3V |
| Bluetooth distance | - | 10M |
| Output | - | 10W |
| Driver Size | - | 52MM |
| Signal to noise ratio | - | ≥75dB |
| Charging Port | - | TYPE-C |
| Battery Capacity | - | 2000mAh |
| Play time (at 50% volume) | - | 5 hours |
| Material | - | ABS+metal mesh |
| Unit size | - | 383*57*63MM |
| Net Weight | - | 567g |
| Function | - | Bluetooth /FM/USB/TF/ AUX/Hands-free/TWS |

CALLING

- Click the (▶||) button to answer/hang up the phone call, Long press the (▶||) button to Reject the phone call.

NOTICE

1. Use the product for its intended purpose only.
2. Please store and use this product at room temperature;
3. Do not expose this product to rain or wet conditions.
4. Do not drop, to avoid the fall of the product damage.
5. Do not disassemble and repair the product by yourself.
6. The product built-in lithium battery, do not casually discard or put in the fire, so as not to cause danger!



DECIBEL 24
Wireless Stereo Soundbar

BUTTONS

(M) : Change Mode : Bluetooth, FM, USB, TF,AUX.
(+) : Volume Up/Next Track
(-) : Volume Down/Previous Track
(▶||) : Play / Pause, Answer / Hang Up Phone Call ,TWS.

FUNCTION

Bluetooth connection:

To start using your Bluetooth Speaker, power it on by pressing and holding the power button until it turns on and enters Bluetooth mode. Enable Bluetooth on your device and search for the speaker's pairing name. Once found, select it to establish a connection. Upon successful pairing, confirmed by a sound notification, the

speaker will then automatically connect to your device whenever it's powered on, provided it's within range and your device's Bluetooth is activated. If automatic connection doesn't occur, you can manually connect via your device's Bluetooth settings.

MUSIC PLAY

- Insert USB Drive(Max 32Gb) or Micro SD Card With MP3 Files to Enjoy Music.
- Using the 3.5mm audio cable to connect your phone with the speaker to play music.
- Short Press (+) to Play The Next Song.
- Short Press (-) to Play The Previous Song.

RADIO MODE

- Insert the Charging Cable into Charging Point to act as an External Antenna to Enhance Signal.
- Press the (M) button to enter the FM mode. Long press the (▶||) button to search channels automatically.
- After the searching is completed, press (+/-) to switch the radio.

TWS FUNCTION

Turn on two speakers at the same time. When they are in bluetooth mode, Long press any speakers (▶||) button. Wait for speakers to get connect. Find connect with your bluetooth device.

CHARGING

- Type-C charging cable.
- When speaker charging, the red light on; Lights will be off when it's fully charged.
- Repeat charging and discharging will lead to the decline of battery life, which is a normal phenomenon for all possible rechargeable batteries.