 




AIR FRYER

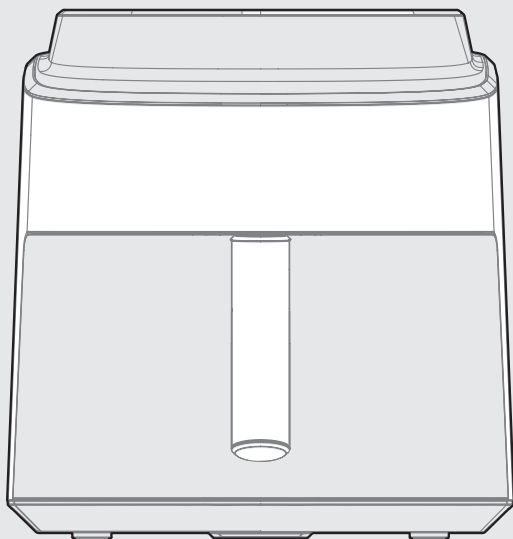

AI Diag



USER MANUAL

AC300

Warning notices: Before using this air fryer, please read this user manual carefully and retain it for future reference. The product's design and specifications are subject to change without prior notice for the purpose of product improvement. For detailed information, please consult your authorized dealer or manufacturer. The diagram shown above is for illustration purposes only. The actual appearance of the product may vary.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER 01

SAFETY INSTRUCTIONS 02

SPECIFICATIONS 06

PRODUCT OVERVIEW 07

OPERATION INSTRUCTIONS 09

CLEANING AND MAINTENANCE 11

TROUBLESHOOTING 12

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT 13

DATA PROTECTION NOTICE 14

1 YEAR LIMITED WARRANTY 14



SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention The signal word indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.
	Hot Surface This symbol indicates the heating element surface is subject to residual heat after use. Do not touch.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

Do not touch hot surfaces.



IMPORTANT SAFEGUARDS

Read all instructions carefully. When using electrical appliances, basic safety precautions should always be followed, including the following:



WARNING: ELECTRIC SHOCK

- Do not operate any appliance with a damaged power cord or plug, or if the appliance has malfunctioned or been damaged in any way, return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not immerse the power cord, plug, or any live parts in water or any other liquid.
- Unplug the appliance before cleaning.
- To disconnect the appliance, turn all controls to OFF, then remove the plug from the wall outlet.
- Always use the basket to cook.
- Oversized foods or metal utensils must not be inserted in an air fryer, as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is designed to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



WARNING: HOT SURFACE

- Do not touch hot surfaces. Use handles or knobs only.
- Unplug the appliance when not in use and allow the appliance to cool completely before handling parts.

WARNING

- Do not use the appliance outdoors. This appliance is for household use only.
- Do not use the appliance for anything other than its intended use.
- Do not place the appliance near the edge of a worktop or table during operation.
- When using this appliance, provide at least 6 inches (15cm) of space above and on all sides for adequate air circulation.
- The use of accessory attachments not recommended by the manufacturer may result in injury.
- Do not place the appliance on or near a hot burner (gas or electric), or in a heated oven.
- After air frying, always place the frying basket drawer on a flat, heat-resistant surface
- Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- Use extreme caution when removing the tray or disposing of hot grease.
- Do not cover the air inlet or air outlet openings while the appliance is operating.
- A fire may occur if the air fryer is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Extreme caution should be exercised when using containers not made of metal or glass.
- Do not store materials inside the appliance, except manufacturer-recommended accessories.
- Do not place any of the following materials in the air fryer: paper, cardboard, plastic, or similar items.
- Do not cover the crisper tray or any part of the appliance with metal foil, as this may cause overheating.
- Make sure the crisper tray is properly locked into the drawer. Both tabs must be fully inserted into the notches inside the basket.

- Always ensure the basket is fully closed while the air fryer is operating.
- The air fryer will not operate unless the basket is fully closed.
- Do not let the power cord touch hot surfaces or hang over the edge of a table or counter.
- A short power cord is provided to reduce the risk of entanglement or tripping.
- If a longer detachable power cord or extension cord is used:
 - The electrical rating marked on the cord set or extension cord must be at least equal to the rating of the appliance.
 - The cord should be positioned so that it does not hang over the countertop or tabletop where it could be pulled by children or tripped over accidentally.
 - If the appliance is grounded, the cord set or extension cord must be a 3-wire grounded cord.



CAUTION:

- After hot air frying, the frying basket, drawer, and cooked food will be hot. Use extreme caution when handling the hot basket and drawer.
- Hot surface during use.
- CAUTION - FOOD SAFETY: Always check the internal temperature of raw or undercooked foods with a food thermometer to ensure safe consumption.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- To reduce the risk of electric shock, cook only in the basket.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS


Product Model	AC300
Rated voltage	120V~
Rated frequency	60Hz
Rated power	1700W



PRODUCT OVERVIEW

Part Name

Actual product and configuration may vary slightly.

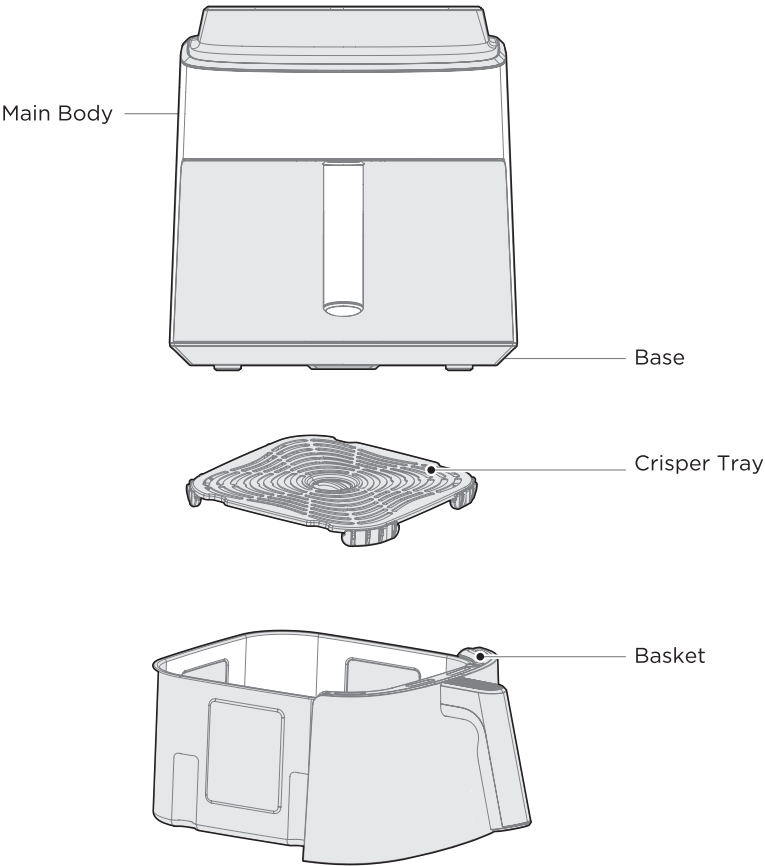


NOTE

The figure below is for reference only. The actual product and configuration shall prevail.

Using the Basket


Note: If the basket is removed during cooking, cooking will be paused.

⚠ Carefully remove and place the basket on a flat surface to prevent burns from steam, oil, or hot food. Use tongs or chopsticks to remove food.

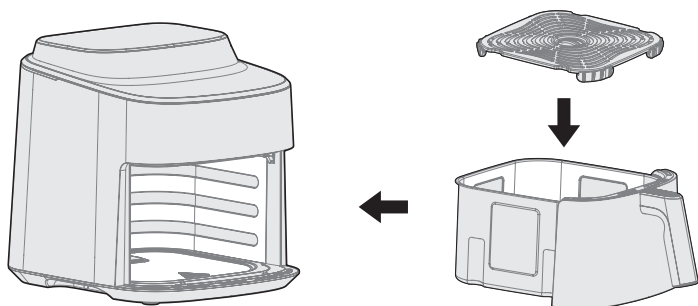

Adjusting the Crisper Tray

There are two available crisper tray heights. Place the crisper tray on the upper level to make the bottom of your food crispier and increase the air circulation in the air fryer.

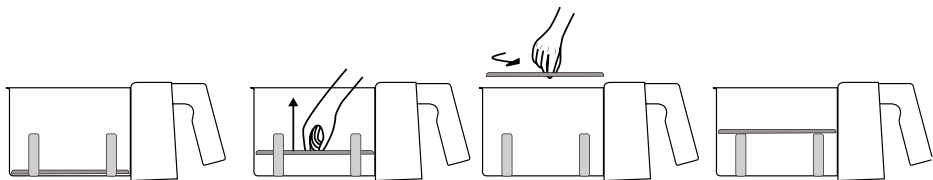

Bottom level:
Plate below
the notches

To adjust:
Pull plate from
the middle

To adjust:
Rotate it 90°


Top level:
Place plate over
the notches

Menu Functions

Menu (Manual)	Default Temp	Adjustment range	Default Time	Adjustment range
Air Fry	385 °F	325-450 °F	10 min	1-60 min
Bake	350 °F	300-450 °F	20 min	1-60 min
Reheat	280 °F	200-350 °F	5 min	1-60 min
Menu (Auto)	Default Temp	Adjustment range	Default Time	Adjustment range
Fries	Auto Mode	/	Auto Mode	/
Nuggets	Auto Mode	/	Auto Mode	/
Wings	Auto Mode	/	Auto Mode	/
Fish	Auto Mode	/	Auto Mode	/

OPERATION INSTRUCTIONS

Display Screen and User Interface

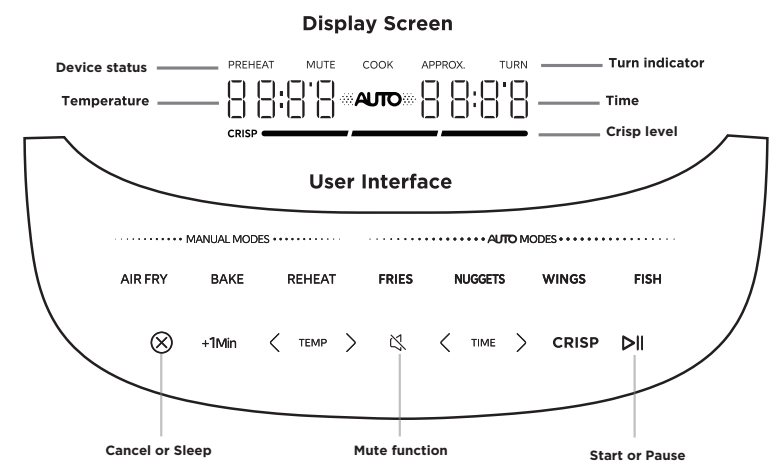

Name	Description
Display Screen	The display screen displays the air fryer's current status (PREHEAT, COOK), approx. time and turn indicators, temperature, time, and crisp level.
..... MANUAL MODES AIR FRY BAKE REHEAT	Manual Mode functions allow you to manually set the temperature and time of your cooking cycle. Press Air Fry for a crispy exterior on all sides. Press Bake to cook your food using the top heating element. Press Reheat to reheat cold food.
..... AUTO MODES FRIES NUGGETS WINGS FISH	AUTO Mode functions automatically set a time and temperature. You may manually adjust the crisp level to your preference. Press Fries, Nuggets, Wings, or Fish.
 Cancel/Sleep	Press Cancel to cancel the current cooking function and return the air fryer to standby mode. If the air fryer is already in standby mode, press Cancel again to enter sleep mode.
+1Min	Press +1 min to quickly add one minute to the cooking time.
< TEMP >	Press < to decrease the set temperature by 5°F. Press > to increase the set temperature by 5°F. The temperature can only be changed in Manual mode.
	Press to adjust the mute settings, then use < and > to select a mute setting. "ALL" disables all prompt sounds, "TURN FOOD" disables only the turn food reminder, and "OFF" turns MUTE off. To turn Mute Mode off, press and hold  for 3 seconds.
< TIME >	Press < to decrease the set time by 1 minute. Press > to increase the set time by 1 minute. The time can only be changed in Manual mode.
CRISP	Press Crisp to increase the crisp level. When the maximum crisp level is reached, pressing Crisp again will set the air fryer to the lowest crisp level.
 Start/Pause	Press Start/Pause to begin or pause cooking. When the air fryer is in sleep mode, press Start/Pause to exit sleep mode and set a new cooking function.



Cooking Overview


- 1) Make sure your air fryer is properly plugged into a properly grounded outlet. If the air fryer is in sleep mode (all buttons dark except the Start/Pause button), press Start/Pause.
- 2) Pull the air fryer basket out and install the crisper tray. There are two possible positions for the crisper tray: lower and higher. Please see the next page for detailed instructions on how to change the crisper tray positions.
- 3) Add your food to the air fryer basket. Push the basket fully into the air fryer.
- 4) Choose a function. This air fryer offers both Manual Mode functions and Auto Mode functions.
 - 4a) **Manual Mode** allows you to manually select the time and temperature.
Press Air Fry, Bake, Reheat or Frozen to select a Manual mode function. Use the < Temp > buttons to select the temperature and the < Time > buttons to select the time.
 - 4b) **Auto Mode** automatically selects a time and temperature.
Press Fries, Nuggets, Wings, or Fish to select an Auto mode function.
- 5) Press **Crisp** to select your preferred crisp level.
- 6) Press **Start/Pause** to begin cooking.
- 7) When cooking is complete, the air fryer will sound. Remove the air fryer basket and place it on a level surface.

Note:

- If the air fryer basket is removed at any point during cooking, cooking will pause. Insert the air fryer basket it will continue working.
- Please exercise caution when using Auto Mode to cook raw or uncooked foods. Check the internal temperature of the food before eating.

Preparation

Place the appliance on a flat, stable surface. Ensure the power cord reaches the wall outlet. Keep the surrounding area well-ventilated and away from flammable materials.

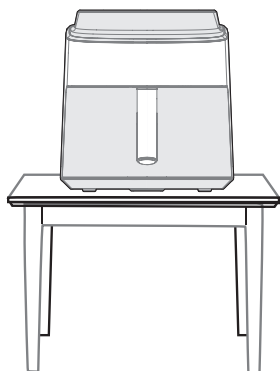

Before First Use

1. Remove and discard all packaging material, promotional labels, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Wash the nonstick basket, crisper plate, and accessories in hot, soapy water, rinse and dry thoroughly. NEVER clean the main unit in the dishwasher.
4. Install the basket and the crisper plate. Do not add any food.
5. Select the Bake function, then set the time and temperature to 20 minutes and 350°F there may be a small amount of white smoke and an odor while the air fryer is operating. This is normal.

Reminder

- Before operating the appliance, please check that the crisper plate and basket are properly placed to avoid malfunction.
- If the appliance malfunctions, stop using it immediately and contact our service department.
- Please always use the crisper plate with the basket. Do not use them separately.
- After use, unplug the power cord and allow the air fryer to cool completely before moving it.

CLEANING AND MAINTENANCE

- Always clean the air fryer to prevent food buildup and burning.
- After use, clean the crisper plate and basket promptly to avoid coating damage caused by food residue and oil.
- Do not use harsh abrasive cleaners, as they may damage the appliance and pose health risks.
- Use a soft, clean cloth to wipe the air fryer. Do not use an overly wet cloth, as water entering the appliance may cause electric shock or fire.
- Do not clean the whole appliance in a dishwasher or with other cleaning equipment, as this may cause damage.
- Clean the crisper plate and basket with a dishwasher, neutral detergent or clean water.
- Do not use hard or sharp objects (such as steel wool, blades, etc.) to clean the crisper plate or basket, to avoid scratches.
- Any other servicing should be performed by an authorized service representative.

TROUBLESHOOTING

The appliance may experience errors or malfunctions during operation.

The two tables below list possible causes and solutions to resolve them.

Please read this section carefully to save time and avoid unnecessary service charges.

To contact Midea customer service, visit us online at

<https://www.midea.com/us/Support> or call us at 1-866-646-4332.

Problem	Cause	Solution
The air fryer does not work	• The appliance is not plugged in.	Insert the power cord plug into a grounded wall socket.
	• You have not set the time.	Select the desired cooking time.
	• The basket is not placed into the appliance properly.	Slide the basket into the appliance until it is fully inserted.
The ingredients are not done.	• The amount of ingredients is too large.	Cook smaller batches of ingredients.
	• The set temperature is too low.	Set the temperature to the required temperature setting.
	• The cooking time is too short.	Set time to the required preparation time.
The ingredients are cooked unevenly.	• Some ingredients need to be turned or stirred halfway through cooking.	Shake layered or overlapping ingredients (e.g. fries) halfway through the cooking time.
Food is not crispy.	• The food is intended for a traditional deep fryer. • The basket is overfilled.	Lightly brush some oil onto the snacks for a crispier result. Avoid ingredient overlap.
Cannot insert the fryer basket properly.	• There are too many ingredients in the basket.	DO NOT fill the basket beyond its capacity.
	• The basket is not correctly placed in the main body.	Push the basket into the main body until it clicks into place.

Problem	Cause	Solution
White smoke comes out of the appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak. The oil produces white smoke and the basket may heat up more than usual. This does not affect the appliance or the end result.
	The basket has grease residue from previous use.	White smoke is caused by grease heating up in the basket. Make sure you clean it properly after each use.
French fries are unevenly cooked	Time and temp are not high enough.	Increase time and temp based on the type of fries you are cooking.
	There are too many fries in the basket.	Make sure that the fries in the basket do not overlap or cover each other. Turn if needed.
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 logo, word marks, trade name, trade dress and all versions there of are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**.

1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover wear from normal use, and damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales. This warranty is void if product is used for other than single family household use or subjected to any voltage and waveform. We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. Legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty.

In the event of a warranty period claim, question, comments or if service is required for this product, please contact the Customer Service Center:

Midea America Corp.
300 Kimball Drive Parsippany, NJ 07054
customerserviceusa@midea.com
1-866-646-4332

Business Hours
Mon - Fri: 8am - 7pm (EST)
Sat: 9am - 4pm (EST)

Note: Contact above customer service to order replacement parts.



make yourself at home



www.midea.com

© Midea 2022 all rights reserved