



Wireless Home Music System

User's Guide for Model IHB227 v1909-01

For the most up-to-date version of this User's Guide, go to www.iliveelectronics.com

Safety Instructions & Warnings

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Battery Warnings

- WARNING: Do not ingest the battery, Chemical Burn Hazard.
- The remote control supplied with this product contains a coin/button cell battery.
- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside and part of the body, seek immediate medical attention.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

- Batteries should be recycled or disposed of as per state and local guidelines.
- Additional Warnings and Precautions
- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains socket completely, the mains plug should be disconnected from the mains socket outlet completely.
- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- WARNING: Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Table of Contents

Setup	4
Features	
Includes	
Power	
Battery Backup	
Orientation	5
Controls & Inputs	
Connect Speakers	
Remote Control	6
Functions	
Batteries	
Connecting External Devices	7
Pairing Bluetooth and Playing Audio Wirelessly	
Aux In (3.5mm Audio Input)	
CD & Radio	8
Loading and Playing a CD	
Programming a CD	
Playing the AM/FM Radio	
Programming Radio Station Presets	
Clock, Sleep Timer & Alarm	9
Setting the Clock	
Setting the Sleep Timer	
Setting the Alarm	
Cancelling the Alarm	
Customer Support	10
Contact Information	
Warranty	
International Support	

Setup

Features

 
- Bluetooth wireless: range 60 ft.
- 2 channel stereo sound
- CD player: CD, CD-R/RW
- AM/FM radio with built-in antennas
- Aux In (3.5mm audio input)
- LCD display
- AC power: built-in AC power cable

Includes

- Remote control with CR2025 battery
- User's Guide & Warranty

Power


Plug the built in AC power cord into a standard wall outlet.

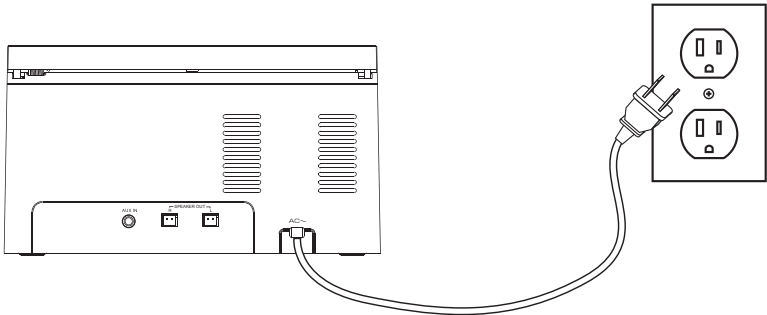

Battery Backup



Requires 2 AAA/1.5V batteries (not included).

 Battery backup is for display and clock functions only. The unit will not play music on battery power.

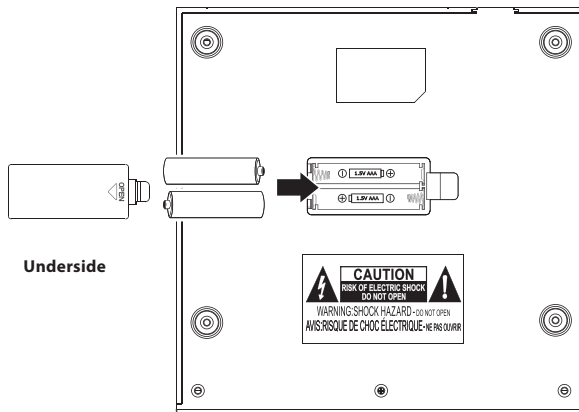

Orientation

  Controls & Inputs

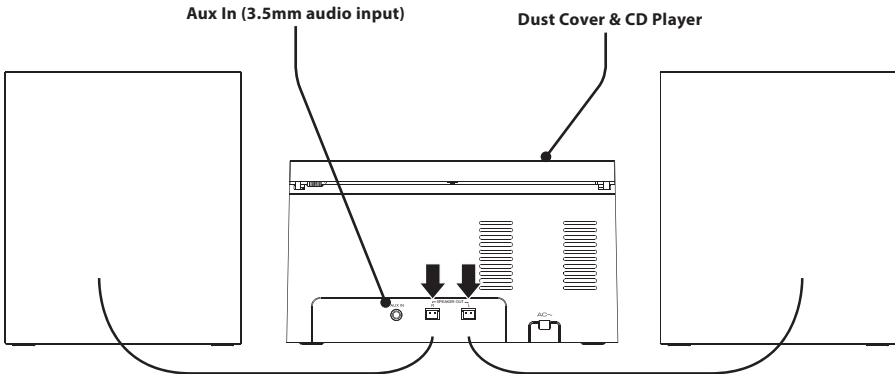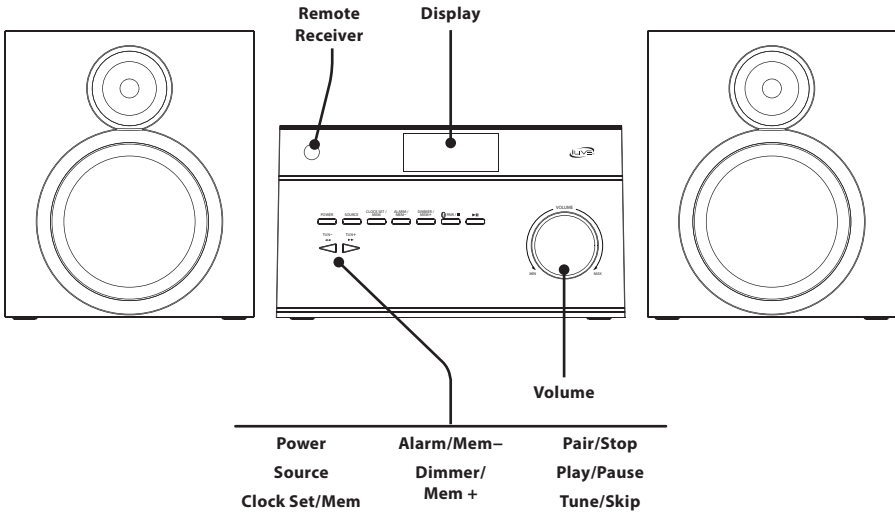

Connect Speakers

Be sure to match the positive (red) and negative (black) wires to their corresponding inputs.

Remote Control

Functions

Power
Press to power the system ON or OFF.

Source
Press to switch media source.

Clock
Press to set clock time.

Repeat
Press to repeat 1 audio track or all audio tracks on a loaded CD.

 
Random
Press to play random audio tracks.

Prog/Mem
Press to program tracks to play in a specific order.

Press to begin saving radio presets (RADIO MODE).

Skip Back/Fwd
Press to skip and audio track.

Play/Pause
Press to play or pause an audio track.

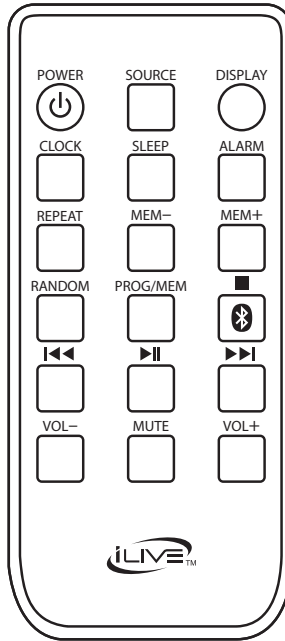

Display

Press to dim display.

Sleep

Press to snooze alarm.

Alarm

Press to begin setting alarm.

Mem- /+

Press to cycle memory presets (RADIO MODE).

Stop/Pair

Press to stop audio track.

Press to pair (BLUETOOTH MODE).

Volume +/-

 
Press to adjust volume.

Mute

Press to mute volume.

Batteries

Requires 1 CR2025 battery (included).

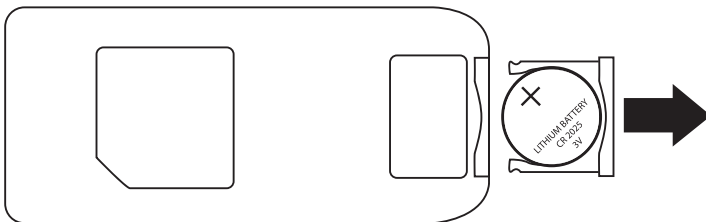

Connecting External Devices


Pairing Bluetooth and Playing Audio Wirelessly

1. Set the **Source** to **BT (Bluetooth)** and press the **Pair/Stop** button. The pairing indicator will begin quickly flashing blue. *When pairing, remain within 3 feet of the unit.*
2. Using the controls on your Bluetooth device, search for and select **IHB227** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0 0 0 0**. *If need be, refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
3. When successfully paired and connected, a chime will sound and the pairing indicator will turn solid. After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat these steps.
4. Use the controls on your connected Bluetooth Device to select and begin playing audio. Use the controls on the connected device or the unit and remote to play, pause or skip audio.

Aux In (3.5mm Audio Input)

Requires 3.5 mm audio input cable (not included).

 1. Plug a 3.5 mm audio input cable into the **Aux In** on the unit and the headphone jack on a smartphone or other audio source.
2. Set the **Source** to **Aux** and use the controls on your connected music player to select and play audio.
3. Audio played through the connected device should now be heard through the speakers.

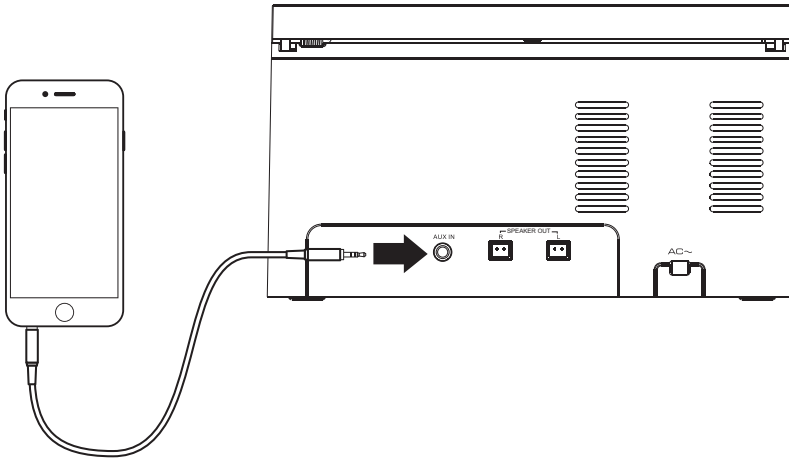

CD & Radio

Loading and Playing a CD

1. Open the CD tray and place a CD in the tray, label side facing up, then close the CD tray.
2. Set the **Source** to **CD mode**.
3. Use the controls on the unit or the remote to begin playing the loaded disc.

Programming a CD

1. Press the **Stop** button to stop a loaded CD.
2. Press the **Prog** button on the remote ("*01*" will blink on the display).
3. Press the **Skip Back/Fwd** buttons to select a track.
4. Press the **Prog** button to add the selected track to the program. Repeat this process to program up to 20 tracks to play in a specified order.
5. Press the **Stop** button to cancel a program.

Playing the AM/FM Radio

AM and FM antennas are built into the unit. Adjust the position of the unit to improve AM/FM radio reception.

1. Set the **Source** to **AM or FM mode**.
2. Use the **Tune -/+** buttons to tune to a desired radio frequency.

Programming Radio Station Presets

1. In **AM or FM mode**, tune to a desired frequency and press and hold the **Prog/Mem** button on the remote.
2. Press the **Tune -/+** buttons to select a preset number (*up to 20 stations may be set*).
3. Press the **Prog/Mem** button to save the current station to that preset.
4. Press the **Mem -/+** button to cycle through your memory presets.

Clock, Sleep Timer & Alarm

Setting the Clock

1. With the unit powered off, press the **Clock Set/Mem** button on the front of the unit, or the **Clock** button on the remote. *The hour will begin flashing on the display.*
2. Press the **Tuning** buttons on the front of the unit or the **Skip Rev/Fwd** buttons on the remote to set the hour.
3. Press the **Clock Set/Mem or Clock** button again. *The minutes will begin flashing on the display.*
4. Repeat **Step 2** to set the minutes.
5. Press the **Clock Set/Mem or Clock** button again to finish setting the time.

Setting the Sleep Timer

1. With the unit powered on, press the **Sleep** button on the remote. *The display will show the amount of time in minutes before the timer goes off.*
2. Press the **Sleep** button to select the amount of time before the timer goes off: 90 minutes, 80, 70, etc.
3. Wait for the display to return to normal. *"Sleep" will be visible on the display when the timer is on.*
4. To turn the Sleep Timer off, perform Step 2 until the display reads **"OFF"**.

Setting the Alarm

1. With the unit powered off, press the **Alarm** button on the front of the unit or the remote. *The hour will begin flashing on the display.*
2. Press the **Tuning** buttons on the front of the unit or the **Skip Rev/Fwd** buttons on the remote to set the hour.
3. Press the **Alarm** button again. *The minutes will begin flashing on the display.*
4. Repeat **Step 2** to set the minutes.
5. Press the **Alarm** button again to set the alarm type. *The alarm type will begin flashing on the display.*
6. Repeat Step 2 to set the alarm type: *Radio, CD or Buzzer.*
7. Press the **Alarm** button again to finish setting the alarm.

Cancelling the Alarm

1. After the alarm has sounded press the **Alarm** button to cancel it.
2. Press and hold the **Alarm** button to turn it off entirely. *The alarm indicator on the display will disappear.*

Customer Support

Contact Information

Website: www.iliveelectronics.com

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.iliveelectronics.com

International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: www.iliveelectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iliveelectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iliveelectronics.com



***Protect for Today
Sustain for Tomorrow***

Copyright © 2017 Digital Products International (DPI, Inc.). All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.