

SENCOR®

SRD 2806



INSTRUCTION MANUAL

AC/DC PORTABLE RADIO

NÁVOD K OBSLUZE

**PŘENOSNÝ RÁDIOPŘIJÍMAČ
S NAPÁJENÍM ZE SÍTĚ/Z BATERIÍ**

NÁVOD NA OBSLUHU

**PRENOSNÝ RÁDIOPRIJÍMAČ
S NAPÁJANÍM ZO SIETE/Z BATÉRIÍ**

FELHASZNÁLÓI KÉZIKÖNYV

**HORDOZHATÓ RÁDIÓVEVŐ KÉSZÜLÉK
HÁLÓZATRÓL/ELEMRRŐL TÖRTÉNŐ
TÁPELLÁTÁSSAL**

INSTRUKCJA OBSŁUGI

**PRZENOŚNY ODBIÓRNIK RADIOWY
Z ZASILANIEM Z SIECI / Z BATERII**

EN


CZ

SK

HU

PL

CONTROL LOCATION

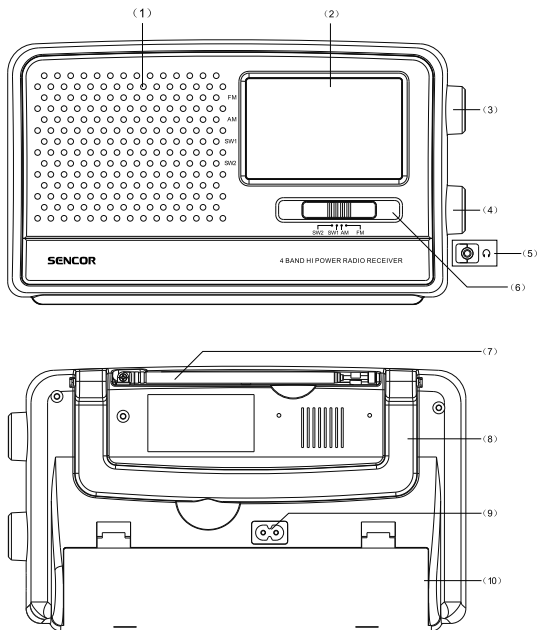

1. SPEAKER
2. FREQUENCY SCALE
3. FREQUENCY TUNING KNOB
4. VOLUME CONTROL KNOB
5. HEADPHONE JACK
6. RADIO BAND SELECTOR
7. ROD ANTENNA
8. CARRY HANDLE
9. AC SOCKET (back cabinet)
10. BATTERY COMPARTMENT COVER (back cabinet)

OPERATING INSTRUCTION

POWER SUPPLY

AC Operation

Insert one end of the supplied AC power cord to the AC IN socket located at the rear of the unit, and the other end to the wall outlet.

DC (battery) Operation

1. To power from batteries, you must disconnect the power cable from the unit.
2. Insert three batteries, type R20, UM1 or D cells (not included) into battery compartment and then close the compartment door.

Note:

- *Check your batteries regularly. Old or discharged batteries should be replaced. If the unit is not to be used for sometimes or is being run exclusively on AC electrical current, remove batteries from the battery compartment to avoid leakage. Do not combine old batteries with new ones. Do not combine alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.*

Warning:

- *Before using this unit, please check if the local mains voltage meets this unit's requirements.
Do not plug or unplug the power cable when your hands wet.*
- *When planning not to use the unit for long periods of time (i.e. vacation etc.) disconnect the plug from the wall outlet. And remove the batteries.*

Radio

1. Turn on the radio by turning the **VOLUME CONTROL KNOB** to the **ON** position.
2. Select the desired wave band (AM / FM / SW1 / SW2) by **RADIO BAND SELECTOR**.
3. Adjust the sound with the controls **VOLUME CONTROL KNOB**.
4. Tune to a radio station using **FREQUENCY TUNING KNOB**.

FM 87.5 - 108 MHz

AM 530 - 1600 kHz

SW1 3.2 - 10.0 MHz

SW2 10.0 - 16.0 MHz

To improve reception:

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM, the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. Turn the set to find the best position.
- Do not place the unit in the vicinity of high-frequency sources of interference such as a mobile phone, WiFi...

Volume

Adjust the sound with the tuning **VOLUME CONTROL KNOB**.

You may connect headphones (not included) to 3.5mm **HEADPHONE JACK**.

The speakers will turn off automatically. Avoid listening to headphones at high volume levels to prevent possible hearing damage.

SPECIFICATIONS

Speaker:	3.5 inches, 8 ohm dynamic speaker
Power Output:	1 W
Battery Operate:	DC 4.5 V (3 x "UM-1 / D")
AC Operate:	230 V ~ 50 Hz

PRECAUTIONS

1. For AC operation, make sure the voltage is compatible. Always use the supplied AC power cord; never use other AC power cord.
2. Always disconnect the AC power cord from the AC power source when it is not in use.
3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime. Do not expose the unit to direct sunlight and don't use it in the vicinity of heat sources or naked flame.
For instances, never place the unit in bathing areas nor around stoves and radiators.
5. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.
6. To clean the unit, just use a soft cloth. Do not use aggressive cleaning agents, thinners or solvents.

Warning:

- *To prevent fire or shock hazard, do not expose the unit to rain or moisture.*
- *To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.*

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 2806 is in compliance with Directive 2014/53/EU.

For the full version of the EU declaration of conformity, please refer to the following website: www.sencor.eu

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.

The original version is Czech.

Manufacturer: FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

